Advantys ETB

IP67 Ethernet Block I/O Modules for Modbus TCP/IP User Guide

04/2017



The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2017 Schneider Electric. All Rights Reserved.

Table of Contents



	Safety Information	5
01 1 1	About the Book	7
Chapter 1	Introducing the Advantys ETB I/O Modules	9
	Features of the Advantys ETB I/O Modules	10
	System View	11
	Advantys ETB for Modbus TCP/IP	14
Chapter 2	Specifications and Physical Description	21 22
	Front Face	24
	Size and Dimensions	25
	Connector Pin Assignments	26
	I/O Assignments	28
	HMI Display	29
Chapter 3	Configuration	31
3.1	Using the Embedded Web Pages	32
	Accessing the Embedded Web Pages	33
	General Information: IP / Physical Information Page	35
	General Information: Password Setup	36
3.2	Configuring IP Address Settings	37
	Introducing IP Parameters	38
	Recommended Practices for IP Configuration	39
	Configuring IP Parameters Using Web Pages	40
	Configuring IP Parameters Using HMI Push Buttons	44
	IP Address: TCP Connection	46
3.3	Configuring Module Settings	47
	Recommended Practices for Configuring Module Settings	48
	Configuring I/O for ETB1EM16CP00	49
	Configuring the Watchdog	52
Chapter 4	Installing the Module	55
•	Mounting the Module	56
	Connecting Cables	57
Chapter 5	I/O Wiring Diagrams	61
-	Module Wired with Schneider Electric Cables	62
	IEC I/O Wiring Diagrams	63

Chapter 6	Application Example: Configuring the Advantys ETB I/O			
6.1	Module for use with a Quantum Processor			
0.1	Configuring IP Parameters			
	Accessing the Embedded Web Pages			
0.0	Setting a Static IP Address			
6.2	Configuring the I/O and Watchdog in Unity Pro			
	Recommended Practices for Using the PLC			
	Introducing the Unity Pro Project			
	Declaring Variables in Unity Pro			
	Configuring I/O Scanning			
	Resetting the Watchdog with Structure Text Code			
	Configuring I/O with Function Block Code			
Chapter 7	Diagnostics			
7.1	LEDs			
	LED Behaviors			
	Scrolling LED Messages			
7.2	Diagnostic Web Pages			
	I/O Data: I/O Value			
	I/O Data: I/O Status			
	Diagnosis: Ethernet Statistics			
	Diagnosis: Network Interface			
Chapter 8	Replacing the Advantys ETB I/O Module			
	Replacing the Module			
Appendices				
Appendix A	Process Image Maps for the Advantys ETB I/O Modules			
	Modbus Registers			
	Output Data Registers			
	Input Data Registers			
	Ethernet Configuration Registers			
	Module Status Registers			
	Module Information Registers			
	I/O and Watchdog Configuration Registers			
Glossary				
Index				

Safety Information



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a "Danger" or "Warning" safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

A DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result** in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

Advantys ETB IP67 Ethernet modules are block I/O with embedded 2-port Ethernet switches. The modules are intended for high-moisture environments, and they provide connectivity to sensors/actuators through Ethernet Modbus messaging.

This document describes the following ETB IP67 models:

Model Number	Description
ETB1EM16CP00	16 I/O points, each point configurable as input or output
ETB1EM16EPP0	16 PNP inputs / 0 outputs
ETB1EM12E04SPP0	12 PNP inputs / 4 PNP outputs
ETB1EM08E08SPP0	8 PNP inputs / 8 PNP outputs

Validity Note

The technical characteristics of the devices described in this document also appear online. To access this information online:

Step	Action
1	Go to the Schneider Electric home page www.schneider-electric.com.
2	 In the Search box type the reference of a product or the name of a product range. Do not include blank spaces in the reference or product range. To get information on grouping similar modules, use asterisks (*).
3	If you entered a reference, go to the Product Datasheets search results and click on the reference that interests you. If you entered the name of a product range, go to the Product Ranges search results and click on the product range that interests you.
4	If more than one reference appears in the Products search results, click on the reference that interests you.
5	Depending on the size of your screen, you may need to scroll down to see the data sheet.
6	To save or print a data sheet as a .pdf file, click Download XXX product datasheet .

The characteristics that are presented in this manual should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the manual and online information, use the online information as your reference.

Chapter 1

Introducing the Advantys ETB I/O Modules

Overview

This chapter introduces the Advantys ETB I/O family of modules for Modbus TCP/IP networks.

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Features of the Advantys ETB I/O Modules	10
System View	11
Advantys ETB for Modbus TCP/IP	14

Features of the Advantys ETB I/O Modules

Introduction

The Advantys ETB family of I/O modules includes modules designed for use with either the Modbus TCP/IP or the EtherNet/IP protocols. This manual describes modules designed for the Modbus TCP/IP protocol.

Advantys ETB I/O modules combine the functionality of a block I/O with an embedded 2-port Ethernet switch. These modules can be used in applications where I/O is mounted directly on equipment without an enclosure. They can be exposed to water or oil spray.

IP67 Rated

Each Advantys ETB I/O module is housed in an IP67 rated enclosure that when properly installed—according to IEC 60529—provides protection against the ingress of:

- dust
- water, when temporarily immersed (for up to 30 minutes) to a depth of 1 meter

Data Access for the ETB I/O Modbus TCP/IP Module

Module data is accessible via Modbus messaging and embedded web pages, and includes:

- input and output data
- input and output status
- I/O configuration settings
- module Ethernet (Modbus TCP/IP) communication configuration settings
- module firmware data

System View


Description

Advantys ETB I/O modules can be used with a protocol compliant scanner as part of control system architecture. The modules' built-in unmanaged 2-port Ethernet switch allows you to use the network topology that meets your application needs. These topologies include the following:

- star
- daisy-chain
- combination of star and daisy-chain

Star

Star topology allows you to connect mixed I/O blocks or additional network equipment. Performing maintenance on one module—for example, by removing the network cable, or by cycling power to the module—does not affect other modules.

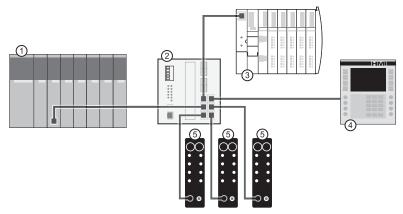


- 1 Quantum PLC
- 2 Ethernet switch
- 3 Advantys STB Island
- 4 Magelis HMI device
- 5 Advantys ETB I/O modules

Daisy-chain

You can create a daisy-chain topology by using the module's embedded switch ports to connect a series of up to 8 Advantys ETB I/O modules.

NOTE: When considering the daisy chain topology, note that:


- Performing maintenance on any module not physically located at the end of the daisy chain for example, by removing the network cable, or by cycling power to the module—affects any modules located down the chain from the maintained module.
- The embedded dual port Ethernet switch located in each module eliminates the need for additional Ethernet switches.

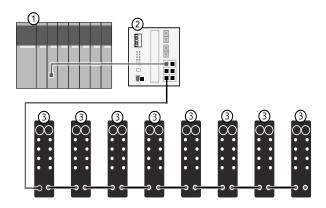

- 1 Quantum PLC
- 2 Ethernet switch
- 3 Advantys ETB I/O modules

Combination of Star and Daisy-chain

Combining star and daisy-chain topology allows you to connect Advantys ETB I/O modules with mixed I/O blocks or additional network equipment.

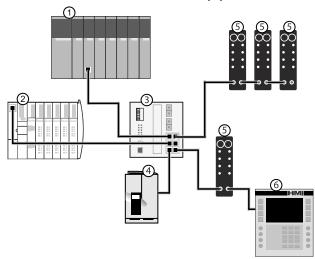


- 1 Quantum PLC
- 2 Advantys STB Island
- 3 Ethernet switch

- 4 Altivar drive
- 5 Advantys ETB I/O modules
- 6 Magelis HMI device

Application

This diagram shows you an example of how to arrange your Advantys ETB I/O modules in a daisy-chain topology.

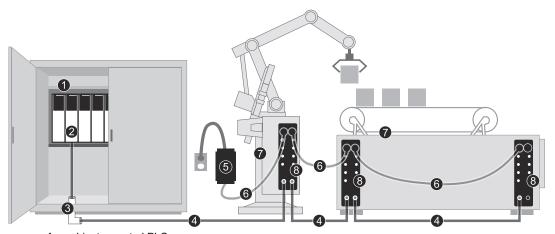

- 1 cabinet mounted PLC
- 2 Ethernet interface module on PLC system
- 3 Ethernet adapter
- 4 Ethernet connector cable
- 5 24 VDC power supply

Note: Alternatively, the power supply could be mounted in the cabinet.

- 6 power supply cable
- 7 machine
- 8 Advantys ETB I/O modules mounted on machine

Advantys ETB for Modbus TCP/IP

Introduction

This topic provides you with the part numbers and descriptions of the Advantys ETB I/O modules, as well as the associated cables and accessories.

Advantys ETB I/O Modules for Modbus TCP/IP

Advantys ETB I/O modules provide 16 I/O points on 8 I/O ports–2 points per port. Each model is distinguished by the number of I/O ports designated as inputs and outputs.

The Modbus TCP/IP product line includes the following modules:

Model Number	Description
ETB1EM16CP00	16 I/O points, each configurable as an input or output
	NOTE: You can configure ETB1EM16CP00 for either PNP or NPN inputs.
ETB1EM16EPP0	16 PNP inputs ¹ (0 outputs)
ETB1EM12E04SPP0	12 PNP inputs / 4 PNP outputs ²
ETB1EM08E08SPP0	8 PNP inputs / 8 PNP outputs

^{1.} PNP Inputs refer to the sensor source or push current from the field sensor to the input circuit of the module.

^{2.} PNP Outputs are the source type output, also referred to as true high output. When energized, the output pushes current through the load to turn on the output point.

Cables and Accessories

The Modbus TCP/IP product line includes the following I/O cables, power cables, and accessories:

Туре	Model Number	Description	Image
sensing cables	ETXSC412M1M3010	I/O cable - M12 connector - 1 m (3.28 ft) long	100
	ETXSC412M1M3020	I/O cable - M12 connector - 2 m (6.56 ft) long	
	ETXSC412M1M3050	I/O cable - M12 connector - 5 m (16.40 ft) long	
	ETXSC412U1M3010	I/O cable - Ultra-Lock™ and M12 connector - 1 m (3.28 ft) long	
	ETXSC412U1M3020	I/O cable - Ultra-Lock™ and M12 connector - 2 m (6.56 ft) long	
	ETXSC412U1M3050	I/O cable - Ultra-Lock™ and M12 connector - 5 m (16.40 ft) long	
	ETXSC412U2M3010	I/O cable - Ultra-Lock™ and M12 connector -1 m (3.28 ft) long	
	ETXSC412U2M3020	I/O cable - Ultra-Lock™ and M12 connector - 2 m (6.56 ft) long	
	ETXSC412U2M3050	I/O cable - Ultra-Lock™ and M12 connector - 5 m (16.40 ft) long	
	ETXSC413U1M3003	I/O splitter cable - Ultra-Lock™ 1 end, M12s other end - 30 cm (0.98 ft) long	

Туре	Model Number	Description	Image
power cables	ETXPC511M300040	7/8 mini-change 5-pin power cable, female straight connector, single ended, 4 m (13.12 ft) long	
	ETXPC512M1M3010	7/8 mini-change 5-pin power cable, straight connectors, 1 m (3.28 ft) long	
	ETXPC512M1M3020	7/8 mini-change 5-pin power cable, straight connectors, 2 m (6.56 ft) long	38
	ETXPC512M1M3050	7/8 mini-change 5-pin power cable, straight connectors, 5 m (16.40 ft) long	
	ETXPC512M2M4006	7/8 mini-change 5-pin power cable, 90° connectors, 0.6 m (1.97 ft) long	
	ETXPC512M2M4010	7/8 mini-change 5-pin power cable, 90° connectors, 1 m (3.28 ft) long	
	ETXPC512M2M4020	7/8 mini-change 5-pin power cable, 90° connectors, 2 m (6.56 ft) long	
	ETXPC511M400020	7/8 mini-change 5-pin power cable, 90° female connector, single ended, 2 m (6.56 ft) long	
	ETXPC511M400040	7/8 mini-change 5-pin power cable, 90° female connector, single ended, 4 m (13.12 ft) long	
power tee	ETXPA513M	auxiliary power tee, 7/8 mini-change 5-pin, straight connector	
power receptacle	ETXPA511M3	auxiliary power receptacle, 7/8 mini- change 5-pin, straight female connectors	

Туре	Model Number	Description	Image
field attachables	NOTE: Do not use ETXPA5M1 and ETXPA5M3 connectors at the same time. These two connectors are not designed to be used together.		
	ETXPA5M1	field attachable connector, 7/8 mini- change 5-pin, straight male connectors	
	ETXPA5M3	field attachable connector, 7/8 mini- change 5-pin, straight female connectors	

The Modbus TCP/IP product line includes the following Ethernet cables and accessories:

Туре	Model Number	Description	Image
Ethernet cables	TSECL2M2M06S2	4-pin Ethernet cable, M12 D coded male to M12 D coded male, 90° connectors, 0.6 m (1.97 ft) long	
	TSECL2M2M1S2	4-pin Ethernet cable, M12 D coded male to M12 D coded male, 90° connectors, 1 m (3.28 ft) long	
	TSECL2M2M2S2	4-pin Ethernet Cable, M12 D coded male to M12 D coded male, 90° connectors, 2 m (6.56 ft) long	

Туре	Model Number	Description	Image
Ethernet patch cord	TCSECL1M3M1S2	straight Ethernet patch cord, RJ45 male to M12 D coded 4 pole male, 1 m (3.28 ft)	
	TCSECL1M3M3S2	straight Ethernet patch cord, RJ45 male to M12 D coded 4 pole male, 3 m (9.84 ft)	
	TCSECL1M3M10S2	straight Ethernet patch cord, RJ45 male to M12 D coded 4 pole male, 10 m (32.81 ft)	
	TCSECL1M3M25S2	straight Ethernet patch cord, RJ45 male to M12 D coded 4 pole male, 25 m (82.02 ft)	
	TCSECL1M3M40S2	straight Ethernet patch cord, RJ45 male to M12 D coded 4 pole male, 40 m (131.23 ft)	
	TCSECL1M1M1S2	straight Ethernet patch cord, M12 D coded 4 pole male to M12 D coded 4 pole male, 1 m (3.28 ft)	
	TCSECL1M1M3S2	straight Ethernet patch cord, M12 D coded 4 pole male to M12 D coded 4 pole male, 3 m (9.84 ft)	
	TCSECL1M1M10S2	straight Ethernet patch cord, M12 D coded 4 pole male to M12 D coded 4 pole male, 10 m (32.81 ft)	
	TCSECL1M1M25S2	straight Ethernet patch cord, M12 D coded 4 pole male to M12 D coded 4 pole male, 25 m (82.02 ft)	
	TCSECL1M1M40S2	straight Ethernet patch cord, M12 D coded 4 pole male to M12 D coded 4 pole male, 40 m (131.23 ft)	
sealing plugs	ETXSA12B	sealing plug for M12 connectors - 10 per package	
	ETXPA78BE	sealing plug for 7/8 mini-change connectors external - 1 per package	
	ETXPA78BI	sealing plug for 7/8 mini-change connectors internal - 1 per package	

Туре	Model Number	Description	Image
adapter	ETXADRJM12	Adapter RJ45 to M12, for panel mounting. M12 female (straight) to RJ45 male plug. 0.6 m (1.97 ft) long.	

Chapter 2

Specifications and Physical Description

Overview

This chapter describes the physical, electrical, and environmental characteristics of the Modbus TCP/IP modules.

What Is in This Chapter?

This chapter contains the following topics:

Торіс	Page
Specifications	22
Front Face	24
Size and Dimensions	25
Connector Pin Assignments	26
I/O Assignments	28
HMI Display	29

Specifications

Description

The specifications for each Modbus TCP/IP module are listed below:

NOTICE

EQUIPMENT DAMAGE

Do not unplug the cables while the module is powered, as this may damage the module's connectors.

Failure to follow these instructions can result in equipment damage.


Data	Model Number							
	ETB1EM16EPPO ETB1EM08E08SPP0 ETB1EM12E04SPPO		ETB1EM16CP00					
Inputs	16	8	12	16 configurable input				
Outputs	0	8	and output points					
Ethernet connector	M12/Ultra-Lock™ (female D-Code)						
I/O connector	M12/Ultra-Lock™ (A	A-Code)						
Power in (left) connector	mini Change 5 Pole	e (male)						
Power out (right) connector	mini Change 5 Pole	mini Change 5 Pole (female)						
Module and input power	24 Vdc (1330V)							
Output power	N/A	24 Vdc (1330V)						
Output current	N/A	2.0 A / point Sum = 8 A Max						
Short circuit current (typical)	N/A	6.5 A						
Output switching frequency	N/A	200 Hz						
Output voltage: on-state drop/point	N/A	1 Vdc						
Output type	N/A	sourcing (PNP)						
ETB input internal load consumption	129 mA without Ethernet 135 mA with Ethernet (1 or 2 ports)							
ETB output internal load consumption	N/A	6.8 mA						
Input signal voltage ("0")	-2 V5 V							
Input signal voltage ("1")	10V30V							
Input filter	2.5 ms configurable							

Data	Model Number						
	ETB1EM16EPPO	ETB1EM08E08SPP0	ETB1EM12E04SPPO	ETB1EM16CP00			
Input short circuit (per point)	600 mA; 24 Vdc cu	rrent limit on pin 1 (per p	port)				
Input current (per point)	140 mA	140 mA					
Input type	PNP	PNP PN coi					
Operating temperature	-25 °C+70 °C						
Storage temperature	-40 °C+85 °C						
Vibration resistance	conforms to IEC68-	2-6					
EMC	EN 61000-6-2						
Protection class	IP67						
MTBF	296,000 hours at 3	0 °C GB (ground benign)				

Front Face

Description

The front face of the module includes the mounting holes, connectors, port connector labels, LEDs, push buttons, and the HMI display. The details and locations of these features are shown below.

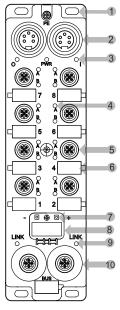


- 1 five mounting holes, including the center one
- 2 two 5-pin power connectors including input (left) and output (right) to connect the next module in the system
- 3 three power LEDs: O = output; PWR = not used; I = both input and module
- 4 sixteen I/O point LEDs
- 5 eight 5-pin I/O port connectors numbered from bottom to top (2 points per port connector)
- 6 eight white port labels
- 7 two buttons for selecting the method of IP address assignment
- 8 four-character scrolling display
- 9 two Link LEDs
- 10 two 4-pin Ethernet network connectors

NOTE: The MAC address label is located on the back of the module.

Size and Dimensions

Description

The module conforms to the following dimensions:

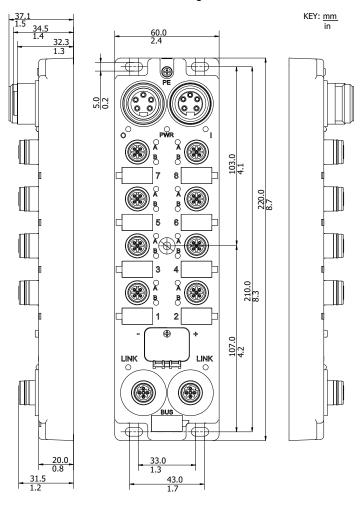

Connector Pin Assignments


Introduction

The module's pin assignments are described below for:

- 5 pin power connectors (7/8 mini-change cables)
- 5 pin I/O port connectors (M12 or Ultra-Lock™ M12 cables)
- 4 pin Ethernet network connectors (M12 D coded cables)

Power Connectors

The pin assignments for the power connectors are outlined in the following figure, with the male on the left and the female on the right.

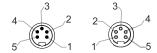

- 1 Output Power 0 Vdc
- 2 Module/Input Power 0 Vdc
- 3 Protective Earth (PE)
- 4 Module/Input Power 24 Vdc
- 5 Output Power 24 Vdc

NOTE: For proper functioning of the ETB startup self test, apply the 24 Vdc module/input power before applying output power, or apply module/input power and output power at the same time. Maintaining output power while the module/input power is off can lead to a condition where I/O scanning continues but the block's LED display does not function, the block's web pages cannot be accessed, and the block does not respond to PING messages.

If the power up sequence has not been properly applied and these results are observed, normal LED display and communication can be restored by power cycling the module/input power.

I/O Port Connectors

The following figure displays an ETB I/O port connector on the left of the module and its corresponding point assignments. Note that the port connectors on the right side of the module are rotated 90° counter-clockwise from the ones on the left.



- 1 +24 Vdc
- 2 Point B Input or Output
- 3 GND
- 4 Point A Input or Output
- **5** PE

Ethernet Network Connectors

The following figure shows the pin assignments of the two Ethernet Network connectors on the module.



- 1 TX+
- 2 RX+
- 3 TX-
- 4 RX-

I/O Assignments

Description


The I/O assignments for the modules with fixed I/O sizes are as follows:

8 in 8 Out	12 In 4 Out	16 In	Point	Connector Number				Connector Number	Point	16 ln	12 In 4 Out	8 in 8 Out	
Out 6	Out 2	In 14	7B Point2	Port 7	- 1	γ ^m γ @ ol	4	Port 8	8B Point 2	In 16	Out 4	Out 8	
Out 5	Out 1	In 13	7A Point 4	l Foil?		/8 8 300 17 8 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		Folto	8A Point 4	In 15	Out 3	Out 7	
Out 2	In 10	In 10	5B Point 2	Port 5				Port 6	6B Point 2	In 12	In 12	Out 4	
Out 1	In 9	In 9	5A Point 4	Ports		/s s		Port 6	6A Point 4	In 11	In 11	Out 3	
In 6	In 6	In 6	3B Point 2			78/20/8/2007 7		Port 4	4B Point 2	In 8	In 8	In 8	
In 5	In 5	In 5	3A Point 4	Port 3		/ 8		POL4	4A Point 4	In 7	In 7	In 7	
In 2	In 2	In 2	1B Point 2	Port 1	Port 1				Port 2	2B Point 2	In 4	In 4	In 4
In 1	In 1	In 1	1A Point 4	Politi		78 8 000 1 2		Port 2	2A Point 4	In 3	In 3	In 3	

HMI Display

Introduction

The Advantys ETB I/O modules include a 4-character scrolling display with 2 push buttons. Use these tools to configure certain IP address *(see page 44)* parameters and view diagnostic LED messages *(see page 86)*.

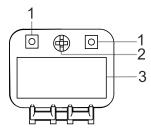

- 1 Push buttons
- 2 Screw to lock HMI door
- 3 HMI Display

Chapter 3 Configuration

Overview

This chapter shows you how to configure the IP and I/O settings for your module. Note that the Application *(see page 65)* chapter provides examples of configuring these settings.

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
3.1	Using the Embedded Web Pages	32
3.2	Configuring IP Address Settings	37
3.3	Configuring Module Settings	47

Section 3.1 Using the Embedded Web Pages

Overview

Advantys ETB I/O modules contain embedded web pages. This section introduces these web pages and shows you how to manage your password. The remaining web pages are described elsewhere in this document.


What Is in This Section?


This section contains the following topics:

Topic	Page
Accessing the Embedded Web Pages	33
General Information: IP / Physical Information Page	35
General Information: Password Setup	36

Accessing the Embedded Web Pages

Before you begin, be sure that both your PC and the Advantys ETB I/O module are configured with IP addresses that are located in the same subnet (or, alternatively, are connected via a routing mechanism).

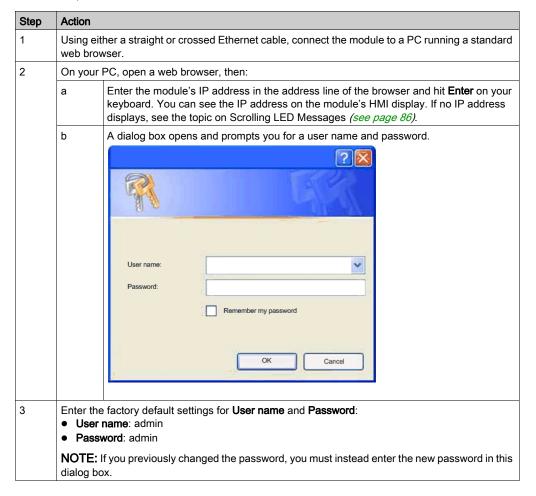

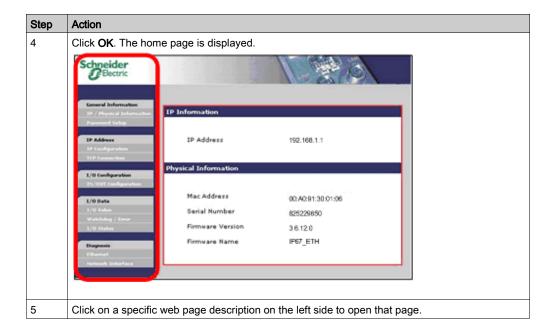

General Information: IP / Physical Information Page

Description

This read only page displays the information describing the selected Advantys ETB I/O module including its: IP address, MAC address, serial number and firmware information.



General Information: Password Setup

Description


Use this page to modify the password for web page access.

• Click Apply to save your changes.

NOTE: You will then need to re-login using your user name and new password.

NOTE: You cannot change the existing user name or add new ones.

Click Cancel to close the window without saving your changes.

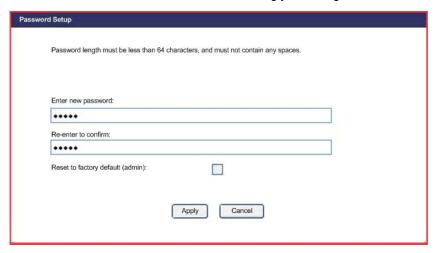

Section 3.2

Configuring IP Address Settings

Introduction

This section shows you how to configure the Advantys ETB I/O module's:

- IP parameters for the Advantys ETB I/O module, and
- the IP address for an optional Master IP device

What Is in This Section?

This section contains the following topics:

Topic	Page
Introducing IP Parameters	38
Recommended Practices for IP Configuration	39
Configuring IP Parameters Using Web Pages	
Configuring IP Parameters Using HMI Push Buttons	
IP Address: TCP Connection	

EI00000000158 04/2017 37

Introducing IP Parameters

Introduction

The module can obtain its IP address from any one of the following 3 sources:

- a static IP address, stored locally on the module, that can be either:
 - o a user-defined value, or
 - o the factory default value of 192.168.1.1
- a DHCP server
- a BootP server

You can select the source of the IP address by using either:

- web pages (see page 40)
- HMI push buttons (see page 44)

NOTE: Stop I/O communication with the module before you attempt to change the IP parameters, as no such changes are possible during I/O communication.

NOTE: Assign a unique IP address to each Advantys ETB I/O module before connecting it to your network. Do not simultaneously connect multiple unconfigured Advantys ETB I/O modules to your network, because each unconfigured module is set to the same factory IP address of 192.168.1.1.

NOTE: Your IP address changes take effect—and are displayed on the module's 4-character scrolling HMI panel—when they are made. You do not need to power cycle the module.

Recommended Practices for IP Configuration

Overview

Each method of assigning an IP address has advantages and disadvantages. Unlike the Internet, PLCs typically communicate to I/O modules using an IP address rather than a name. It is key that the module uses the same IP address, even after being power cycled. For the majority of applications, using a static IP address is the easiest to implement; however, it is important for you to choose the method of assigning an IP address that is appropriate for your network environment.

Static

A static IP address is stored locally on the module and is retained even after a power cycle. No IP address server is required on the network. When replacing a module, you need to manually configure the same IP parameters in the replacement module. You also need to manually maintain a list of assigned IP addresses. Do not use duplicate IP addresses on your network.

BootP

A BootP server is required on your network to assign IP parameters to modules. This server can exist on a PC or PLC and must be configured to assign specific IP settings to a module with a specific MAC address. Each time a module is power cycled, it will need to get its IP parameters from the BootP server. If the server is not present, the module will not get an IP address. When replacing a module, you only need to configure the new module for BootP and reconfigure the server to assign the IP settings to the new module's MAC address.

DHCP

A DHCP server is required on your network to assign IP parameters to modules. This server can exist on a PC or PLC. There are two ways for a module to get its IP parameters from a DHCP server, either by referencing a Device Name or instead a MAC address (if the Device Name is blank). The DHCP server must be configured in a similar manner to assign specific IP settings to a module by either method. Each time a module is power cycled, it needs to get its IP parameters from the DHCP server. If the server is not present, the module will not get an IP address. When replacing a module using a Device Name to assign IP parameters, you need to configure the replacement module for DHCP and set the same Device Name as the module being replaced. If using the MAC address to assign IP parameters, you need configure the replacement module for DHCP and leave the Device Name blank. You also need to change the MAC address used by your DHCP server to that of the replacement module.


EIO000000158 04/2017 39

Configuring IP Parameters Using Web Pages

Introduction


You can use the module's **IP Configuration** embedded web page (see page 33) to:

- specify the source of IP parameters for the module,
- configure user-defined static IP parameters, and
- input a **Device Name** value for DHCP server assigned IP parameters.

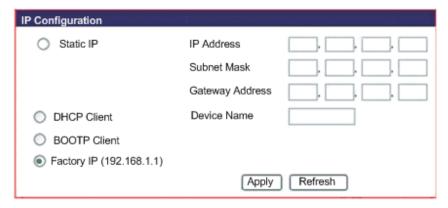

Accessing the IP Configuration Page


To access the IP Configuration embedded web page for IP parameter configuration:

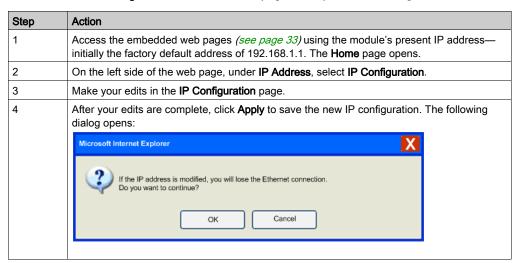

Step	Action
5	Click OK to accept your IP parameter changes.
	NOTE: If you changed the actual IP address assigned to the module, you must point your
	browser to that new address to continue viewing the web pages.

Configuring User-Defined Static IP Parameters

After accessing the IP Configuration page, configure user-defined static IP parameters as follows:

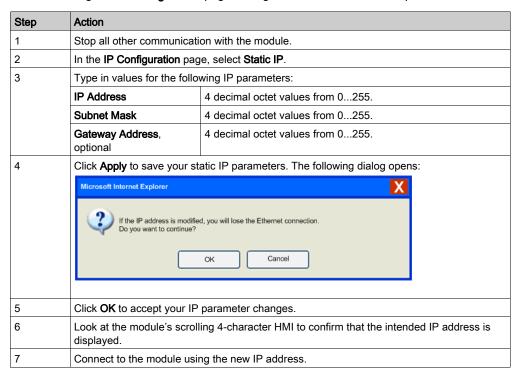


Applying the Factory Default Static IP Address

After accessing the IP Configuration page, apply the factory default static IP address as follows:


Step	Action	
1	Stop all other communication with the module.	
2	In the IP Configuration page, select Factory IP .	
	NOTE: This also sets the Subnet Mask to 255.255.255.0 and the default Gateway Address to 0.0.0.0.	

EIO000000158 04/2017 41

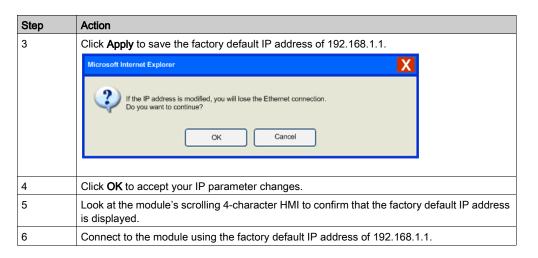

Configuring the Module to Receive IP Parameters from a DHCP Server


After accessing the **IP Configuration** page, configure the module to receive its IP address from a DHCP server as follows:

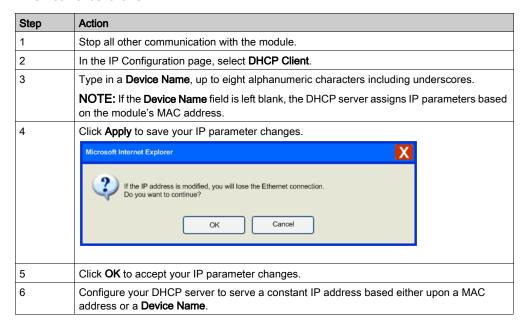

Step	Action
7	Physically connect the module to the network.
8	Look at the module's scrolling 4-character HMI to confirm that the intended IP address is displayed.
9	Connect to the module using the new IP address.

Configuring the Module to Receive IP Parameters from a BootP Server

After accessing the **IP Configuration** page, configure the module to receive IP parameters from a BootP server as follows:

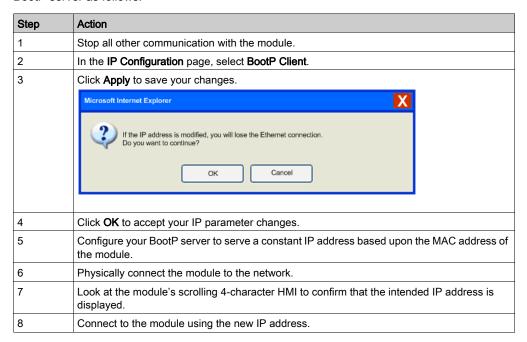

EIO000000158 04/2017 43

Configuring IP Parameters Using HMI Push Buttons

Introduction

You can use the push buttons, located on the front of the module above the 4-character HMI display (see page 21), to:


- set the source of the module's IP address,
- assign the factory address of 192.168.1.1, and
- assign a new, static IP address by modifying the last octet of the current IP address

NOTE: The remaining IP parameters—**Subnet Mask**, **Gateway Address**, and **Device Name**—cannot be configured using the HMI push buttons.


Push Button Behavior

Use the below diagrams when manipulating the push buttons.

The right push button increments:

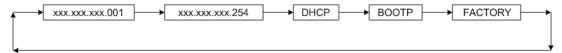

The left push button decrements:

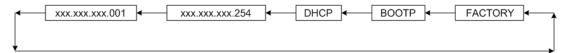

Manipulating Push Buttons

To set the source of the IP address:

Step	Action
1	Stop all communication with the module.
2	Use a Phillips screwdriver to open the plastic cover on the display.
3	When the IP addressing source is displayed, use the screwdriver or a similar shaped object to toggle either of the push buttons. Press the push button once to advance to the next selection, or hold the button down and the display will increment by itself.

Step	Action	Action		
4	Select the des	Select the desired source of IP address from the list:		
	xxx	This selection displays the last octet of the present IP address. Make this selection with the push buttons and: use either the left or right push button to toggle the last octet of the IP address to a number from 1 to 254 use your PC's web browser to navigate to the IP Configuration page where you can configure the Subnet Mask and Gateway Address parameters.		
	DHCP	 Make this selection with the push buttons and: configure a DHCP server with the MAC address or Device Name, and use your PC's web browser to navigate to the IP Configuration page where you can enter the Device Name if necessary. 		
	BootP	Make this selection with the push buttons and configure a BootP server with the MAC address and IP parameters for this module.		
	FACTORY	This selection applies the factory IP address, Subnet Mask , Gateway Address , and Device Name .		
5	it as the new	sired source displays on the HMI, remove pressure from the push button to select source of the IP address. Your IP addressing changes will be applied 3 seconds ove pressure from the push button.		
6	Look at the module's 4-character HMI to confirm that the desired IP address has been a Replace the plastic cover with a Phillips screwdriver.			
7				
8	Connect to the module using the new IP address.			


EIO0000000158 04/2017 45

IP Address: TCP Connection

Description

Use the TCP Connection page to:

- · input the IP address of master controller, and
- display TCP connection statistics:

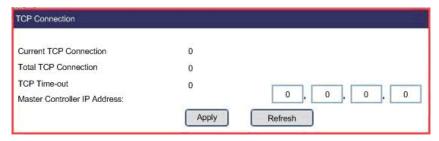

Identifying a Master Controller

Use the **Master Controller IP Address** field to enter the IP address of master device. This device is exclusively permitted to execute write commands to the module's outputs. Other devices can still read the module information. Changes made to the **Master Controller IP Address** field take effect when you click **Apply**.

If the value of this field remains set to the default of 0.0.0.0, no master device is identified, and any device can execute write commands to the module's outputs.

TCP Connection Data

The **TCP Connection** page displays the following statistics describing the module's TCP connection:

Field	Description
Current TCP Connection	This shows the number of presently open TCP connections.
Total TCP Connection	This shows a count of TCP connections since the last Refresh command or power cycle.
TCP Time-out	This shows a count of times that communications have been lost since the last Refresh command or power cycle.

Click **Refresh** to clear the two counting fields.

Section 3.3

Configuring Module Settings

Overview

This section shows you how to use the embedded web pages to configure the following:

- I/O assignments for the module with configurable I/O
- watchdog settings for Modbus TCP/IP modules

What Is in This Section?

This section contains the following topics:

Topic	Page
Recommended Practices for Configuring Module Settings	48
Configuring I/O for ETB1EM16CP00	49
Configuring the Watchdog	52

EI00000000158 04/2017 47

Recommended Practices for Configuring Module Settings

Overview

You can configure the Advantys ETB I/O module's I/O and watchdog settings using either the PLC or web pages.

PLC

Configuring the I/O and watchdog using the PLC, instead of the embedded web pages, is recommended because:

- configuration settings can be saved in the PLC, and can be easily reapplied to a replacement module
- applying configuration settings saved in the PLC reduces the likelihood of errors introduced by manually configuring the module

Web Pages

The embedded web pages offer a convenient method for configuring the module's I/O and watchdog settings. However, configuration settings made to a module via its web pages cannot be transferred to a replacement module.

If you elect to configure a module using its embedded web pages, you should also:

- edit your application program in the PLC to include the same configuration settings, or
- maintain a record of the configuration settings, which can be re-applied if and when the module needs to be replaced

Configuring I/O for ETB1EM16CP00

Introduction

The ETB1EM16CP00 module contains configurable points that can be configured for in, out, or automatic. This topic shows you how to configure the ETB1EM16CP00 module's I/O points and only applies to this specific module.

NOTE: By default, each point is pre-configured as an auto-configurable I/O point.

A WARNING

UNINTENDED EQUIPMENT OPERATION

If the point is connected to a sensor and used as an input, do not write a 1 to the corresponding output bit of the process image, as this can conflict with the current state of the input.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

In addition to configuring the **I/O Type** (described above) for each point, you can also configure the following settings that apply to all inputs:

- Input Type: PNP or NPN
- Input Filter: the minimum time period—in milliseconds—an input signal must persist in order for the module to recognize it as valid (and not merely noise).

There are two methods to configure the I/O settings of the module. Regardless of which method you use, you must configure all I/O settings.

- PLC
- embedded web pages

PLC


You can use the PLC to set the I/O configuration. When a configurable I/O point—set to auto-configuration—acts as an output, that output value will appear in both the input and output process images. This is also true for the pre-configured modules. For example, with the ETB1EM08E08SPP0 module, the output shows as an echo in the input process image.

Configuring I/O settings via the PLC simplifies module replacement because the configuration is stored on the PLC and does not have to be re-configured in the web pages when a module is replaced. Refer to the application example (see page 70) to configure ETB1EM16CP00 in Unity Pro with a Quantum PLC via a NOE 771 01 communications module.

EI0000000158 04/2017 49

Web Pages

The **IN/OUT Configuration** page displays the configuration of the module's input and output points. This page is configurable for ETB1EM16CP00, and read only for all other modules.

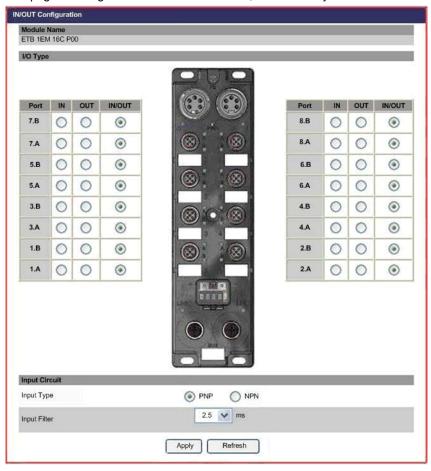

After you access the embedded web pages *(see page 33)*, you can configure the I/O settings for ETB1EM16CP00 as follows:

Step	Action
1	Navigate to the IN/OUT Configuration page by clicking the left pane of the main web page.
2	Select an I/O Type for each point: IN: the selected point is configured as an input OUT: the selected point is configured as an output IN/OUT: the selected point will auto-configure as an: input, if it detects that it is connected to a sensor, or output, if it detects that it is connected to an actuator
3	Select the Input Type for all points acting as inputs: PNP NPN
4	Select an Input Filter value. Valid values include: o 0 ms o 0.5 ms o 1 ms o 1.5 ms o 2 ms o 2.5 ms o 5 ms
5	Click Apply to save your I/O configuration changes.

NOTE: If the module needs to be replaced, you need to re-configure the replacement module with the same parameters.

EIO0000000158 04/2017 51

Configuring the Watchdog

Introduction

During normal operations, each Advantys ETB I/O module remains in continuous communication with the Modbus master (usually a PLC). If communication with the Modbus master is lost, the behavior of the Advantys ETB I/O module's outputs is governed by its watchdog settings.

The following settings are configurable:

Setting	Description
Watchdog Timeout	The time period—in milliseconds—that the module waits after the communication with the Modbus master is lost and before adopting the preconfigured Watchdog Behavior .
Watchdog Behavior	The behavior that the module's output points will adopt if communication with the Modbus master is lost for a continuous period greater than the Watchdog Timeout. Choices are: • Apply Output Fallback Value: places each output into a pre-configured on or off state, or • Hold Output Value: maintains the state of each output at the time communication with the Modbus master is lost
Fallback Value (for each output point)	The pre-determined state—on or off—each output point will adopt if communication with the Modbus master is lost for a time period longer than the Watchdog Timeout .

The Watchdog Status is:

- inactive (off), if the module remains in communication with the Modbus master, and
- active (on), if communication with the Modbus master is lost

You can configure watchdog settings using either:


- the PLC, or
- the module's embedded web pages

PLC

Configuring the watchdog settings via the PLC simplifies module replacement because the configuration is stored on the PLC and does not have to be re-configured in the web pages when a module is replaced. Refer to the application example *(see page 70)* to configure the module in Unity Pro with a Quantum PLC via a NOE 771 01 communications module.

Web Pages

- In the Watchdog / Error page, you can:
- · configure watchdog settings for the module, and
- view the watchdog state (active or inactive) of the module.

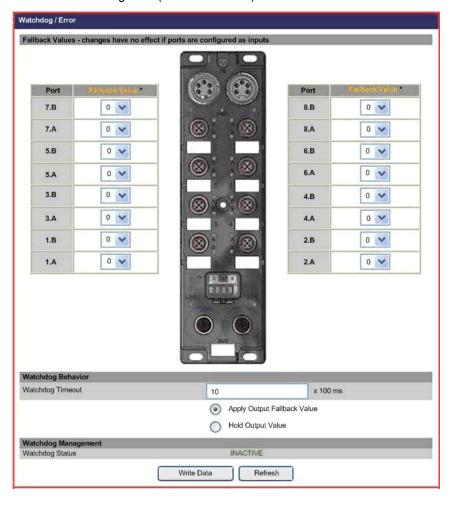

EI00000000158 04/2017 53

After accessing the embedded web pages *(see page 33)*, select **Watchdog / Error** on the left to open the **Watchdog / Error** web page, where you can configure watchdog behavior:

Step	Action
1	Type in an integer value from 0 to 65535 for Watchdog Timeout . This value will be multiplied by 100 ms to determine the timeout.
	NOTE: Setting the timeout value to 0 disables the watchdog. The default timeout is 10 x 100ms = 1s.
2	Select a watchdog behavior: • Apply Output Fallback Value: to place each output into its fallback state, or • Hold Output Value: to have each output maintain its pre-existing state
3	For each point configured as an output, select a Fallback Value describing the behavior of that point if the module enters a fallback state: • 0 = off • 1 = on
	NOTE: These behaviors will only be applied if Apply Output Fallback Value is selected.
4	Click Write Data to save your changes.

Chapter 4

Installing the Module

Overview

This chapter describes how to mount the module and attach the cables.

What Is in This Chapter?

This chapter contains the following topics:


Topic	Page
Mounting the Module	56
Connecting Cables	57

EI00000000158 04/2017 55

Mounting the Module

Description

Each module has 5 mounting holes, which are circled in the diagram below. Use of the middle hole is optional. Use M5 (#10) bolts in the perimeter slotted holes and an M4 (#8) bolt in the center hole to attach the module to a flat surface. Make sure to properly torque so as not to overtighten and damage the module case. The topic Size and Dimensions (see page 25) provides dimensions that you can use to prepare your panel or machine for mounting.

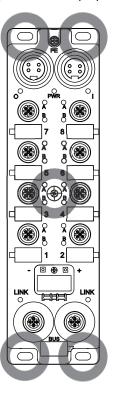

Connecting Cables

Introduction

Connect the cables to complete the physical installation of the module. The chapter I/O Wiring Diagrams (see page 62) shows a diagram using Schneider Electric cables (see page 15).



LOSS OF COMMUNICATION

To ensure proper functioning of the self test at startup of ETB module, it is mandatory to power up the module/input power 24 Vdc at the same time or before the output power 24 Vdc.

Failure to follow these instructions can result in injury or equipment damage.

A WARNING

PERSONAL INJURY

Make sure you disconnect the power before attaching any cables.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: For proper functioning of the ETB startup self test, apply the 24 Vdc module/input power before applying output power, or apply module/input power and output power at the same time. Maintaining output power while the module/input power is off can lead to a condition where I/O scanning continues but the block's LED display does not function, the block's web pages cannot be accessed, and the block does not respond to PING messages.

If the power up sequence has not been properly applied and these results are observed, normal LED display and communication can be restored by power cycling the module/input power.

Step	Action
1	Attach a PE ground cable per your local electric code.
2	Connect I/O cables.
3	Connect Ethernet network cables.
4	Connect the power cables.
5	Cover unused ports with sealing plugs.

EIO000000158 04/2017 57

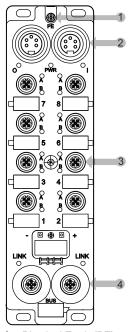

- 1 Physical Earth (PE)
- 2 two 5-pin power connectors including input (left) and output (right)
- 3 eight 5-pin I/O port connectors (2 points each)
- 4 two 4-pin Ethernet network connectors

Ground Cable

Attach the module to a ground cable with a ring or spade connector at the PE size M3 screw (1 in the above diagram). Refer to your electric code for proper grounding instructions.

I/O Cables

Connect I/O cables to the module (3 in the above diagram) by either screwing a threaded connector to the inside of the port, or by pressing an Ultra-Lock™ connector over the outside of the port. Depending on your application needs, you may elect to use I/O splitter cables.

Ethernet Network Cables

Connect Ethernet network cables to the module (4 in the above diagram) by screwing a threaded connector to the inside of the port.

Power Cables

Connect the power cable (2 in the above diagram) by using a threaded cable connector and screwing it to the outside (power input connector) or inside (power output connector) of the module power connector.

Sealing Plugs

Cover unused ports with sealing plugs. Not covering ports in harsh environments may cause contaminants to come in contact with internal components of the module.



EQUIPMENT DAMAGE

Make sure you cover unused ports with sealing plugs to maintain the IP67 rating of the modules. Failure to follow these instructions can result in death, serious injury, or equipment damage.

Use this sealing plug	To cover this connector
ETXSA12B	M12 connectors (Ethernet and I/O ports)
ETXPA78BE	7/8 external connectors (power input port)
ETXPA78BI	7/8 internal connectors (power output port)

EIO000000158 04/2017 59

Chapter 5 I/O Wiring Diagrams

At a Glance

This chapter shows you examples of how to connect Schneider Electric cables to your module. IEC I/O wiring diagrams are also available for your reference.

What Is in This Chapter?

This chapter contains the following topics:


Topic	Page
Module Wired with Schneider Electric Cables	62
IEC I/O Wiring Diagrams	63

EI00000000158 04/2017 61

Module Wired with Schneider Electric Cables

Description

The below image shows you examples of how to connect Schneider Electric cables *(see page 15)* to your module.

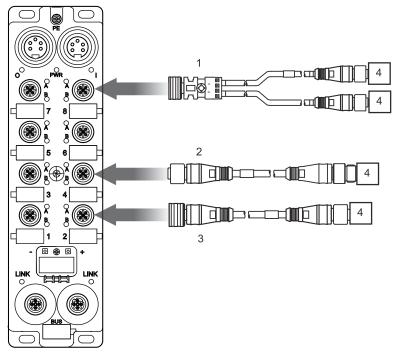

- 1 ETXSC413U1M3003: I/O splitter cable, Ultra-Lock 1 end and M12s other end
- 2 ETXSC412M1M3010: I/O cable, M12 connectors
- 3 ETXSC412U1M3010: I/O cable, Ultra-Lock™ 1 end and M12 other end
- **4** I/O

IEC I/O Wiring Diagrams

Introduction


These diagrams show the wiring of an I/O port wired to support:

- 2 outputs
- 2 inputs
- 1 input and 1 output

NOTE: These diagrams are here for your convenience and to aid in troubleshooting.


2 Outputs

Use this diagram to field-wire two actuators to a module using 2 outputs per port.

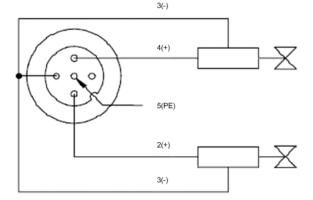

2 Inputs


Use this diagram to field-wire two sensors to a module using 2 inputs per port.

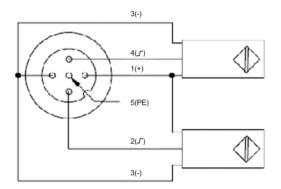

EIO0000000158 04/2017 63

1 Input and 1 Output

The ETB1EM16CP00 is a configurable module that allows you to connect to any combination of up to 16 inputs or outputs. This diagram shows a connection where an input and output are connected to a single port.

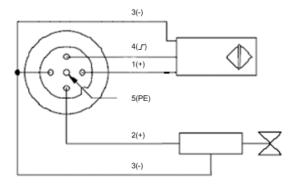

Chapter 6

Application Example: Configuring the Advantys ETB I/O Module for use with a Quantum Processor

Overview

This chapter presents a sample configuration of the ETB1EM16CP00 configurable I/O module, connected to a Quantum PLC via a NOE 771 01 communications module.

The application example shows you how to configure the module's:

- IP parameters, using the module's embedded web pages, and
- I/O and watchdog settings, using Unity Pro running on a PC connected to the Quantum PLC

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
6.1	Configuring IP Parameters	66
6.2	Configuring the I/O and Watchdog in Unity Pro	70

EIO0000000158 04/2017 65

Section 6.1

Configuring IP Parameters

Introduction

This application example uses the ETB1EM16CP00 module's embedded web pages to configure its IP parameters.

What Is in This Section?


This section contains the following topics:

Topic	Page
Accessing the Embedded Web Pages	
Setting a Static IP Address	


Accessing the Embedded Web Pages

Description

Follow these steps to access the module's embedded web pages, where you can configure the module's IP addressing settings.

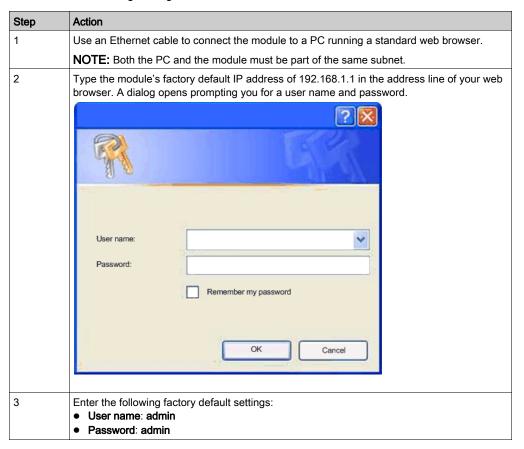

EIO000000158 04/2017 67

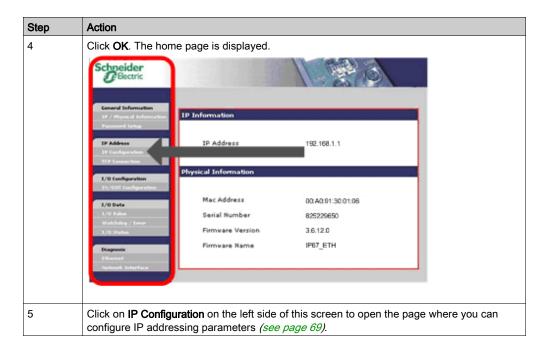

Setting a Static IP Address


Description

Use the module's IP Configuration web page to set a static IP address and edit the related settings.

The following page opens when you select the description for **IP Configuration**. This page indicates that the module is configured to use the factory default IP address.



To configure the module to use a static IP address, follow these steps:

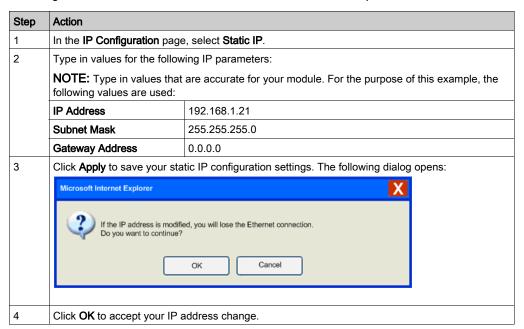

EIO000000158 04/2017 69

Section 6.2

Configuring the I/O and Watchdog in Unity Pro

Introduction

This section of the application example shows you how to use Unity Pro to configure the ETBE1M16CP00 module's inputs, outputs and watchdog settings.

What Is in This Section?

This section contains the following topics:

Topic	Page
Recommended Practices for Using the PLC	
Introducing the Unity Pro Project	
Declaring Variables in Unity Pro	
Configuring I/O Scanning	
Resetting the Watchdog with Structure Text Code	
Configuring I/O with Function Block Code	

Recommended Practices for Using the PLC

Overview

The below actions are the recommended practices for using the module in conjunction with the PLC. While these steps are preferred for optimal operation, they are not required for normal system function.

MSTR Blocks

Set the following parameters using MSTR blocks to facilitate device replacement:

- I/O Module Configuration
- Save I/O Module Configuration

I/O Data

While in normal operation, continually monitor the global status of the module before trusting input data and writing output data.

- If the global status is 0, you can write I/O data.
- If the global status is 1, do not write I/O data, as the information should not be trusted and the actuator may not turn on.

Code Writing

Review module configuration at startup and after any system interruption. The PLC reads the module settings and compares the data to the configuration assignments.


- If the data matches:
 - You can trust the data that is read from the module.
 - You can write new data on the PLC.
- If the data does not match:
 - Do not write new data on the PLC.
 - o Instead, rewrite the configuration assignments to the module.
 - Read back the data to confirm a match.
 - If the data matches, you can trust the information read from the module and can write new data on the PLC.

EI0000000158 04/2017 71

Introducing the Unity Pro Project

Local Bus

The application example includes the following devices comprising the Local Bus in Unity Pro:

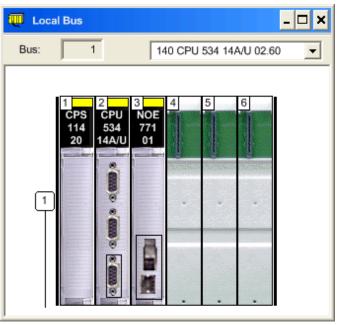

Project Components


The application example includes the following components, created in Unity Pro and described in the remainder of this section:

- declaration of variables (see page 73), used in the program
- I/O scanning (see page 77) by the PLC of module registers
- structured text (see page 78) programming, designed to reset the watchdog if communications between the PLC and the module are lost and then restored
- function block (see page 80) programming, designed to download the I/O and watchdog settings from the PLC to the module, whenever the PLC detects the values of these settings in the module differ from the same settings stored in the PLC

Declaring Variables in Unity Pro

Introduction

The application includes a collection of variables that are declared in the **Variables** page of the **Data Editor**, as in the following figure. These variables are named so that they describe the purpose they serve in the application program.

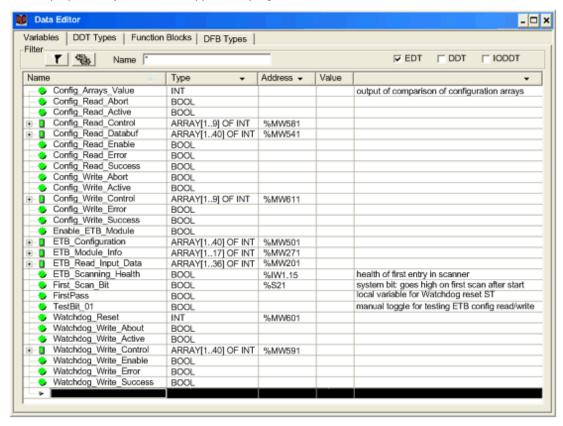

Of the variables declared above and used in the program, the following variables are of particular significance.

ETB_Configuration

This variable array holds the I/O point and watchdog configuration values that are stored in the PLC. It is also used as the Databuf parameter of a MPB_MSTR function block that writes these stored values to the ETBE1M16CP00 module when the module is initialized, and whenever an I/O or watchdog setting in the PLC differs from the same setting in the module.


N	ame	. Type ▼	Address ▼	Value	Comment ~	
9-8	ETB_Configuration	ARRAY[140] OF INT	%MW501			
	 ETB_Configuration(1) 	INT	%MVV501	10	Watchdog Value	
	— ETB_Configuration[2]	INT	%MW502	0	Watchdog State	
	— ETB_Configuration[3]	INT	%MW503	0	Watchdog Behavior	
	 ETB_Configuration[4] 	INT	%MW504	0	Reserved	
	 ETB_Configuration(5) 	INT	%MW505	0	State of the Firmware	
	 ETB_Configuration[6] 	INT	%MW506	0	Fallback Value for Point 1.A.	
	— TB_Configuration[7]	INT	%MW507	0	Fallback Value for Point 1.B	
	<u> </u>	<u> </u>	. :			
	 ETB_Configuration[20] 	INT	%MW520	1	Fallback Value for Point 8.A	
	 ETB_Configuration[21] 	INT	%MW521	1	Fallback Value for Point 8.B	
	 ETB_Configuration(22) 	INT	%MW522	1	I/O Configuration for Point 1.A	
	 ETB_Configuration[23] 	INT	%MW523	1	I/O Configuration for Point 1.B	
Н	•		:	:	:	
	 ETB_Configuration[36] 	INT	%MW536	1	I/O Configuration for Point 8.A	
	 ETB_Configuration[37] 	INT	%MW537	0	I/O Configuration for Point 8.B	
	 ETB_Configuration[38] 	INT	%MW538	0	PNP - NPN Type	
	 ETB_Configuration(39) 	INT	%MW539	0	Input Filter Delay	
	 ETB_Configuration(40) 	INT	%MW540	0	Reserved	,

Config_Read_Databuf

This variable array holds the I/O point and watchdog configuration values that are periodically read from the ETBE1M16CP00 module, using a MBP_MSTR function block. This data is compared against the data stored in the ETB_Configuration variable array to check the accuracy of the module's configuration.

Config_Read_Control

This variable array holds the Control parameter elements of a MBP_MSTR block used to read the I/O and watchdog settings in the ETBE1M16CP00 module.

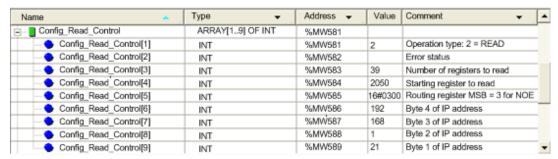

Config_Write_Control


This variable array also contains the Control parameter elements of a MBP_MSTR block, but in this case for the purpose of performing a write operation. In this case, the contents of the ETB_Configuration variable array are written to the ETBE1M16CP00 module when:

- the module is initialized, or
- the PLC detects that an I/O or watchdog setting in the PLC differs from the same setting in the module

This variable array writes to the same module address ranges that are read by the Config_Read_Control variable array. The values of the elements are also the same as the Config_Read_Control variable array, except that the first element—the Operation type—is set to 1, indicating a write operation.

Watchdog_Write_Control

This variable array contains the Control parameter elements of a MBP_MSTR block. It operates in conjunction with both the structured text and a MBP_MSTR function block to toggle the save client configuration bit ON or OFF, which must be performed after communications are restored and before resuming normal operations. Unlike the Config_Read_Control and Config_Write_Control variable arrays, the Watchdog_Write_Control variable array writes to a single register.

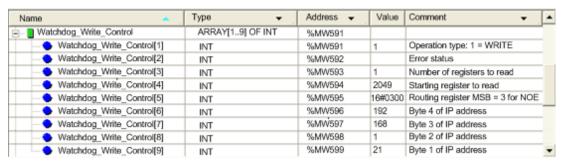

ETB_Input_Data

This variable array holds the data returned by scanning the ETBE1M16CP00 module's inputs. Although the scan includes 36 words of input data, only array element 36—watchdog state—is relevant to this application example, as it is used in the structured text code.

Configuring I/O Scanning


Description

For the purpose of this application example, I/O scanning is configured to read 1 word of input data and 35 words of status data for the ETBE1M16CP00 module, including:

- the input data
- · the port identifier
- the current status for each of the 16 communication points (1.A...8.B)
- the event status for each of the 16 communication points (1.A...8.B)
- the module's global status
- the module's power status
- the module's watchdog state

I/O scanning is configured in the I/O Scanning page of the Network Configuration window. Access this window from the Project Browser by selecting <Project Name> → Communication → Networks → <Network Name>.

On each scan, the PLC copies 36 words on input data to the ETB_Input_Data (see page 76) variable array. The last element in the array—ETB_Input_Data[36]—holds the module's watchdog state. The application's function block code uses this element to toggle the save client configuration register, which thereby resets the watchdog after communications have been lost and then restored.

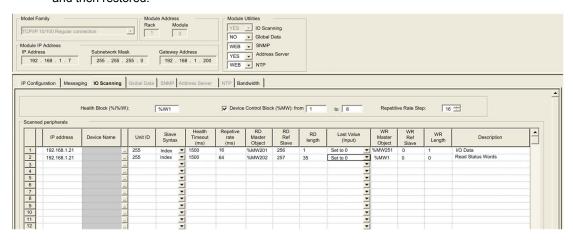

Resetting the Watchdog with Structure Text Code

Description

When the Advantys ETB I/O module loses communication with the Modbus master, and if the watchdog timeout is set to a value other than 0, the module's watchdog is enabled.

After communication between the Modbus master and the module is restored, the watchdog does not automatically return to its original inactive state, but instead remains active.

Your application must reset the state of the watchdog to inactive, by including instructions that:

- detect that the watchdog is active, and
- toggle ON and OFF the command that saves the module configuration

In the following example—for a Unity Pro project using a Quantum master—structured text code resets the watchdog to its inactive state.

NOTE: A power cycle will also reset the watchdog if communications have been restored.

Example

The sample program uses both structured text and function block code to reset the watchdog. On each scan, first the structured text, then the function block code executes.

This example employs the following variables:

Variable name	Data Type	Starting address		Comment
		in PLC	in Module	
FirstPass	BOOL	_	_	An unassigned variable with default value of FALSE.
Watchdog_Reset	BOOL	%MW601	_	A located variable assigned to the Databuf parameter of a MBP_MSTR block that toggles the save module configuration register.
Watchdog_Write_Enable	BOOL	_	_	An unassigned variable assigned to the Enable parameter of a MBP_MSTR block that toggles the save module configuration register.
ETB_Read_Input_Data (see page 76)	ARRAY[136] OF INT	%MW201	Modbus Register 400257	The element at array position 36 contains the watchdog state, detected by I/O scanning (see page 77).

The following structured text code, executed in multiple scans, employs the above described variables and operates in conjunction with a MBP_MSTR function block to detect the watchdog state and toggle the save module configuration command, as explained below:

```
IF NOT FirstPass AND ETB_Read_Input_Data[36] = 1 THEN
     WatchDog_Reset := 1;
     Watchdog_Write_Enable := 1;
     FirstPass := TRUE;

ELSIF FirstPass AND ETB_Read_Input_Data[36] = 0 THEN
     WatchDog_Reset := 0;
     Watchdog_Write_Enable := 1;
     FirstPass := FALSE;

END_IF;
```

The following is an example of how this code should execute:

Scan 1:

The conditions required by the IF NOT line are satisfied, because:

- the variable FirstPass is false (by default), and
- the variable ETB Read Input Data[36]—the watchdog state—is active

Consequently, the next 3 lines of code execute:

- the Watchdog_Write_Enable Boolean is turned ON, triggering the operation of a MBP MSTR block
- the Watchdog_Reset Boolean is set to 1, toggling ON the save module configuration register when the MBP MSTR block executes

The conditions required by the ELSIF line are not yet met, because the watchdog has not yet been set to inactive.

Scan 2 (or later):

The conditions required by the IF NOT line are no longer both satisfied, because the variable FirstPass has been set to TRUE (above).

However, the conditions required by the ELSIF line are both satisfied, because:

- the variable FirstPass is TRUE, and
- the variable ETB_Read_Input_Data[36]—the watchdog state—is now 0, which indicates that the watchdog is again inactive.

Consequently, the next 3 lines of code execute:

- the Watchdog_Write_Enable Boolean is turned ON, triggering the operation of a MBP_MSTR block
- the Watchdog_Reset Boolean is set to 0, toggling OFF the save module configuration register when the MBP MSTR block executes

Subsequent scan:

Because none of the conditions required by the IF NOT and the ELSIF lines are satisfied, none of the conditional code executes. Normal operation has resumed.

Configuring I/O with Function Block Code

Introduction

The sample application program employs function block code to:

- check the accuracy of I/O and watchdog settings in the ETBE1M16CP00 I/O module, and
- communicate the watchdog reset after communication between the PLC and the module is restored after a communication loss


The application includes a total of four sequences of function block code, described below.

Checking I/O and Watchdog Settings

The application program uses the following three function block sequences to check the accuracy of the module's I/O and watchdog settings:

FB Sequence 1:


This FB sequence triggers the first read of the ETB module's I/O and watchdog settings. It begins when the First_Scan_Bit (a system bit) is set to 1, and runs until the Config_Read_Success bit is set to 0 in FB Sequence 2, below.

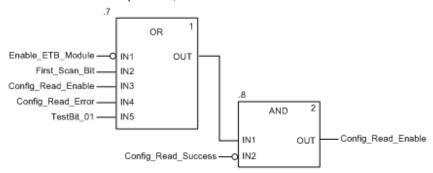

FB Sequence 2:


The second FB sequence reads the current I/O and watchdog configuration of the module and compares it against the configuration stored in the ETB_Configuration variable. If the two sets of data are:

- the same, the variable Enable_ETB_Module is set to 1 and the module continues operations with its present configuration
- different, the variable Enable_ETB_Module is set to 0 and the next sequence of function block code executes

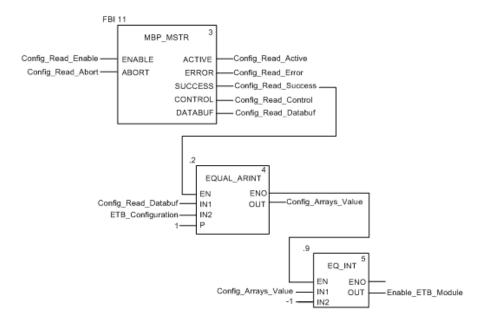

FB Sequence 3:


If the I/O and watchdog settings stored in the PLC differ from the data read from the module, FB sequence 3 writes the stored data from the PLC to the module. This sequence runs until the Config Write Success parameter is set to 1.

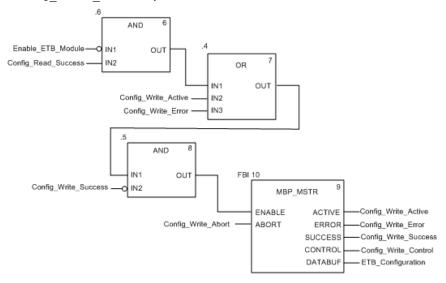

Resetting the Watchdog

FB Sequence 4:

The following sequence of FB code works in coordination with the structured text code to toggle the save module configuration word at Modbus register 402050 to ON and then to OFF.

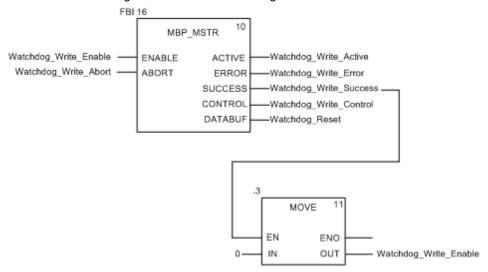

Chapter 7 Diagnostics

Overview

This chapter describes the tools available for diagnosing the state of the module.

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
7.1	LEDs	84
7.2	Diagnostic Web Pages	87

Section 7.1 LEDs

Introduction

The Advantys ETB I/O modules provide LEDs to diagnose the state of the modules. You can use the LED descriptions in this section to troubleshoot your module.

What Is in This Section?

This section contains the following topics:

Topic	Page
LED Behaviors	85
Scrolling LED Messages	86

LED Behaviors


Description

The module provides LEDs for you to visually check its status. You can use the LEDs to monitor power, I/O points, and network link status.

- 2 power LEDs: output (O) and input/module (I)
- 16 logic sided I/O point LEDs
- 2 Ethernet network link LEDs

NOTE: If you cannot see the physical 16 I/O point LEDs, you can instead use the web page labeled I/O Status (see page 89).

The following table shows the LEDs and their indications.

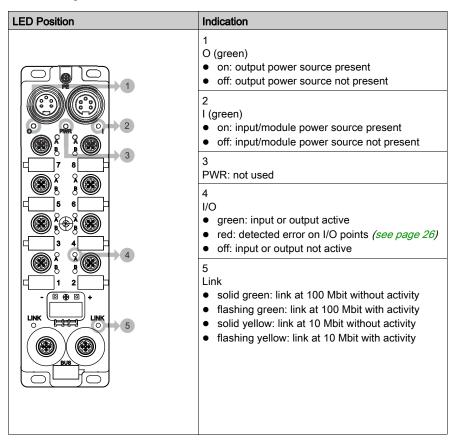

Scrolling LED Messages

Description

The module's scrolling LED displays messages for you to check the module's status. During normal operation, only the source of the IP address, the address itself, and the state of the I/O scanning is displayed. The HMI shows the following specific data when available.

Source information displayed on the HMI:

Message	Description
DHCP	The module is waiting for a response from a DHCP server.
BOOT	The module is waiting for a response from a BootP server.
FACT	The module is applying the factory IP address of 192.168.1.1.

IP address information displayed on the HIMI:

Message	Description
DHCP:192.168.1.1	The IP address of 192.168.1.1 was acquired by a DHCP server.
BOOTP:192.168.1.1	The IP address of 192.168.1.1 was acquired by a BootP server.
FACTORY:192.168.1.1	The IP address is set to the factory IP address of 192.168.1.1.
STATIC:192.168.1.21	The IP address of 192.168.1.21 was manually set by the user, either through the embedded web pages or push buttons.
DEFx	The module detects an IP conflict and defends its own IP address.
	NOTE: x: number of times the module defends its IP address
IP CONFLICT on 192.168.1.1	The module detects an IP address conflict on 192.168.1.1.

Module status information displayed on the HMI:

Message	Description
WLNK	There is no Ethernet link on any ports of the switch.
PING	The module is receiving PING requests on the network.
IO:ERR	A detected I/O error exists on one or more points.
WD:ACTIV	The watchdog was triggered and is now active.

Section 7.2 Diagnostic Web Pages

Introduction

The Advantys ETB I/O modules provide embedded web pages that you can use to display the state of the modules. Use these pages to verify settings and troubleshoot your module.

What Is in This Section?


This section contains the following topics:

Topic	Page
I/O Data: I/O Value	88
I/O Data: I/O Status	
Diagnosis: Ethernet Statistics	90
Diagnosis: Network Interface	92

I/O Data: I/O Value

Description

This web page displays the current state of the inputs and outputs for the module. Like all the web pages in this section, this is a static page and you must click **Refresh** to update the information.

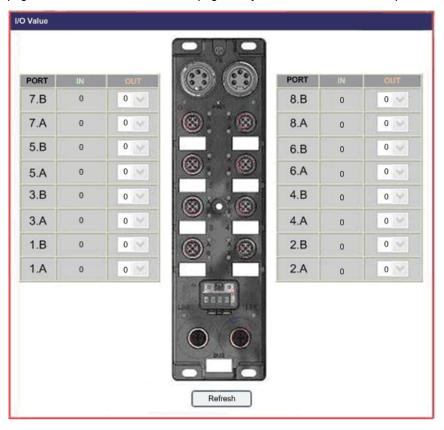

I/O Data: I/O Status

Description

This page displays the I/O status of the module. Like all the web pages in this section, this is a static page and you must click **Refresh** to update the information.

NOTE: You can also retrieve the Current Status information by looking at the LEDs (see page 85).

Current Status: shows the current condition of I/O points

- green: no detected output power loss and no detected short circuit on the input power
- red: detected output power loss or detected short circuit on the input power

Event Status: latches Current Status since last cleared

- green: no detected error present with the I/O points since the last reset
- red: detected error present with the I/O points since the last reset


General Status: reflects status of all I/O points

- green: neither the Current Status or Event Status is red
- red: when both the Current Status and Event Status are red, or when just the Event Status is red

Output Power Status: signals presence or absence of output power

- green: output power is present
- red: output power is absent

NOTE: You can also use this web page to reset the Event Status of individual points. Click **Reset** to clear the Event Status for individual I/O points. This also refreshes the web page.

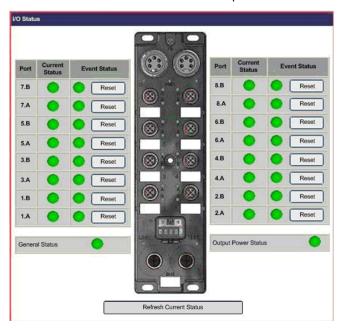

Diagnosis: Ethernet Statistics

Description

This page displays the details of the Ethernet interface counters and Ethernet media counters by port.

- Click Reset to set all values to 0.
- Click **Refresh** to update the information on the web page.

NOTE: Port 0 is on the bottom right of the module, and port 1 is on the bottom left.



Interface counters:

Field	Description
In Octets	Number of packets received in the interface
In Ucast Packets	Number of unicast packets received in the interface
In NUcast Packets	Number of non-unicast packets received in the interface
In Discards	Number of inbound packets discarded
In Errors	Number of incoming packets with detected errors (undersize, fragments, oversize, jabbers, detected symbol error, detected CRC error, detected alignment error)
In Unknown Protos	Inbound packets discarded due to unknown or unsupported protocol
Out Octets	Number of output packets transmitted in the interface
Out Ucast Packets	Number of unicast output packets transmitted in the interface
Out NUcast Packets	Number of non-unicast output packets transmitted in the interface
Out Discards	Number of outbound packets discarded
Out Errors	Number of outbound packets that could not be transmitted due to detected errors

Media counters:

Field	Description
Alignment Errors	Number of detected alignment errors in Rx packets
Single Collisions	Successfully transmitted frames on a port for which transmit is inhibited by exactly one collision
Multiple Collisions	Successfully transmitted frames on a port for which transmit is inhibited by more than one collision
Deferred Transmissions	Transmitted packets by a port for which the first transmit attempt is delayed due to the busy medium
Excessive Collisions	Count of frames for which transmit is unsuccessful due to excessive collisions
Frame Too Long	Received oversize packets with good CRC (max: 1536 or 1522 bytes)

Diagnosis: Network Interface

Description


This read only page displays information about the network interface by port:

- Speed
- Negotiation
- Duplex

The module enables auto-negotiation, so the speed and duplex are automatically configured.

Like all the web pages in this section, this is a static page and you must click **Refresh** to update the information.

NOTE: Port 0 is on the bottom right of the module, and port 1 is on the bottom left.

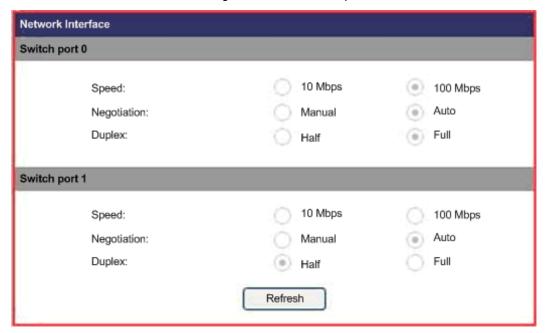

Chapter 8

Replacing the Advantys ETB I/O Module

Replacing the Module

Introduction

The below steps show you how to replace your Modbus TCP/IP module by first configuring it on a bench. The configuration data from the original module must be transferred to the replacement for proper system operation.

▲ WARNING

UNINTENDED EQUIPMENT OPERATION

You must set up the replacement to match the same connections and configurations in the original module, as this is necessary for proper system operation.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

The following table shows the steps needed to replace your module. Details of each step are provided after the table.

Step	Action
1	remove power
2	remove original module
3	apply module power
4	assign IP address and, if required, master controller IP address
5	configure remaining module settings for replacement
6	mount replacement
7	attach cables
8	verify settings and apply output power

Removing Original Module

Remove the power supply, I/O, and network connectors, making note of which cables go to which port. It is recommended that you mark the connector locations appropriately to make sure you reassemble them in the same order. Then detach the module from the mounted surface.

Assigning IP Address and Master Controller IP Address

You must assign the replacement module an IP address, master controller IP address (if applicable), and the related settings identical to the ones assigned to the original.

For a static IP address and the related settings:

- · Retrieve the original IP address.
- Refer to the topic Configuring IP Parameters (see page 41) to use the web pages, or see the
 topic Manipulating Push Buttons (see page 44) to use the HMI push buttons. Make sure to
 modify the IP address and the related settings to match those of the original.

For a BootP assigned IP address:

- Retrieve the original IP address.
- Refer to the topic Configuring IP Parameters (see page 43) to use the web pages, or see the
 topic Manipulating Push Buttons (see page 44) to use the HMI push buttons. Make sure to
 modify the server to serve the original IP address to the module's MAC address.

For a DHCP assigned IP address:

- Retrieve the original Device Name.
- Refer to the topic Configuring IP Parameters (see page 42) to use the web pages, or see the
 topic Manipulating Push Buttons (see page 44) to use the HMI push buttons. Make sure to
 modify the **Device Name** to match that of the original.

If applicable, make sure you set the master controller IP address to be identical to the one assigned to the original. Refer to the topic Identifying a Master Controller (see page 46) for instructions on assigning this address.

Configuring Remaining Module Settings

Configuring the module settings for the replacement depends on how they were configured for the original module.

If configured with the PLC:

• The module settings for the replacement are automatically configured once the IP address and, if applicable, master controller IP address assignments are complete.

If configured with the embedded web pages:

- Obtain the originally configured module settings.
- See the topic on Configuring the Watchdog (see page 52) for instructions on assigning module settings such as fallback values, and see the topic on Configuring I/O (see page 49) for instructions on configuring the I/O parameters for ETB1EM16CP00.

NOTE: You can only configure the I/O settings for ETB1EM16CP00, and using the PLC will facilitate future module replacement.

Mounting Replacement

Screw the module back in place, making sure to properly torque so as not to overtighten and damage the module case.

Attaching Cables

Attach the cables to the replacement in the same locations as they were on the original module.

Verifying Settings

Verify that the connections and configurations match those of the original module. Then apply output power and check module functionality.

Appendices



Appendix A

Process Image Maps for the Advantys ETB I/O Modules

Overview

The following topics describe the Modbus registers that are available for communication purposes in the Advantys ETB I/O modules.

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Modbus Registers	100
Output Data Registers	101
Input Data Registers	102
Ethernet Configuration Registers	104
Module Status Registers	105
Module Information Registers	
I/O and Watchdog Configuration Registers	

Modbus Registers

Description


Each module presents a data image containing 3072 registers. These registers are grouped into blocks according to their specific purpose, as shown below.

		p p ,	
400001	Block 1	17 registers	Output Data
400018	Block 2	239 registers	Reserved
400257 400292	Block 3	36 registers	Input Data
400293 400512	Block 4	219 registers	Reserved
400513 400768	Block 5	256 registers	Ethernet Configuration
400769	Block 6	256 registers	I/O Module Status
401025 402048	Block 7	1024 registers	I/O Module Information
402049	Block 8	1024 registers	I/O Configuration

Output Data Registers

Description

Modbus register 400001 maps output data to module I/O points as follows:

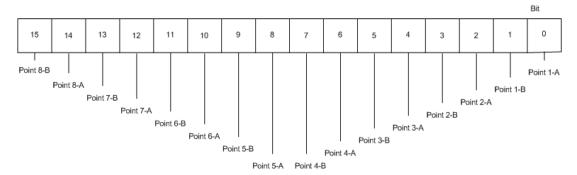

The value configured for each output (0 or 1) drives the output point.

Registers 400002...400017 are not used.

Input Data Registers


Introduction

The input data image consists of 36 registers:

Register numbers	Description	
400257	The data from up to 16 inputs or the echo from the outputs.	
400258400292	The following input status data: • the current status of each input point • the event status of each input point • global status • power status • watchdog status	

Input Data

Modbus register 400257 maps input data to module I/O points as follows:

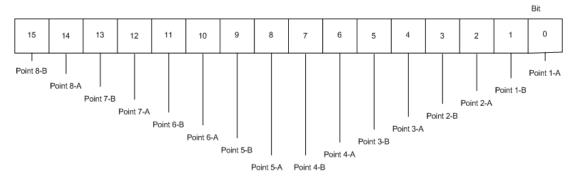

All data presented by Modbus registers 400257 through 400292 are read only.

Input Status Registers

The following registers contain input status data, all of which are assigned to bit 0 within the word.

Modbus Register Address	Access	Length In word	Description
400258	RO	1	PIN P1.A Current Status
400259	RO	1	PIN P1.B Current Status
• • •			• • •
400272	RO	1	PIN P8.A Current Status
400273	RO	1	PIN P8.B Current Status
400274	RO	1	PIN P1.A Event Status

Modbus Register Address	Access	Length In word	Description
400275	RO	1	PIN P1.B Event Status
400288	RO	1	PIN P8.A Event Status
400289	RO	1	PIN P8.B Event Status
400290	RO	1	Global Status
400291	RO	1	Power Status
400292	RO	1	Watchdog State

Ethernet Configuration Registers

Description

The following registers contain the Ethernet configuration:

Modbus Register Address	Access	Length (words)	Value	Description
400513	R/W	1	!0 = to save the configuration	save Ethernet modification
400514	R/W	1	0 = static address IP address source 1 = DHCP 2 = BOOTP 3 = FACTORY	
400515	R/W	1	2 lower octets (0-255)	IP address low byte ¹
400516	R/W	1	2 higher octets (0-255)	IP address high byte ¹
400517	R/W	1	2 lower octets (0-255)	maximum subnet address low byte ¹
400518	R/W	1	2 higher octets (0-255)	maximum subnet address high byte ¹
400519	RO	3	read from device	MAC address
400522	RO	2	read from device	serial number
400524	RO	1	read from device	current TCP connection
400525	RO	1	read from device	total TCP connections
400526	RO	1	read from device	timeout number
400527	R/W	1	2 lower octets (0-255)	gateway IP address low byte ¹
400528	R/W	1	2 higher octets (0-255)	gateway IP address high byte ¹
400529	R/W	5	use with DHCP server	DHCP client Identifier
400534	R/W	1	2 lower octets (0-255)	Master controller IP address low byte ¹
400535	R/W	1	2 higher octets (0-255)	Master controller IP address high byte ¹

- 1. For example, the IP address 172.16.27.172 would be represented as:
- low byte = 0x1BAC (27.172); where 0x1B = 27 and 0xAC = 172
- high byte = 0xAC10 (172.16); where 0xAC =172 and 0x10 = 16

NOTE: It is recommended practice to use the module web pages to set the Ethernet parameters. Only the master controller IP address, set in registers 400534 and 400535, should be set using the PLC.

Registers 400536...400768 are not used.

Module Status Registers

Description

These registers indicate module status. They only use the first bit in each word like in the input process image. Use RW access registers to write to and reset the event status using MBP_MSTR function blocks.

NOTE: The RO access registers are for reference, as they duplicate the information provided in the input process image.

Modbus Register Address	Access	Length (words)	Values ¹	Description
400769	RO	1	0 or 1	point 1. A Current Status
400770	RO	1	0 or 1	point 1.B Current Status
• • •				
400783	RO	1	0 or 1	point 8. A Current Status
400784	RO	1	0 or 1	point 8.B Current Status
400785	RW	1	0 or 1	point 1. A Event Status ²
400786	RW	1	0 or 1	point 1.B Event Status ²
				2
400799	RW	1	0 or 1	point 8. A Event Status ²
400800	RW	1	0 or 1	point 8.B Event Status ²
400801	RO	1	0 or 1	Global Status
400802	RO	1	0 or 1	Output Power Status

- 1. The values indicate:
- 0 = OK
- 1 = short circuit or overload
- 2. Event Status references the occurrence (1), or non-occurrence (0) of an event since the last power cycle.

Registers 400803...401024 are not used.

Module Information Registers

Description

This range of registers contains information on the I/O process image and shows information about firmware and version.

Modbus Register Address	Access	Length (words)	Description
401025	RO	1	firmware version - minor
401026	RO	1	firmware version - major
401030	RO	4	firmware name
401034	RO	1	editable I/O configuration
401035	RO	8	model number

Registers 401036...402048 are not used.

I/O and Watchdog Configuration Registers

Description

To save a new I/O module configuration, simply write a 1 to the save client configuration register (402049), and then write a 0 to the same register.

Modbus Register Address	Access	Length (words)	Values	Description
402049	R/W	1	!0 to save the configuration	save client configuration
402050	R/W	1	!0 = * 100ms 0 = not active	watchdog value Note: This value is multiplied by a factor of 100 to produce the watchdog timeout setting. Applied to points with fallback set to ON.
402051	R/W	1	0 = not active 1 = active	watchdog state
402052	R/W	1	0 = apply output fallback 1 = hold output	watchdog behavior
			• • •	
402054	R/W	1	0 = OK 1 = PB on Firmware	firmware state
402055	R/W	1	used when I/O pin is an output 0 = OFF !0 = ON	fallback for point 1. A
402056	R/W	1	used when I/O pin is an output 0 = OFF !0 = ON	fallback for point 1.B
402069	R/W	1	used when I/O pin is an output 0 = OFF !0 = ON	fallback for point 8. A
402070	R/W	1	used when I/O pin is an output 0 = OFF !0 = ON	fallback for point 8.B
402071	RO or RW	1	0 = input pin 1 = output pin 2 = universal I/O other = universal I/O	I/O configuration for point 1. A
402072	RO or RW	1	0 = input pin 1 = output pin 2 = universal I/O other = universal I/O	I/O configuration for point 1.B

Modbus Register Address	Access	Length (words)	Values	Description
402085	RO or RW	1	0 = input pin 1 = output pin 2 = universal I/O other = universal I/O	I/O configuration for point 8. A
402086	RO or RW	1	0 = input pin 1 = output pin 2 = universal I/O other = universal I/O	I/O configuration for point 8.B
402087	RO or RW	1	0 = PNP 1= PNP	PNP-NPN input type
402088	RO or RW	1	0 = 0 ms 1 = 0.5 ms 2 = 1 ms 3 = 1.5 ms 4 = 2 ms 5 = 2.5 ms 6 = 5 ms	input filter delay

Registers 402089...403072 are not used.

Glossary



A

auto-negotiation/auto-sensing

The ability of a device (at the MAC sub-layer) to identify the speed (10 or 100 Mb/s) and the duplex or half mode of a connection and to adjust it, according to clause 28 of the IEEE 802.3u standard.

B

bit/s

Bits per second, unit of transmission speed.

BootP

(bootstrap protocol) A TCP/IP network protocol that offers network nodes request configuration information from a BOOTP server node.

D

default

A value automatically assigned by the computer in a software program. Usually, this value can be changed.

DHCP

(*dynamic host configuration protocol*) Communications protocol that assigns IP addresses to devices on the network, based on BootP.

Ε

embedded web pages

Embedded Web pages (accessed by an installed HTTP server) provide Ethernet communications modules with easy access to devices anywhere in the world from standard browsers such as Internet Explorer or Netscape Navigator.

ETB

Ethernet Terminal Block

Ethernet

A LAN cabling and signaling specification used to connect devices within a defined area, e.g., a building. Ethernet uses topology such as bus or star to connect different nodes on a network.

EIO0000000158 04/2017

F

fallback state

A stable state to which an Advantys I/O module can return in the event that its communication connection is disrupted.

fallback value

The value that a device assumes during fallback. Typically, the fallback value is either configurable or the last stored value for the device.



gateway

A combination of hardware and software that interconnects otherwise incompatible networks or networking devices. Gateways include packet assembler/disassembler (pads) and protocol converters.

Н

HMI

(human-machine interface) The screen of a device, the design of which makes its use intuitive to the user.

ı

1/0

(input/output) The transfer of data to and from a computer.

I/O module

In a programmable controller system, an I/O module interfaces directly to the sensors and actuators of the machine/process. This module is the component that mounts in an I/O base and provides electrical connections between the controller and the field devices. Normal I/O module capacities are offered in a variety of signal levels and capacities.

IEC

(International Electrotechnical Commission Carrier) Founded in 1884 to focus on advancing the theory and practice of electrical, electronics, and computer engineering, as well as computer science. IEC 1131 is the specification that deals with industrial automation equipment.

Internet

A series of interconnected local, regional, national and international networks, linked using TCP/IP. Internet links may be government, university and research sites. It provides E-mail, remote login and file transfer services.

110 EI00000000158 04/2017

IΡ

(Internet protocol). That part of the TCP/IP protocol family that tracks the Internet addresses of nodes, routes outgoing messages, and recognizes incoming messages.

IP address

The 32-bit address associated with a workstation in connection with TCP/IP Internet.

L

LED

Light emitting diode. An indicator that lights up when electricity passes through it. It indicates the operation status of a communications module.

link

Physical connection between two nodes in a network. It can consist of a data communication circuit or a direct channel (cable) connection.

M

MAC address

The *media access control* address of a device, which is burned into a DNI card and is added near the beginning of the packet.

Modbus

Modbus is an application layer messaging protocol. Modbus provides client and server communications between devices connected on different types of buses or networks. Modbus TCP is the Modbus type that transmits data over Ethernet.

N

network

An interconnected system of computers that can communicate with each other and share files, data and resources.

NPN inputs

The field sensor sink or pull current from input circuitry of the module to 0 VDC.

NPN outputs

NPN outputs are sinking type outputs also referred to as True Low. When energized, the outputs pull current through the load to turn on the field device.

P

ping

(packet Internet groper) To test the network by trying to reach a destination with an ICMP echo request and waiting for a reply, type ping.exe at the command line.

PLC

(programmable logic controller) An industrial control computer, also known simply as a controller.

PNP inputs

The sensor sources or push current from the field sensor to the input circuit of the module, typically a 24 VDC signal.

PNP outputs

PNP outputs are source type output also referred to as True High. When energized the output pushes current through the load to turn the output device on.

port

The physical connector on a device enabling the connection to be made.

process image

Serves as a real-time data area for the data exchange process. The process image includes an input buffer that contains current data and status information from the module and an output buffer that contains the current outputs for the module.

protocol

Any standard method of communicating over a network.

S

server

A computer that provides resources to be shared on the network, such as files (file server) or terminals (terminal server).

subnet

A part of a network that shares a network address with the other parts of a network. A subnet may be physically and/or logically independent of the rest of the network. A part of an internet address called a subnet mask, which is ignored in IP routing, distinguishes the subnet.

switch

A multiport Ethernet device designed to increase network performance by allowing only essential traffic on the attached individual Ethernet segments. Packets are filtered or forwarded based upon their source and destination addresses.

112 EI0000000158 04/2017

T

timeout

If communication stops, the program waits the specified number of seconds before trying to communicate again.

topology

The arrangement of the nodes and connecting hardware that comprises the network. Types include ring, bus, star and tree.

114 EI0000000158 04/2017

Index



A	description
	ETB1EM08E08SPP0, 22
accessories	ETB1EM12E04SPP0, 22
ETB1EM08E08SPP0, <i>15</i>	ETB1EM16CP00, 22
ETB1EM12E04SPP0, <i>15</i>	ETB1EM16EPP0, 22
ETB1EM16CP00, <i>15</i>	DHCP, 42
ETB1EM16EPP0, <i>15</i>	diagnosing HMI messages
application example	ETB1EI08E08SPP0, <i>86</i>
configuring I/O, 80	ETB1EI12E04SPP0, 86
ETB1EM08E08SPP0, <i>65</i>	ETB1EI16CP00, 86
ETB1EM12E04SPP0, <i>65</i>	ETB1EI16EPP0, 86
ETB1EM16CP00, <i>65</i>	diagnosing LEDs
ETB1EM16EPP0, <i>65</i>	ETB1EM08E08SPP0, <i>85</i>
IP address, 69	ETB1EM12E04SPP0, <i>85</i>
local bus, 72	ETB1EM16CP00, 85
variable declarations, 73	ETB1EM16EPP0, <i>85</i>
	dimensions
В	ETB1EM08E08SPP0, <i>25</i>
	ETB1EM12E04SPP0, 25
BootP, <i>43</i>	ETB1EM16CP00, 25
	ETB1EM16EPP0, <i>25</i>
С	Display
	ETB1EM08E08SPP0, 29
cables	ETB1EM12E04SPP0, 29
ETB1EM08E08SPP0, 15, 57, 62	ETB1EM16CP00, 29
ETB1EM12E04SPP0, 15, 57, 62	ETB1EM16EPP0, 29
ETB1EM16CP00, 15, 57, 62	
ETB1EM16EPP0, <i>15</i> , <i>57</i> , <i>62</i>	_
code	E
function blocks, 80	embedded web pages, 40, 87
structured text, 78	accessing, 67
connecting cables	ETB1EM08E08SPP0, 33, 69
ETB1EM08E08SPP0, <i>57</i>	ETB1EM12E04SPP0, 33, 69
ETB1EM12E04SPP0, <i>57</i>	ETB1EM16CP00, 33, 69
ETB1EM16CP00, <i>57</i>	ETB1EM16EPP0, 33, 69
ETB1EM16EPP0, <i>57</i>	in/out configuration, 50
	Ethernet cables
D	ETB1EM08E08SPP0, <i>58</i>
	ETB1EM12E04SPP0, <i>58</i>
default IP address, <i>41</i>	ETB1EM16CP00, <i>58</i>
	FTB1FM16FPP0. <i>58</i>

Ethernet configuration registers	1
ETB1EM08E08SPP0, 104	I/O assignments
ETB1EM12E04SPP0, 104	ETB1EM08E08SPP0, 28
ETB1EM16CP00, <i>104</i>	ETB1EM12E04SPP0, 28
ETB1EM16EPP0, 104	ETB1EM16CP00, 28
Ethernet status	ETB1EM16EPP0, 28
ETB1EM08E08SPP0, <i>90</i> ETB1EM12E04SPP0, <i>90</i>	I/O cables
ETB1EM16CP00, <i>90</i>	ETB1EM08E08SPP0, <i>58</i>
ETB1EM16EPP0, <i>90</i>	ETB1EM12E04SPP0, 58
ETBTEMTOETT 0, 90	ETB1EM16CP00, <i>58</i>
	ETB1EM16EPP0, <i>58</i>
F	I/O configuration
- fallback	PLC (programmable logic controller, 49
ETB1EM08E08SPP0, <i>52</i>	programmable logic controller (PLC), 49
ETB1EM00E003FF0, <i>32</i> ETB1EM12E04SPP0, <i>52</i>	I/O data (read only)
ETB1EM16CP00, <i>52</i>	ETB1EM08E08SPP0, <i>88</i>
ETB1EM16EPP0, <i>52</i>	ETB1EM12E04SPP0, <i>88</i>
LIBILIMIOLI I 0, 32	ETB1EM16CP00, <i>88</i>
	ETB1EM16EPP0, 88
G	I/O registers
ground cable	ETB1EM08E08SPP0, 107
ETB1EM08E08SPP0, 58	ETB1EM12E04SPP0, 107
ETB1EM00E0031 1 0, 30 ETB1EM12E04SPP0, 58	ETB1EM16CP00, <i>107</i>
ETB1EM16CP00, <i>58</i>	ETB1EM16EPP0, <i>107</i>
ETB1EM16EPP0, <i>58</i>	I/O status
ETBTEWTOETT 0, 00	ETB1EM08E08SPP0, <i>89</i>
	ETB1EM12E04SPP0, <i>89</i>
H	ETB1EM16CP00, <i>89</i>
HMI (human-machine interface), 44	ETB1EM16EPP0, <i>89</i>
ETB1EM08E08SPP0, 29	input
ETB1EM12E04SPP0, 29	ETB1EM08E08SPP0, 49
ETB1EM16CP00, 29	ETB1EM12E04SPP0, 49
ETB1EM16EPP0, <i>29</i>	ETB1EM16CP00, 49
human-machine interface (HMI), 44	ETB1EM16EPP0, 49
ETB1EM08E08SPP0, <i>29</i>	input assignments
ETB1EM12E04SPP0, 29	ETB1EM08E08SPP0, 28
ETB1EM16CP00, <i>29</i>	ETB1EM12E04SPP0, 28
ETB1EM16EPP0, <i>29</i>	ETB1EM16CP00, 28
	ETB1EM16EPP0, <i>28</i> input data (read only)
	ETB1EM08E08SPP0, 88
	ETB1EM06E063FF0, <i>88</i>
	ETB1EM12E043FF0, 88
	ETB1EM16CF00, 88

116 EI00000000158 04/2017

input data registers ETB1EM08E08SPP0, 102 ETB1EM12E04SPP0, 102 ETB1EM16CP00, 102 ETB1EM16EPP0, 102 input status ETB1EM08E08SPP0, 89 ETB1EM12E04SPP0, 89 ETB1EM16CP00, 89 ETB1EM16EPP0, 89 installation	LEDs (light emitting diodes) ETB1EM08E08SPP0, 85 ETB1EM12E04SPP0, 85 ETB1EM16CP00, 85 ETB1EM16EPP0, 85 light emitting diodes (LEDs) ETB1EM08E08SPP0, 85 ETB1EM12E04SPP0, 85 ETB1EM16CP00, 85 ETB1EM16CP00, 85 ETB1EM16CP00, 85
cables, 57 connecting cables, 57 ETB1EM08E08SPP0, 56 ETB1EM12E04SPP0, 56 ETB1EM16CP00, 56 ETB1EM16EPP0, 56 ETB1EM16EPP0, 56 Ethernet cables, 58 ground cable, 58 I/O cables, 58 network cables, 58 power cables, 59 IP address assigning, 40 BootP, 43 DHCP, 42 factory default, 41 Master Controller, 46 static, 41 static IP address, 69 user-defined, 41 IP address source, 44	M Master Controller IP Address, 46 Modbus registers, 100 module information registers ETB1EM08E08SPP0, 106 ETB1EM12E04SPP0, 106 ETB1EM16CP00, 106 ETB1EM16EPP0, 106 module status registers ETB1EM08E08SPP0, 105 ETB1EM16CP00, 105 ETB1EM16CP00, 105 ETB1EM16CP00, 105 ETB1EM16EPP0, 105 mounting ETB1EM08E08SPP0, 56 ETB1EM12E04SPP0, 56 ETB1EM16CP00, 56
IP configuration, 38 IP67 ETB1EM08E08SPP0, 10 ETB1EM12E04SPP0, 10 ETB1EM16CP00, 10 ETB1EM16EPP0, 10	N network cables ETB1EM08E08SPP0, 58 ETB1EM12E04SPP0, 58 ETB1EM16CP00, 58 ETB1EM16EPP0, 58 network interface (read only) ETB1EM08E08SPP0, 92 ETB1EM12E04SPP0, 92 ETB1EM16CP00, 92 ETB1EM16CP00, 92 ETB1EM16EPP0, 92

network topology, 11	point assignments
	I/O port connectors, 26
0	point status ETB1EM08E08SPP0, <i>89</i>
output	ETB1EM12E04SPP0, 89
ETB1EM08E08SPP0, 49	ETB1EM16CP00, 89
ETB1EM12E04SPP0, <i>49</i>	ETB1EM16EPP0, 89
ETB1EM16CP00, <i>49</i>	port assignments
ETB1EM16EPP0, <i>49</i>	ETB1EM08E08SPP0, 28
output assignments	ETB1EM12E04SPP0, <i>28</i>
ETB1EM08E08SPP0, <i>28</i>	ETB1EM16CP00, 28
ETB1EM12E04SPP0, <i>28</i>	ETB1EM16EPP0, <i>28</i>
ETB1EM16CP00, 28	power cables
ETB1EM16EPP0, <i>28</i>	ETB1EM08E08SPP0, <i>59</i>
output data (read only)	ETB1EM12E04SPP0, <i>59</i>
ETB1EM08E08SPP0, 88	ETB1EM16CP00, <i>59</i>
ETB1EM12E04SPP0, <i>88</i>	ETB1EM16EPP0, <i>59</i>
ETB1EM16CP00, 88	programmable logic controller (PLC
ETB1EM16EPP0, <i>88</i>	I/O configuration, 49
output data registers	watchdog configuration, <i>52</i>
ETB1EM08E08SPP0, <i>101</i>	push buttons, 44
ETB1EM00E00311 0, 101	puon buttono, 77
ETB1EM16CP00, 101	
ETB1EM16EPP0, 101	R
output status	registers
ETB1EM08E08SPP0, 89	ETB1EM08E08SPP0, <i>100</i>
ETB1EM00E00011 0, 05 ETB1EM12E04SPP0, 89	ETB1EM12E04SPP0, <i>100</i>
ETB1EM16CP00, <i>89</i>	ETB1EM12E043FF0, 700 ETB1EM16CP00, 100
ETB1EM16EPP0, 89	ETB1EM16CF00, 100 ETB1EM16EPP0, 100
ETBTENTIOEFFO, 09	Ethernet configuration, 104
	I/O, <i>107</i>
P	
•	input data, <i>102</i> module information, <i>106</i>
password setup, 36	module status, 105
pin assignments	
ETB1EM08E08SPP0, 26	output data, 101
ETB1EM12E04SPP0, 26	watchdog, 107
ETB1EM16CP00, <i>26</i>	replacing module
ETB1EM16EPP0, 26	ETB1EM08E08SPP0, <i>93</i>
Ethernet connectors, 27	ETB1EM12E04SPP0, <i>93</i>
network connectors, 27	ETB1EM16CP00, <i>93</i>
power connectors, 26	ETB1EM16EPP0, <i>93</i>
PLC (programmable logic controller)	
I/O configuration, 49	
watchdog configuration, 52	

118 EI0000000158 04/2017

S	web pages, <i>40</i> , <i>87</i>
size	accessing, 67
ETB1EM08E08SPP0, 25 ETB1EM12E04SPP0, 25 ETB1EM16CP00, 25 ETB1EM16EPP0, 25 Source of IP address, 44 specifications ETB1EM08E08SPP0, 22 ETB1EM12E04SPP0, 22 ETB1EM16CP00, 22 ETB1EM16EPP0, 22 Static IP address ETB1EM08E08SPP0, 69 ETB1EM12E04SPP0, 69 ETB1EM12E04SPP0, 69 ETB1EM16CP00, 69 ETB1EM16CP00, 69 ETB1EM16CP00, 69	ETB1EM08E08SPP0, 33, 69 ETB1EM12E04SPP0, 33, 69 ETB1EM16CP00, 33, 69 ETB1EM16EPP0, 33, 69 in/out configuration, 50 web server, 87 ETB1EM08E08SPP0, 33 ETB1EM12E04SPP0, 33 ETB1EM16CP00, 33 ETB1EM16CP00, 33 Wiring, 63
TCP connections, 46 topology, 11	
W	
watchdog	
reset, 78, 82	
watchdog configuration ETB1EM08E08SPP0, <i>52</i>	
ETB1EM12E04SPP0, <i>52</i>	
ETB1EM16CP00, <i>52</i>	
ETB1EM16EPP0, <i>52</i>	
PLC (programmable logic controller), <i>52</i>	
programmable logic controller (PLC), <i>52</i> watchdog registers	
ETB1EM08E08SPP0, 107	
ETB1EM12E04SPP0, <i>107</i>	
ETB1EM16CP00, <i>107</i>	
ETB1EM16EPP0, <i>107</i>	

120 EI00000000158 04/2017