

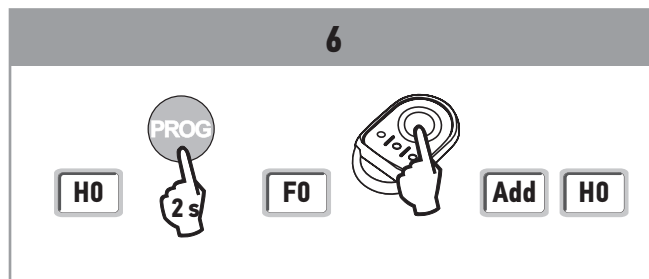
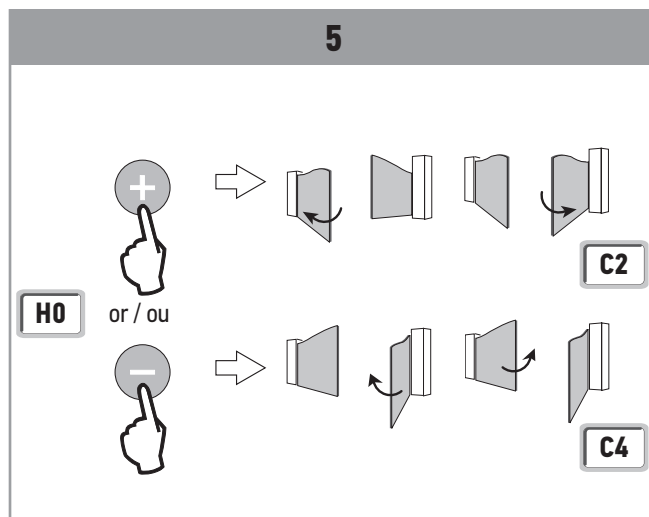
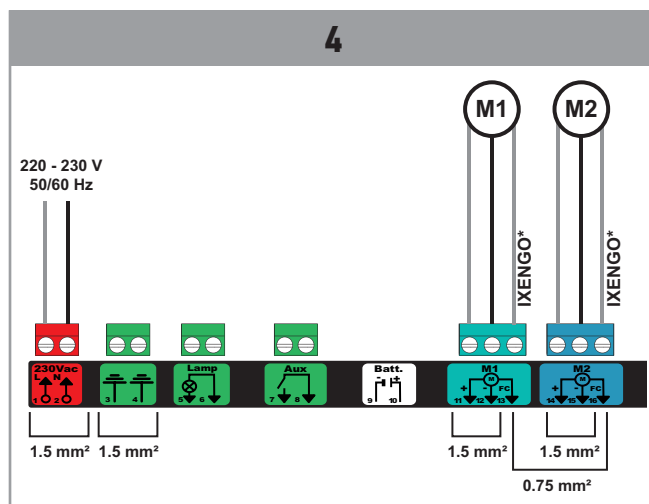
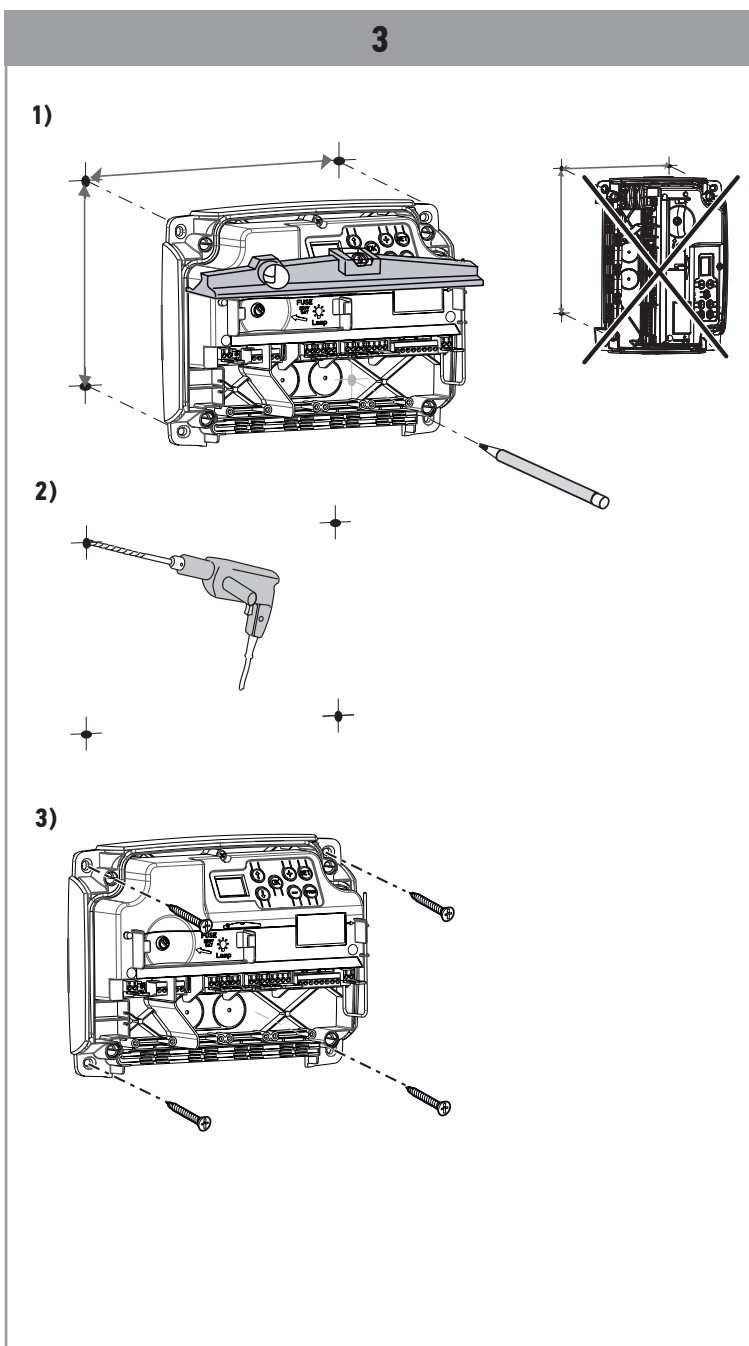
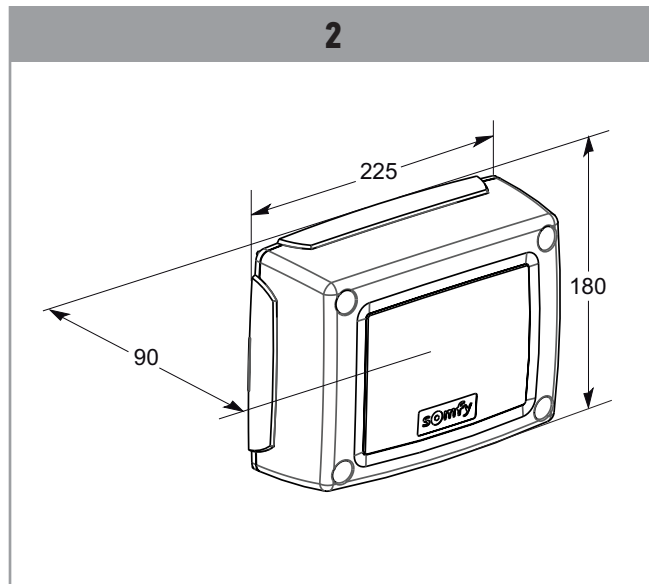
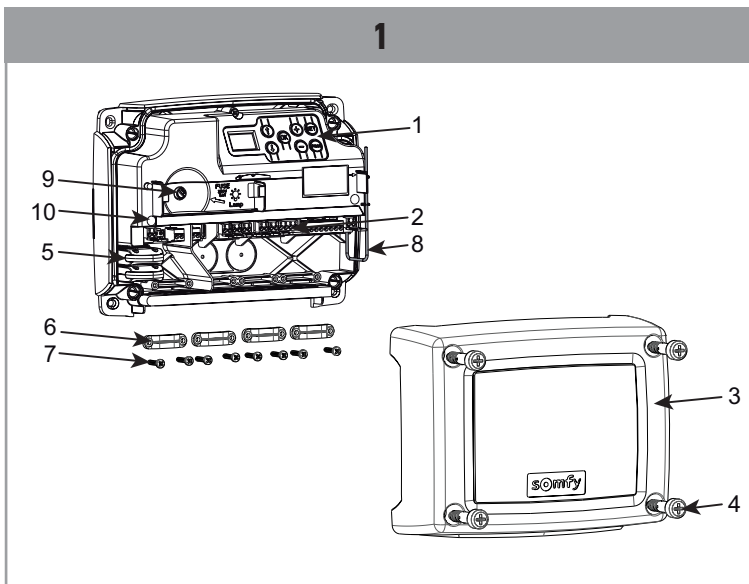


CONTROL BOX 3S RTS


- | | |
|---|--|
| FR Manuel d'installation - Illustrations | IT Manuale di installazione - Illustrazioni |
| EN Installation instructions - Illustrations | ES Manual de instalación - Ilustraciones |
| DE Montageanleitung - Abbildungen | EL Εγχειρίδιο εγκατάστασης - Εικόνες |
| NL Installatiehandboek - Illustraties | TR Montaj kılavuzu - Şekiller |
| PL Instrukcja montażu - Ilustracje | FA راهنمای نصب - تصاویر |
| RU Руководство по установке —
иллюстрации | AR دليل التركيب - الرسوم التوضيحية |
| CS Instalační příručka - Ilustrace | |
| RO Manual de instalare - Ilustrații | |

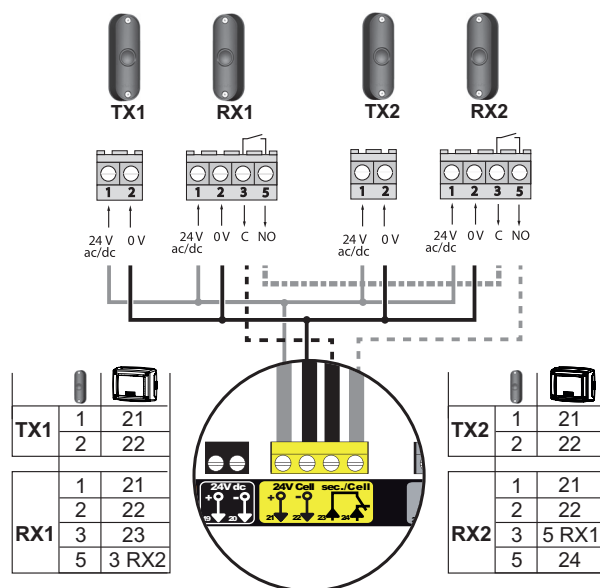



A $\overline{PO7} = 1$









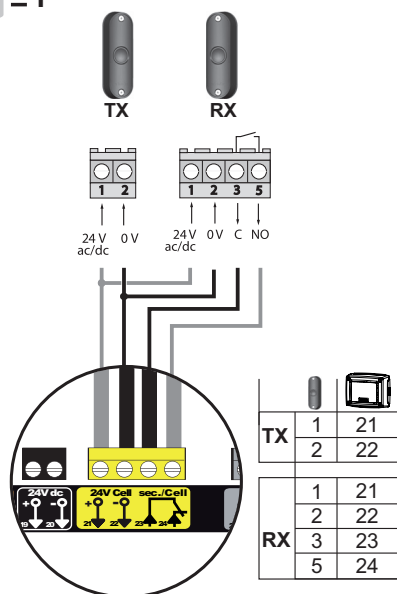


B $\overline{PO7} = 3$


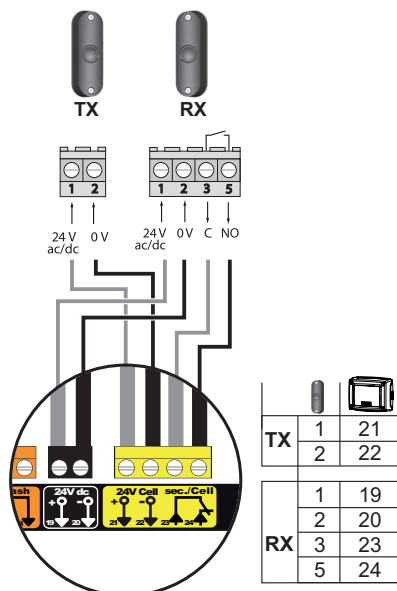


C $\overline{PO7} = 4$

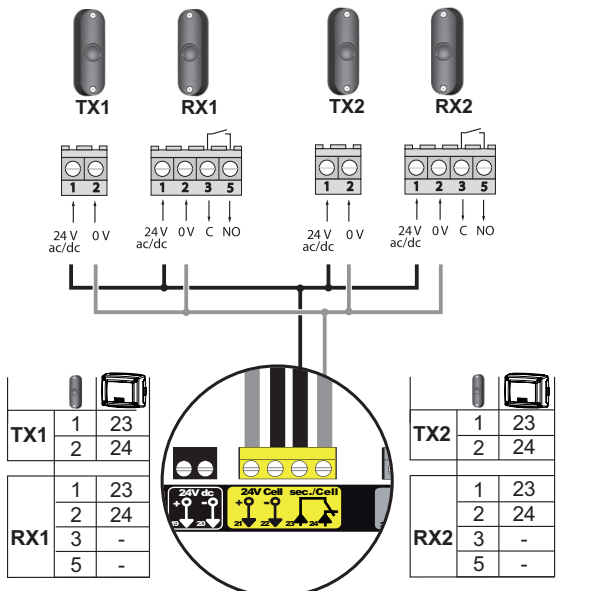
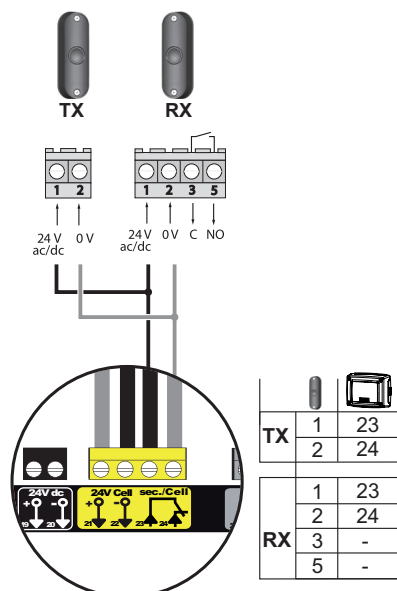


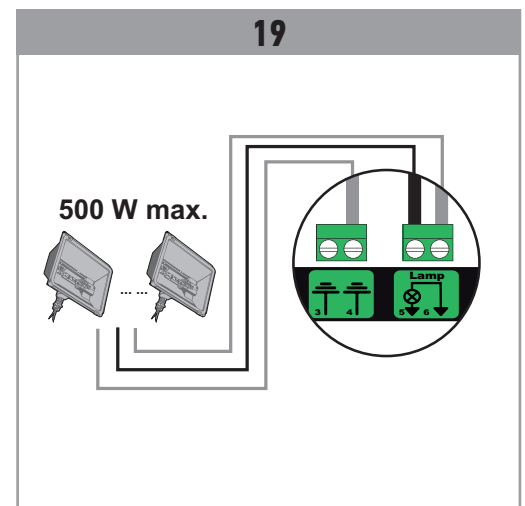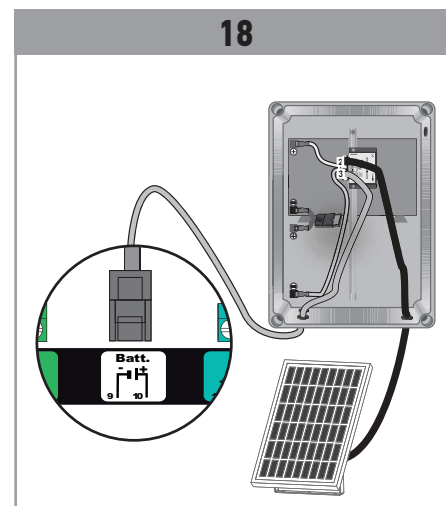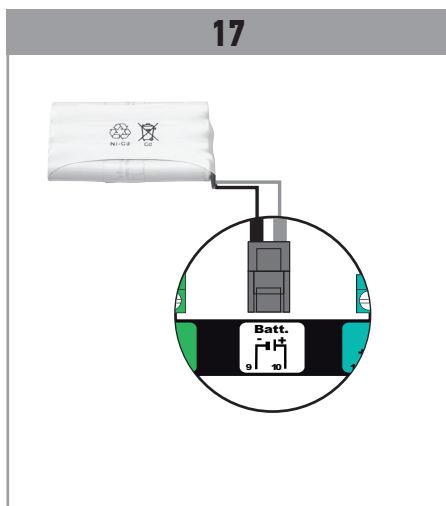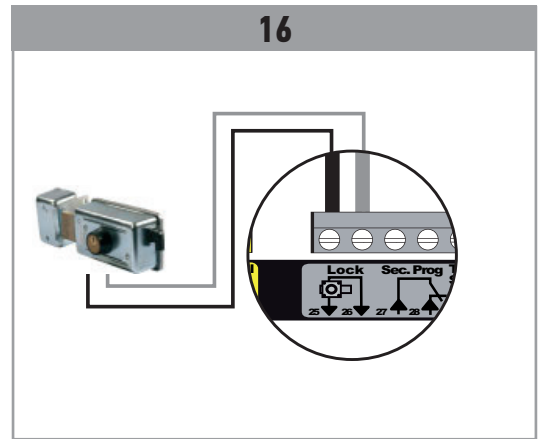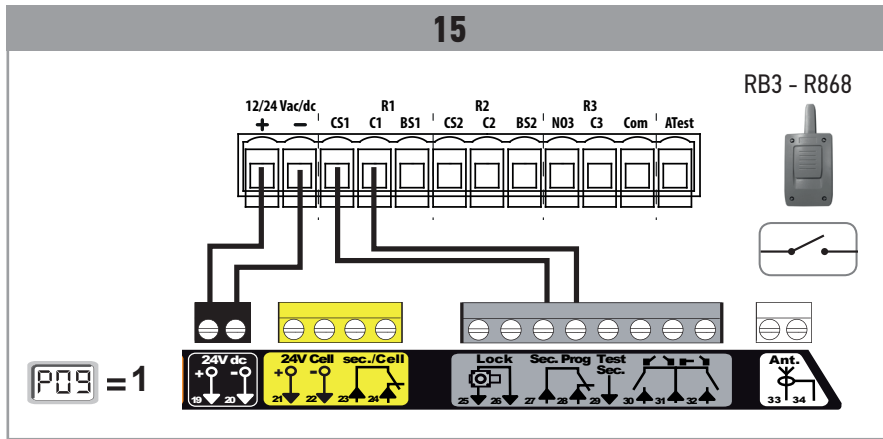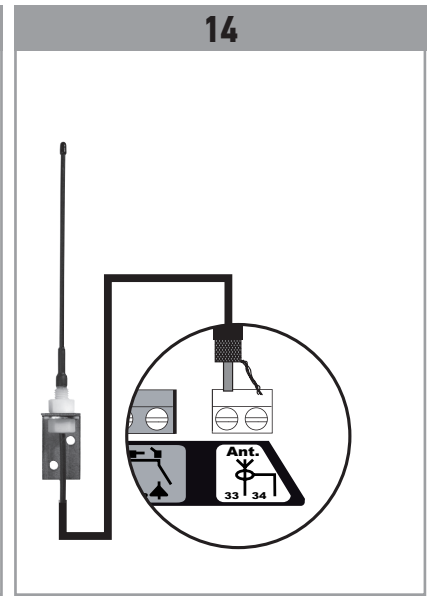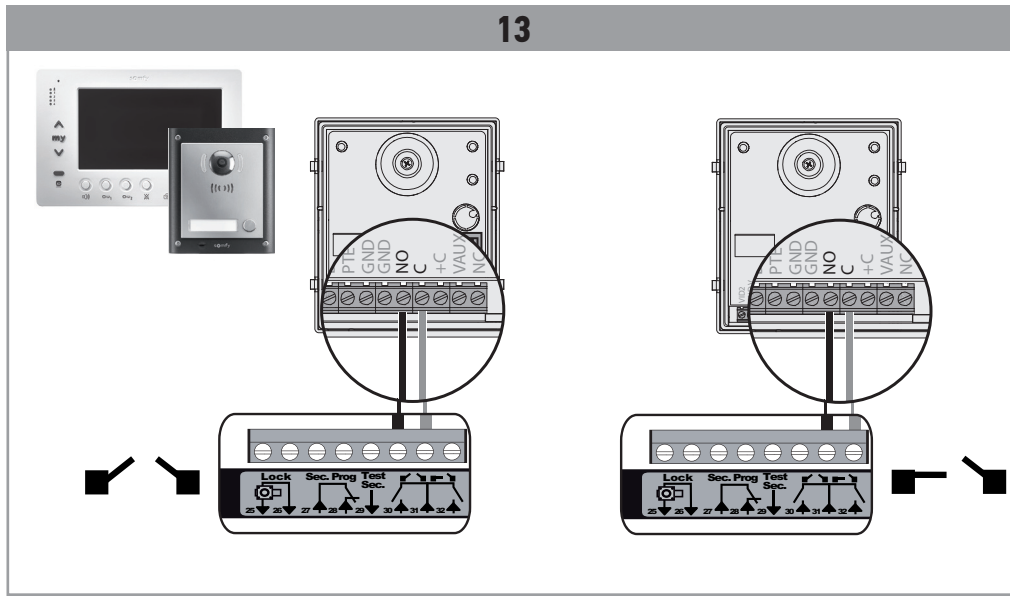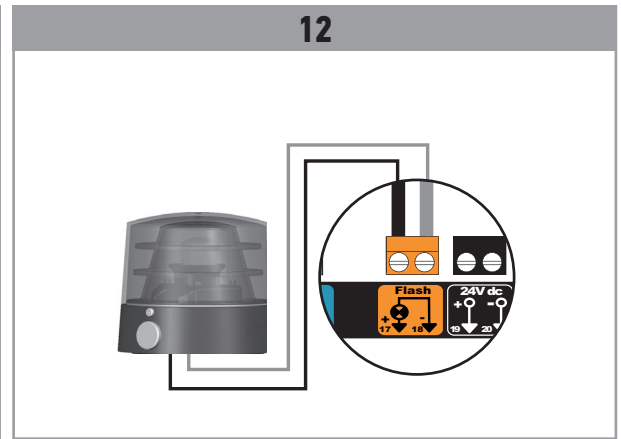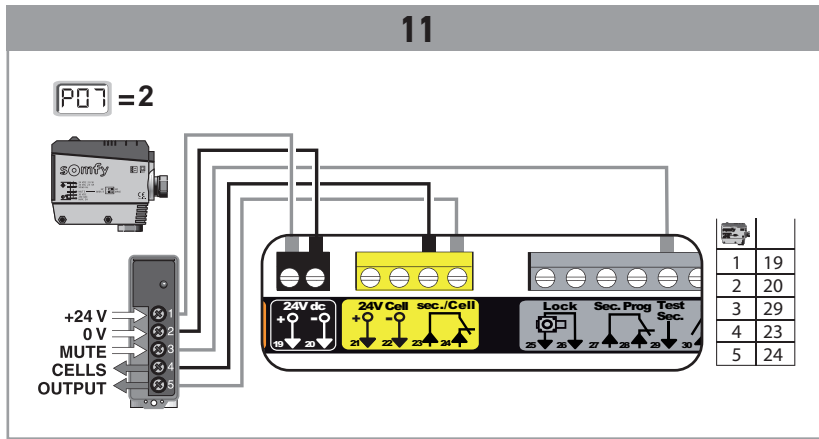

20

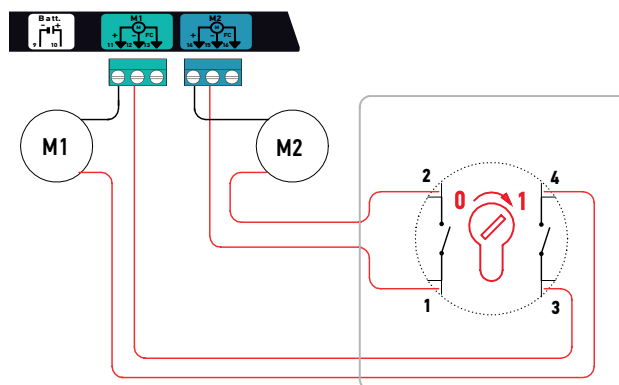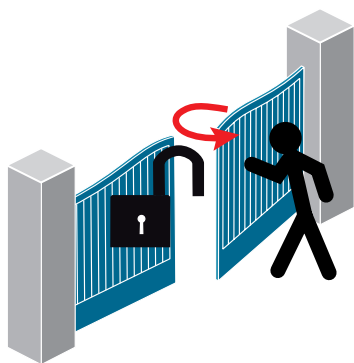

Ref. 1841021

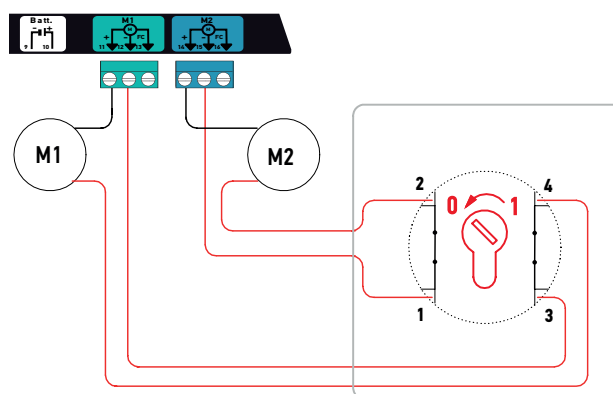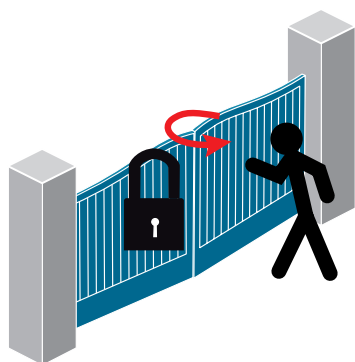

21



22



23




24




25




26

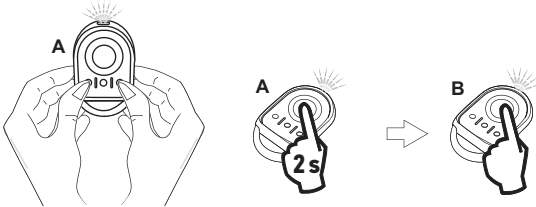

27

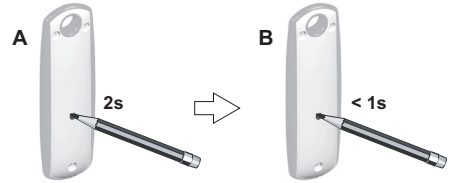


28

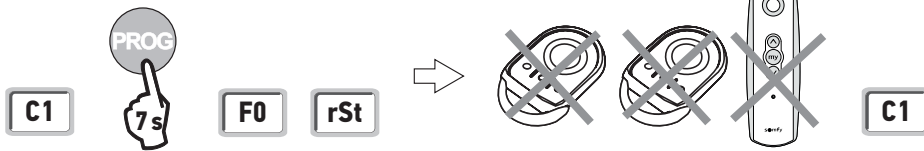

29



30

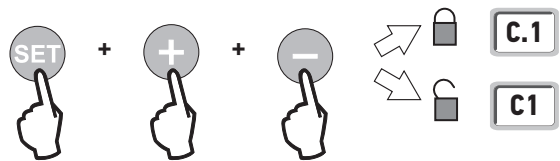

SOMFY ACTIVITES SA

50 avenue du Nouveau Monde

74300 CLUSES

FRANCE

www.somfy.com

somfy®

ERC CE

