


PRODUCT-DETAILS

2020 US-201

Switch insert 1-pole push switch 1 NO

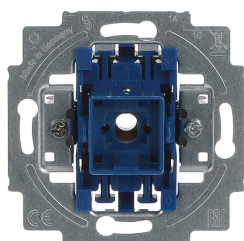

Informations générales

Extension du type de produit	2020 US-201
Code de produit	2CKA001413A0483
EAN	4011395045602
Description courte	Switch insert 1-pole push switch 1 NO
Description longue	With 2 independent signalling contacts.

Installation

Instructions et manuels	No document needed
Wiring Diagram	2CKA000097E0031

Technique

Fiche produit, informations techniques	No document needed
Tension nominale (U_r)	250 V
Courant nominal (I_n)	10 A
Contacts Configuration	1 NO, 0 NC
Nombre de pôles	1

Number of Contacts NO	1
Nombre de sorties	1
Number of Rocker Switches	1
Design Range	63x63 Busch-balance SI Busch-art linear future linear Busch-axcent Busch-axcent pur solo carat future Busch-Dynasty Pure Stainless Steel Reflex SI Reflex SI Linear Reflex SI/SI Linear Busch-Duro 2000 Busch-Duro 2000 SI Linear alpha alpha exclusive alpha nea Allwetter 44 (IP 44)
Type de commutation	1-pole push switch
Actuator Type	Push button
Type de montage	Flush Mounted
Type of Fastening	Mounting with Claw Mounting with Screw
Finition de surface	Untreated Matt
Matériau	Thermoplastic
Label Space Provided	No
Model Number	Single push button
RAL Number	RAL 5010 - Bleu gentiane
Couleur	blue
Application Function	Electrical Load and Light Control

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E0362
REACH Declaration	2CKA309999E9999
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

Dimensions

Produit Largeur Net	71 mm
Produit Hauteur Net	71 mm
Produit Longueur Net	40 mm
Poids net	60 g

Profondeur d'encastrement (t ₂)	25 mm
Schéma dimensionnel	2CKA000097E0490

Commande

ID du produit remplacé	1413-0-0483
------------------------	-------------

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA100000E0268
--------------------------------	-----------------

Classifications

ETIM 8	EC000029 - Push-switch button
ETIM 9	EC000029 - Push button
Catégorie DEEE	5. Small Equipment (No External Dimension More Than 50 cm)
WEEE B2C / B2B	Business To Consumer
CN8	8536 50 80
eClass	V11.0 : 27144044

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001751A3090	Mechanical Controls Without imprint for Switch/push button, Single rocker platinum - alpha	1786-20-500	1	piece
2CKA001751A3086	Mechanical Controls Without imprint for Switch/push button, Single rocker bronze - alpha	1786-21-500	1	piece
2CKA001751A3081	Mechanical Controls Without imprint for Switch/push button, Single rocker ivory - alpha	1786-22G-500	1	piece
2CKA001751A3078	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - alpha	1786-24G-500	1	piece
2CKA001751A3080	Mechanical Controls Without imprint for Switch/push button, Single rocker palladium - alpha	1786-260-500	1	piece
2CKA001751A3085	Mechanical Controls Without imprint for Switch/push button, Single rocker titanium - alpha	1786-266-500	1	piece
2CKA001751A3093	Mechanical Controls Without imprint for Switch/push button, Single rocker grey metallic - 63x63	1786-803-500	1	piece
2CKA001751A3079	Mechanical Controls Without imprint for Switch/push button, Single rocker anthracite - 63x63	1786-81-500	1	piece
2CKA001751A3083	Mechanical Controls Without imprint for Switch/push button, Single rocker ivory white - 63x63	1786-82-500	1	piece

2CKA001751A3075	Mechanical Controls Without imprint for Switch/push button, Single rocker aluminium silver - 63x63	1786-83-500	1	piece
2CKA001751A3116	Mechanical Controls Without imprint for Switch/push button, Single rocker antique brass - 63x63	1786-840-500	1	piece
2CKA001751A3074	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1786-84-500	1	piece
2CKA001751A3077	Mechanical Controls Without imprint for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001751A3089	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white matt - 63x63	1786-884-500	1	piece
2CKA001751A3094	Mechanical Controls Without imprint for Switch/push button, Single rocker black matt - 63x63	1786-885-500	1	piece
2CKA001434A0448	Rocker with legend for Switch/push button, Single rocker white - Busch-Duro 2000	2546-212	1	piece
2CKA001434A0554	Rocker with legend Neutral symbol for Switch/push button, Single rocker alpine white - Reflex SI	2546-214	1	piece
2CKA001731A2001	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch- Duro 2000	2506-212-500	1	piece
2CKA001731A0322	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch- Duro 2000	2506-212-506	1	piece
2CKA001731A1889	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch- Duro 2000	2506-212-507	1	piece
2CKA001731A1992	Mechanical Controls Without imprint for Switch/push button, Single rocker alpine white - Reflex SI/SI Linear	2506-214-500	1	piece
2CKA001731A1891	Mechanical Controls Without imprint for Switch/push button, Single rocker alpine white - Reflex SI/SI Linear	2506-214-507	1	piece
2CKA001731A1007	Mechanical Controls Without imprint for Switch/push button, Single rocker black - Reflex SI	2506-215	1	piece
2CKA001731A4012	Rocker for Switch/push button, Single rocker red - Reflex SI	2506-217-101	1	piece
2CKA001784A0032	Illumination set Switch/push button White Incandescent lamp 24 V - Busch-Duro 2000 SM	8337-1	1	piece
2CKA001731A4007	Rocker with labelling field for Switch/push button, Single push button green - 63x63	1764 NLI-13- 82	1	piece
2CKA001731A1858	Rocker with labelling field for Switch/push button, Single rocker ivory - alpha	1764 NLI-22G	1	piece
2CKA001731A1569	Rocker with labelling field for Switch/push button, Single rocker studio white - alpha	1764 NLI-24G	1	piece
2CKA001731A1975	Rocker with labelling field for Switch/push button, Single rocker grey metallic - 63x63	1764 NLI-803	1	piece
2CKA001731A1552	Rocker with labelling field for Switch/push button, Single push button anthracite - 63x63	1764 NLI-81	1	piece
2CKA001731A1876	Rocker with labelling field for Switch/push button, Single push button ivory white - 63x63	1764 NLI-82	1	piece

2CKA001731A1948	Rocker with labelling field for Switch/push button, Single push button aluminium silver - 63x63	1764 NLI-83	1	piece
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single push button studio white - 63x63	1764 NLI-84	1	piece
2CKA001731A2024	Rocker Without imprint for Switch/push button, Single rocker antique brass - 63x63	1764 NLI-840-500	1	piece
2CKA001731A1953	Rocker with labelling field for Switch/push button, Single push button stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	Rocker with labelling field for Switch/push button, Single push button studio white matt - 63x63	1764 NLI-884	1	piece
2CKA001731A1982	Rocker with labelling field for Switch/push button, Single push button black matt - 63x63	1764 NLI-885	1	piece
2CKA001731A0355	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch-Duro 2000	2509-212-500	1	piece
2CKA001731A0900	Rocker for Switch/push button, Single rocker alpine white - Reflex SI	2509-214	1	piece
2CKA001731A1995	Mechanical Controls Without imprint for Switch/push button, Single rocker alpine white - Reflex SI/SI Linear	2509-214-500	1	piece
2CKA001751A1625	Rocker for Switch/push button, Single rocker platinum - alpha	1789-20	1	piece
2CKA001751A1716	Rocker for Switch/push button, Single rocker bronze - alpha	1789-21	1	piece
2CKA001751A2490	Rocker for Switch/push button, Single rocker ivory - alpha	1789-22G	1	piece
2CKA001751A2102	Rocker for Switch/push button, Single rocker studio white - alpha	1789-24G	1	piece
2CKA001751A2825	Rocker for Switch/push button, Single rocker palladium - alpha	1789-260	1	piece
2CKA001751A2836	Rocker for Switch/push button, Single rocker titanium - alpha	1789-266	1	piece
2CKA001751A3013	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789-803	1	piece
2CKA001751A2928	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789-81	1	piece
2CKA001751A2813	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789-82	1	piece
2CKA001751A2945	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789-83	1	piece
2CKA001751A3118	Mechanical Controls Without imprint for Switch/push button, Single rocker antique brass - 63x63	1789-840-500	1	piece
2CKA001751A3091	Mechanical Controls Without imprint for Switch/push button, Single rocker studio white - 63x63	1789-84-500	1	piece
2CKA001751A2957	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789-884	1	piece
2CKA001751A3047	Rocker for Switch/push button, Single rocker black matt - 63x63	1789-885	1	piece
2CKA001731A0272	Rocker for Switch/push button, Single rocker white - Busch-Duro 2000	2520 LI-212	1	piece

2CKA001731A1996	Mechanical Controls Symbol "light" for Switch/push button, Single rocker alpine white - Reflex SI/SI Linear	2520 LI-214-500	1	piece
2CKA001751A3185	Rocker for Switch/push button, Single rocker grey metallic - 63x63	2520 LI-803	1	piece
2CKA001751A3186	Rocker for Switch/push button, Single rocker anthracite - 63x63	2520 LI-81	1	piece
2CKA001751A3187	Rocker for Switch/push button, Single rocker ivory white - 63x63	2520 LI-82	1	piece
2CKA001751A3188	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	2520 LI-83	1	piece
2CKA001751A3191	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	Rocker for Switch/push button, Single rocker studio white matt - 63x63	2520 LI-884	1	piece
2CKA001751A3193	Rocker for Switch/push button, Single rocker black matt - 63x63	2520 LI-885	1	piece
2CKA001731A2000	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch-Duro 2000	2520-212-500	1	piece
2CKA001731A0413	Mechanical Controls Without imprint for Switch/push button, Single rocker white - Busch-Duro 2000	2520-212-506	1	piece
2CKA001731A1994	Mechanical Controls Without imprint for Switch/push button, Single rocker alpine white - Reflex SI/SI Linear	2520-214-500	1	piece
2CKA001731A0561	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000	2506 N-212	1	piece
2CKA001731A0520	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2506 N-214	1	piece
2CKA001731A1445	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000	2510 NLI-212	1	piece
2CKA001731A1452	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2510 NLI-214	1	piece
2CKA001731A0330	Mechanical Controls Characters 0 and 1 for Switch/push button, Single rocker white - Busch-Duro 2000	2502-212-500	1	piece
2CKA001731A0884	Rocker for Switch/push button, Single rocker alpine white - Reflex SI	2502-214	1	piece
2CKA001434A0455	Rocker with legend Characters 0 and 1 for Switch/push button, Single rocker white - Busch-Duro 2000	2544-212	1	piece
2CKA001434A0570	Rocker with legend Characters 0 and 1; neutral symbol for Switch/push button, Single rocker alpine white - Reflex SI	2544-214	1	piece
2CKA001751A3146	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 N-803	1	piece
2CKA001751A3147	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789 N-81	1	piece
2CKA001751A3148	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789 N-82	1	piece
2CKA001751A3149	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 N-83	1	piece
2CKA001751A3151	Mechanical Controls for Switch/push button, Single rocker studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3152	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece

2CKA001751A3153	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789 N-884	1	piece
2CKA001751A3154	Rocker for Switch/push button, Single rocker black matt - 63x63	1789 N-885	1	piece
2CKA001751A1633	Rocker with legend Symbol "light" for Switch/push button, Single rocker platinum - alpha	1789 LI-20	1	piece
2CKA001751A1724	Rocker with legend Symbol "light" for Switch/push button, Single rocker bronze - alpha	1789 LI-21	1	piece
2CKA001751A2516	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory - alpha	1789 LI-22G	1	piece
2CKA001751A2201	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white - alpha	1789 LI-24G	1	piece
2CKA001751A2828	Rocker with legend Symbol "light" for Switch/push button, Single rocker palladium - alpha	1789 LI-260	1	piece
2CKA001751A2839	Rocker with legend Symbol "light" for Switch/push button, Single rocker titanium - alpha	1789 LI-266	1	piece
2CKA001753A0072	Cover Plate for Switch/push button, Single rocker ivory - impuls	1789 LI-72	1	piece
2CKA001753A4815	Cover plate with legend Symbol "light" for Switch/push button, Single rocker alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0187	Cover plate with legend Symbol "light" for Switch/push button, Single rocker studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	Cover plate with legend Symbol "light" for Switch/push button, Single rocker black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	Cover plate with legend Symbol "arrows" for Switch/push button, Single rocker aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	Cover plate with legend Symbol "light" for Switch/push button, Single rocker champagne metallic - impuls	1789 LI-79	1	piece
2CKA001751A3014	Rocker with legend Symbol "light" for Switch/push button, Single rocker grey metallic - 63x63	1789 LI-803	1	piece
2CKA001751A2931	Rocker with legend Symbol "light" for Switch/push button, Single rocker anthracite - 63x63	1789 LI-81	1	piece
2CKA001751A2745	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory white - 63x63	1789 LI-82	1	piece
2CKA001751A2951	Rocker with legend Symbol "light" for Switch/push button, Single rocker aluminium silver - 63x63	1789 LI-83	1	piece
2CKA001751A3084	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - 1789 LI-84-500 63x63	1789 LI-84-500	1	piece
2CKA001751A2958	Rocker with legend Symbol "light" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 LI-866	1	piece
2CKA001751A3031	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - 63x63	1789 LI-884	1	piece
2CKA001751A3045	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - 63x63	1789 LI-885	1	piece
2CKA001731A4011	Rocker with labelling field for Switch/push button, Single push button red - 63x63	1764 NLI-12-82-101	1	piece
2CKA001751A1674	Rocker for Switch/push button, Single rocker platinum - alpha	1788-20	1	piece
2CKA001751A1765	Rocker for Switch/push button, Single rocker bronze - alpha	1788-21	1	piece

2CKA001751A2557	Rocker for Switch/push button, Single rocker ivory - alpha	1788-22G	1	piece
2CKA001751A2326	Rocker for Switch/push button, Single rocker studio white - alpha	1788-24G	1	piece
2CKA001751A2823	Rocker for Switch/push button, Single rocker palladium - alpha	1788-260	1	piece
2CKA001751A2834	Rocker for Switch/push button, Single rocker titanium - alpha	1788-266	1	piece
2CKA001751A3017	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1788-803	1	piece
2CKA001751A2927	Rocker for Switch/push button, Single rocker anthracite - 63x63	1788-81	1	piece
2CKA001751A2742	Rocker for Switch/push button, Single rocker ivory white - 63x63	1788-82	1	piece
2CKA001751A2954	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1788-83	1	piece
2CKA001751A2750	Rocker for Switch/push button, Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2961	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1788-884	1	piece
2CKA001751A3042	Rocker for Switch/push button, Single rocker black matt - 63x63	1788-885	1	piece
2CKA001751A1690	Rocker with legend Heizung for Switch/push button, Single rocker platinum - alpha	1789 H-20	1	piece
2CKA001751A1781	Rocker with legend Heizung for Switch/push button, Single rocker bronze - alpha	1789 H-21	1	piece
2CKA001751A2573	Rocker with legend Heizung for Switch/push button, Single rocker ivory - alpha	1789 H-22G	1	piece
2CKA001751A2375	Rocker with legend Heizung for Switch/push button, Single rocker studio white - alpha	1789 H-24G	1	piece
2CKA001751A2826	Rocker with legend Heizung for Switch/push button, Single rocker palladium - alpha	1789 H-260	1	piece
2CKA001751A2837	Rocker with legend Heizung for Switch/push button, Single rocker titanium - alpha	1789 H-266	1	piece
2CKA001753A0068	Cover plate with labelling field for Switch/push button, Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	Cover plate with labelling field for Switch/push button, Single rocker alpine white - impuls	1789 H-74-101	1	piece
2CKA001753A0184	Cover plate with labelling field for Switch/push button, Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0154	Cover plate with labelling field for Switch/push button, Single rocker black matt - impuls	1789 H-775-101	1	piece
2CKA001753A0069	Cover plate with labelling field for Switch/push button, Single rocker aluminium silver - impuls	1789 H-783-101	1	piece
2CKA001753A6612	Cover plate with labelling field for Switch/push button, Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001751A3019	Rocker with legend Heizung for Switch/push button, Single rocker grey metallic - 63x63	1789 H-803	1	piece
2CKA001751A2929	Rocker with legend Heizung for Switch/push button, Single rocker anthracite - 63x63	1789 H-81	1	piece
2CKA001751A2743	Rocker with legend Heizung for Switch/push button, Single rocker ivory white - 63x63	1789 H-82	1	piece

2CKA001751A2955	Rocker with legend Heizung for Switch/push button, Single rocker aluminium silver - 63x63	1789 H-83	1	piece
2CKA001751A2751	Rocker with legend Heizung for Switch/push button, Single rocker studio white - 63x63	1789 H-84	1	piece
2CKA001751A2963	Rocker with legend Heizung for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	Rocker with legend Heizung for Switch/push button, Single rocker studio white matt - 63x63	1789 H-884	1	piece
2CKA001751A3043	Rocker with legend Heizung for Switch/push button, Single rocker black matt - 63x63	1789 H-885	1	piece
2CKA001751A1658	Rocker with legend Symbol "key/door" for Switch/push button, Single rocker platinum - alpha	1789 TR-20	1	piece
2CKA001751A1740	Rocker for Switch/push button, Single rocker bronze - alpha	1789 TR-21	1	piece
2CKA001751A2532	Rocker for Switch/push button, Single rocker ivory - alpha	1789 TR-22G	1	piece
2CKA001751A2268	Rocker for Switch/push button, Single rocker studio white - alpha	1789 TR-24G	1	piece
2CKA001751A2830	Rocker for Switch/push button, Single rocker palladium - alpha	1789 TR-260	1	piece
2CKA001751A2841	Rocker for Switch/push button, Single rocker titanium - alpha	1789 TR-266	1	piece
2CKA001751A3016	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 TR-803	1	piece
2CKA001751A2933	Rocker for Switch/push button, Single rocker anthracite - 63x63	1789 TR-81	1	piece
2CKA001751A2747	Rocker for Switch/push button, Single rocker ivory white - 63x63	1789 TR-82	1	piece
2CKA001751A2953	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 TR-83	1	piece
2CKA001751A2755	Rocker for Switch/push button, Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A2960	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 TR-866	1	piece
2CKA001751A3032	Rocker for Switch/push button, Single rocker studio white matt - 63x63	1789 TR-884	1	piece
2CKA001751A3046	Rocker for Switch/push button, Single rocker black matt - 63x63	1789 TR-885	1	piece
2CKA001751A1641	Rocker for Switch/push button, Single rocker platinum - alpha	1789 KI-20	1	piece
2CKA001751A1732	Rocker for Switch/push button, Single rocker bronze - alpha	1789 KI-21	1	piece
2CKA001751A2524	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory - alpha	1789 KI-22G	1	piece
2CKA001751A2235	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - alpha	1789 KI-24G	1	piece
2CKA001751A2829	Rocker with legend Symbol "bell" for Switch/push button, Single rocker palladium - alpha	1789 KI-260	1	piece
2CKA001751A2840	Rocker with legend Symbol "bell" for Switch/push button, Single rocker titanium - alpha	1789 KI-266	1	piece
2CKA001751A3015	Rocker for Switch/push button, Single rocker grey metallic - 63x63	1789 KI-803	1	piece
2CKA001751A2932	Rocker with legend Symbol "bell" for Switch/push button, Single rocker anthracite - 63x63	1789 KI-81	1	piece

2CKA001751A2746	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory white - 63x63	1789 KI-82	1	piece
2CKA001751A2952	Rocker for Switch/push button, Single rocker aluminium silver - 63x63	1789 KI-83	1	piece
2CKA001751A2754	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white - 63x63	1789 KI-84	1	piece
2CKA001751A2959	Rocker for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 KI-866	1	piece
2CKA001751A3030	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - 63x63	1789 KI-884	1	piece
2CKA001751A3044	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - 63x63	1789 KI-885	1	piece
2CKA001714A0295	Label Braille Symbol "light" - Allwetter 44 (IP 44)	2144 LI	1	piece
2CKA001784A0545	Illumination set Switch/push button Orange Neon lamp 230 V - Busch-Duro 2000 SM	8350	1	piece
2CKA001784A0560	Illumination set Switch/push button Orange Neon lamp 230 V - Busch-Duro 2000 SM	8352	1	piece
2CKA001784A0578	Illumination set Switch/push button Orange Neon lamp 230 V - Busch-Duro 2000 SM	8353	1	piece
2CKA001784A0552	Illumination set Orange Neon lamp 230 V red - Busch-Duro 2000 SM	8360	1	piece
2CKA001784A0586	Illumination set Switch/push button Orange Neon lamp 230 V yellow - Busch-Duro 2000 SM	8362	1	piece
2CKA001784A0594	Illumination set Switch/push button Orange Neon lamp 230 V white - Busch-Duro 2000 SM	8363	1	piece
2CKA001784A0024	Illumination set Switch/push button White Incandescent lamp 3 ... 8 V - Busch-Duro 2000 SM	8333-1	1	piece
2CKA001784A0164	Illumination set Switch/push button White Incandescent lamp 8 V - Busch-Duro 2000 SM	8344-1	1	piece
2CKA001784A0289	Illumination set Switch/push button White Incandescent lamp 12 V - Busch-Duro 2000 SM	8345-1	1	piece
2CKA001754A4373	Cover Frame 1gang platinum - alpha exclusive	1721 KA-20	1	piece
2CKA001754A4382	Cover Frame 1gang bronze - alpha exclusive	1721 KA-21	1	piece
2CKA001754A3831	Cover Frame 1gang ivory - alpha exclusive	1721 KA-22G	1	piece
2CKA001754A2965	Cover Frame 1gang studio white - alpha exclusive	1721 KA-24G	1	piece
2CKA001754A4520	Cover Frame 1gang palladium - alpha exclusive	1721 KA-260-500	1	piece
2CKA001754A4509	Cover Frame 1gang titanium - alpha exclusive	1721 KA-266-500	1	piece
2CKA001754A4516	Cover Frame 1gang white - Busch-Duro 2000	1721 NS-212-500	1	piece
2CKA001754A4496	Cover Frame 1gang alpine white - Reflex SI	1721 NS-214-500	1	piece
2CKA001754A4093	Cover Frame 1gang white - Busch-Duro 2000 SI Linear	1721 NSKA-212	1	piece
2CKA001754A4497	Cover Frame 1gang alpine white - Reflex SI Linear	1721 NSKA-214-500	1	piece
2CKA001754A4065	Cover Frame 1gang studio white - alpha exclusive	1721 NSKA-24G	1	piece
2CKA001754A4713	Cover Frame 1gang red - future linear	1721-12-182K-101	1	piece
2CKA001754A4240	Cover Frame 1gang anthracite - future linear	1721-181K	1	piece
2CKA001754A4168	Cover Frame 1gang ivory white - future	1721-182	1	piece

2CKA001754A4506	Cover Frame 1gang ivory white - future linear	1721-182K-500	1	piece
2CKA001754A4529	Cover Frame 1gang aluminium silver - future linear	1721-183K-500	1	piece
2CKA001754A4173	Cover Frame 1gang studio white - future	1721-184	1	piece
2CKA001754A4527	Cover Frame 1gang studio white - future linear	1721-184 NSK-500	1	piece
2CKA001754A4504	Cover Frame 1gang studio white - future	1721-184-500	1	piece
2CKA001754A4498	Cover Frame 1gang studio white - future linear	1721-184K-500	1	piece
2CKA001754A4521	Cover Frame 1gang platinum - alpha nea	1721-20-500	1	piece
2CKA001754A4522	Cover Frame 1gang bronze - alpha nea	1721-21-500	1	piece
2CKA001754A4775	Cover Frame 1gang glass purple - Busch-axcent pur	1721-223	1	piece
2CKA001754A4760	Cover Frame 1gang glass sun - Busch-axcent pur	1721-225	1	piece
2CKA001754A4770	Cover Frame 1gang glass avocado - Busch-axcent pur	1721-226	1	piece
2CKA001754A4765	Cover Frame 1gang glass coral - Busch-axcent pur	1721-227	1	piece
2CKA001754A4755	Cover Frame 1gang glass ocean - Busch-axcent pur	1721-228	1	piece
2CKA001754A4780	Cover Frame 1gang glass oyster - Busch-axcent pur	1721-229	1	piece
2CKA001754A4512	Cover Frame 1gang ivory - alpha nea	1721-22G-500	1	piece
2CKA001754A4790	Cover Frame 1gang paper brown - Busch-axcent pur	1721-243	1	piece
2CKA001754A4800	Cover Frame 1gang glass black - Busch-axcent pur	1721-245	1	piece
2CKA001754A4785	Cover Frame 1gang paper blue - Busch-axcent pur	1721-248	1	piece
2CKA001754A4503	Cover Frame 1gang studio white - alpha nea	1721-24G-500	1	piece
2CKA001754A4400	Cover Frame 1gang palladium - alpha nea	1721-260	1	piece
2CKA001754A4391	Cover Frame 1gang titanium - alpha nea	1721-266	1	piece
2CKA001754A4688	Cover Frame 1gang platinum - Busch-axcent pur	1721-270-500	1	piece
2CKA001754A4708	Cover Frame 1gang black matt - Busch-axcent pur	1721-275-500	1	piece
2CKA001754A4698	Cover Frame 1gang titanium - Busch-axcent pur	1721-276-500	1	piece
2CKA001754A4437	Cover Frame 1gang white glass - Busch-axcent pur	1721-280	1	piece
2CKA001754A4409	Cover Frame 1gang black - Busch-axcent	1721-281	1	piece
2CKA001753A4126	Cover Frame 1gang black - Busch-axcent flat	1721-281/11	1	piece
2CKA001754A4543	Cover Frame 1gang brown glass - Busch-axcent pur	1721-283	1	piece
2CKA001754A4331	Cover Frame 1gang studio white - Busch-axcent	1721-284	1	piece
2CKA001753A4121	Cover Frame 1gang studio white - Busch-axcent flat	1721-284/11	1	piece
2CKA001754A4334	Cover Frame 1gang yellow - Busch-axcent	1721-285	1	piece
2CKA001754A4337	Cover Frame 1gang green - Busch-axcent	1721-286	1	piece
2CKA001754A4340	Cover Frame 1gang red - Busch-axcent	1721-287	1	piece
2CKA001754A4343	Cover Frame 1gang blue - Busch-axcent	1721-288	1	piece
2CKA001754A4805	Cover Frame 1gang slate grey - Busch-axcent pur	1721-290	1	piece
2CKA001754A4471	Cover Frame 1gang entrée grey - Busch-axcent	1721-291-500	1	piece

2CKA001754A4491	Cover Frame 1gang château-black - Busch-axcent	1721-295-500	1	piece
2CKA001754A4795	Cover Frame 1gang concrete grey - Busch-axcent pur	1721-298	1	piece
2CKA001754A4481	Cover Frame 1gang maison-beige - Busch-axcent	1721-299-500	1	piece
2CKA001754A4535	Cover Frame 1gang chrome - solo	1721-80-500	1	piece
2CKA001754A4538	Cover Frame 1gang chrome gloss - solo	1721-80G-500	1	piece
2CKA001754A4442	Cover Frame 1gang white glass - carat	1721-811	1	piece
2CKA001754A4820	Cover Frame 1gang porcelain anthracite - carat	1721-815	1	piece
2CKA001754A4258	Cover Frame 1gang bronze - carat	1721-821	1	piece
2CKA001754A4356	Cover Frame 1gang gold - carat	1721-823-101	1	piece
2CKA001754A4322	Cover Frame 1gang glass black - carat	1721-825	1	piece
2CKA001754A4360	Cover Frame 1gang chrome - carat	1721-826-101	1	piece
2CKA001754A4605	Cover Frame 1gang anthracite - Busch-Dynasty	1721-831-500	1	piece
2CKA001754A4600	Cover Frame 1gang ivory white - Busch-Dynasty	1721-832-500	1	piece
2CKA001754A4575	Cover Frame 1gang polished brass decor anthracite - Busch-Dynasty	1721-833-500	1	piece
2CKA001754A4565	Cover Frame 1gang polished brass anthracite - Busch-Dynasty	1721-835-500	1	piece
2CKA001754A4570	Cover Frame 1gang polished brass decor ivory white - Busch-Dynasty	1721-836-500	1	piece
2CKA001754A4560	Cover Frame 1gang polished brass ivory white - Busch-Dynasty	1721-838-500	1	piece
2CKA001754A4595	Cover Frame 1gang antique brass decor anthracite - Busch-Dynasty	1721-843-500	1	piece
2CKA001754A4536	Cover Frame 1gang studio white - solo	1721-84-500	1	piece
2CKA001754A4585	Cover Frame 1gang antique brass anthracite - Busch-Dynasty	1721-845-500	1	piece
2CKA001754A4590	Cover Frame 1gang antique brass decor ivory white - Busch-Dynasty	1721-846-500	1	piece
2CKA001754A4580	Cover Frame 1gang antique brass ivory white - Busch-Dynasty	1721-848-500	1	piece
2CKA001754A4254	Cover Frame 1gang stainless steel - carat	1721-860	1	piece
2CKA001754A4500	Cover Frame 1gang stainless steel - Pure Stainless Steel	1721-866K-500	1	piece
2CKA001754A4531	Cover Frame 1gang studio white matt - future linear	1721-884K-500	1	piece
2CKA001754A4532	Cover Frame 1gang black matt - future linear	1721-885K-500	1	piece
2CKA001754A4374	Cover Frame 2gang platinum - alpha exclusive	1722 KA-20	1	piece
2CKA001754A4383	Cover Frame 2gang bronze - alpha exclusive	1722 KA-21	1	piece
2CKA001754A3849	Cover Frame 2gang ivory - alpha exclusive	1722 KA-22G	1	piece
2CKA001754A2999	Cover Frame 2gang studio white - alpha exclusive	1722 KA-24G	1	piece
2CKA001754A4116	Cover Frame 2gang palladium - alpha exclusive	1722 KA-260	1	piece
2CKA001754A4523	Cover Frame 2gang titanium - alpha exclusive	1722 KA-266-500	1	piece
2CKA001754A2239	Cover Frame 2gang white - Busch-Duro 2000	1722 NS-212	1	piece
2CKA001754A2163	Cover Frame 2gang alpine white - Reflex SI	1722 NS-214	1	piece
2CKA001754A4094	Cover Frame 2gang white - Busch-Duro 2000 SI Linear	1722 NSKA-212	1	piece
2CKA001754A4059	Cover Frame 2gang alpine white - Reflex SI Linear	1722 NSKA-214	1	piece

2CKA001754A4066	Cover Frame 2gang studio white - alpha exclusive	1722 NSKA-24G	1	piece
2CKA001754A4714	Cover Frame 2gang red - future linear	1722-12-182K-101	1	piece
2CKA001754A4241	Cover Frame 2gang anthracite - future linear	1722-181K	1	piece
2CKA001754A4169	Cover Frame 2gang ivory white - future	1722-182	1	piece
2CKA001754A4231	Cover Frame 2gang ivory white - future linear	1722-182K	1	piece
2CKA001754A4530	Cover Frame 2gang aluminium silver - future linear	1722-183K-500	1	piece
2CKA001754A4174	Cover Frame 2gang studio white - future	1722-184	1	piece
2CKA001754A4508	Cover Frame 2gang studio white - future	1722-184-500	1	piece
2CKA001754A4499	Cover Frame 2gang studio white - future linear	1722-184K-500	1	piece
2CKA001754A4524	Cover Frame 2gang platinum - alpha nea	1722-20-500	1	piece
2CKA001754A1710	Cover Frame 2gang bronze - alpha nea	1722-21	1	piece
2CKA001754A4776	Cover Frame 2gang glass purple - Busch-axcent pur	1722-223	1	piece
2CKA001754A4761	Cover Frame 2gang glass sun - Busch-axcent pur	1722-225	1	piece
2CKA001754A4771	Cover Frame 2gang glass avocado - Busch-axcent pur	1722-226	1	piece
2CKA001754A4766	Cover Frame 2gang glass coral - Busch-axcent pur	1722-227	1	piece
2CKA001754A4756	Cover Frame 2gang glass ocean - Busch-axcent pur	1722-228	1	piece
2CKA001754A4781	Cover Frame 2gang glass oyster - Busch-axcent pur	1722-229	1	piece
2CKA001754A3799	Cover Frame 2gang ivory - alpha nea	1722-22G	1	piece
2CKA001754A4791	Cover Frame 2gang paper brown - Busch-axcent pur	1722-243	1	piece
2CKA001754A4801	Cover Frame 2gang glass black - Busch-axcent pur	1722-245	1	piece
2CKA001754A4786	Cover Frame 2gang paper blue - Busch-axcent pur	1722-248	1	piece
2CKA001754A4511	Cover Frame 2gang studio white - alpha nea	1722-24G-500	1	piece
2CKA001754A4401	Cover Frame 2gang palladium - alpha nea	1722-260	1	piece
2CKA001754A4392	Cover Frame 2gang titanium - alpha nea	1722-266	1	piece
2CKA001754A4689	Cover Frame 2gang platinum - Busch-axcent pur	1722-270-500	1	piece
2CKA001754A4709	Cover Frame 2gang black matt - Busch-axcent pur	1722-275-500	1	piece
2CKA001754A4699	Cover Frame 2gang titanium - Busch-axcent pur	1722-276-500	1	piece
2CKA001754A4438	Cover Frame 2gang white glass - Busch-axcent pur	1722-280	1	piece
2CKA001754A4410	Cover Frame 2gang black - Busch-axcent	1722-281	1	piece
2CKA001753A4127	Cover Frame 2gang black - Busch-axcent flat	1722-281/11	1	piece
2CKA001754A4544	Cover Frame 2gang brown glass - Busch-axcent pur	1722-283	1	piece
2CKA001754A4332	Cover Frame 2gang studio white - Busch-axcent	1722-284	1	piece
2CKA001753A4122	Cover Frame 2gang studio white - Busch-axcent flat	1722-284/11	1	piece
2CKA001754A4335	Cover Frame 2gang yellow - Busch-axcent	1722-285	1	piece
2CKA001754A4338	Cover Frame 2gang green - Busch-axcent	1722-286	1	piece
2CKA001754A4341	Cover Frame 2gang red - Busch-axcent	1722-287	1	piece

2CKA001754A4344	Cover Frame 2gang blue - Busch-axcent	1722-288	1	piece
2CKA001754A4806	Cover Frame 2gang slate grey - Busch-axcent pur	1722-290	1	piece
2CKA001754A4472	Cover Frame 2gang entrée grey - Busch-axcent	1722-291-500	1	piece
2CKA001754A4492	Cover Frame 2gang château-black - Busch-axcent	1722-295-500	1	piece
2CKA001754A4796	Cover Frame 2gang concrete grey - Busch-axcent pur	1722-298	1	piece
2CKA001754A4482	Cover Frame 2gang maison-beige - Busch-axcent	1722-299-500	1	piece
2CKA001754A4537	Cover Frame 2gang chrome - solo	1722-80-500	1	piece
2CKA001754A4327	Cover Frame 2gang chrome gloss - solo	1722-80G	1	piece
2CKA001754A4443	Cover Frame 2gang white glass - carat	1722-811	1	piece
2CKA001754A4821	Cover Frame 2gang porcelain anthracite - carat	1722-815	1	piece
2CKA001754A4259	Cover Frame 2gang bronze - carat	1722-821	1	piece
2CKA001754A4357	Cover Frame 2gang gold - carat	1722-823-101	1	piece
2CKA001754A4323	Cover Frame 2gang glass black - carat	1722-825	1	piece
2CKA001754A4361	Cover Frame 2gang chrome - carat	1722-826-101	1	piece
2CKA001754A4606	Cover Frame 2gang anthracite - Busch-Dynasty	1722-831-500	1	piece
2CKA001754A4601	Cover Frame 2gang ivory white - Busch-Dynasty	1722-832-500	1	piece
2CKA001754A4576	Cover Frame 2gang polished brass decor anthracite - Busch-Dynasty	1722-833-500	1	piece
2CKA001754A4566	Cover Frame 2gang polished brass anthracite - Busch-Dynasty	1722-835-500	1	piece
2CKA001754A4571	Cover Frame 2gang polished brass decor ivory white - Busch-Dynasty	1722-836-500	1	piece
2CKA001754A4561	Cover Frame 2gang polished brass ivory white - Busch-Dynasty	1722-838-500	1	piece
2CKA001754A4596	Cover Frame 2gang antique brass decor anthracite - Busch-Dynasty	1722-843-500	1	piece
2CKA001754A4539	Cover Frame 2gang studio white - solo	1722-84-500	1	piece
2CKA001754A4586	Cover Frame 2gang antique brass anthracite - Busch-Dynasty	1722-845-500	1	piece
2CKA001754A4591	Cover Frame 2gang antique brass decor ivory white - Busch-Dynasty	1722-846-500	1	piece
2CKA001754A4581	Cover Frame 2gang antique brass ivory white - Busch-Dynasty	1722-848-500	1	piece
2CKA001754A4255	Cover Frame 2gang stainless steel - carat	1722-860	1	piece
2CKA001754A4501	Cover Frame 2gang stainless steel - Pure Stainless Steel	1722-866K-500	1	piece
2CKA001754A4415	Cover Frame 2gang studio white matt - future linear	1722-884K	1	piece
2CKA001754A4534	Cover Frame 2gang black matt - future linear	1722-885K-500	1	piece
2CKA001754A4376	Cover Frame 3gang platinum - alpha exclusive	1723 KA-20	1	piece
2CKA001754A4385	Cover Frame 3gang bronze - alpha exclusive	1723 KA-21	1	piece
2CKA001754A3856	Cover Frame 3gang ivory - alpha exclusive	1723 KA-22G	1	piece
2CKA001754A3021	Cover Frame 3gang studio white - alpha exclusive	1723 KA-24G	1	piece
2CKA001754A4118	Cover Frame 3gang palladium - alpha exclusive	1723 KA-260	1	piece
2CKA001754A4127	Cover Frame 3gang titanium - alpha exclusive	1723 KA-266	1	piece
2CKA001754A3708	Cover Frame 3gang white - Busch-Duro 2000	1723 NS-212	1	piece
2CKA001754A3724	Cover Frame 3gang alpine white - Reflex SI	1723 NS-214	1	piece

2CKA001754A4096	Cover Frame 3gang white - Busch-Duro 2000 SI Linear	1723 NSKA-212	1	piece
2CKA001754A4061	Cover Frame 3gang alpine white - Reflex SI Linear	1723 NSKA-214	1	piece
2CKA001754A4068	Cover Frame 3gang studio white - alpha exclusive	1723 NSKA-24G	1	piece
2CKA001754A4242	Cover Frame 3gang anthracite - future linear	1723-181K	1	piece

Catégories

Produits basse tension → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts

