


Tops D1

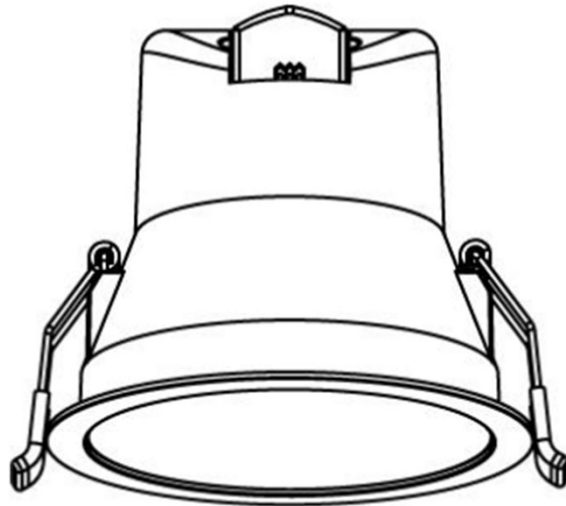


CE RoHS

Technical parameters:

Item No.	083100		
Input Voltage	220-240V AC		
Current(A)	0.09		
Power (W)	6W		
Power factor(PF)	≥0.5		
Color Temperature (K)	5700K	4000K	3000K
Luminous Flux	480	480	420
Cutout (mm)	φ 68- φ 73		
Lifespan (h)	30000		
Beam Angle	40°		
Protection Rate	IP44 Surface		
CRI (Ra)	>80		

DIMENSIONS (MM)

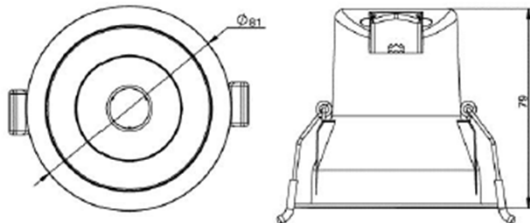

Notes:

- ◆ Only qualified electrician is allowed to do the installation, maintenance and inspection for safety concern. It is dangerous for non-professional operator.
- ◆ Ceiling-installation only.
- ◆ Do not install the product in high temperature or humid place.
- ◆ 75mm space should be left around the product for ventilation, no cover on the light at any time
- ◆ Storage conditions: room temperature dry environment.

MONTAGE

Warning



- * Power should be cut off before installation, maintenance or inspection.
- * Please install and use the light strictly according to the instruction.
- * Do not disassemble or remold the product by own to avoid accident of electric shock or fixture falling.
- * Working out of temp. range $-20^{\circ}\text{C} \sim +40^{\circ}\text{C}$ will shorten the lifetime of luminaries.
- * Input wire should use 2 * 0.75 was H03VVH2, open the terminal cover, connected wires, forcibly pressure into the line pressing cover, ensure the line pressing cap to the end.
- *The light source of this luminaire is not repalceable, when the light source reaches its end of life the whole luminaire shall be replaced.

Installation:

Picture 1. Turn off the power.

Picture 2. Drill a suitable mounting hole on ceiling according to size requirement of different item.

Picture 3. Open the line pressing cover with cross screwdriver.

Picture 4. Connect input cable end of LED fixture to suitable power socket(220-240V), and make sure connecting way is right. Make sure the two connectors inserted into the terminal at the same time when connecting the wire to the input end of the lamp.

Picture 5. Close the line pressing cover with cross screwdriver; make sure the power line fixed tightly.

Picture 6. Pinch both springs, then push light into installation hole, hangers rebound and chuck automatically. Make sure the light fixed well.

Picture 7. Double-check everything is well-connected, and then turn on the power.

