

EMR6-T50-A-1
EMR6-T100-A-1
EMR6-T200-A-1

(DE) Betriebs- und Montageanleitung

Temperaturüberwachungsrelais, EMR6 Reihe

Hinweis: Diese Betriebs- und Montageanleitung gilt nicht sämtliche Detailinformationen zu allen Typen der Produkte und kann auch nicht jeden Einsatzfall der Produkte berücksichtigen. Alle Angaben dienen ausschließlich der Produktbeschreibung und sind nicht als vertraglich vereinbarte Beschaffenheit aufzufassen.

Weiterführende Informationen und Daten erhalten Sie in den Katalogen und Datenblättern der Produkte, über die örtliche Eaton-Niederlassung sowie auf der Eaton Homepage unter www.eaton.eu.

Technische Änderungen jederzeit vorbehalten.

In Zweifelsfällen gilt der deutsche Text.

Warnung! Gefährliche Spannung! Installation nur durch elektrotechnische Fachkraft! Landes-spezifische Vorschriften (z.B. VDE, etc.) beachten. Vor der Installation diese Betriebs- und Montageanleitung sorgfältig lesen und beachten.

An die nicht beschrifteten Klemmen darf kein Leiter angeschlossen werden.

1SIC/79/B/60/0000 B

07/18 IL2101ZU

(EN) Operating and installation instructions

Temperature monitoring relays, EMR6 range

Note: These operating and installation instructions cannot claim to contain all detailed information of all types of this product range and can even not consider every possible application of the products. All statements serve exclusively to describe the products and have to be understood as contractually agreed characteristics. Further information and data is obtainable from the catalogues and data sheets of this product, from the local Eaton sales organisations as well as on the Eaton homepage www.eaton.eu. Subject to change without prior notice. The German text applies in cases of doubt.

Attention! Hazardous voltage! Installation by person with electrotechnical expertise only and in accordance with the specific national regulations (e.g., VDE, etc.). Before installing this unit, read these operating and installation instructions carefully and completely. Do not connect any conductor to terminals not labelled.

(FR) Instructions de montage et de mise en service

Relais de contrôle de température, gamme

EMR6

Note: Ces instructions de service et de montage ne contiennent pas toutes les informations relatives à tous les types de cette gamme de produits et ne peuvent pas non plus tenir compte de tous les cas d'application. Toutes les indications ne sont données qu'à titre de description du produit et ne constituent aucune obligation contractuelle.

Eaton Industries GmbH, Hein-Moeller-Straße 7-11, 53115 Bonn, Germany

© 2018 by Eaton Industries GmbH, Eaton.com/documentation

Eaton.com/recycling

I Front view with operating controls

① Indication of operational status with LEDs

U: green LED - Status indication of control supply voltage

② red LED - Fault message, state of measuring input

R: yellow LED - Status indication of the output relays

② Adjustment of the hysteresis for threshold value ①

③ Adjustment of the threshold value ①

④ Adjustment of the hysteresis for threshold value ②

⑤ Adjustment of the threshold value ②

LEDs, status information and fault messages

Operational state

U: green LED

③: red LED

R: yellow LED

Power supply missing

OFF

U: OFF

③: OFF

R: OFF

No fault

... 1)

Short circuit

Wire interruption

... 1)

Below threshold ①

... 1)

Below threshold ②

... 1)

Above threshold ①

... 1)

Above threshold ②

... 1)

Setting fault ②

... 1)

1) Depending on the configuration (see function diagrams)

2) Possible faulty setting: The threshold value for switch-off is set at a higher value than the threshold value for pre-warning.

II DIP switch functions

⑥ DIP switches for the adjustment of:

1 ON = Overtemperature monitoring

OFF = Undertemperature monitoring

2 ON = Temperature window monitoring ON

DIP switch 1 disabled

OFF = Temperature window monitoring OFF

3 ON = Closed-contact principle

OFF = Open-circuit principle

4 ON = 2 threshold values (2 x 1 c/o contact) ①

OFF = 1 threshold value (1 x 2 c/o contacts) ②

Default setting: All DIP switches in position OFF

1) Overtemperature monitoring:

Output relay R2 - Prewarning

Adjustment via ③

Output relay R1 - Final switch-off

Adjustment via ①

Undertemperature monitoring:

Output relay R1 - Prewarning

Adjustment via ①

Output relay R2 - Final switch-off

Adjustment via ②

2) Overtemperature monitoring: ② disabled

Undertemperature monitoring: ① disabled

III DIP switch position

Electrical connection

A1-A2 Control supply voltage U_s

11-12/14 Output relay R1

21-22/24 Output relay R2

T1, T2, T3 Measuring input, connection PT100

Emergency On Call Service: Local representative (Eaton.eu/aftersales) or +49 (0) 180 5 223822 (de,en)

07/18 IL2101ZU

1SIC/79/B/60/0000 B

07/18 IL2101Z

