



EN



User manual

POWERBANK

Model: PBDUAL10000



Read this user manual and in particular the safety notes before using the product. Keep the user manual for future reference and include it when passing the product on to third parties.

Celly S.p.A. will not in any way be held responsible for injury or damage caused to persons or property arising from misuse of the product.

Safety notes

To prevent malfunction or damage to the product, avoid accidental falls, do not crush, puncture or exercise a high level of pressure on the product. This can cause an internal short-circuit and overheating.

During operation, the housing becomes

Keep away from humidity, water or other liquids. If the product comes into contact with water, moisture or other liquids, do not use the product to avoid any electrical shock, explosion or damage.

If the product gets wet, even if it is drying up and operating normally, the battery contacts and the circuitry could slowly corrode and pose a safety hazard.

Do not store or expose the product to any source of heat, direct sunlight, radiators, stoves or other heat sources such as the dashboard of your car in the summer. This

protection circuit of the product is not working properly.

Immediately stop using the product if you see a bulge, dispersion or other abnormalities.

Allow the product to reach room temperature before connecting and using it again. This could take several hours.

Never short circuit the contacts/battery terminals.

Do not try to modify, repair or disassemble the product. Risk of explosion!

Do not leave the product in contact with metal objects.

Metallic objects can interfere with the electrical connections and cause an accident if the internal

4. Disconnect the device's cable from the device and the power bank after charging.

Do not under any circumstances use aggressive cleaning agents, alcohol or other

chemical solutions for cleaning as they

hot. Allow adequate ventilation. The housing must never be covered.

Never use the product when moving from a cold to a warm environment. Condensation may occur and, in some cases, damage the product.

A non-replaceable rechargeable battery is integrated in the product. There are no serviceable parts inside the product. Never open/disassemble it.

Do not press too hard on the housing to avoid scratching. Keep the product out of reach of children. Never allow children or

replaceable. Don not try to remove li-ion/polymer battery included in inside the product because can produce overheat's

Do not dispose of the product into fire. Make sure that children do not play with the plastic wrapping. They may swallow it

Do not leave the product in contact with metal objects.

Charge the battery regularly, even when the product is unused. This will prolong its lifespan (once time every 2 months)

Do not store the power bank in a clean, dry area. Keep it away from direct sunlight.

3. Connect your device to the USB port of the power bank, using the device's original cable in the power bank.

4. Disconnect the device's cable from the device and the power bank after charging.

Do not under any circumstances use aggressive cleaning agents, alcohol or other

chemical solutions for cleaning as they

can damage the housing or even impair the functionality of the product.

Disconnect all connected cables before

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°

Made in China.

Safely's use of this product is guarantee-

ed from the respect of this instructions

manual, keep it and carefully use it for all

life of the product. The product doesn't

need any kind of technical maintenance,

NEVER DISASSEMBLE IT. The battery

allow the product to reach room tempera-

ture before connecting and using it again.

Never open/disassemble it.

Do not press too hard on the housing to

avoid scratching. Keep the product out of

reach of children. Never allow children or

replaceable. Don not try to remove li-ion/

polymer battery included in inside the

product because can produce overheat's

Do not dispose of the product into fire.

Make sure that children do not play with

the plastic wrapping. They may swallow it

Do not leave the product in contact with

metal objects.

Charge the battery regularly, even when

the product is unused. This will prolong its

lifespan (once time every 2 months)

Do not store the power bank in a clean, dry area.

Keep it away from direct sunlight.

3. Connect your device to the USB port of

the power bank, using the device's origi-

nal cable in the power bank.

4. Disconnect the device's cable from the

device and the power bank after charging.

Do not under any circumstances use ag-

gressive cleaning agents, alcohol or other

chemical solutions for cleaning as they

can damage the housing or even impair

the functionality of the product.

Disconnect all connected cables before

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles

to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°

Made in China.

Do not use a damaged product.

Make sure that the provided cable for

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles

to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°

Made in China.

Do not use a damaged product.

Make sure that the provided cable for

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles

to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°

Made in China.

Do not use a damaged product.

Make sure that the provided cable for

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles

to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°

Made in China.

Do not use a damaged product.

Make sure that the provided cable for

charging the product is intact and never

short-circuit the charging outputs.

Use a clean brush with soft, long bristles

to remove dust on the connectors.

Do not use any solvents, corrosive or ga-

seous cleaning agents.

Make sure no water or other liquids pene-

trate the housing.

1. Make sure the power bank is suffi-

ciently charged.

2. Before charging your device, make

sure its technical characteristics (voltage,

output and amperage) are compatible

with the power bank.

Temperature of use: 0 – 40°