


DO NOT PULL UP

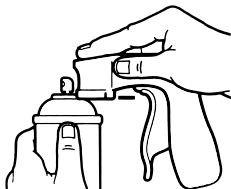

ATTACH / REMOVE

Instructions: Hold can and handle level with fingers off trigger. Rotate can until spray nozzle points forwards. Then firmly push and slide bottom of the nosepiece under can's stopring.



ART NR: 702011

Maston Oy • www.maston.fi • maston@maston.fi

Teollisuustie 10, FI-02880 Veikkola, FINLAND, Tel. +358 20 7188 580 • Fax +358 20 7188 599

Teollisuustie 10, 02880 Вейккола, Финляндия, Тел. +358 20 7188 580 • Факс +358 20 7188 599