


AURA 1930 IP (LED Strip)

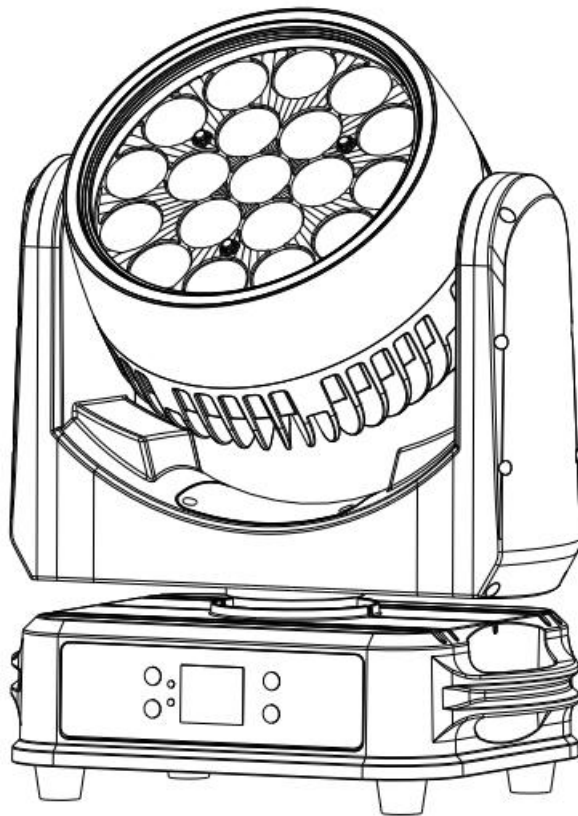

USER MANUAL

KEEP THIS USER MANUAL FOR FUTURE NEEDS

Thank you for your patronage!

We are confident that our excellent products and service can satisfy you.

For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safety correctly.

We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.



CAUTION!

Keep this device away from rain and moisture!



CAUTION!

Unplug mains lead before device's installation, cleaning and maintenance!

Every person involved with the installation, operation and maintenance of device has to:

-be qualified

-follow carefully the instructions of this manual

INTRODUCTION

Thank you for having chosen this professional moving head.

You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the carton box you should find:

1. One power in cable
2. One 3 Pin DMX cable(5 Pin optional)
3. Folding Clamps
4. One safety rope
5. One English user manual

(Flight case is optional, please contact your dealer)

Please check carefully that there is no damage caused by transportation. Should there be any questions, please consult your dealer and don't install this device.

GENERAL GUIDELINES

This device is a lighting effect for a professional use on stages, TV, in discotheques, theaters, etc., The device was designed for indoor use only.

This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in 6th page of this manual.

Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. Please don't project the beam onto combustible substances. The minimum distance between light-output from the projector and the illuminated surface must be more than 0,5 meter.

If you use the quick lock cam in hanging up the fixture, please make sure the quick lock

fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported.

For safety reasons, please be aware that all modifications on the device are forbidden. If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, crash, etc.

SAFETY INSTRUCTIONS



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

1. In order to guarantee the product's life, please don't put it in the damp places or even the environment over 60degrees.
2. Always mount this unit in safe and stable matter.

The qualified professionals are allowed to carry out the lamp installation, operation and maintenance, but they must guarantee to operate in strict accordance with the instructions referred to.

▲ Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperatures.

This device falls under protection-class I . Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord. During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

**CAUTION!**

Never touch the device during operation!
The housing may heat up!

**CAUTION!**

Never look directly into the light source,
As sensitive persons may suffer an epileptic shock.

Please be aware that damages caused by manual modifications to be the device are not subject to warranty. Keep away from children and non-professionals.

CLEANING AND MAINTENANCE

1. To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
2. Do not spill water or other liquids into or on to your unit.
3. During long periods of non-use, disconnect the unit's main power.
4. It should be installed in a well-ventilated place, at a distance of 50 centimeters or more with the walls. At the same time, please check if the fan and ventilation holes are unobstructed.

The following points have to be considered during the inspection

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing. Fixations and installations spots(ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

**CAUTION!**

Disconnect from mains before starting maintenance operation!

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device.

Please use a moist, lint-free cloth. Never use alcohol or solvents !

TECHNICAL PARAMETERS

LIGHT SOURCE & OPTIC

LED Source: 19PCS × 30W RGBW 4-IN-1

Outer Ring: 54PCS RGB 3-IN-1

Inner Ring: 114PCS RGB 3-IN-1

EFFECTS

- Zoom: 10°-51° Motorized Zoom
- Movement: Pan 540°, Tilt 270°, 16-bit precision

CONTROL & PROGRAM

- Control: 31/32/36/40CH DMX512, RDM supported, Master, Slave, Auto
- Luminaire Output: 10,915lm
- Illuminance: (10°): 13,920 lux @ 5m; (51°): 1,240 lux @ 5m
- Dimming: 0-100% Electronic Dimming, 4 Dimming Curve Options

POWER SUPPLY


- Power Supply: AC110V-240V 50/60Hz
- Power Consumption: 550W
- Strobe: 0-20Hz, Selectable Multiple Strobe Effects with Different Speeds

BODY


- Display: LCD screen 180° reversible
- Housing: Aluminum Alloy + Engineering Plastic
- IP Rating: IP65 dustproof

WEIGHT & SIZE

- Product size: 31×22×43cm
- N.W: 11.6kg, G.W:
- Carton size: 46x29x39cm

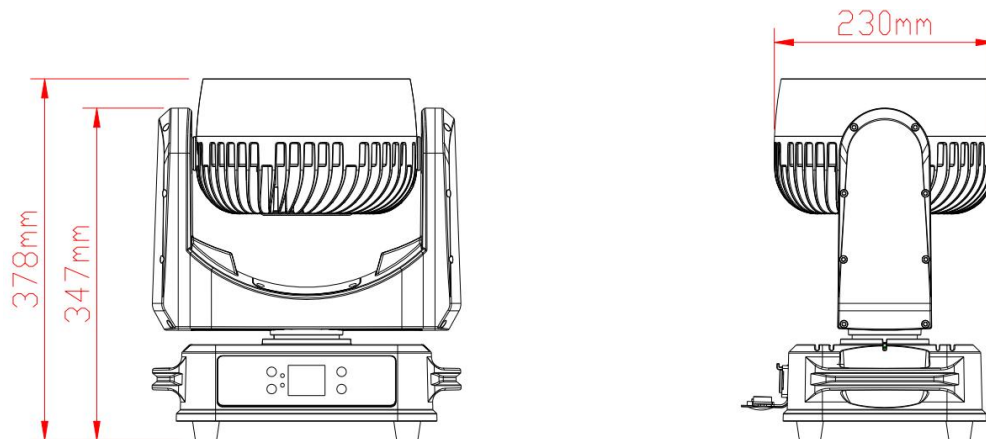

PHOTOMEREICS DIAGRAM

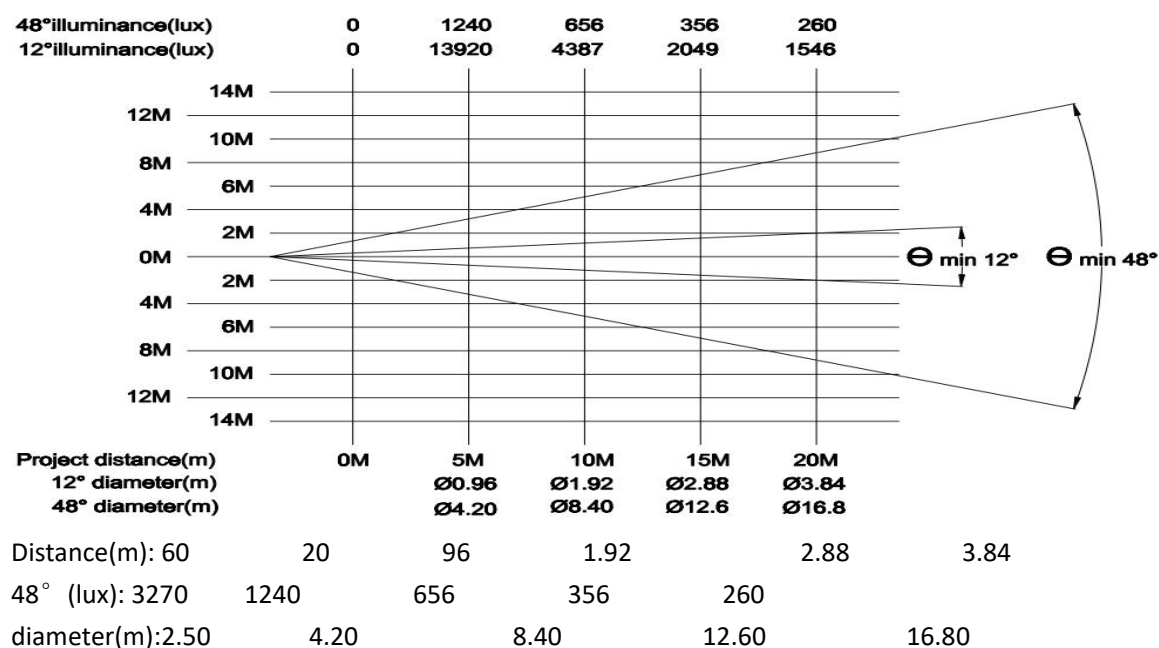

CHANNEL LIST

LIST-1	LIST-2	LIST-3	LIST-4	NAME	VALUE	BRIEF
[CH1]	[CH1]	[CH1]	[CH1]	Pan	0-255	0-540(degree)
[CH2]	[CH2]	[CH2]	[CH2]	Pan Fine	0-255	0-2(degree)
[CH3]	[CH3]	[CH3]	[CH3]	Tilt	0-255	0-270(degree)
[CH4]	[CH4]	[CH4]	[CH4]	Tilt Fine	0-255	0-1(degree)
[CH5]	[CH5]	[CH5]	[CH5]	PT Spd	0-255	Fast to slow
[CH6]	[CH6]	[CH6]	[CH6]	Focus	0-255	Far to near
[CH7]	[CH7]	[CH7]	[CH7]	Strobe		
					0-9	Dark
					10-250	Pluse strobe slow to fast
					251-255	Open
[CH8]	[CH8]	[CH8]	[CH8]	Dimmer	0-255	0-100% dimmer
[CH9]		[CH9]		Red	0-255	From dark to light
		[CH10]		Red Fine	0-255	From dark to light
[CH10]		[CH11]		Green	0-255	From dark to light
		[CH12]		Green Fine All	0-255	From dark to light
[CH11]		[CH13]		Blue	0-255	From dark to light
		[CH14]		Blue Fine All	0-255	From dark to light
[CH12]		[CH15]		White	0-255	From dark to light
		[CH16]		White Fine All	0-255	From dark to light
	[CH9]			CMY1	0-255	Bright to Dark
	[CH10]			CMY2	0-255	Bright to Dark

	[CH11]			CMY3	0-255	Bright to Dark
			[CH9]	IR Red1	0-255	From dark to light
			[CH10]	IR Green1	0-255	From dark to light
			[CH11]	IR Blue1	0-255	From dark to light
			[CH12]	IR White1	0-255	From dark to light
			[CH13]	MR Red1	0-255	From dark to light
			[CH14]	MR Green1	0-255	From dark to light
			[CH15]	MR Blue1	0-255	From dark to light
			[CH16]	MR White1	0-255	From dark to light
			[CH17]	OR Red1	0-255	From dark to light
			[CH18]	OR Green1	0-255	From dark to light
			[CH19]	OR Blue1	0-255	From dark to light
			[CH20]	OR White1	0-255	From dark to light
[CH13]	[CH12]	[CH17]	[CH21]	CCT		
					0-15	None
					16-255	CCT(2800K-8000K)
[CH14]	[CH13]	[CH18]	[CH22]	Colour		
					0-7	None
					8-15	Colour1
					16-23	Colour2
						
					232-239	Colour29
					240-247	Colour30
					248-255	Colour31
[CH15]	[CH14]	[CH19]	[CH23]	Rotate		
					0-9	None
					10-9	Fade1
					20-29	Fade2
						
					230-239	Fade23
					240-249	Fade24
					250-255	Fade25
[CH16]	[CH15]	[CH20]	[CH24]	Rotate Spd		
					0-127	Forward (fast to slow)
					128-255	Reverse (slow to fast)
[CH17]	[CH16]	[CH21]	[CH25]	Back Red	0-255	From dark to light
[CH18]	[CH17]	[CH22]	[CH26]	Back Green	0-255	From dark to light
[CH19]	[CH18]	[CH23]	[CH27]	Back Blue	0-255	From dark to light
[CH20]	[CH19]	[CH24]	[CH28]	Back White	0-255	From dark to light
[CH21]	[CH20]	[CH25]	[CH29]	Ring Dimmer	0-255	0-100% dimmer
[CH22]	[CH21]	[CH26]	[CH30]	Ringl Strobe		
					0-3	None

					4-255	Pluse strobe slow to fast
[CH23]	[CH22]	[CH27]	[CH31]	Ring Effect		
					0-14	None
					15-255	Every 5 values correspond to one effect
[CH24]	[CH23]	[CH28]	[CH32]	Ring Spd		
					0-127	Forward (fast to slow)
					128-255	Reverse (slow to fast)
[CH25]	[CH24]	[CH29]	[CH33]	Reset		
					10-19	Dimmer Curve:Linear
					20-29	Dimmer Curve:Square
					30-39	Dimmer Curve:Logarithmic
					40-49	Dimmer Curve:S-Curve
					240-255	Reset fixture over 6 second

REMARK

The product has perfect performance and integrity packing. All users should be strictly comply with the warning

and operating instructions as stated. Or we aren't in charge of any result by misusing.

Any damage resulting by misuse is not within the Company's warranty.

Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted.

All information is subject to change without prior notice.

Thank you again for your patronage!
We will be offering sincere service as always,
Wish you have a good lighting journey!