


DIAMOND LINE

1240 ECO

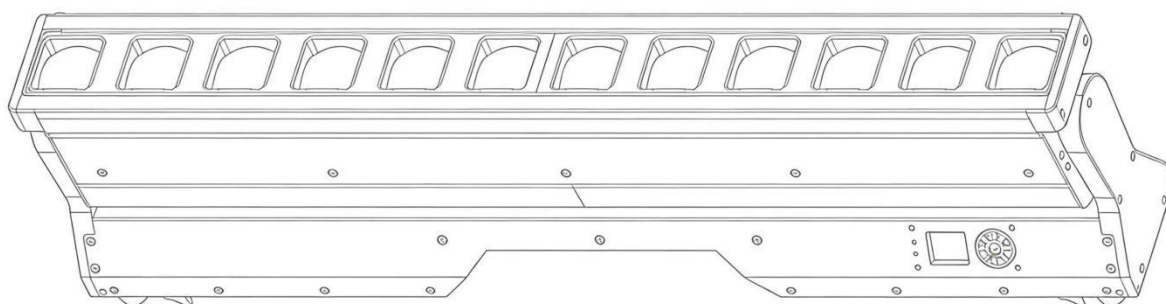

USER MANUAL

KEEP THIS USER MANUAL FOR FUTURE NEEDS

Thank you for your patronage!

We are confident that our excellent products and service can satisfy you.

For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safety correctly.

We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.



CAUTION!

Keep this device away from rain and moisture!



CAUTION!

Unplug mains lead before device's installation, cleaning and maintenance!

Every person involved with the installation, operation and maintenance of device has to:

- be qualified
- follow carefully the instructions of this manual

INTRODUCTION

Thank you for having chosen this professional moving head.

You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the carton box you should find:

1. One power in cable
2. One 3 Pin DMX cable(5 Pin optional)
3. Folding Clamps
4. One safety rope
5. One English user manual

(Flight case is optional, please contact your dealer)

Please check carefully that there is no damage caused by transportation. Should there be any questions, please consult your dealer and don't install this device.

GENERAL GUIDELINES

This device is a lighting effect for a professional use on stages, TV, in discotheques, theaters, etc., The device was designed for indoor use only.

This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in 6th page of this manual.

Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. Please don't project the beam onto combustible substances. The minimum distance between light-output from the projector and the illuminated surface must be more than 0,5 meter.

If you use the quick lock cam in hanging up the fixture, please make sure the quick lock fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported.

For safety reasons, please be aware that all modifications on the device are forbidden. If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, crash, etc.

SAFETY INSTRUCTIONS



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

1. In order to guarantee the product's life, please don't put it in the damp places or even the environment over 60degrees.
2. Always mount this unit in safe and stable matter.

The qualified professionals are allowed to carry out the lamp installation, operation and maintenance, but they must guarantee to operate in strict accordance with the instructions referred to.

▲ Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperatures.

This device falls under protection-class I . Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

**CAUTION!**

Never touch the device during operation!

The housing may heat up!

**CAUTION!**

Never look directly into the light source,
As sensitive persons may suffer an epileptic shock.

**Please be aware that damages caused by manual modifications to be the device are not subject to warranty.
Keep away from children and non-professionals.**

CLEANING AND MAINTENANCE

1. To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
2. Do not spill water or other liquids into or on to your unit.
3. During long periods of non-use, disconnect the unit's main power.
4. It should be installed in a well-ventilated place, at a distance of 50 centimeters or more with the walls. At the same time, please check if the fan and ventilation holes are unobstructed.

The following points have to be considered during the inspection

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing. Fixations and installations spots(ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

**CAUTION!**

Disconnect from mains before starting maintenance operation!

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device.

Please use a moist, lint-free cloth. Never use alcohol or solvents !

TECHNICAL PARAMETERS

LIGHT SOURCE & OPTIC

Lamp beads: 12*40W 4in1 lamp beads, 144*0.3W 5050 3in1 lamp beads

EFFECT

Dimming: 32bit 0-100% linear dimming

Features: Y shaking head+beam+burst flash+auxiliary light

Strobe frequency: 1-30Hz Appearance: Metal, black

Connection method: DMX512 input/output/power input/output.

CONTROL & PROGRAM

Control mode: DMX512, self-propelled, master-slave, voice control, with RDM function.


Channels: CH26, CH38, CH62 CH74. CH194.

POWER SUPPLY

Voltage: AC100~240V 50/60HZ

Power: 500W

SIZE

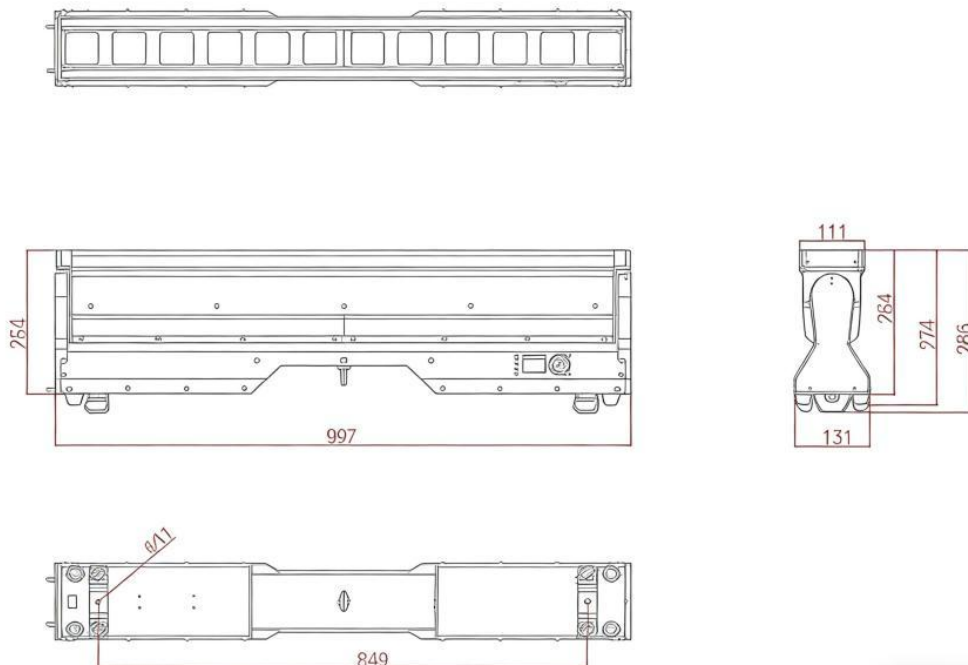

Display panel and button definitions



Menu key: Enter/return to the main menu

Up key: menu function up selection/parameter increment

Down key: menu function selection down/parameter decrease

Confirm key: Select the menu function and make a confirmation and save when modifying the menu function parameters.

Menu

After powering on and resetting the entire machine, press the menu button to enter the main menu (exit after 30 seconds without any operation on the main menu interface). Please refer to the main menu function table for details(5 main menu options in total) ; Select the main menu with the up or down arrow keys, enter the confirm button to modify the functional parameters of each menu, and then press the confirm button to save the current functional parameters (with power-off memory after saving).

Main menu	Sub menu	Menu Function Description
1 、 System settings	1. DMX address	Modify the DMA address code up or down (optional range of address codes 001-512), confirm to save, default to 001.
	2. Encoder	Modify encoder on/off up or down, confirm key to save, default to on.
	3. X reversal	Modify X up or down to reverse on/off, confirm to save, default to off.
	4. Y reversal	Modify Y up or down to reverse on/off, confirm to save, default to off.
	5. Advanced Settings	Select the operating mode up or down, such as MAX/voice control/automatic, and press the confirm button to save. The default mode is MAX.
2 、 Operating mode	1. Operation mode	Select channels CH26, CH38, CH62 up or down CH74. CH194 confirm key to save, default to CH26.
	2. Channel	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.

	selection	
3、Manual	1. Y-axis	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	2. Y fine-tuning	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	3. Y speed	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	4. Focusing	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	5. Dimming	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.

	6. A strobe	Modify the brightness of the red light bead up or down (adjustable range 000-255), confirm to save, default to 000.
	7. A Red	Modify the brightness of the green light bead up or down (adjustable range 000-255), confirm to save, default to 000.
	8. A Green	Modify the brightness of the blue light bead up or down (adjustable range 000-255), confirm to save, default to 000.
	9. A Blue	Modify the brightness of the white light bead up or down (adjustable range 000-255), confirm to save, default to 000.
	10. A white	Modify the DMA address code up or down (optional range of address codes 001-512), confirm to save, default to 001.
	11. A-mode	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	12. A speed	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	13. A background color	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	14. A background color tone light	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.

	15. B strobe	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	16. B Red	Modify the brightness of the red light bead up or down (adjustable range 000-255), confirm to save, default to 255.
	17. B Green	Modify the brightness of the green light bead up or down (adjustable range 000-255), confirm to save, default to 255.
	18. B Blue	Modify the brightness of the blue light bead up or down (adjustable range 000-255), confirm to save, default to 255.
	19. B White	Modify the brightness of the white light beads up or down (adjustable range 000-255), confirm to save, default to 255.
	20. B Yellow	Modify the brightness of blue and yellow light beads up or down (adjustable range 000-255), confirm to save, default to 255.
	21. Mode B	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	22. B speed	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	23. Direction B	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	24. B background color	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	25. B background color tone light	Modify the parameter values up or down (adjustable range 000-255), confirm and save, default to 000.
	26. Reset	Yes/No
4、 Display Settings	1. Language selection	Select Chinese/EN (English) up or down, confirm to save, default to Chinese.
	2. Inverted Display Settings	Select up or down to turn off/on the inverted display setting, confirm to save, default to off.

	3. Screen saver	Select up or down to turn off/on screen saver, confirm to save, default to on.	
	4. Software version	069C program identification code, cannot be modified.	
5、Factory settings	Display, please enter password! Change up or down to 138, then press the confirm button to enter the factory settings.	1. Y-axis calibration	Modify parameters up or down (range 000-255), confirm to save, default to 128.
		2. Focus 1 calibration	Modify the focus 1 calibration (000-255) up or down, confirm and save, default to 128.
		3. Focus 2 calibration	Modify the focus 2 calibration (000-255) up or down, confirm and save, default to 128.
		4. Focusing stroke	Modify the focusing stroke up or down (000-255), confirm and save, default to 128.
		5. Red	Modify the red bead current (032-255) up or down, press the confirm button to save, default to 252.
		6. Green	Modify the green light bead current (032-255) up or down, confirm and save, default to 252.
		7. Blue	Modify the blue light bead current (032-255) up or down, confirm and save, default to 252.
		8. White	Modify the white light bead current (032-255) up or down, confirm to save, default to 252.
		9. LEDNum	Select 000/0012 up or down, confirm to save, default to 001.
		10. Current	Select 000/007 up or down, confirm to save, default to 004.
		11. Speed	Select 000/007 up or down, confirm to save, default to 000.
		12. LOGO	Select 000/001 up or down, confirm to save, default to 000.
		13. Temperature	Modify the temperature parameters up or down (range 40-70), confirm and save, default to 065.
		14. Temperature - Fan	Select up or down to turn off/on temperature fan control, confirm to save, default to on.
		15. LED	LED bead sequence selection
		16. ETO	ETO

Master slave control

Two or more identical lighting fixtures are connected using a three core signal wire in the DMXs. All lighting fixtures are modified to any address code from 001 to 512, and any one of them is set as the host, while the other lighting fixtures are set as the slave. The display screens of all slave devices do not flash; When adjusting the gradient, pulse, jump, voice control, and self-propelled effects with the host, all slave machines synchronize the gradient, pulse, jump, voice control, and self-propelled effects.

Special attention:

1. Only one host can be set for a group of lighting fixtures. If there are multiple hosts, all lighting fixtures will flash randomly and not synchronize.
2. All lighting fixtures must be functional when the DMX512 console is turned off.

CHANNEL LIST

26CH

26CH	VALUE	DESCRIPTION
1	000-255	Electrical machinery
2	000-255	Motor fine adjustment
3	000-255	Motor speed
4	000-255	Focusing
5	000-255	Dimming
6	000-255	Main light strobe
7	000-255	Main light red
8	000-255	Main light green
9	000-255	Main light blue
10	000-255	Main light white
11	000-255	Main light mode
12	000-255	Main optical speed
13	000-255	Main light background color
14	000-255	Main light, background color tone, light
15	000-255	Auxiliary light strobe
16	000-255	Coenzyme red
17	000-255	Auxiliary light green
18	000-255	Auxiliary light blue
19	000-255	Auxiliary light white
20	000-255	Auxiliary light yellow
21	000-255	Auxiliary light mode
22	000-255	Auxiliary light speed
23	000-255	Auxiliary light direction
24	000-255	Auxiliary light background color
25	000-255	Auxiliary light background color tone light
26	000-255	Reset

38CH

38CH	VALUE	DESCRIPTION
1	000-255	Electrical machinery
2	000-255	Motor fine adjustment
3	000-255	Motor speed
4	000-255	Focusing
5	000-255	Dimming
6	000-255	Main light strobe
7	000-255	Main light red
8	000-255	Main light green

9	000-255	Main light blue
10	000-255	Main light white
11	000-255	Main light mode
12	000-255	Main optical speed
13	000-255	Main light background color
14	000-255	Main light, background color tone, light
15	000-255	Auxiliary light strobe
16	000-255	Coenzyme red
17	000-255	Auxiliary light green
18	000-255	Auxiliary light blue
19	000-255	Auxiliary light white
20	000-255	Auxiliary light yellow
21	000-255	Auxiliary light mode
22	000-255	Auxiliary light speed
23	000-255	Auxiliary light direction
24	000-255	Auxiliary light background color
25	000-255	Auxiliary light background color tone light
26	000-255	Reset
27	000-255	Main light LED1
28	000-255	Main light LED2
29	000-255	Main light LED3
30	000-255	Main light LED 4
31	000-255	Main light LED 5
32	000-255	Main light LED 6
33	000-255	Main light LED 7
34	000-255	Main light LED 8
35	000-255	Main light LED 9
36	000-255	Main light LED10
37	000-255	Main light LED11
38	000-255	Main light LED12

62CH

62CH	VALUE	DESCRIPTION
1	000-255	Electrical machinery
2	000-255	Motor fine adjustment
3	000-255	Motor speed
4	000-255	Focusing
5	000-255	Dimming
6	000-255	Main light strobe
7	000-255	Main light red
8	000-255	Main light green
9	000-255	Main light blue
10	000-255	Main light white

11	000-255	Main light mode
12	000-255	Main optical speed
13	000-255	Main light background color
14	000-255	Main light, background color tone, light
15	000-255	Auxiliary light strobe
16	000-255	Coenzyme red
17	000-255	Auxiliary light green
18	000-255	Auxiliary light blue
19	000-255	Auxiliary light white
20	000-255	Auxiliary light yellow
21	000-255	Auxiliary light mode
22	000-255	Auxiliary light speed
23	000-255	Auxiliary light direction
24	000-255	Auxiliary light background color
25	000-255	Auxiliary light background color tone light
26	000-255	Reset
27	000-255	Main light LED1
28	000-255	Main light LED2
29	000-255	Main light LED3
30	000-255	Main light LED 4
31	000-255	Main light LED 5
32	000-255	Main light LED 6
33	000-255	Main light LED 7
34	000-255	Main light LED 8
35	000-255	Main light LED 9
36	000-255	Main light LED10
37	000-255	Main light LED11
38	000-255	Main light LED12
39	000-255	Auxiliary light LED1
40	000-255	Auxiliary light LED2
41	000-255	Auxiliary light LED3
42	000-255	Auxiliary light LED 4
43	000-255	Auxiliary light LED 5
44	000-255	Auxiliary light LED 6
45	000-255	Auxiliary light LED 7
46	000-255	Auxiliary light LED 8
47	000-255	Auxiliary light LED 9
48	000-255	Auxiliary light LED10
49	000-255	Auxiliary light LED11
50	000-255	Auxiliary light LED12
51	000-255	Auxiliary light LED13
52	000-255	Auxiliary light LED14
53	000-255	Auxiliary light LED15
54	000-255	Auxiliary light LED16
55	000-255	Auxiliary light LED17
56	000-255	Auxiliary light LED18

57	000-255	Auxiliary light LED19
58	000-255	Auxiliary light LED20
59	000-255	Auxiliary light LED21
60	000-255	Auxiliary light LED22
61	000-255	Auxiliary light LED23
62	000-255	Auxiliary light LED24

74CH

74CH	VALUE	DESCRIPTION
1	000-255	Electrical machinery
2	000-255	Motor fine adjustment
3	000-255	Motor speed
4	000-255	Focusing
5	000-255	Dimming
6	000-255	Main light strobe
7	000-255	Main light red
8	000-255	Main light green
9	000-255	Main light blue
10	000-255	Main light white
11	000-255	Main light mode
12	000-255	Main optical speed
13	000-255	Main light background color
14	000-255	Main light, background color tone, light
15	000-255	Auxiliary light strobe
16	000-255	Coenzyme red
17	000-255	Auxiliary light green
18	000-255	Auxiliary light blue
19	000-255	Auxiliary light white
20	000-255	Auxiliary light yellow
21	000-255	Auxiliary light mode
22	000-255	Auxiliary light speed
23	000-255	Auxiliary light direction
24	000-255	Auxiliary light background color
25	000-255	Auxiliary light background color tone light
26	000-255	Reset
27	000-255	Main light red 1
28	000-255	Main light green 1
29	000-255	Main light blue 1
30	000-255	Main light white 1
31	000-255	Main light red 2
32	000-255	Main light green 2
33	000-255	Main light blue 2

34	000-255	Main light white 2
35	000-255	Main light red 3
36	000-255	Main light green 3
37	000-255	Main light blue 3
38	000-255	Main light white 3
39	000-255	Main light red 4
40	000-255	Main light green 4
41	000-255	Main light blue 4
42	000-255	Main light white 4
43	000-255	Main light red 5
44	000-255	Main light green 5
45	000-255	Main light blue 5
46	000-255	Main light white 5
47	000-255	Main Light Red 6
48	000-255	Main light green 6
49	000-255	Main light blue 6
50	000-255	Main light white 6
51	000-255	Main light red 7
52	000-255	Main light green 7
53	000-255	Main light blue 7
54	000-255	Main light white 7
55	000-255	Main light red 8
56	000-255	Main light green 8
57	000-255	Main light blue 8
58	000-255	Main light white 8
59	000-255	Main light red 9
60	000-255	Main light green 9
61	000-255	Main light blue 9
62	000-255	Main light white 9
63	000-255	Main light red 10
64	000-255	Main light green 10
65	000-255	Main light blue 10
66	000-255	Main light white 10
67	000-255	Main Light Red 11
68	000-255	Main light green 11
69	000-255	Main light blue 11
70	000-255	Main light white 11
71	000-255	Main light red 12
72	000-255	Main light green 12
73	000-255	Main light blue 12
74	000-255	Main light white 12

194CH

194CH	VALUE	DESCRIPTION
1	000-255	Electrical machinery
2	000-255	Motor fine adjustment
3	000-255	Motor speed
4	000-255	Focusing
5	000-255	Dimming
6	000-255	Main light strobe
7	000-255	Main light red
8	000-255	Main light green
9	000-255	Main light blue
10	000-255	Main light white
11	000-255	Main light mode
12	000-255	Main optical speed
13	000-255	Main light background color
14	000-255	Main light, background color tone, light
15	000-255	Auxiliary light strobe
16	000-255	Coenzyme red
17	000-255	Auxiliary light green
18	000-255	Auxiliary light blue
19	000-255	Auxiliary light white
20	000-255	Auxiliary light yellow
21	000-255	Auxiliary light mode
22	000-255	Auxiliary light speed
23	000-255	Auxiliary light direction
24	000-255	Auxiliary light background color
25	000-255	Auxiliary light background color tone light
26	000-255	Reset
27	000-255	Main light red 1
28	000-255	Main light green 1
29	000-255	Main light blue 1
30	000-255	Main light white 1
31	000-255	Main light red 2
32	000-255	Main light green 2
33	000-255	Main light blue 2
34	000-255	Main light white 2
35	000-255	Main light red 3
36	000-255	Main light green 3
37	000-255	Main light blue 3
38	000-255	Main light white 3
39	000-255	Main light red 4
40	000-255	Main light green 4
41	000-255	Main light blue 4
42	000-255	Main light white 4
43	000-255	Main light red 5

44	000-255	Main light green 5
45	000-255	Main light blue 5
46	000-255	Main light white 5
47	000-255	Main Light Red 6
48	000-255	Main light green 6
49	000-255	Main light blue 6
50	000-255	Main light white 6
51	000-255	Main light red 7
52	000-255	Main light green 7
53	000-255	Main light blue 7
54	000-255	Main light white 7
55	000-255	Main light red 8
56	000-255	Main light green 8
57	000-255	Main light blue 8
58	000-255	Main light white 8
59	000-255	Main light red 9
60	000-255	Main light green 9
61	000-255	Main light blue 9
62	000-255	Main light white 9
63	000-255	Main light red 10
64	000-255	Main light green 10
65	000-255	Main light blue 10
66	000-255	Main light white 10
67	000-255	Main Light Red 11
68	000-255	Main light green 11
69	000-255	Main light blue 11
70	000-255	Main light white 11
71	000-255	Main light red 12
72	000-255	Main light green 12
73	000-255	Main light blue 12
74	000-255	Main light white 12
75	000-255	Auxiliary light red 1
76	000-255	Auxiliary light green 1
77	000-255	Auxiliary light blue 1
78	000-255	Auxiliary light white 1
79	000-255	Auxiliary light yellow 1
80	000-255	Auxiliary light red 2
81	000-255	Auxiliary light green 2
82	000-255	Auxiliary light blue 2
83	000-255	Auxiliary light white 2
84	000-255	Auxiliary light yellow 2
85	000-255	Auxiliary light red 3
86	000-255	Auxiliary light green 3
87	000-255	Auxiliary light blue 3
88	000-255	Auxiliary light white 3
89	000-255	Auxiliary light yellow 3

90	000-255	Auxiliary Light Red 4
91	000-255	Auxiliary light green 4
92	000-255	Auxiliary light blue 4
93	000-255	Auxiliary light white 4
94	000-255	Auxiliary light yellow 4
95	000-255	Auxiliary light red 5
96	000-255	Auxiliary light green 5
97	000-255	Auxiliary light blue 5
98	000-255	Auxiliary light white 5
99	000-255	Auxiliary light yellow 5
100	000-255	Auxiliary Light Red 6
101	000-255	Auxiliary light green 6
102	000-255	Auxiliary light blue 6
103	000-255	Auxiliary light white 6
104	000-255	Auxiliary light yellow 6
105	000-255	Auxiliary light red 7
106	000-255	Auxiliary light green 7
107	000-255	Auxiliary light blue 7
108	000-255	Auxiliary light white 7
109	000-255	Auxiliary light yellow 7
110	000-255	Auxiliary light red 8
111	000-255	Auxiliary light green 8
112	000-255	Auxiliary light blue 8
113	000-255	Auxiliary light white 8
114	000-255	Auxiliary light yellow 8
115	000-255	Auxiliary light red 9
116	000-255	Auxiliary light green 9
117	000-255	Auxiliary light blue 9
118	000-255	Auxiliary light white 9
119	000-255	Auxiliary light yellow 9
120	000-255	Auxiliary light red 10
121	000-255	Auxiliary light green 10
122	000-255	Auxiliary light blue 10
123	000-255	Auxiliary light white 10
124	000-255	Auxiliary light yellow 10
125	000-255	Auxiliary Light Red 11
126	000-255	Auxiliary Green 11
127	000-255	Auxiliary light blue 11
128	000-255	Auxiliary Light White 11
129	000-255	Auxiliary light yellow 11
130	000-255	Auxiliary light red 12
131	000-255	Auxiliary light green 12
132	000-255	Auxiliary light blue 12
133	000-255	Auxiliary light white 12
134	000-255	Auxiliary light yellow 12
135	000-255	Auxiliary Light Red 13

136	000-255	Auxiliary light green 13
137	000-255	Auxiliary light blue 13
138	000-255	Auxiliary light white 13
139	000-255	Auxiliary light yellow 13
140	000-255	Auxiliary Light Red 14
141	000-255	Auxiliary light green 14
142	000-255	Auxiliary light blue 14
143	000-255	Auxiliary light white 14
144	000-255	Auxiliary light yellow 14
145	000-255	Auxiliary light red 15
146	000-255	Auxiliary light green 15
147	000-255	Auxiliary light blue 15
148	000-255	Auxiliary light white 15
149	000-255	Auxiliary light yellow 15
150	000-255	Auxiliary Light Red 16
151	000-255	Auxiliary light green 16
152	000-255	Auxiliary light blue 16
153	000-255	Auxiliary light white 16
154	000-255	Auxiliary light yellow 16
155	000-255	Auxiliary Light Red 17
156	000-255	Auxiliary light green 17
157	000-255	Auxiliary light blue 17
158	000-255	Auxiliary light white 17
159	000-255	Auxiliary light yellow 17
160	000-255	Auxiliary Light Red 18
161	000-255	Auxiliary Green 18
162	000-255	Auxiliary light blue 18
163	000-255	Auxiliary light white 18
164	000-255	Auxiliary light yellow 18
165	000-255	Auxiliary light red 19
166	000-255	Auxiliary Green 19
167	000-255	Auxiliary light blue 19
168	000-255	Auxiliary light white 19
169	000-255	Auxiliary light yellow 19
170	000-255	Auxiliary light red 20
171	000-255	Auxiliary light green 20
172	000-255	Auxiliary light blue 20
173	000-255	Auxiliary light white 20
174	000-255	Auxiliary light yellow 20
175	000-255	Auxiliary Light Red 21
176	000-255	Auxiliary light green 21
177	000-255	Auxiliary light blue 21
178	000-255	Auxiliary Light White 21
179	000-255	Auxiliary light yellow 21
180	000-255	Auxiliary Light Red 22
181	000-255	Auxiliary light green 22

182	000-255	Auxiliary light blue 22
183	000-255	Auxiliary light white 22
184	000-255	Auxiliary light yellow 22
185	000-255	Auxiliary light red 23
186	000-255	Auxiliary light green 23
187	000-255	Auxiliary light blue 23
188	000-255	Auxiliary light white 23
189	000-255	Auxiliary light yellow 23
190	000-255	Auxiliary Light Red 24
191	000-255	Auxiliary light green 24
192	000-255	Auxiliary light blue 24
193	000-255	Auxiliary light white 24
194	000-255	Auxiliary light yellow 24

REMARK

The product has perfect performance and integrity packing. All users should be strictly comply with the warning

and operating instructions as stated. Or we aren't in charge of any result by misusing.

Any damage resulting by misuse is not within the Company's warranty.

Any fault or problem caused by neglecting the manual is also not in the charge of dealers.

Errors and omissions for every information given in this manual excepted.

All information is subject to change without prior notice.

Thank you again for your patronage!
We will be offering sincere service as always,
Wish you have a good lighting journey!