


BLADE 2i

Zoom

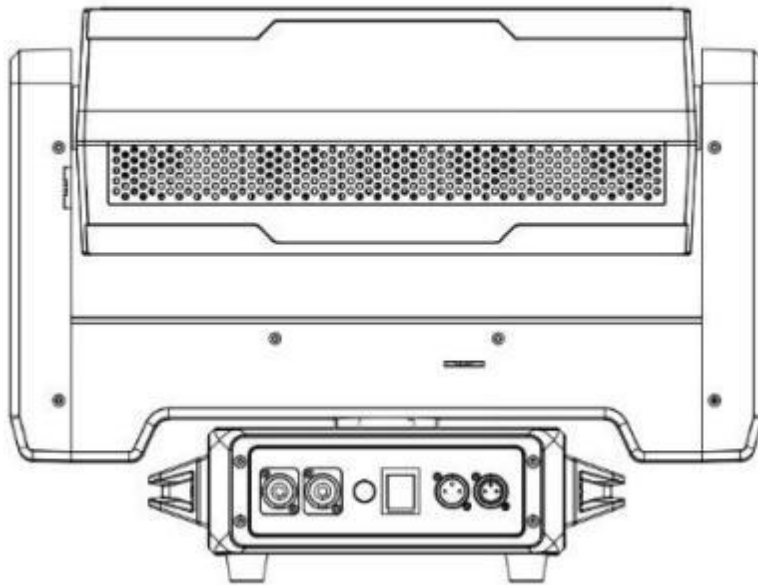

USER MANUAL

KEEP THIS USER MANUAL FOR FUTURE NEEDS

Thank you for your patronage!

We are confident that our excellent products and service can satisfy you.

For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safety correctly.

We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.



CAUTION!

Keep this device away from rain and moisture!



CAUTION!

Unplug mains lead before device's installation, cleaning and maintenance!

Every person involved with the installation, operation and maintenance of device has to:

-be qualified

-follow carefully the instructions of this manual

INTRODUCTION

Thank you for having chosen this professional moving head.

You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the carton box you should find:

1. One power in cable
2. One 3 Pin DMX cable(5 Pin optional)
3. Folding Clamps
4. One safety rope
5. One English user manual

(Flight case is optional, please contact your dealer)

Please check carefully that there is no damage caused by transportation. Should there be any questions, please consult your dealer and don't install this device.

GENERAL GUIDELINES

This device is a lighting effect for a professional use on stages, TV, in discotheques, theaters, etc., The device was designed for indoor use only.

This fixture is only allowed to be operated with the max alternating current which stated in the technical specifications in 6th page of this manual.

Lighting effects are not designed for permanent operation. Consistent operation breaks may ensure that the device will serve you for a long time without defects.

Do not shake the device. Avoid brute force when installing or operating the device.

While choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. Please don't project the beam onto combustible substances. The minimum distance between light-output from the projector and the illuminated surface must be more than 0,5 meter.

If you use the quick lock cam in hanging up the fixture, please make sure the quick lock fasteners turned in the quick lock holes correctly.

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation.

Please use the original packaging if the device is to be transported.

For safety reasons, please be aware that all modifications on the device are forbidden. If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to short-circuit, burns, electric shock, crash, etc.

SAFETY INSTRUCTIONS



CAUTION!

Be careful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

1. In order to guarantee the product's life, please don't put it in the damp places or even the environment over 60degrees.

2. Always mount this unit in safe and stable matter.

The qualified professionals are allowed to carry out the lamp installation, operation and maintenance, but they must guarantee to operate in strict accordance with the instructions referred to.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device.

Leave the device switched off until it has reached room temperatures.

This device falls under protection-class I . Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it.

Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



CAUTION!

Never touch the device during operation!
The housing may heat up!



CAUTION!

Never look directly into the light source,
As sensitive persons may suffer an epileptic shock.

Please be aware that damages caused by manual modifications to be the device are not subject to warranty. Keep away from children and non-professionals.

CLEANING AND MAINTENANCE

1. To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

2. Do not spill water or other liquids into or on to your unit.

3. During long periods of non-use, disconnect the unit's main power.

4. It should be installed in a well-ventilated place, at a distance of 50 centimeters or more with the walls. At the same time, please check if the fan and ventilation holes are unobstructed.

The following points have to be considered during the inspection

1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.

- 2) There must not be any deformations on the housing. Fixations and installations spots(ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION!

Disconnect from mains before starting maintenance operation!

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device.

Please use a moist, lint-free cloth. Never use alcohol or solvents !

TECHNICAL PARAMETERS

LIGHT SOURCE & OPTIC

Front side: 5pcs 60w RGBW 4in1 LED Pixel control

Back: 42pcs 3W 3535 White LED + 84pcs 0.3W 5050 RGB 3in1 LED

Back side: 14 sections pixel control, each section 9pcs led.

Zoom Angle: 2.8°-50°

EFFECTS

With zoom and strobe function

Beam mode: 5 LEDs can be controlled individually

Strobe mode: 18 zone can be controlled individually Linear motorized zoom

Outstanding color mixing effect

Smooth dimming from 0-100%; outstanding strobe effect with variable speed

CONTROL & PROGRAM

DMX Channel: 24/29/105 Channels

Control Mode: DMX512,Auto

Firmware Upgrade via DMX connection

POWER SUPPLY

Input voltage: 100-240V~ 50/60Hz

Power Consumption:500W

DMX In/Out: 3-pin XLR (5-pin XLR is optional)

Power In/Out: Power Connector in/out

MOVEMENT

Pan/Tilt movement: 360° infinite rotating

Fixation: Pan/Tilt Lock

BODY


Display: LCD display




Battery backup, for user setup without power connection

Protection Rating: IP20

WEIGHT & SIZE

506x215x385.6mm, 15kgs

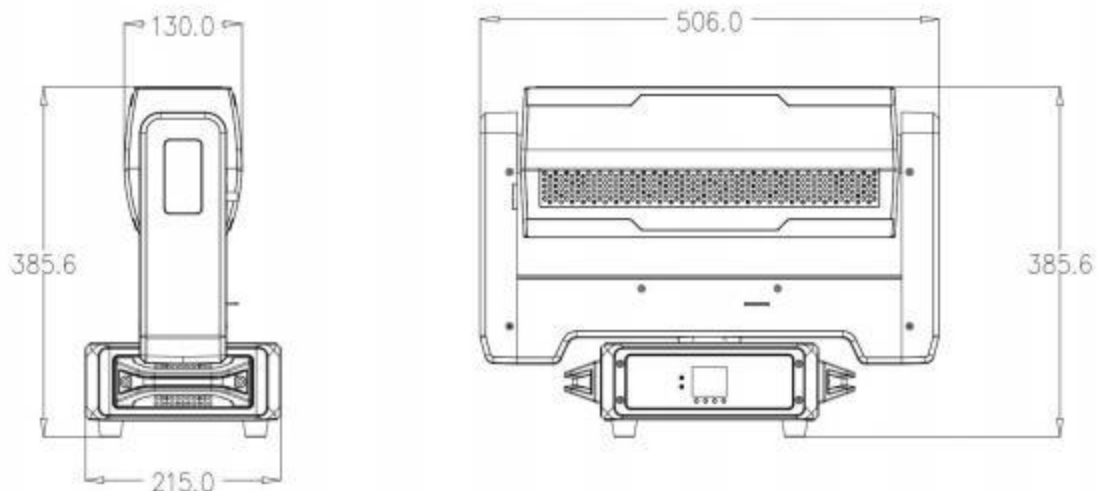

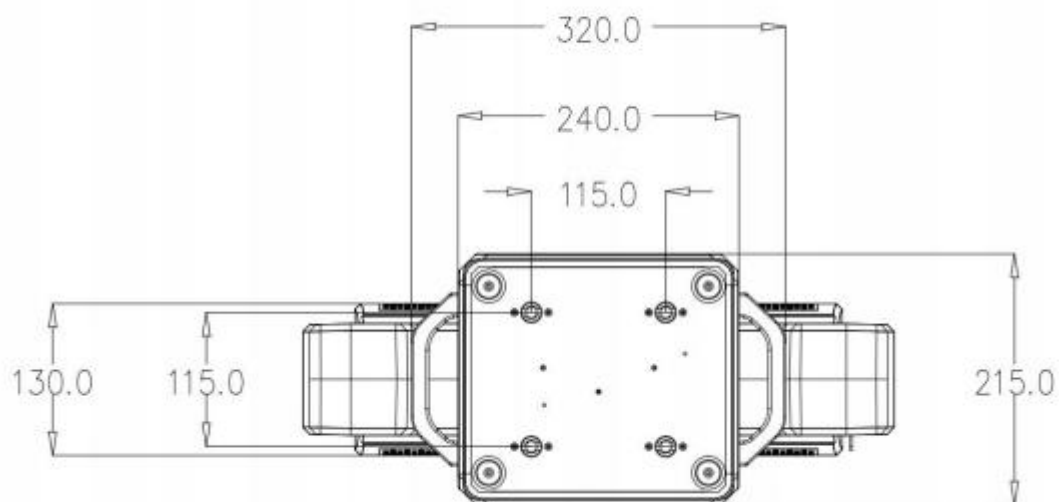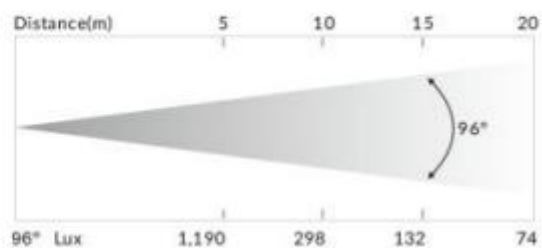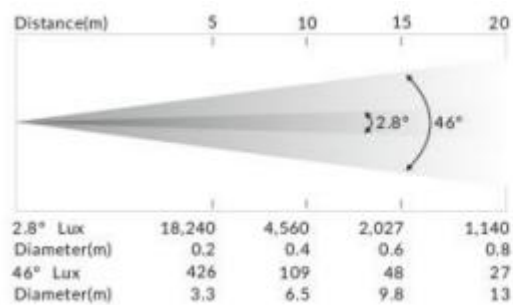

MENU

Version: V1.00			
Address	1-512		
RUN	DMX512		
	Auto		
DMX MODE	CH24		
	CH29		
	CH105		
SET		DISPLAY	No/Yes
		Signal Keep	No/Yes
		Slave	No/Yes
INFO	Version	Vx.xx	
	Pan (X轴)		
MANUAL	Tilt (Y轴)		
	:		
	:		
	Strobe		
RESET	All Reset	No/Yes	

Channel List

24 Channel

24CH	CH name	CH value	CH function
1	Pan	0 - 255	Pan Rotation
2	PanFine	0 - 255	Pan Fine
3	Tilt	0 - 255	Tilt Rotation
4	TiltFine	0 - 255	Tilt Fine
5	Zoom	0 - 255	Zoom
6	Pan infinity	0 - 255	Pan infinity
7	Tilt infinity	0 - 255	Tilt infinity
8	Dim	0 - 255	Dim
9	Strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
10	Red	0 - 255	0-100%
11	Green	0 - 255	0-100%
12	Blue	0 - 255	0-100%

13	White	0 - 255	0-100%
14	Backgroud	0 - 255	Backgroud
15	Background dim	0 - 255	Background dim
16	Scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
17	Scenes speed	0 - 255	SLOW - FAST
18	Auxiliary light strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
19	Auxiliary light Color	0-10	No function
		11-25	R
		24-40	G
		41-55	B
		56-70	W
		71-85	R+G
		86-100	R+B
		101-115	G+B
		116-130	R+W
		131-145	G+W
		146-160	B+W
		161-175	RGW
		176-190	RBW
		191-205	GBW
		206-255	RGBW
20	Auxiliary light Backgroud	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
21	Auxiliary light Backgroud color	0 - 255	0-100%
22	Auxiliary light scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
23	Auxiliary light scenes speed	0-10	SLOW PULSATION - FAST
24	Reset	0 - 250	No function
		251 - 255	Reset

29 Channel

29CH	CH name	CH value	CH function
1	Pan	0 - 255	Pan Rotation
2	PanFine	0 - 255	Pan Fine
3	Tilt	0 - 255	Tilt Rotation
4	TiltFine	0 - 255	Tilt Fine
5	XY Speed	0 - 255	XY Speed
6	Zoom	0 - 255	Zoom

7	Pan infinity	0 - 255	Pan infinity
8	Tilt infinity	0 - 255	Tilt infinity
9	Dim	0 - 255	Dim
10	Strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
11	Red	0 - 255	0-100%
12	Green	0 - 255	0-100%
13	Blue	0 - 255	0-100%
14	White	0 - 255	0-100%
15	Backgroud	0 - 255	Backgroud
16	Background dim	0 - 255	Background dim
17	Scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
18	Scenes speed	0 - 255	SLOW - FAST
19	Auxiliary light Dim	0 - 255	0-100%
20	Auxiliary light strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
21	Red	0 - 255	R
22	Green	0 - 255	G
23	Blue	0 - 255	B
24	White	0 - 255	W
25	Auxiliary light Backgroud	0 - 255	0-100%
26	Auxiliary light Backgroud dim	0 - 255	0-100%
27	Auxiliary light scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
28	Auxiliary light scenes speed	0-10	SLOW PULSATION - FAST
29	Reset	0 - 250	No function
		251 - 255	Reset

105 Channel

105CH	CH name	CH value	CH function
1	Pan	0 - 255	Pan Rotation
2	PanFine	0 - 255	Pan Fine
3	Tilt	0 - 255	Tilt Rotation
4	TiltFine	0 - 255	Tilt Fine
5	XY Speed	0 - 255	XY Speed
6	Zoom	0 - 255	Zoom
7	Pan infinity	0 - 255	Pan infinity
8	Tilt infinity	0 - 255	Tilt infinity
9	Dim	0 - 255	Dim
10	Strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST

11	Red	0 - 255	0-100%
12	Green	0 - 255	0-100%
13	Blue	0 - 255	0-100%
14	White	0 - 255	0-100%
15	Background	0 - 255	Background
16	Background dim	0 - 255	Background dim
17	Scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
18	Scenes speed	0 - 255	SLOW - FAST
19	Auxiliary light Dim	0 - 255	0-100%
20	Auxiliary light strobe	0 - 19	No function
		20 - 255	SLOW PULSATION - FAST
21	Red	0 - 255	R
22	Green	0 - 255	G
23	Blue	0 - 255	B
24	White	0 - 255	W
25	Auxiliary light Background	0 - 255	0-100%
26	Auxiliary light Background dim	0 - 255	0-100%
27	Auxiliary light scenes	0-10	No function
		11-20	Scenes 1
		:	:
		241-250	Scenes 24
		251-255	Scenes 1-24
28	Auxiliary light scenes speed	0-10	SLOW PULSATION - FAST
29	Reset	0 - 250	No function
		251 - 255	Reset
:	:	:	:
102	Auxiliary light R14	0-255	0-100%
103	G14	0-255	0-100%
104	B14	0-255	0-100%
105	W14	0-255	0-100%

REMARK

The product has perfect performance and integrity packing. All users should be strictly comply with the warning and operating instructions as stated. Or we aren't in charge of any result by misusing. Any damage resulting by misuse is not within the Company's warranty. Any fault or problem caused by neglecting the manual is also not in the charge of dealers. Errors and omissions for every information given in this manual excepted. All information is subject to change without prior notice.

Thank you again for your patronage!
We will be offering sincere service as always,
Wish you have a good lighting journey !

