

Safety instructions for lever hoists:

1. **Suitability and inspection before use:**
Ensure that the lever hoist is suitable for the intended load. Before each use, carry out a visual inspection for damage, wear or deformation. Do not use defective lever hoists.
2. **Load capacity:**
Only use the lever hoist within the specified load limit. Never exceed the specified maximum load capacity.
3. **Stable insert:**
The lever hoist must be attached securely and stably. Ensure that the chains and hooks are undamaged, clean and properly attached.
4. **Safety distance:**
Maintain a safe distance from the load and the hoist. Ensure that there are no people under the load during the lifting process.
5. **Lever operation:**
Never use the lever hoist by pushing, pulling or sudden tearing. Operation should be smooth. Excessive leverage can lead to damage.
6. **Operating environment:**
Ensure that the lever hoist is not used in an environment with extreme temperatures, moisture or corrosive substances, unless it is specially designed for this purpose.
7. **No modifications:**
Do not make any changes or modifications to the lever cable. Only use original spare parts and only have maintenance carried out by specialists.
8. **Load direction:**
The lever hoist may only be used for lifting and lowering loads in a straight line. Pulling at an angle can damage the device and endanger safety.
9. **Lubrication and care:**
Check the chain regularly and lubricate moving parts to ensure smooth operation.
10. **Storage:**
Store the lever hoist in a dry and clean place to prevent corrosion and damage.
11. **Use by trained personnel:**
The lever hoist may only be operated by trained and qualified personnel.

These instructions are intended to prevent accidents and to ensure that the lever hoist functions properly. Always follow the manufacturer's instructions.