

Transport truck / Pushbar cart 150kg / 300kg



Original of the OPERATING INSTRUCTIONS

Keep for future use

Address of the manufacturer

Trading EU GmbH
Gruckingerstrasse 4
D - 85461 Bockhorn

Tel.: +49 (0) 8123 - 989 0 900
Fax: +49 (0) 8123 - 989 0 904
E-mail: info@tradingeu.de
Web: www.tradingeu.de

Dear customer

This pushbar cart is an indispensable product for daily transport operations.

When using pushbar carts, some safety measures must be taken to avoid injury to persons and damage to the product.

Please read these instructions and keep them in a safe place so that they are always to hand.

We accept no liability for accidents and damage caused by non-observance of these instructions!

Only suitable for commercial, industrial or professional applications.

Operating instructions

Document number:	Transport truck / Pushbar cart
Version:	1.0
Creation date:	01.01.2020
Last change:	23.01.2025
Model:	Pushbar cart 150kg Pushbar cart 300kg Pushbar cart 300kg pneumatic tires
Year of manufacture:	2022

Customer entries

Inventory no.:	
Location:	

Storage

The operating instructions must be kept in the responsible specialist department. They must always be at hand.

Preface:

Thank you for choosing the "Pallit" brand pushbar cart!

We hope that our pushbar cart will make your work much easier!

- Please read this manual carefully before commissioning.
- These operating instructions show you the correct operation and maintenance of the serving trolley.

For personal safety and correct operation, users must read these operating instructions carefully before using the product.

Due to the constant further development of our products, illustrations and contents may vary slightly.

The instructions may also differ if your product is customised.

Content


I. Pushbar cart 150kg.....5

II. Pushbar cart 300kg.....7

III. Pushbar cart 300kg pneumatic wheels9

I. Pushbar cart 150kg


1. Operating instructions:

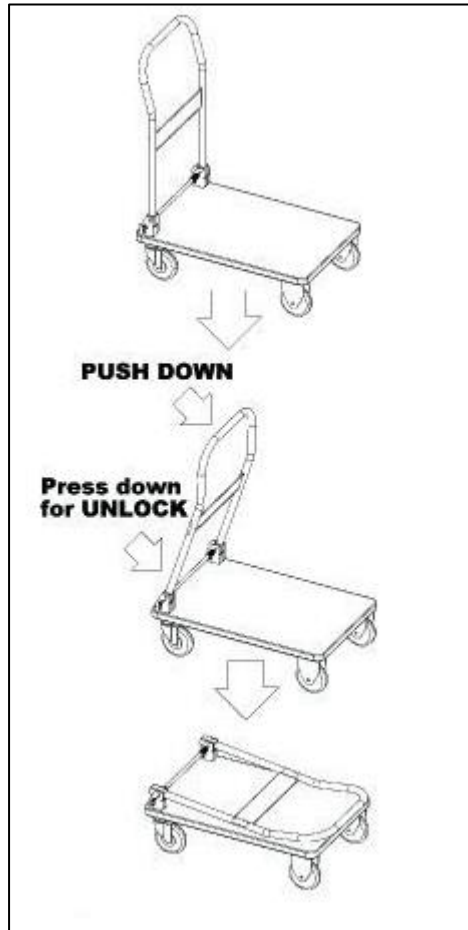

2. Assembly instruction:

- Sort the connecting hardware into separate parts before assembling
- Tighten all parts by hand
- Do not use power tools
- Don't overload the cart, as components could be damaged

3. Parts of the pushbar cart:

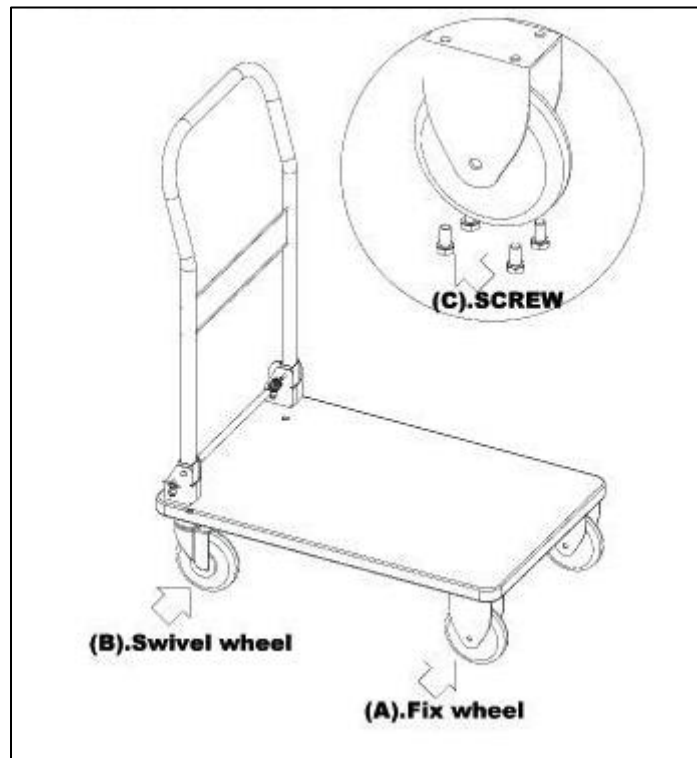


No.	Designation	Amount
A	Fix wheels	2
B	Swivel wheels	2
C	Screws (M8 x 16mm)	16

4. Technical data:

Manufacturer		Pallit
Weight	kg	7,3
Capacity	kg	150
Platform size	mm	700 x 440
Measurements	mm	730 x 470 x 820
Type drive		Manually
Diameter wheels	mm	100

II. Pushbar cart 300kg


1. Operating instructions:

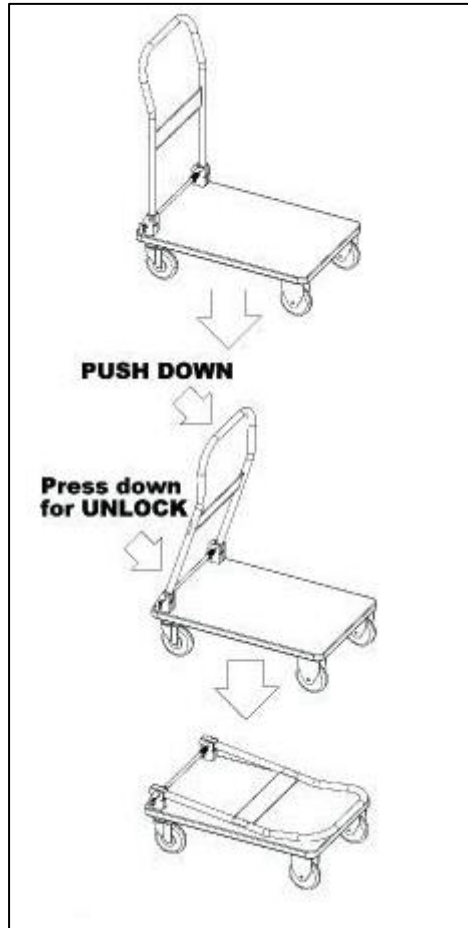

2. Assembly instruction:

- Sort the connecting hardware into separate parts before assembling
- Tighten all parts by hand
- Do not use power tools
- Don't overload the cart, as components could be damaged

3. Parts of the pushbar cart:

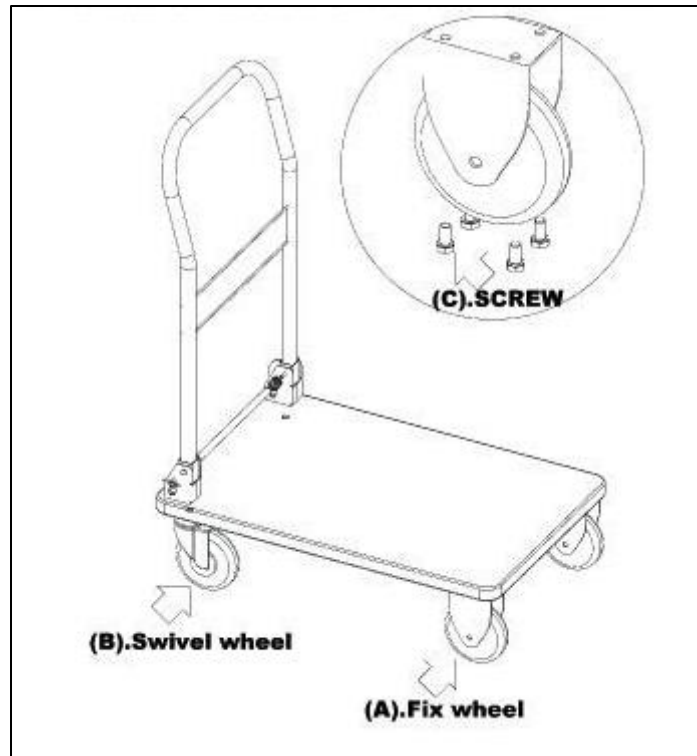


No.	Designation	Amount
A	Fix wheels	2
B	Swivel wheels	2
C	Screws (M8 x 16mm)	16

4. Technical data:

Manufacturer		Pallit
Weight	kg	13,5
Capacity	kg	300
Platform size	mm	880 x 580
Measurements	mm	910 x 610 x 860
Type drive		Manually
Diameter wheels	mm	125

III. Pushbar cart 300kg pneumatic wheels


1. Operating instructions:

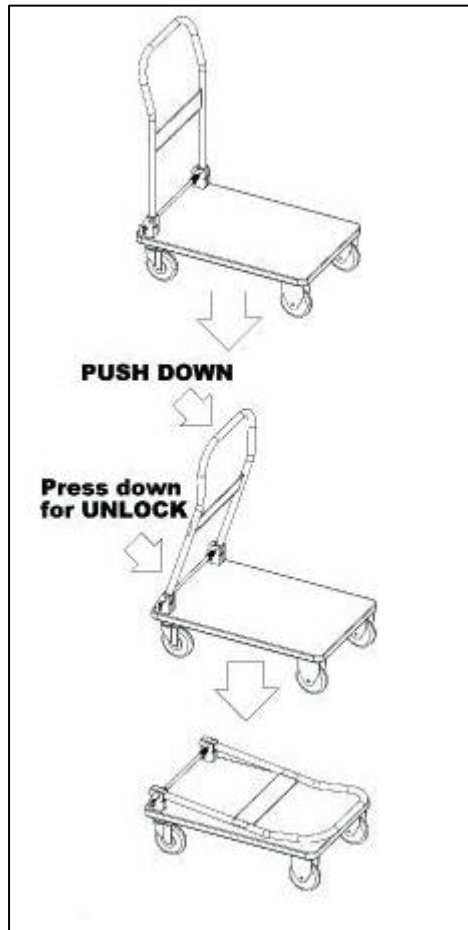

2. Assembly instruction:

- Sort the connecting hardware into separate parts before assembling
- Tighten all parts by hand
- Do not use power tools
- Don't overload the cart, as components could be damaged

3. Parts of the pushbar cart:

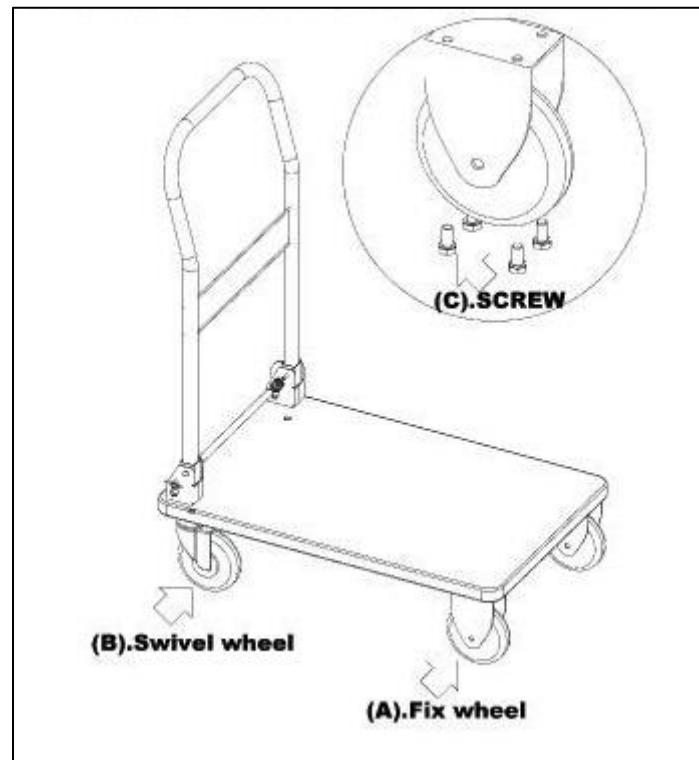

No.	Designation	Amount
A	Fix wheels	2
B	Swivel wheels	2
C	Screws (M8 x 16mm)	16

4. Technical data:

Manufacturer		Pallit
Weight	kg	19
Capacity	kg	300
Platform size	mm	880 x 580
Measurements	mm	910 x 610 x 940
Type drive		Manually
Tires		Pneumatic tires
Diameter wheels	mm	200