



MUZ-LN25VGHZ2

1-5. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

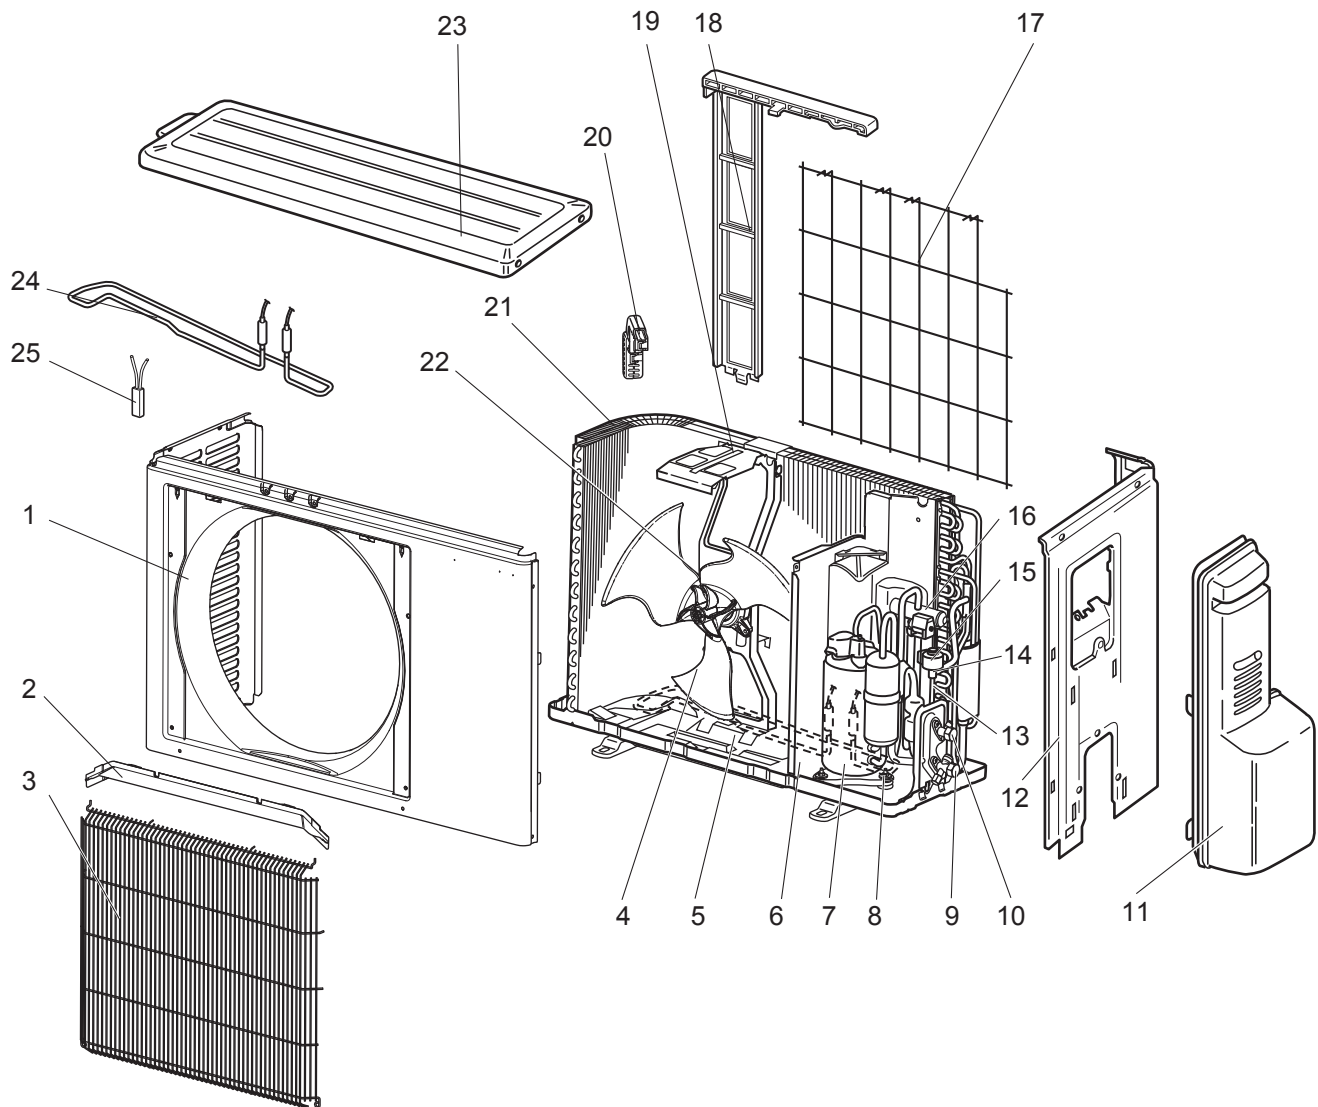

MUZ-LN25VGHZ2

1-6. OUTDOOR UNIT ELECTRICAL PARTS

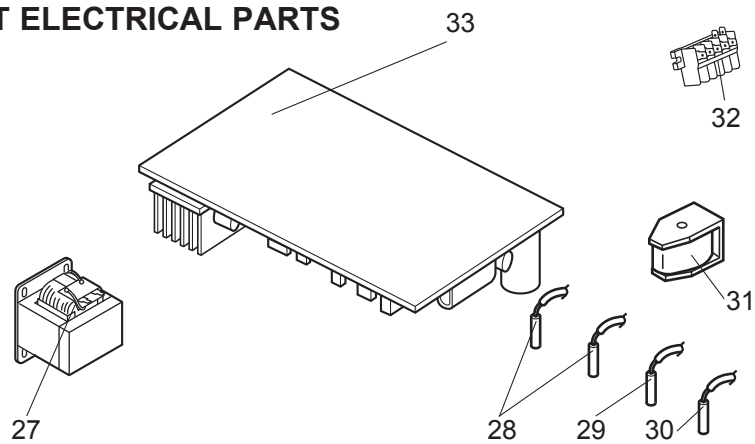

1-5. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

Part number that is circled is not shown in the illustration.


No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit	Remarks
				MUZ-LN25	
				VGHZ2- [E1]	
1	E22 J63 232	CABINET		1	
2	E22 J63 531	ICE GUARD		1	
3	E22 Y84 521	GRILLE		1	
4	E22 95B 501	PROPELLER FAN		1	
5	E22 Y96 290	BASE		1	
6	E22 G14 293	SEPARATOR		1	
7	E22 Y85 900	COMPRESSOR	MC	1	SVB092FBAMT
8	E22 C34 506	COMPRESSOR RUBBER SET		3	3 RUBBERS/SET
9	E22 T66 661	STOP VALVE (GAS)		1	ø9.52
10	E22 T66 662	STOP VALVE (LIQUID)		1	ø6.35
11	E22 L59 245	SERVICE PANEL		1	
12	E22 G15 233	BACK PANEL		1	
13	E22 21G 645	EXPANSION VALVE ASSEMBLY		1	Includes LEV body and capillary tube
14	E22 Y84 640	EXPANSION VALVE		1	
15	E22 Y84 493	EXPANSION VALVE COIL	LEV	1	
16	E22 R81 961	4-WAY VALVE		1	
17	E22 930 525	CONDENSER WIRE NET		1	
18	E22 930 523	CONDENSER NET		1	
19	E22 14F 515	MOTOR SUPPORT		1	
20	E22 D84 079	THERMO HOLDER		1	
21	E22 Y84 630	OUTDOOR HEAT EXCHANGER		1	
22	E22 97B 301	OUTDOOR FAN MOTOR	MF	1	RC0J50-□□
23	E22 L85 297	TOP PANEL		1	
24	E22 Y96 526	DEFROST HEATER	H	1	Includes lead assembly
25	E22 D65 381	HEATER PROTECTOR	26H	1	
②6	E22 J47 936	CAPILLARY TUBE		1	ø4.0×ø2.4×240

1-6. OUTDOOR UNIT ELECTRICAL PARTS

No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit	Remarks
				MUZ-LN25	
				VGHZ2- [E1]	
27	E22 20A 337	REACTOR	L61	1	
28	E22 R81 306	THERMISTOR SET	RT61, RT62	1	DEFROST, DISCHARGE
29	E22 D65 308	AMBIENT TEMPERATURE THERMISTOR	RT65	1	
30	E22 P72 307	OUTDOOR HEAT EXCHANGER TEMPERATURE THERMISTOR	RT68	1	
31	E22 R81 490	R.V. COIL	21S4	1	
32	E22 T95 374	TERMINAL BLOCK	TB1	1	5P
33	E22 38J 451	INVERTER P.C. BOARD		1	Includes heat sink and RT64


MUZ-LN35VGHZ2

1-11. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

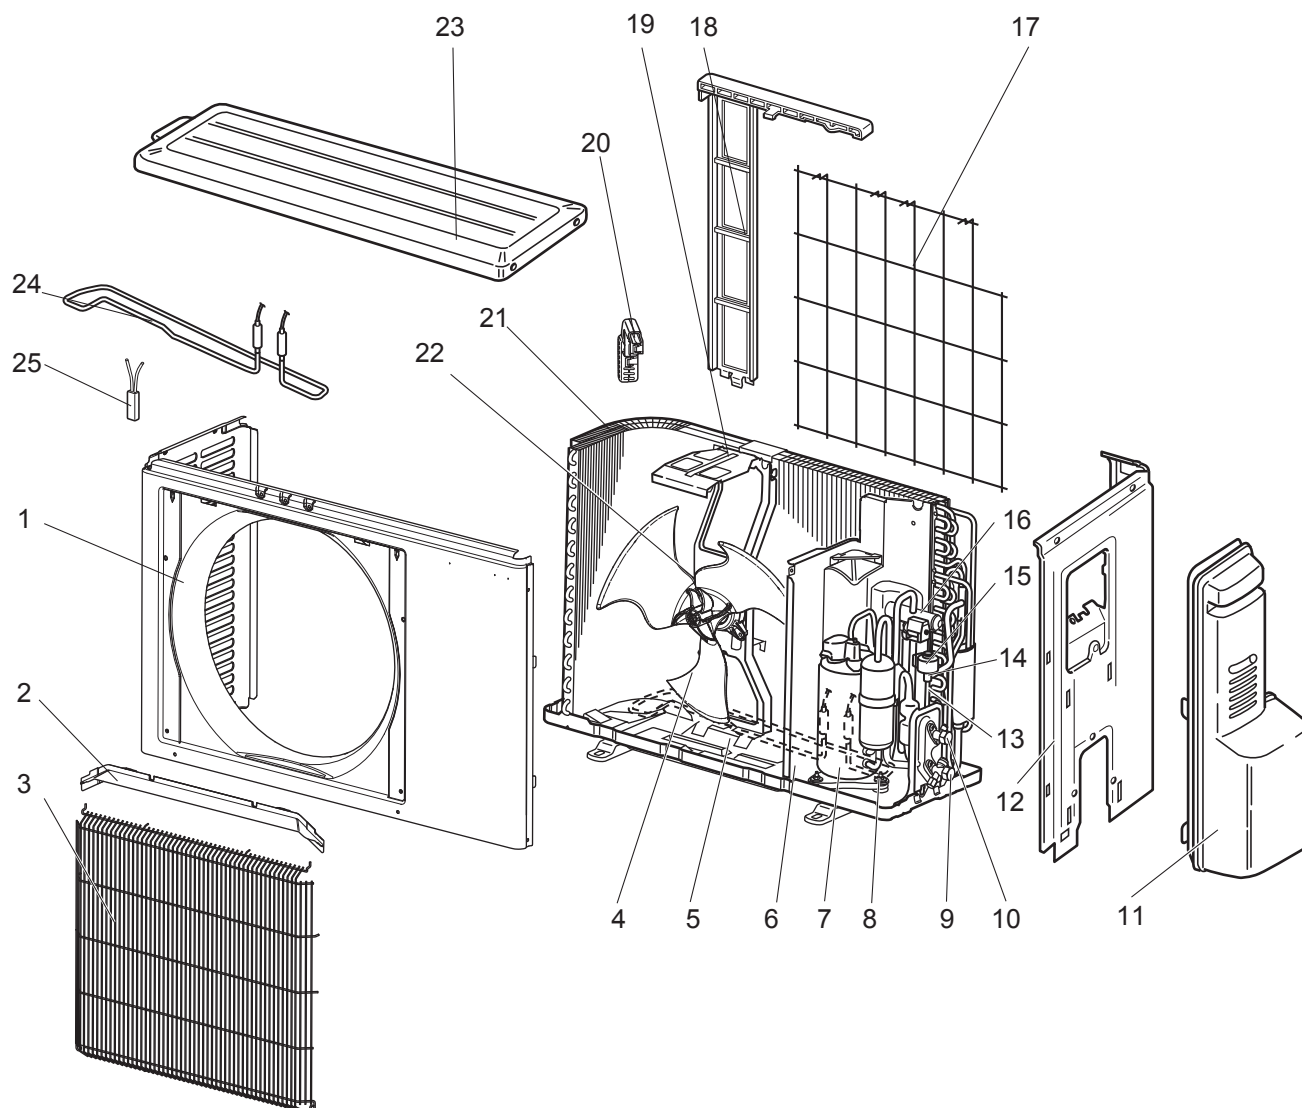

MUZ-LN35VGHZ2

1-12. OUTDOOR UNIT ELECTRICAL PARTS

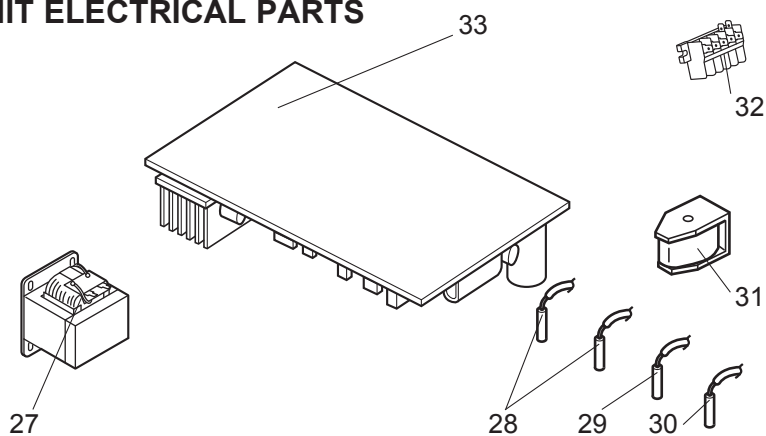

1-11. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

Part number that is circled is not shown in the illustration.

No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit	Remarks
				MUZ-LN35	
				VGHZ2- E1	
1	E22 J63 232	CABINET		1	
2	E22 J63 531	ICE GUARD		1	
3	E22 Y84 521	GRILLE		1	
4	E22 95B 501	PROPELLER FAN		1	
5	E22 Y96 290	BASE		1	
6	E22 G14 293	SEPARATOR		1	
7	E22 R83 900	COMPRESSOR	MC	1	SVB130FBBMT
8	E22 C34 506	COMPRESSOR RUBBER SET		3	3 RUBBERS/SET
9	E22 T66 661	STOP VALVE (GAS)		1	ø9.52
10	E22 T66 662	STOP VALVE (LIQUID)		1	ø6.35
11	E22 L59 245	SERVICE PANEL		1	
12	E22 G15 233	BACK PANEL		1	
13	E22 21G 645	EXPANSION VALVE ASSEMBLY		1	Includes LEV body and capillary tube
14	E22 Y84 640	EXPANSION VALVE		1	
15	E22 Y84 493	EXPANSION VALVE COIL	LEV	1	
16	E22 R81 961	4-WAY VALVE		1	
17	E22 930 525	CONDENSER WIRE NET		1	
18	E22 930 523	CONDENSER NET		1	
19	E22 14F 515	MOTOR SUPPORT		1	
20	E22 Y84 630	THERMO HOLDER		1	
21	E22 D84 079	OUTDOOR HEAT EXCHANGER		1	
22	E22 97B 301	OUTDOOR FAN MOTOR	MF	1	RC0J50-□□
23	E22 L85 297	TOP PANEL		1	
24	E22 Y96 526	DEFROST HEATER	H	1	Includes lead assembly
25	E22 D65 381	HEATER PROTECTOR	26H	1	
②⑥	E22 J47 936	CAPILLARY TUBE		1	ø4.0×ø2.4×240

1-12. OUTDOOR UNIT ELECTRICAL PARTS

No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit	Remarks
				MUZ-LN35	
				VGHZ2- E1	
27	E22 20A 337	REACTOR	L61	1	
28	E22 R81 306	THERMISTOR SET	RT61, RT62	1	DEFROST, DISCHARGE
29	E22 D65 308	AMBIENT TEMPERATURE THERMISTOR	RT65	1	
30	E22 P72 307	OUTDOOR HEAT EXCHANGER TEMPERATURE THERMISTOR	RT68	1	
31	E22 R81 490	R.V. COIL	21S4	1	
32	E22 T95 374	TERMINAL BLOCK	TB1	1	5P
33	E22 39J 451	INVERTER P.C. BOARD		1	Includes heat sink and RT64