decora®

QUIET FAN SPEED CONTROL

Single Pole or 3-Way Cat. No. DSFØ1 – Ceiling Fan 1.5A 120VAC. 60Hz INSTALLATION INSTRUCTIONS

LEVITON

DI-000-DSF01-02A

WARNINGS AND CAUTIONS:

- TO AVOID FIRE, SHOCK, OR DEATH: TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring or servicing fixture!
- TO AVOID FIRE, SHOCK, OR DEATH: this control is to be used with ceiling fans that are rated 120VAC, total load 1.5 amperes maximum.
- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, consult an electrician.
- Use this device with copper or copper clad wire only.

Tools needed to install your Fan Speed Control

Slotted/Philips Screwdriver Electrical Tape Pliers Pencil

Ruler Cutters

Changing the color of your Fan Speed Control

If a color change kit is provided with your device, proceed with the following step before wiring the device if you need to change the color. Otherwise, proceed with the "Installing your Fan Speed Control" section.





Press the side of the Align slide bar with color kit at either bottom alignment arrow as tab and pull forward to release hottom



of the color kit in until it

snaps into place.

Installing Control by itself or with other devices

O

NOTE: There is NO derating necessary for multi-gang installations of this Fan Speed Control.



WARNINGS AND CAUTIONS:

- For use on ceiling paddle fans with split-capacitor or shaded pole motors only. Please refer to manufacturer's instructions or rating label on the motor to confirm type. Use with any other types of motors or equipment may cause overheating and/or damage to the motors or equipment.
- Use only one (1) Fan Speed Control per load. The switch(es) will turn ON the fan at the speed level selected at the control.

Step 3

.

 To avoid overheating and possible damage to this device and other equipment, DO NOT install to control a receptacle, fluorescent lighting, a motor or a transformer-operated appliance other than appropriate ceiling fans.

Installing your Fan Speed Control

NOTE: Use check boxes \sqrt{V} when Steps are completed.



WARNING: TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring or servicing fixture!



Identifying your wiring application Step 2 (most common):

NOTE: If the wiring in the wall box does not resemble any of these configurations, consult an electrician.



Single Pole 1. Line (Hot)

- 2. Neutral
- 3. Ground
- 4. Load



3-Wav

- 1. Line or Load (See note below)
- 2. Neutral
- 3. Ground

4. First Traveler - note color 5. Second Traveler - note color

NOTE: For 3-Way applications, note that one of the screw terminals from the old switch being removed will usually be a different color (Black) or labeled Common. Tag that wire with electrical tape and identify as the common (Line or Load) in both the Fan Speed Control wall box and 3-way switch wall box



Preparing and connecting wires:

Make sure that the ends of the wires from the wall box are straight (cut if necessary).

Remove 5/8" (1.6 cm) of insulation from each

wire in the wall box (shown).

Single-Pole Wiring Application: Step 4a











Step 4a cont'd

Connect wires per WIRING DIAGRAM as follows:

- Green or bare copper wire in wall box to GREEN control lead.
- · Line Hot wall box wire to BLACK control lead.
- · Load wall box wire to RED control lead.
- · Remaining RED control lead should have a label affixed. DO NOT REMOVE this label in a single pole application. NOTE: If the insulating label is not affixed to the second RED lead use electrical tape or a wire connector to cover.

Proceed to Step 5.



0 \cap \bigcirc

Step 5

Step 6

Testing your Fan Speed Control prior to mounting in the wall box:

- Restore power at circuit breaker or fuse.
- Carefully holding the Fan Speed Control, move slider control lever to highest position and press the top of the Decora® rocker. Fan should turn ON to highest Speed.

If fan does not turn ON, refer to the TROUBLESHOOTING section.

Installation may now be completed by carefully positioning all wires to provide room in wall box for the control. Mount the control into box with mounting screws supplied. Attach wallplate.

ON/OFF: Press top of Decora® rocker

Operation

- Fan will turn ON. Press bottom of Decora® rocker

CHANGING SPEEDS: Move slide bar - Fan will change speeds.

- Fan will turn OFF.



NOTE: If using the control in a 3-way application, the control will turn ON at the speed level set on the control's slide bar. The fan can be

controlled from either the control or the switch location.

Troubleshooting

• Fan does not turn ON - Circuit breaker or fuse has tripped.

- Fan has burned out.
- Fan Neutral connection is not wired.

Step 7

Connect wires per WIRING DIAGRAM as follows:

- Green or bare copper wire in wall box to GREEN control lead.
- · Common (Line hot or Load) wire to BLACK control lead. Remove insulating label and connect the first traveler wire to the RED
- control lead.

Neutral (white)

· Connect the second traveler wire to the remaining RED control lead.

Proceed to Step 5.

For Technical Assistance Call: 1-800-824-3005 (U.S.A. Only) www.leviton.com

FOR CANADA ONLY

For warranty information and/or product returns, residents of Canada should contact Leviton in writing at Leviton Manufacturing of Canada Ltd to the attention of the Quality Assurance Department, 165 Hymus Blvd, Pointe-Claire (Quebec), Canada H9R 1E9 or by telephone at 1 800 405-5320.

© 2014 Leviton Mfg. Co., Inc

DI-000-DSF01-02A

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option. For details visit www.leviton.com or call 1-800-824-3005. This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose, but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation. The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.

Restore Power:

Restore power at circuit breaker or fuse.

Installation is complete.

Fan Speed Control Mounting: TURN OFF POWER AT CIRCUIT BREAKER OR FUSE.