

Job or Customer :	
Location :	
Engineer :	
<input type="checkbox"/> Complies with Spec <input type="checkbox"/> Alternate	Notes :
Contractor :	
HeatLink Rep :	
Submitted By :	Date :
Approved By :	Date :
P.O. Number :	Date :

Description

The SpacerClip™ is placed between the heat transfer plates and holds the pipe in place. Pipe can be stepped into clip.


Technical Data

Material:..... Polypropylene

Standards / Listings

n/a

Qty	Stk. #	Dimensions			# in Bag	Weight
		A	B	C		
	87305	4" (102 mm)	5/8" (16 mm)	1-1/4" (32 mm)	50	0.03 lb 13 g

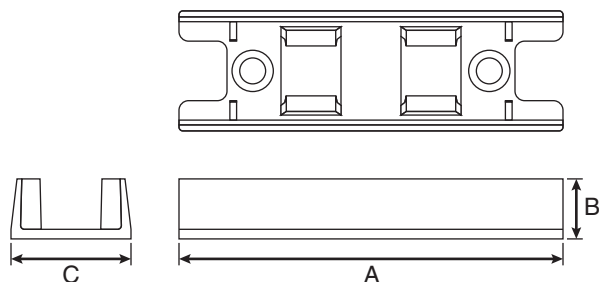

Installation

Installation must follow all of HeatLink's instructions and guidelines, including those in the Installation Guide.

Related Documents

- HeatLink Installation Guide (L3390)
- Component Warranty