


B1T1ER

DETAILED INSTALLATION INSTRUCTIONS FOR B BASEBOARD HEATER THERMOSTAT

Right installation only.

Note that the power supply must come from the right side.

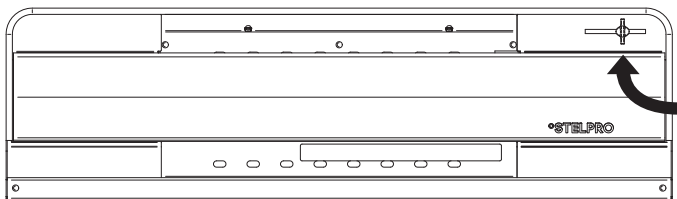


WARNING

Stelpro recommends that the installation of this product be performed by a certified electrician. Before installing this product, ensure that the breaker at the electrical panel is switched to the OFF position.


Make sure that all the electrical connections are secure and have been made properly. Pull each wire to ensure it is not loose in the connector or the terminal board as this may cause a fire.

STEPS


- 1**




Remove the front panel by tilting its bottom part upward.
- 2**



Remove the coverplate of the wiring compartment by loosening the screw (note that this coverplate will no longer be required as the thermostat is equipped with its own coverplate).
- 3**

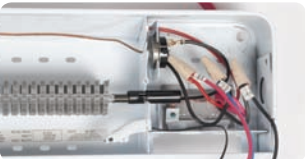

Perform the electrical connexions as indicated on the following diagram.

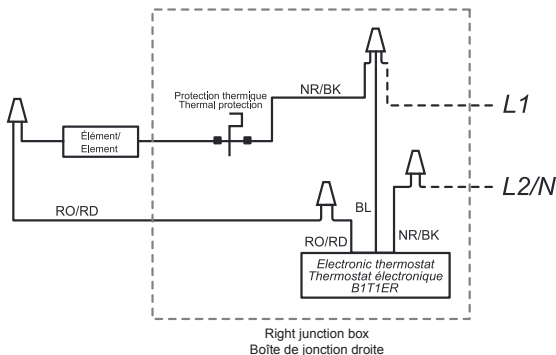


4



The sensor must be properly secured into the slot since the cover of the junction box will have to be closed later on. The sensor must be directed downward (see the illustration).

5

VERY IMPORTANT

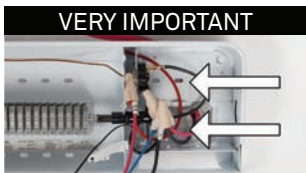

Properly position the wire connectors on the left side of the junction box. Then, secure them under the heating element or the thermal protection.

6

Thermostat positioning

Note that it is very important to follow each step as shown below to ensure that the coverplate closes properly




Affix the left upper corner of the thermostat on the upper slot.



Pull out the metallic part as shown in order to insert the thermostat cover.



Secure the thermostat by tightening the screw that has been removed at step 2.

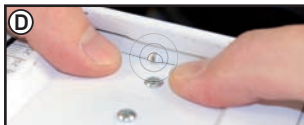

Push down the thermostat until it clips into place (under the metallic insert located at the right side of the junction box). Do not push it below the second metallic insert.

7



Reinstall the front panel by inserting the upper part first and then gently pressing its downward half into place.

.....

This handling description is printed prior to product development. When a part of the product specification must be changed to improve operability or other functions, priority is given to the product specification itself. In such instances, the instruction manual may not entirely match all the functions of the actual product. Therefore, the actual product and packaging, as well as the name and illustration, may differ from the manual.

LIMITED WARRANTY

This unit has a 1-year warranty. If at any time during this period the unit becomes defective, it must be returned to its place of purchase with the invoice copy, or simply contact our customer service department (with an invoice copy in hand). **In order for the warranty to be valid, the unit must have been installed and used according to instructions.** If the installer or the user modifies the unit, he will be held responsible for any damage resulting from this modification. The warranty is limited to the factory repair or the replacement of the unit, and does not cover the cost of disconnection, transport, and installation.

E-mail: contact@stelpro.com

Web site: www.stelpro.com