

ASSEMBLY INSTRUCTION**8ELAL- C - R**

WALL MOUNT POT FILLER

**8ELAL****8ELAC****8ELAC****REMOVAL OF FAUCET:**


Always turn the water supply off before removing the existing faucet or disassembling a valve. Open both faucet handles to relieve water pressure and to ensure that the water has been successfully turned off.

CARE OF FAUCET:


The use of warm water and a soft cloth is all that is required to clean Rubinet products. The patina of our living finishes (Oil Rubbed Bronze & Tuscan Brass) will change as a result of normal use. Applying Mineral Oil on occasion will create a softer look, subtle color changes and character.

CONTACT US:

If you need assistance with installation, replacement parts or have any questions regarding your Rubinet product, please call a Customer Service representative at: 905-851-6781 toll free 1-800-461-5901 or visit www.rubinet.com

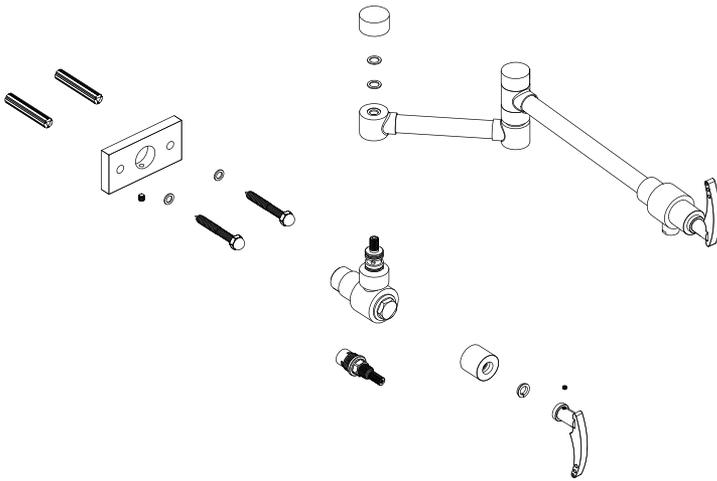


1

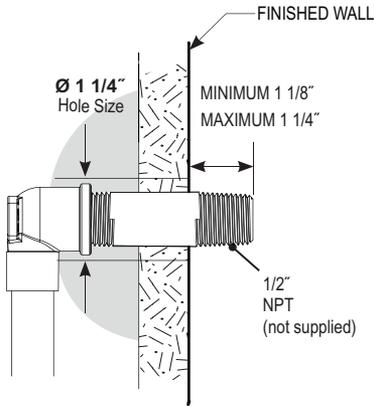

Ø 1/8" Hole Size for Stud Back

Ø 7/16" Hole Size for Concrete

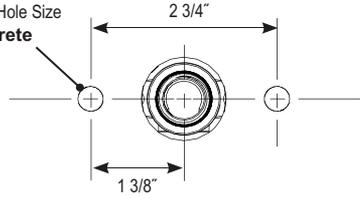


STUD WALL BACK



CONCRETE WALL BACK

• Anchor using ears on the valve body.


• Anchor using ears on the valve body.

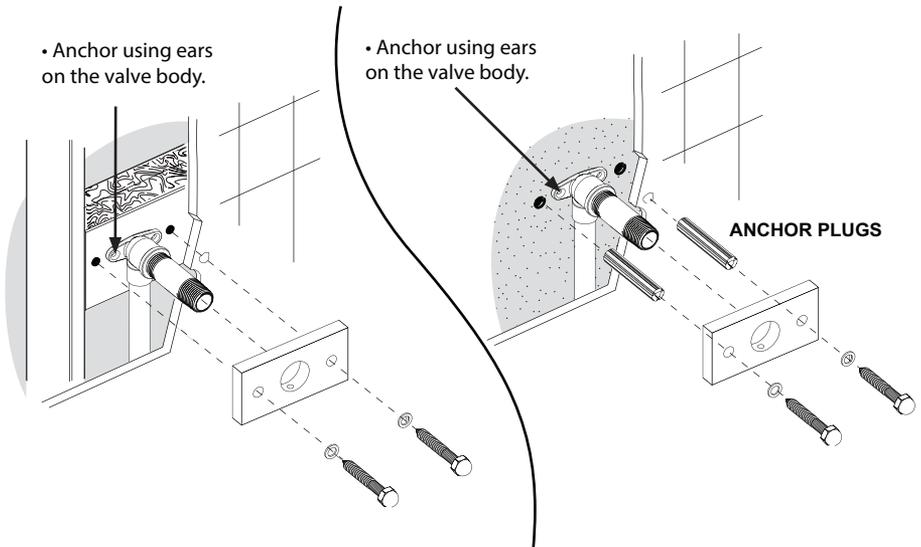




2

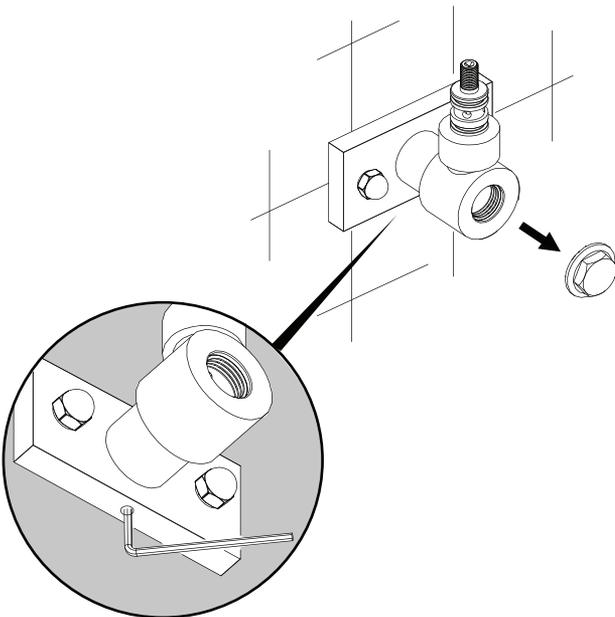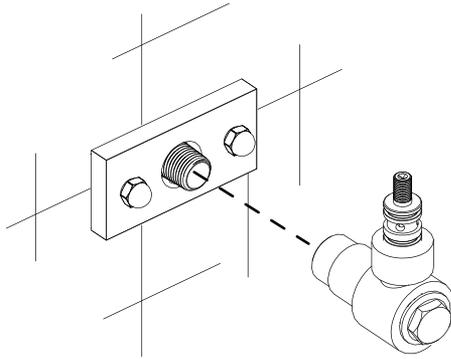


3

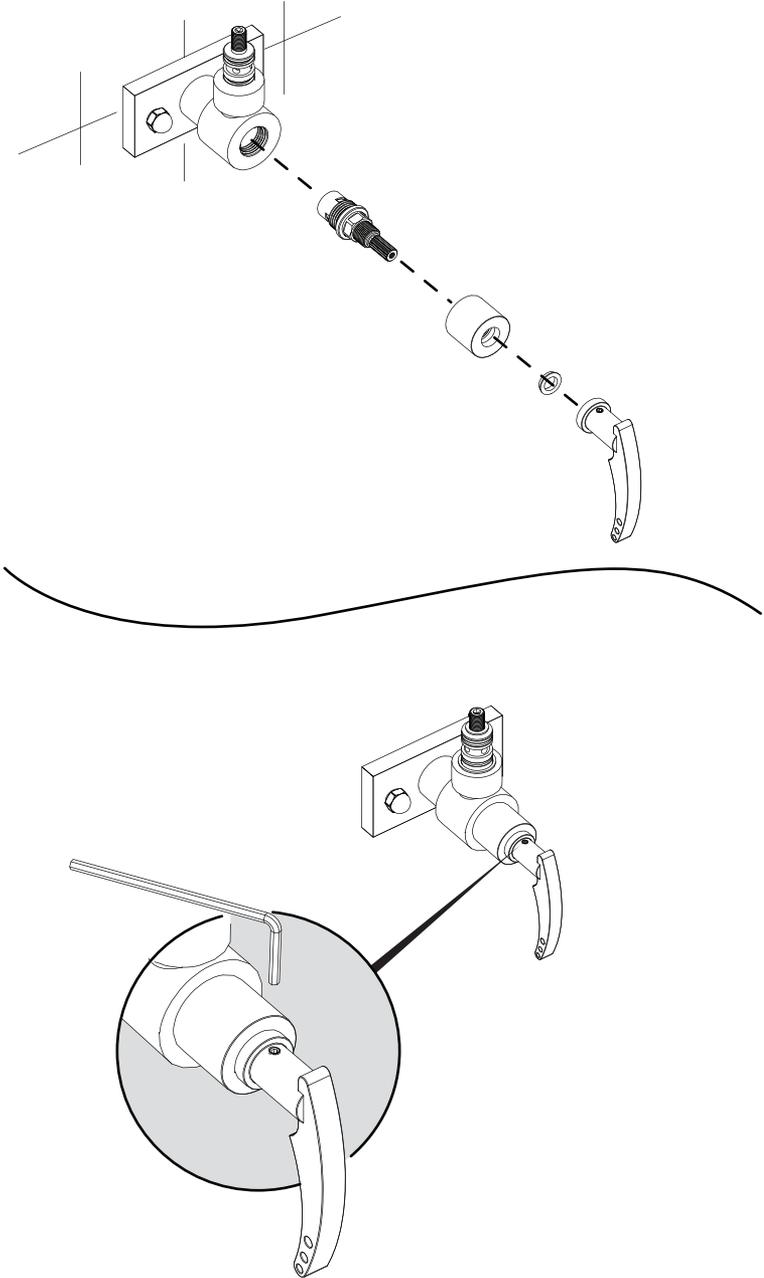



4

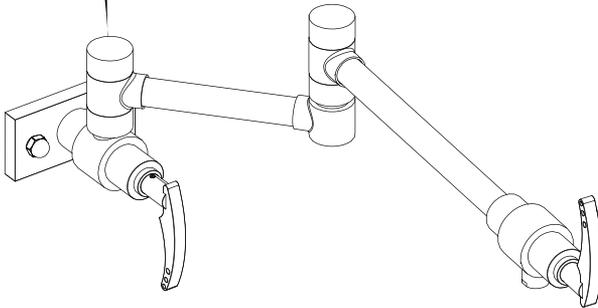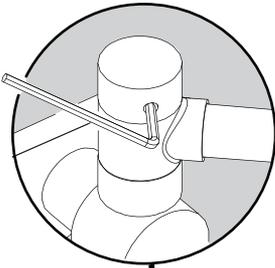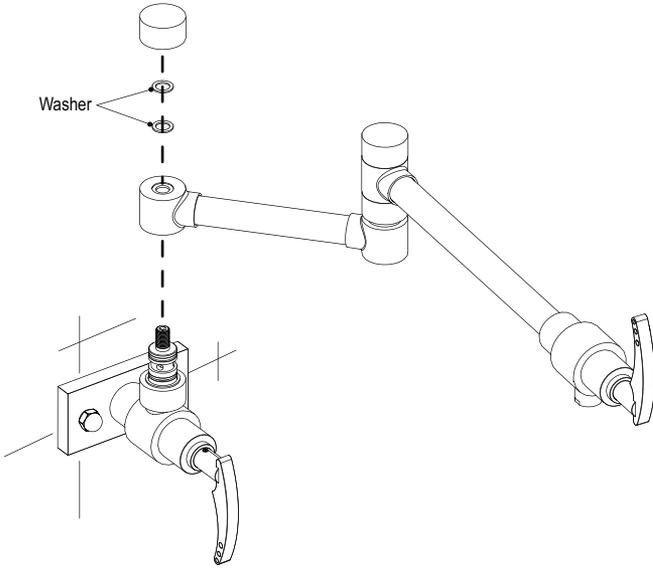


5

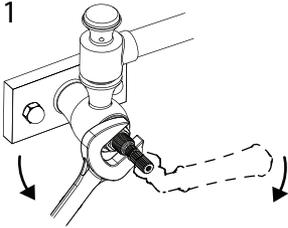HANDLE ALIGNMENT

Loosen the lock nut from the main body while holding the broach position with handle

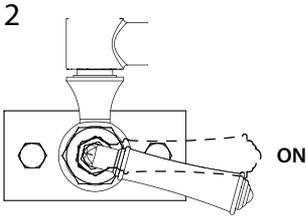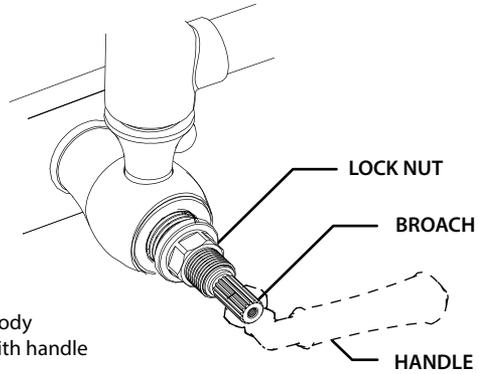

Replace handle one tooth off from the ON position as shown.

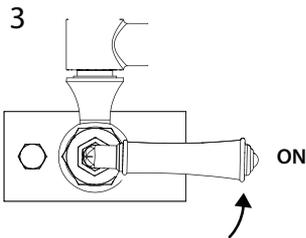

Turn the handle to reach the desired handle alignment. Then tighten the lock nut to secure. This adjustment should not be more than 25°.

