



GENESIS™

AIR CONDITIONER
ALL MODELS

INSTRUCTION MANUAL

TABLE OF CONTENTS

| | |
|---|----|
| Warranty and Return Policy | 2 |
| RECEIVING THE AIR CONDITIONER | 3 |
| HANDLING AND TESTING THE AIR CONDITIONER | 3 |
| INSTALLATION INSTRUCTIONS | 4 |
| M13 Design Data | 5 |
| M13 Dimensional Drawing | 5 |
| M13 Mounting Gasket and Cutout Dimensions | 5 |
| M13 Components List | 6 |
| M13 Schematic and Wire Diagram, 115/230 Volt 1000 BTU | 7 |
| M17 Design Data | 8 |
| M17 Dimensional Drawing | 8 |
| M17 Mounting Gasket and Cutout Dimensions | 8 |
| M17 Components List | 9 |
| M17 Schematic and Wire Diagram, 115 Volt 1800 BTU | 10 |
| M17 Schematic and Wire Diagram, 230 Volt 1800 BTU | 10 |
| M28 Design Data | 11 |
| M28 Dimensional Drawing | 11 |
| M28 Mounting Gasket and Cutout Dimensions | 12 |
| M28 Components List | 13 |
| M28 Schematic and Wire Diagram, 115 Volt, 2200 BTU And 230 Volt 6000 BTU | 14 |
| M28 Schematic and Wire Diagram, 230 Volt, 2200 BTU | 14 |
| M28 Schematic and Wire Diagram, 115/230 Volt, 4000 BTU & 230 Volt 6000 BTU | 15 |
| M28 Schematic and Wire Diagram, 115 Volt, 6000 BTU | 15 |
| M33 Design Data | 16 |
| M33 Dimensional Drawing | 16 |
| M33 Mounting Gasket and Cutout Dimensions | 17 |
| M33 Components List | 18 |
| M33 Schematic and Wire Diagram, 115/230 Volt 4000 BTU | 18 |
| M36 Design Data | 19 |
| M36 Dimensional Drawing | 19 |
| M36 Mounting Gasket and Cutout Dimensions | 20 |
| M36 Components List | 21 |
| M36 Schematic and Wire Diagram, 115/230 Volt 6000 BTU | 21 |
| M52 Design Data | 22 |
| M52 Dimensional Drawing | 22 |
| M52 Mounting Gasket and Cutout Dimensions | 23 |
| M52 Components List | 24 |
| M52 Schematic and Wire Diagram, 115 Volt 10000 and 12000 BTU | 25 |
| M52 Schematic and Wire Diagram, 115/230 Volt 6000/8000 BTU and 230 Volt 10000/12000 BTU | 25 |
| MHB11 Design Data | 26 |
| MHB11 Dimensional Drawing | 26 |
| MHB11 Mounting Gasket and Cutout Dimensions | 27 |
| MHB11 Components List | 27 |
| MHB11 Schematic and Wire Diagram, 115 Volt, 2200 BTU And 230 Volt 6000 BTU | 28 |
| MHB11 Schematic and Wire Diagram, 230 Volt, 2200 BTU | 29 |
| MHB11 Schematic and Wire Diagram, 115/230 Volt, 4000 BTU & 230 Volt 6000 BTU | 29 |
| TEMPERATURE CONTROL | 30 |
| PRINCIPLES OF OPERATION | 30 |
| MAINTENANCE | 30 |
| Compressor | 30 |
| Inlet Air Filter | 30 |
| How To Remove, Clean or Install a New Inlet Air Filter | 31 |
| Condenser and Evaporator Air Movers | 31 |
| Refrigerant Loss | 31 |
| TROUBLE SHOOTING | 32 |
| Basic Air Conditioning Trouble Shooting Check List | 32 |
| Symptoms and Possible Causes:..... | 33 |

NOTE: Some of the information in this manual may not apply if a special unit was ordered. If additional drawings for a special unit are necessary, they have been inserted. Contact Pentair Equipment Protection if further information is required.

WARRANTY AND RETURN POLICY

Visit <https://hoffman.nvent.com/en/hoffman/warranty-information>


RECEIVING THE AIR CONDITIONER

Inspect the air conditioner. Check for concealed damage that may have occurred during shipment. Look for dents, scratches, loose assemblies, evidence of oil, etc. Damage evident upon receipt should be noted on the freight bill. Damage should be brought to the attention of the delivering carrier – NOT to nVent Equipment Protection – within 15 days of delivery. Save the carton and packing material and request an inspection. Then file a claim with the delivering carrier.

nVent Equipment Protection cannot accept responsibility for freight damages; however, we will assist you in any way possible.

HANDLING AND TESTING THE AIR CONDITIONER

If the air conditioner has been in a horizontal position, be certain it is placed in an upright, vertical or mounting position for a minimum of five (5) minutes before operating.

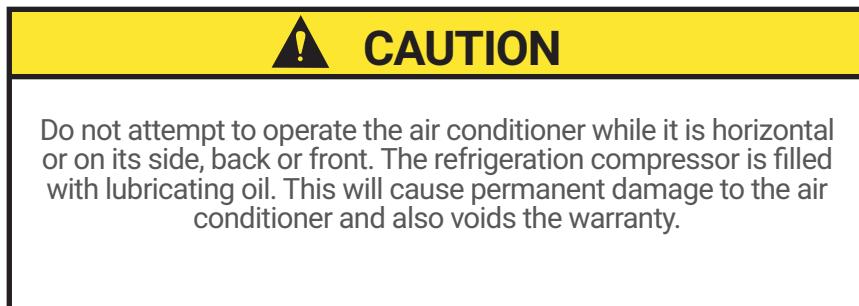

TEST FOR FUNCTIONALITY BEFORE MOUNTING THE AIR CONDITIONER TO THE ENCLOSURE.

Refer to the nameplate for proper electrical current requirements, and then connect the power cord to a properly grounded power supply. Minimum circuit ampacity should be at least 125% of the amperage shown in the design data section for the appropriate model. No other equipment should be connected to this circuit to prevent overloading.

Operate the air conditioner for five (5) to ten (10) minutes. No excessive noise or vibration should be evident during this run period. The condenser blower (ambient air), the evaporator blower (enclosure air), and the compressor should be running.

Condenser air temperatures should be warmer than normal room temperatures within a few minutes.

The compressor is provided with automatic reset thermal overload protection. This thermo-switch is located and mounted inside the plastic enclosure clipped to the compressor. The switch operates when the compressor overheats due to clogged or dirty inlet air filter or if ambient air temperatures exceed nameplate rating or if enclosure dissipated heat loads exceed the rated capacity of the air conditioner. The thermal overload switch will actuate and stop compressor operation. The blowers will continue to operate and the compressor will restart after it has cooled to within the thermal overload cut-in temperature setting.

INSTALLATION INSTRUCTIONS


1. Inspect air conditioner. Verify functionality before mounting the air conditioner, see **HANDLING AND TESTING THE AIR CONDITIONER** on page 3.
2. Using the cutout dimensions shown in this manual or the cutout template printed on the units shipping carton, prepare the air "IN" and air "OUT" openings, and mounting bolt hole pattern for the enclosure.
3. Using the gasket kit provided, install gaskets to air conditioner. See gasket kit illustration in this manual for proper location.
4. Mount air conditioner on enclosure using mounting bolts and screws provided. "EZ" mount tabs can be used to hold unit on enclosure while mounting in place. Allow unit to remain upright for a minimum of five (5) minutes before starting. Caution: Air conditioner must be in upright position during operation.
5. Refer to top of nameplate for electrical requirements. Connect the power cord to a properly grounded power supply. Use of an extension cord is not recommended. Electrical circuit should be fused with slow blow or HACR circuit breaker.

M13 DESIGN DATA


| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|----------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M13-0116-G1014 | Stock | 115 | 50/60 | 4.0/4.0 | 1 | 800/1000 | 125/52 | 48/22 |
| M13-0116-G1XXX | | 115 | 50/60 | 4.0/4.0 | 1 | 800/1000 | 125/52 | 48/22 |
| M13-0126-G1008 | Stock | 230 | 50/60 | 2.2/2.1 | 1 | 800/1000 | 125/52 | 48/22 |
| M13-0126-G1XXX | | 230 | 50/60 | 2.2/2.1 | 1 | 800/1000 | 125/52 | 48/22 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.


M13 DIMENSIONAL DRAWING

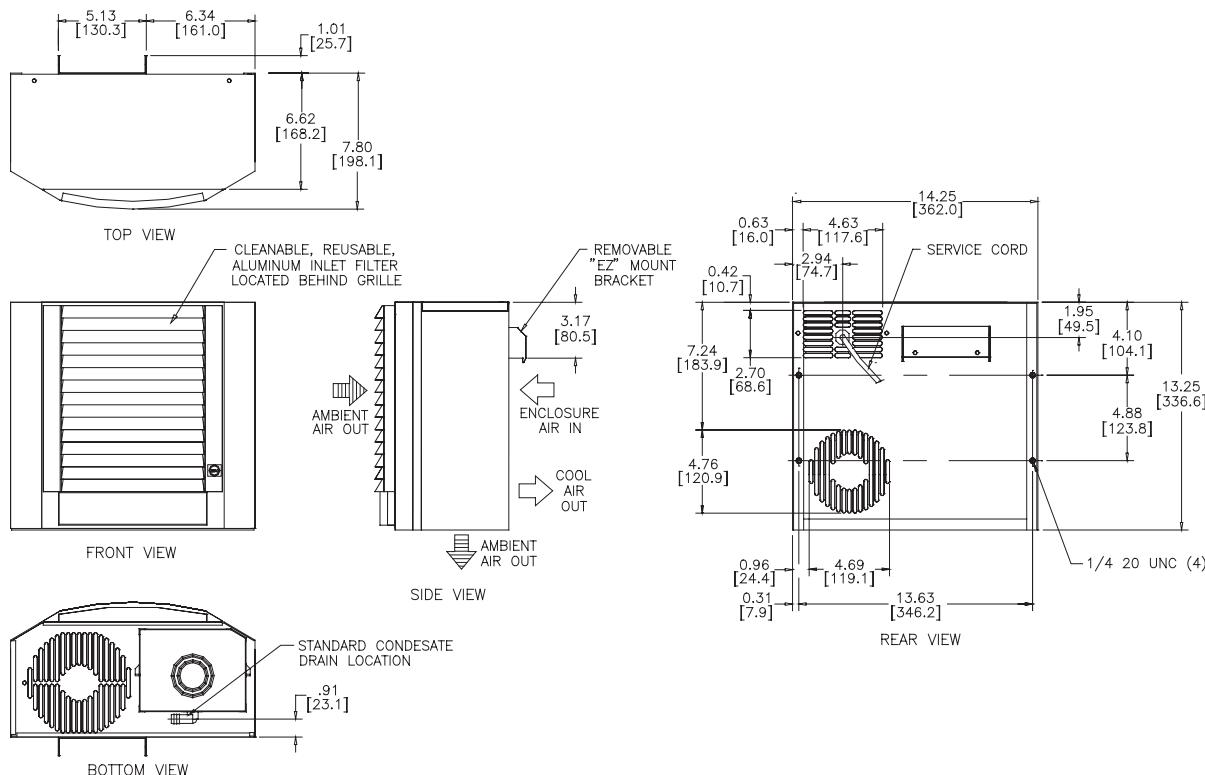

M13 MOUNTING GASKET AND CUTOUT DIMENSIONS

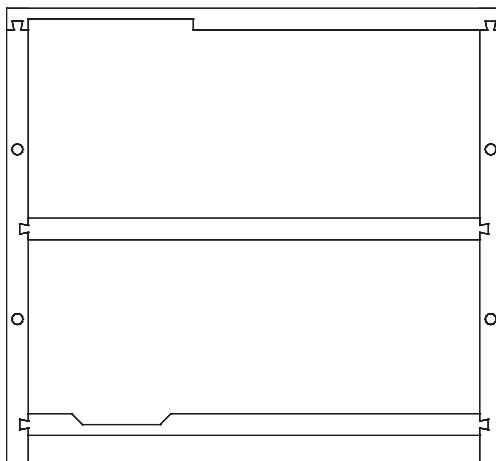


MOUNTING GASKET KIT 17-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.

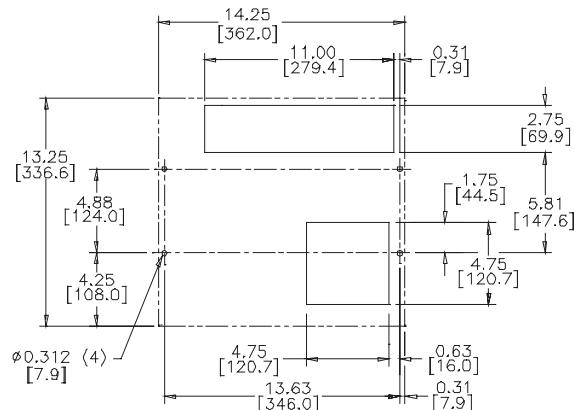



DASHED LINES REPRESENT AIRE CONDITIONER.

M13 COMPONENTS LIST

| Part Description | Item Number. | Part Number | |
|--------------------------------|--------------|-------------|-------------|
| | | 115 Volt | 230 Volt |
| Fan, Condenser | 1 | 12-1012-01 | 12-1012-02 |
| Fan, Evaporator | 2 | 13-1015-01 | 13-1015-02 |
| Coil, Condenser | 4 | 13-1001-05 | 13-1001-05 |
| Coil, Evaporator | 5 | 13-1001-04 | 13-1001-04 |
| Compressor, AE | 6 | 10-1016-61 | 10-1026-71 |
| Control Panel Assembly, Narrow | N/S | 10-1106-100 | 10-1106-100 |
| Filter, Air, Reusable, Narrow | N/S | 10-1000-57 | 10-1000-57 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Narrow | N/S | 10-1130-01 | 10-1130-01 |
| Pan, Condensate | 9 | 10-1130-12 | 10-1130-12 |
| Pan, Evaporator | 10 | 10-1130-13 | 10-1130-13 |
| Relay, Compressor, Start | 11 | 10-1028-05 | 10-1028-07 |
| Service Cord | 12 | 52-6035-138 | 52-6035-139 |
| Terminal Block | 13 | 10-1003-03 | 10-1003-03 |
| Thermal Overload, Compressor | 14 | 10-1007-19 | 10-1007-58 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-115 |

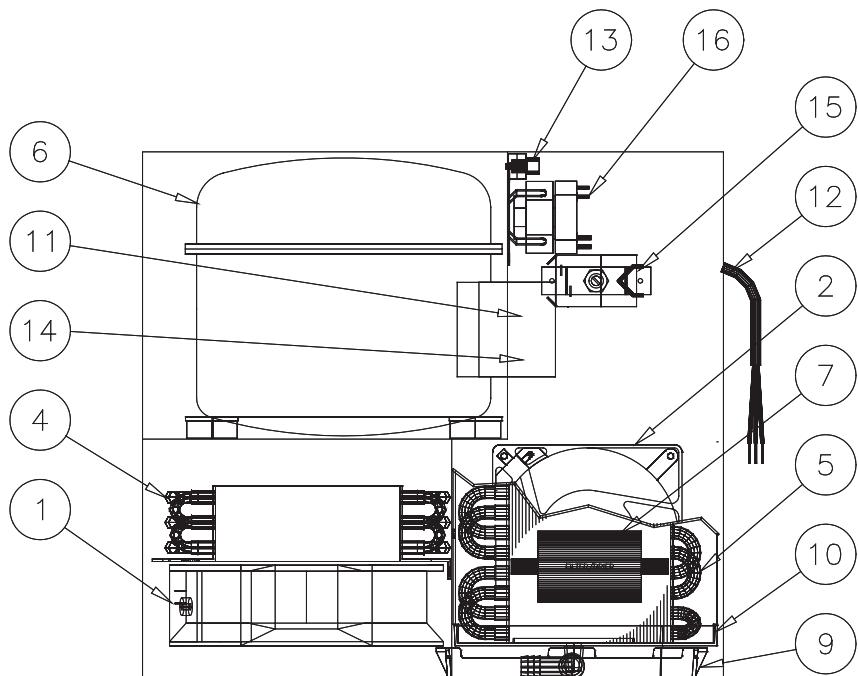

M13 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT 1000 BTU

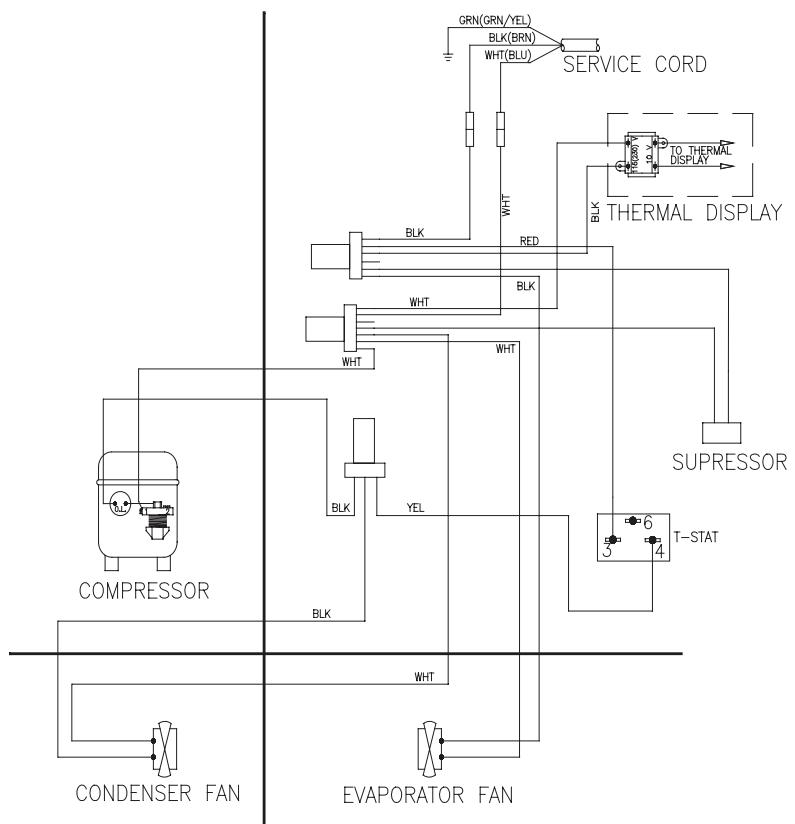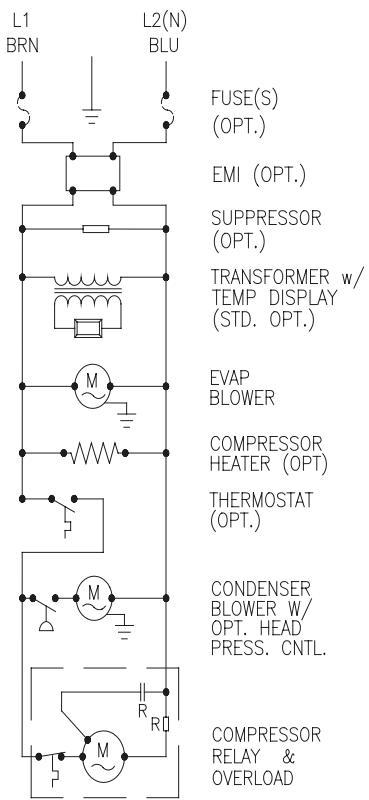


M17 DESIGN DATA



| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|---------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M17-0216-G009 | Stock | 110/115 | 50/60 | 6.6/6.7 | 1 | 1500/1800 | 125/52 | 56/25 |
| M17-0216-GXXX | | 110/115 | 50/60 | 6.6/6.7 | 1 | 1500/1800 | 125/52 | 56/25 |
| M17-0226-G004 | Stock | 220/230 | 50/60 | 4.2/3.7 | 1 | 1500/1800 | 125/52 | 56/25 |
| M17-0226-GXXX | | 220/230 | 50/60 | 4.2/3.7 | 1 | 1500/1800 | 125/52 | 56/25 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

M17 DIMENSIONAL DRAWING

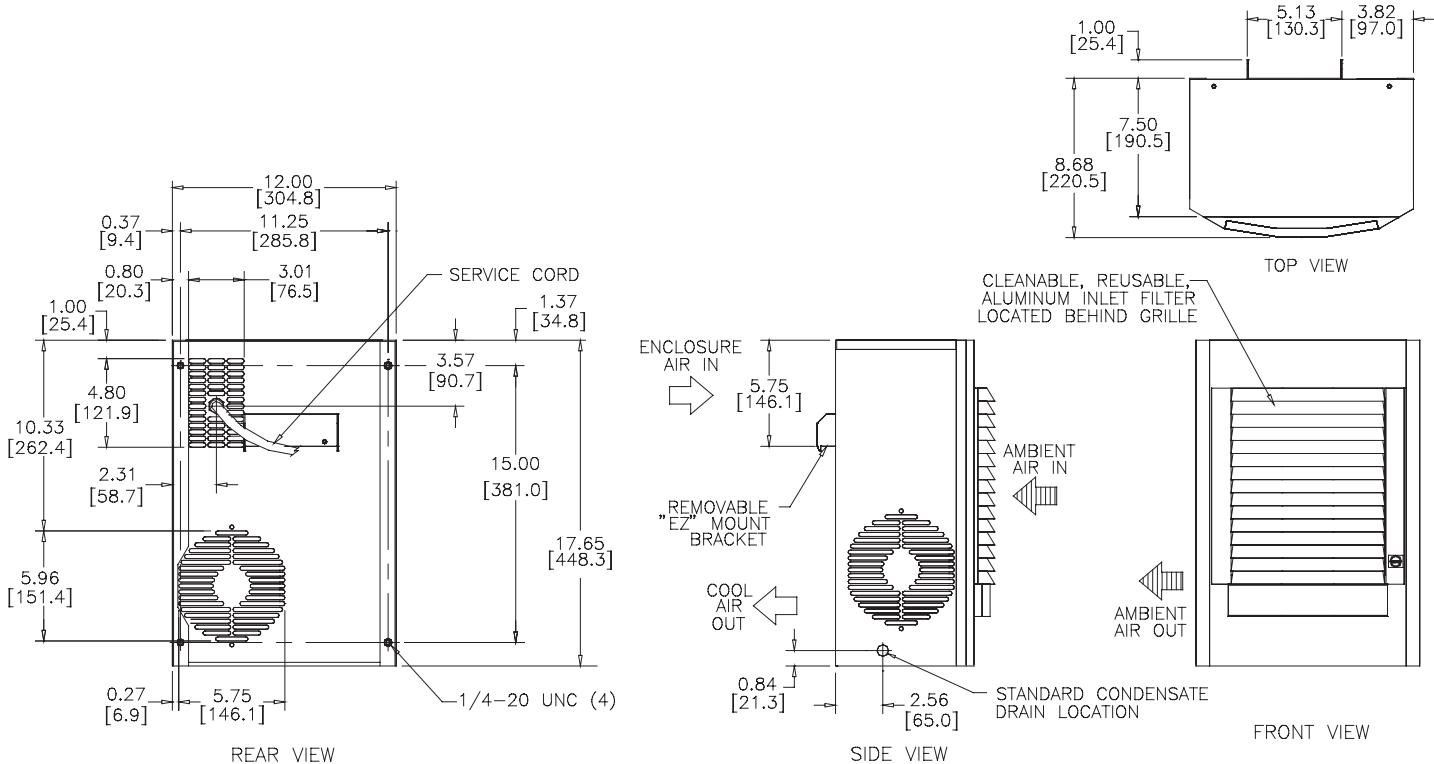

M17 MOUNTING GASKET AND CUTOUT DIMENSIONS

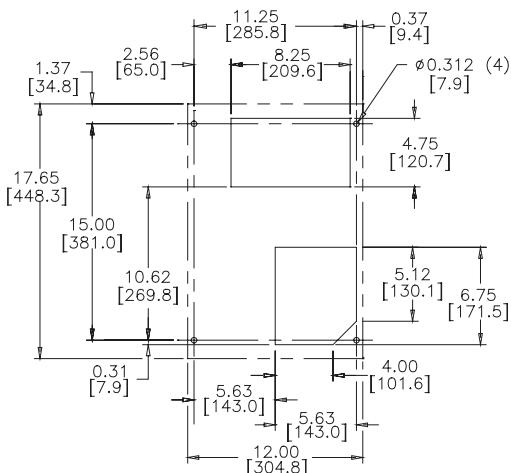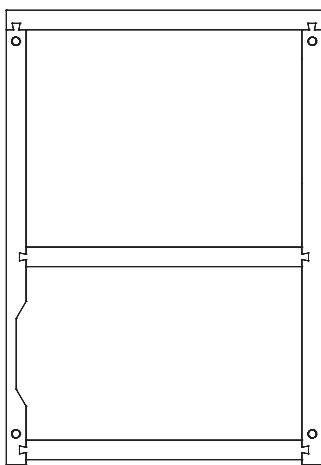


MOUNTING GASKET KIT 17-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.


DASHED LINES REPRESENT AIRE CONDITIONER.

M17 COMPONENTS LIST


| Part Description | Item Number. | Part Number | |
|--------------------------------|--------------|-------------|-------------|
| | | 115 Volt | 230 Volt |
| Fan, Condenser | 1 | 12-1012-01 | 12-1012-02 |
| Fan, Evaporator | 2 | 12-1012-01 | 12-1012-02 |
| Capacitor, Compressor, Start | 3 | N/A | 10-1032-09 |
| Coil, Condenser | 4 | 17-1001-00 | 17-1001-00 |
| Coil, Evaporator | 5 | 17-1002-01 | 17-1002-01 |
| Compressor, AE | 6 | 10-1016-22 | 10-1026-74 |
| Control Panel Assembly, Narrow | N/S | 10-1106-100 | 10-1106-100 |
| Filter, Air, Reusable, Narrow | N/S | 10-1000-57 | 10-1000-57 |
| Filter/Dryer | 7 | 52-6028-03 | 52-6028-03 |
| Grille, Front, Narrow | N/S | 10-1130-01 | 10-1130-01 |
| Pan, Condensate | 9 | 10-1130-14 | 10-1130-14 |
| Pan, Evaporator | 10 | 10-1130-18 | 10-1130-18 |
| Relay, Compressor, Start | 11 | 10-1028-05 | 10-1028-07 |
| Service Cord | 12 | 52-6035-138 | 52-6035-139 |
| Terminal Block | 13 | 10-1003-03 | 10-1003-03 |
| Thermal Overload, Compressor | 14 | 10-1007-44 | 10-1007-57 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-115 |

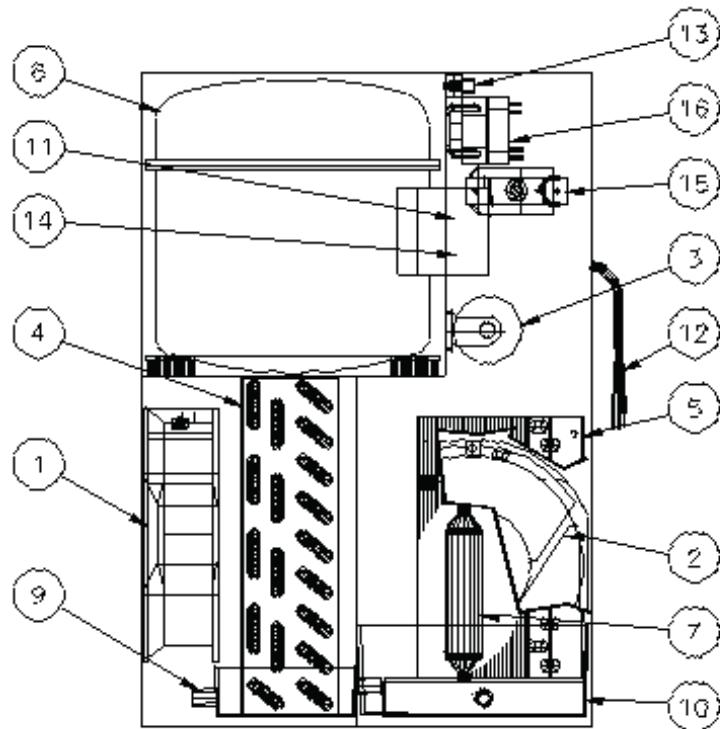

M17 SCHEMATIC AND WIRE DIAGRAM, 115 VOLT 1800 BTU

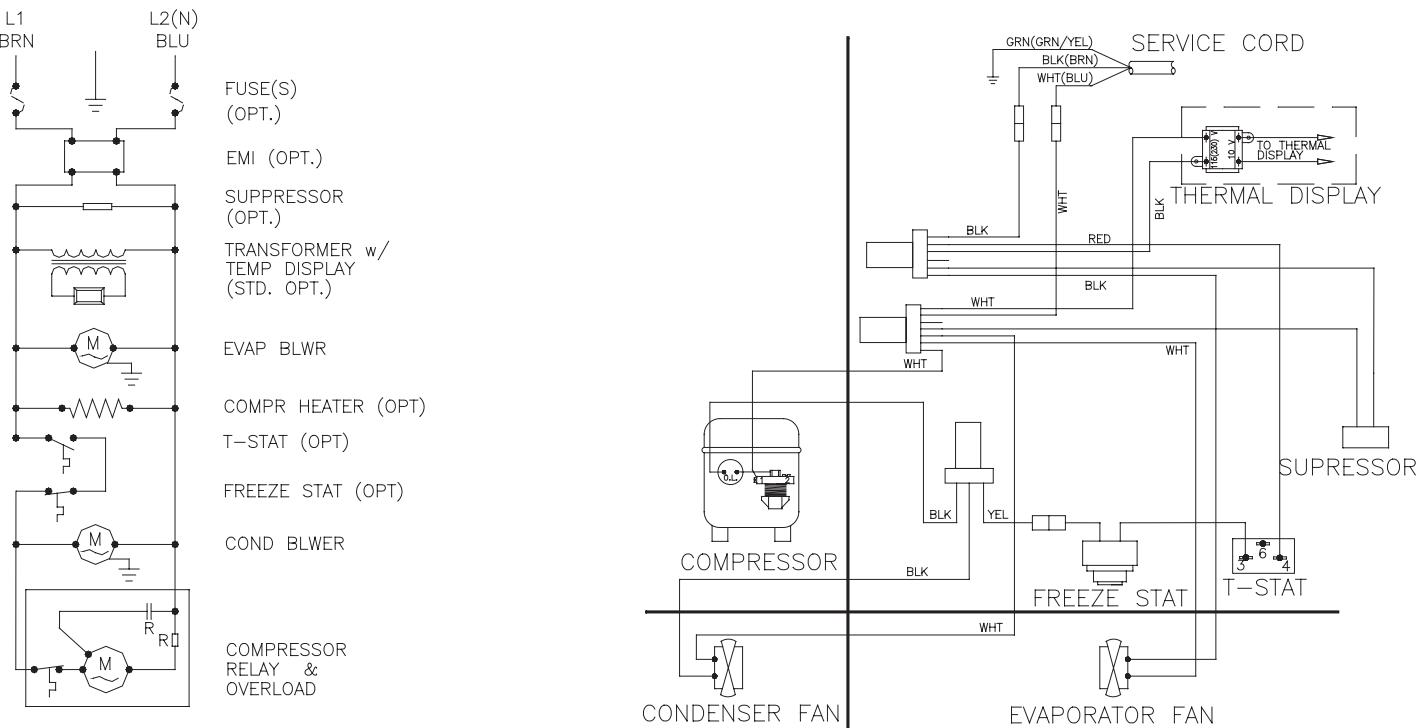

M17 SCHEMATIC AND WIRE DIAGRAM, 230 VOLT 1800 BTU

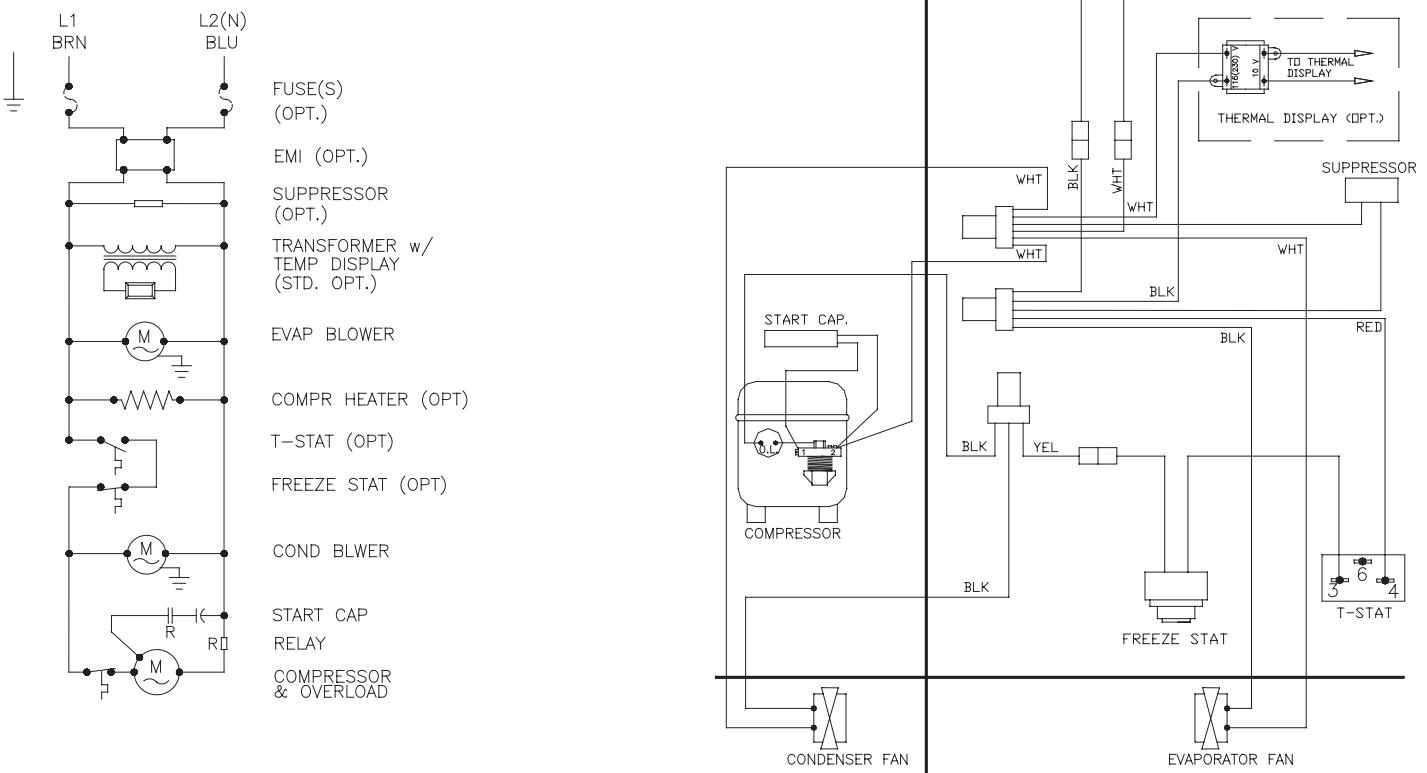


M28 DESIGN DATA


| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|---------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M28-0216-G013 | STOCK | 115 | 50/60 | 9.8/9.0 | 1 | 2200/2200 | 125/52 | 98/45 |
| M28-0216-GXXX | | 115 | 50/60 | 9.8/9.0 | 1 | 2200/2200 | 125/52 | 98/45 |
| M28-0226-G004 | STOCK | 230 | 50/60 | 5.0/4.5 | 1 | 2200/2200 | 125/52 | 98/45 |
| M28-0226-GXXX | | 230 | 50/60 | 5.0/4.5 | 1 | 2200/2200 | 125/52 | 98/45 |
| M28-0416-G007 | STOCK | 115 | 50/60 | 14.6/14.0 | 1 | 3800/4000 | 125/52 | 116/53 |
| M28-0416-GXXX | | 115 | 50/60 | 14.6/14.0 | 1 | 3800/4000 | 125/52 | 116/53 |
| M28-0426-G032 | STOCK | 230 | 50/60 | 7.4/6.9 | 1 | 3800/4000 | 125/52 | 116/53 |
| M28-0426-GXXX | | 230 | 50/60 | 7.4/6.9 | 1 | 3800/4000 | 125/52 | 116/53 |
| M28-0616-GXXX | | 115 | 50/60 | 16.4/17.2 | 1 | 5400/6000 | 125/52 | 120/55 |
| M28-0626-GXXX | | 230 | 50/60 | 8.0 | 1 | 5400/6000 | 125/52 | 120/55 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

M28 DIMENSIONAL DRAWING

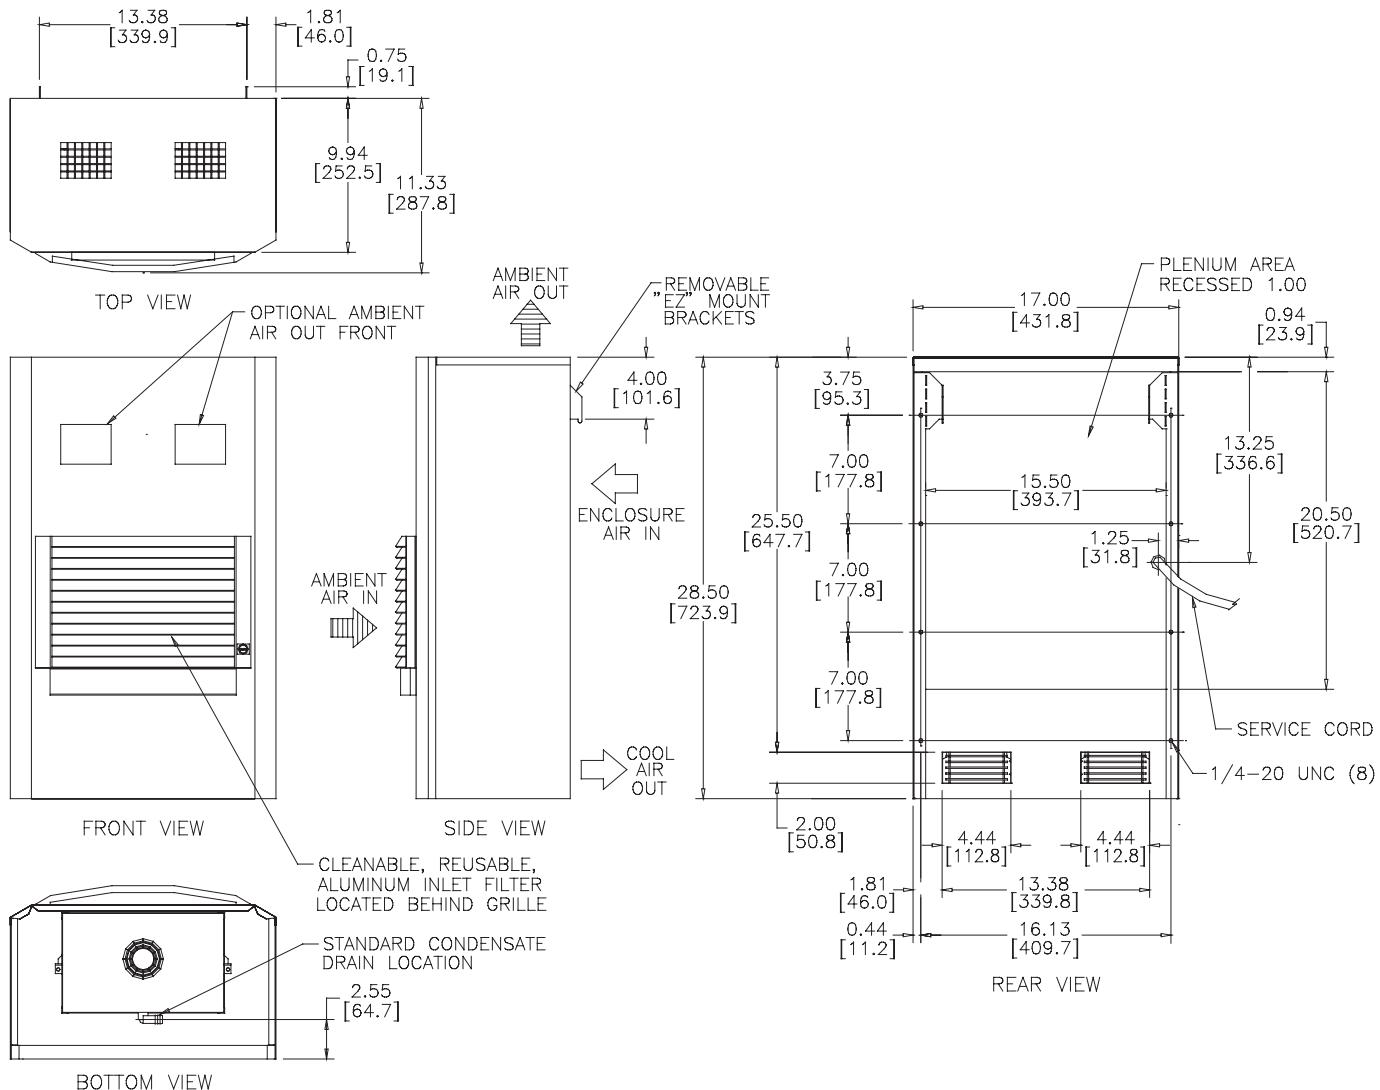


M28 MOUNTING GASKET AND CUTOUT DIMENSIONS

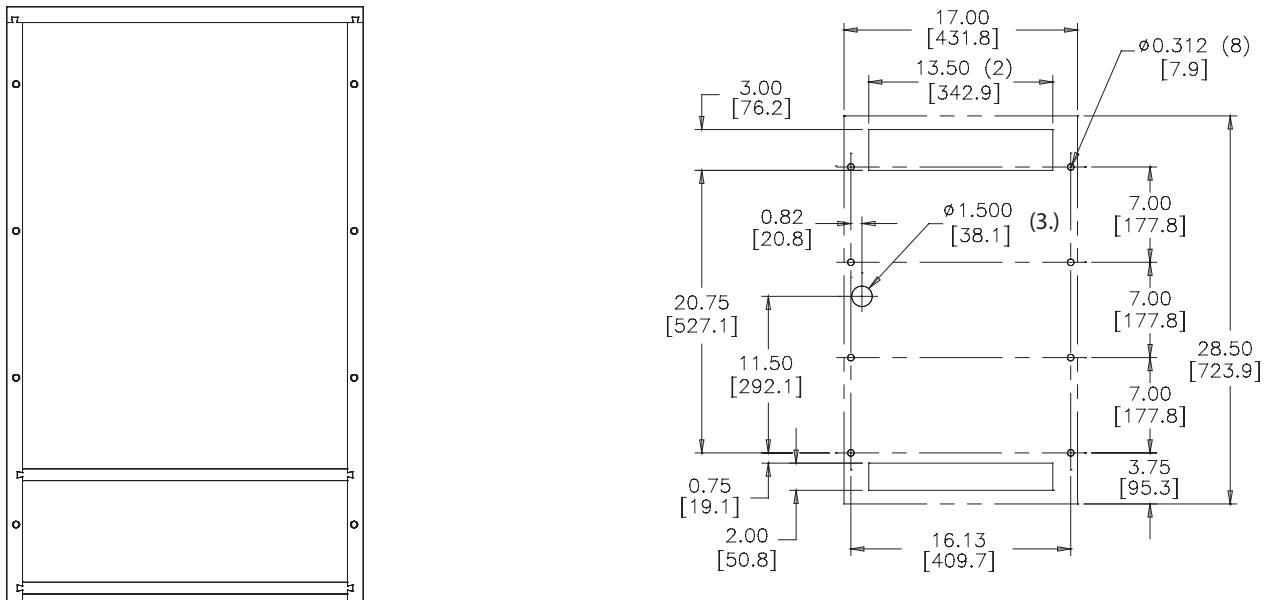

MOUNTING GASKET KIT 28-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.

1. Dashed lines represent air conditioner.
2. Cutout dimensions are for standard unit.
3. Hole may be deleted if service cord is routed through 3.00 x 13.50 cutout (except on units with electric heat).


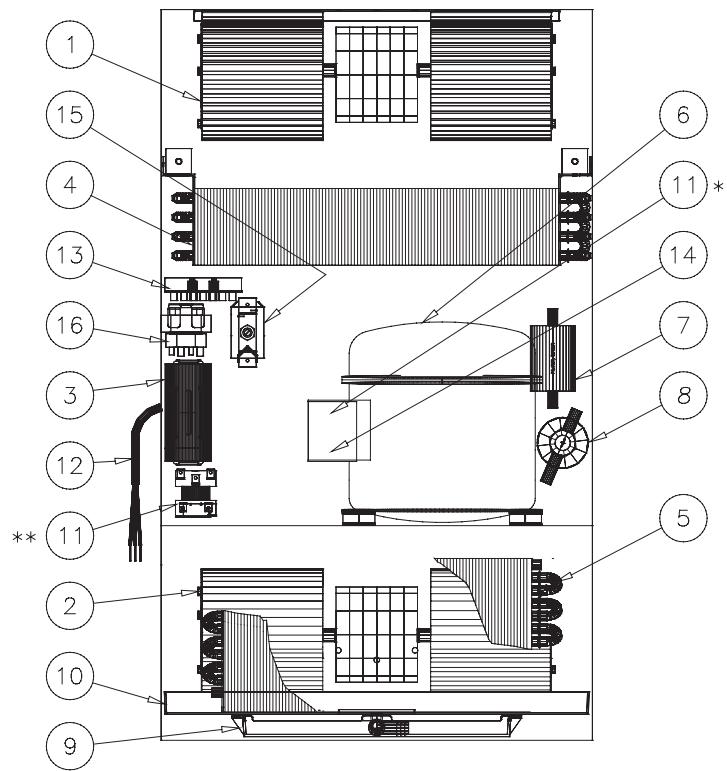


M28 COMPONENTS LIST



| Part Description | Item Number | Part Number (115 Volt) | | |
|----------------------------------|-------------|------------------------|-------------|-------------|
| | | 2200 BTU | 4000 BTU | 6000 BTU |
| Blower, Condenser | 1 | 30-4019-01M | 30-4019-01M | 38-2019-04 |
| Blower, Evaporator | 2 | 28-1064-06M | 28-1064-06M | 28-1064-06M |
| Capacitor, Compressor, Start/Run | 3 | N/A | 10-1032-13 | 10-1032-15 |
| Coil, Condenser | 4 | 24-1001-00 | 24-1001-00 | 24-1001-00 |
| Coil, Evaporator | 5 | 28-1001-00 | 28-1001-01 | 14-1002-00 |
| Compressor, AE/AK/AK | 6 | 10-1016-22 | 10-1016-26 | 10-1016-68 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 | 10-1130-00 |
| Hot Gas By-Pass Valve | 8 | N/A | 52-6027-16 | 52-6027-11 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-15 | 10-1130-15 | 10-1130-15 |
| Relay, Compressor, Start | 11 | 10-1028-05 | 10-1028-14 | N/A |
| Service Cord | 12 | 52-6035-138 | 52-6035-142 | 52-6035-125 |
| Terminal Block (If Installed) | 13 | 10-1003-31 | 10-1003-31 | 10-1003-31 |
| Thermal Overload, Compressor | 14 | 10-1007-44 | 10-1007-45 | 10-1007-50 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-114 | 10-1006-114 |

| Part Description | Item Number | Part Number (230 Volt) | | |
|-----------------------------------|-------------|------------------------|-------------|-------------|
| | | 2200 BTU | 4000 BTU | 6000 BTU |
| Blower, Condenser | 1 | 30-4019-02M | 30-4019-02M | 38-2020-04 |
| Blower, Evaporator | 2 | 28-1064-05M | 28-1064-05M | 28-1064-05M |
| Capacitor, Compressor., Start/Run | 3 | 10-1032-09 | 10-1032-14 | 10-1032-18 |
| Coil, Condenser | 4 | 24-1001-00 | 24-1001-00 | 24-1001-00 |
| Coil, Evaporator | 5 | 28-1001-00 | 28-1001-01 | 14-1002-00 |
| Compressor, AE/AK/AK | 6 | 10-1026-74 | 10-1026-77 | 10-1026-80 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 | 10-1130-00 |
| Hot Gas By-Pass Valve | 8 | N/A | 52-6027-16 | 52-6027-11 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-15 | 10-1130-15 | 10-1130-15 |
| Relay, Compressor, Start | 11 | 10-1028-07 | 10-1028-15 | N/A |
| Service Cord | 12 | 52-6035-139 | 52-6035-139 | 52-6035-139 |
| Terminal Block (If Installed) | 13 | 10-1003-31 | 10-1003-31 | 10-1003-31 |
| Thermal Overload, Compressor | 14 | 10-1007-57 | 10-1007-51 | 10-1007-49 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-115 | 10-1006-115 | 10-1006-115 |



M28 SCHEMATIC AND WIRE DIAGRAM, 115 VOLT, 2200 BTU AND 230 VOLT 6000 BTU

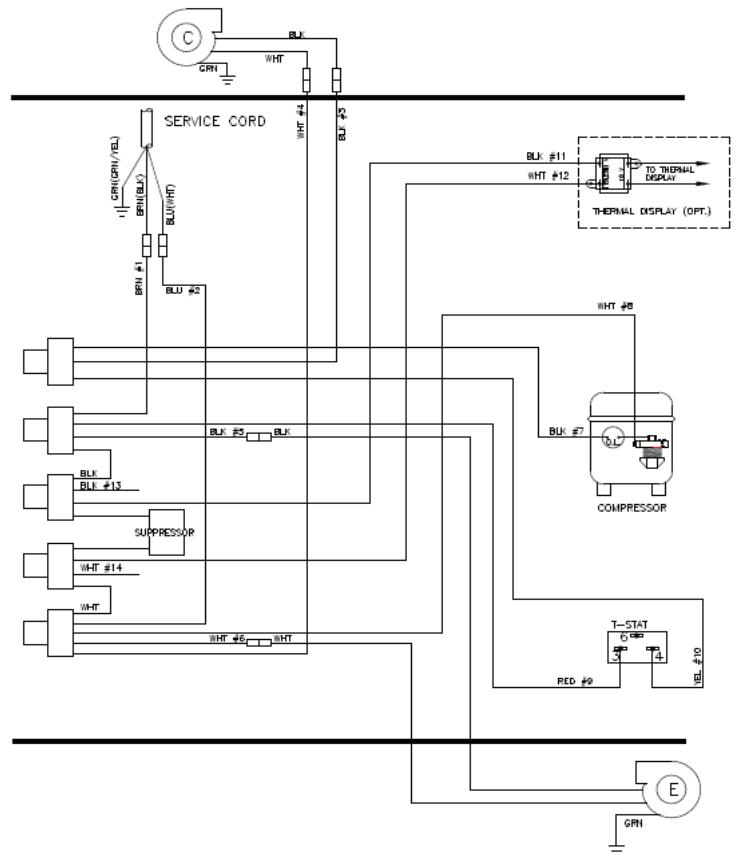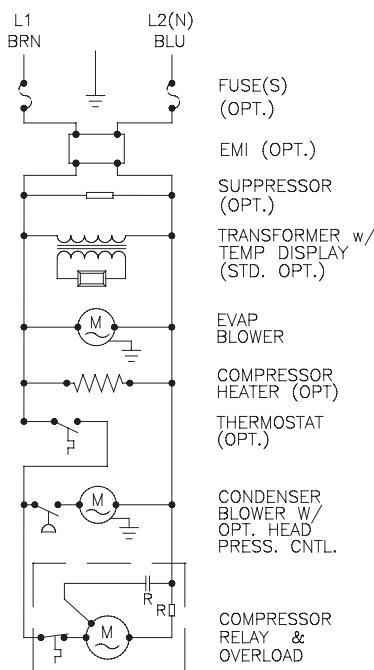



M28 SCHEMATIC AND WIRE DIAGRAM, 230 VOLT, 2200 BTU

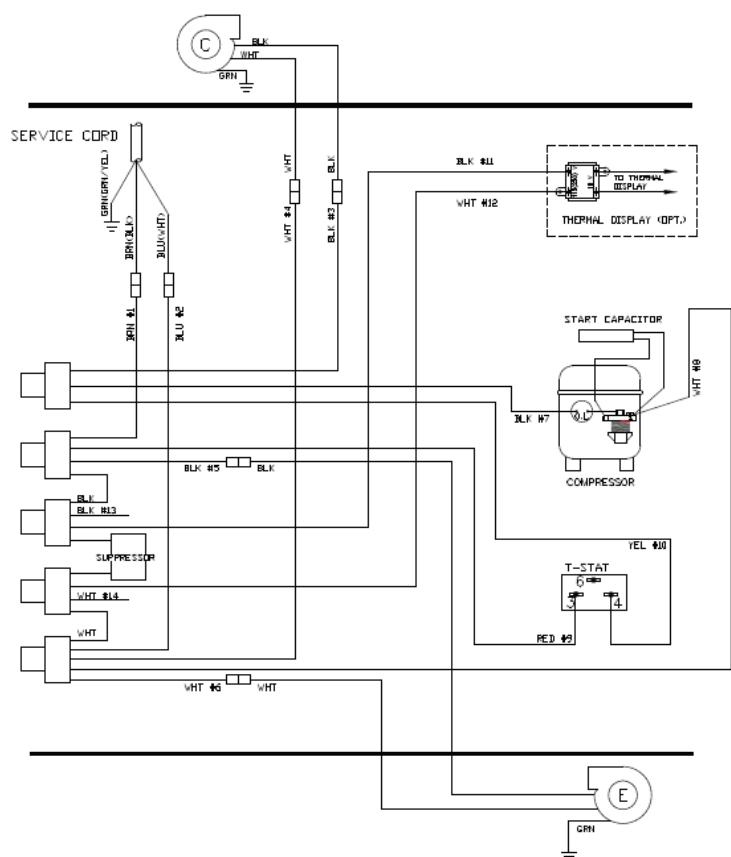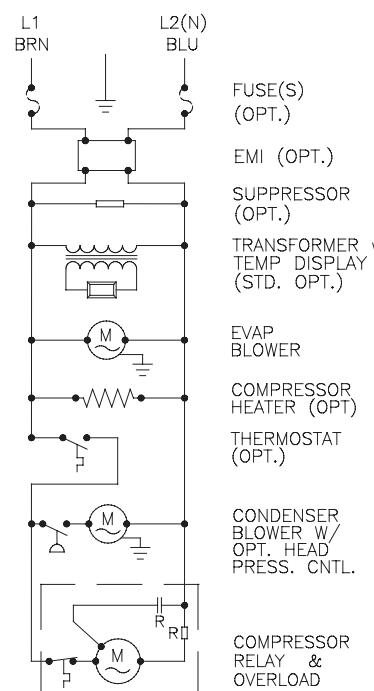

M28 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT, 4000 BTU & 230 VOLT 6000 BTU

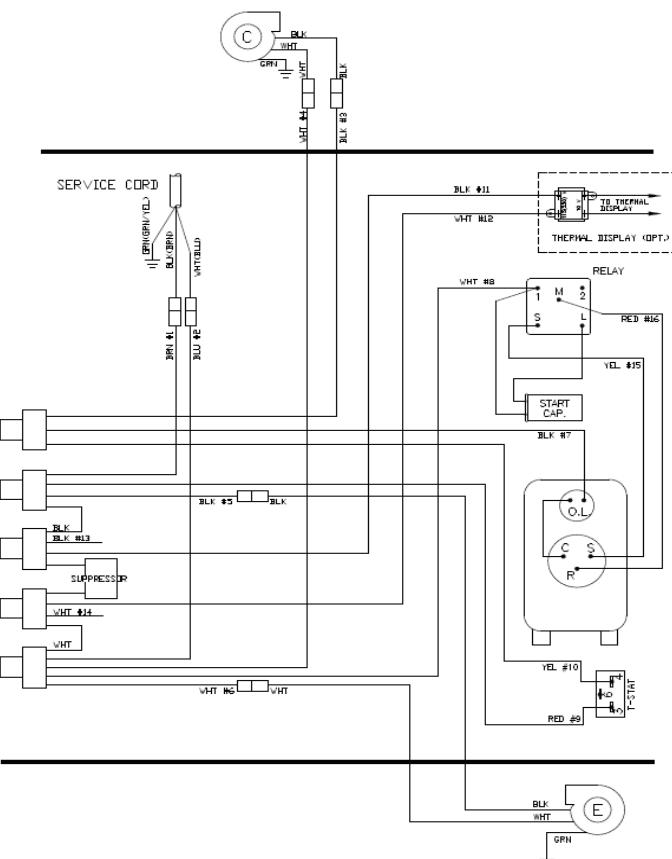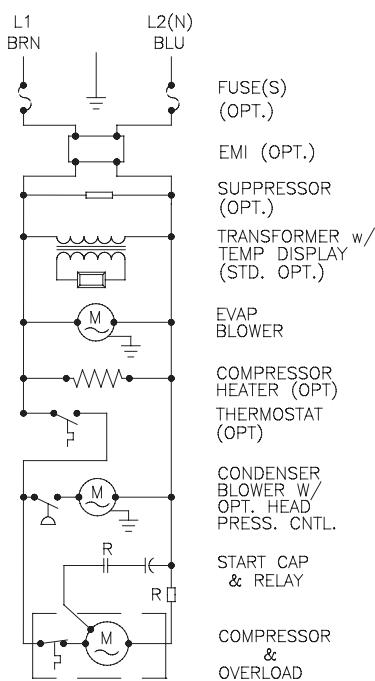

M28 SCHEMATIC AND WIRE DIAGRAM, 115 VOLT, 6000 BTU

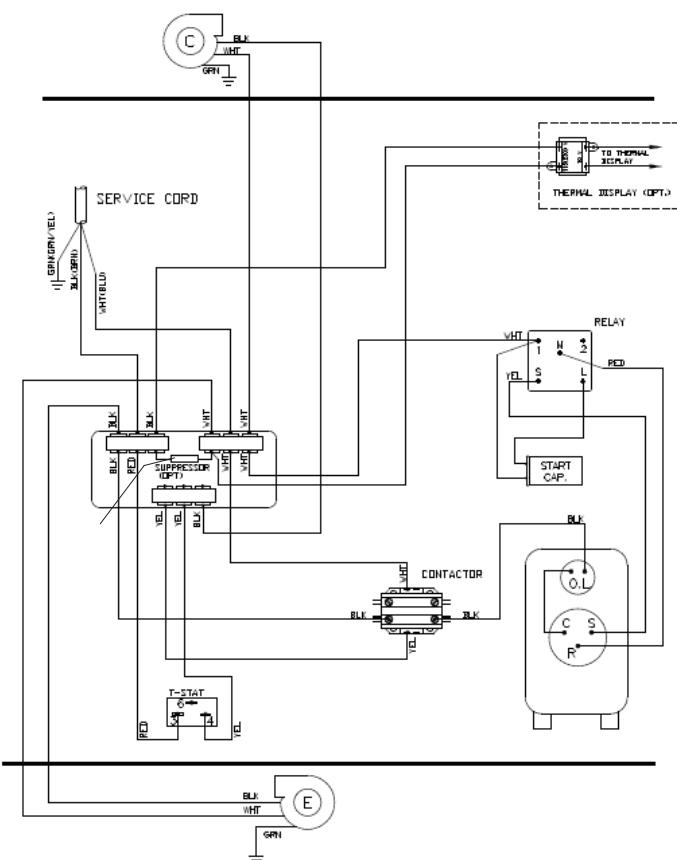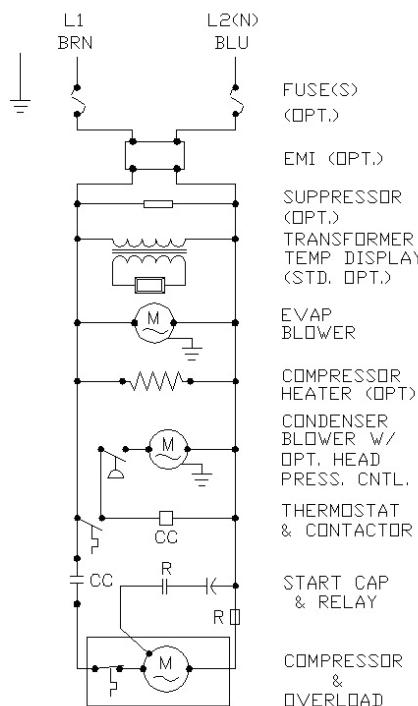


M33 DESIGN DATA


| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|---------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M33-0416-G010 | Stock | 115 | 50/60 | 13.0/13.2 | 1 | 3700/4000 | 125/52 | 105/48 |
| M33-0416-GXXX | | 115 | 50/60 | 13.0/13.2 | 1 | 3700/4000 | 125/52 | 105/48 |
| M33-0426-G009 | Stock | 230 | 50/60 | 7.2/7.3 | 1 | 3700/4000 | 125/52 | 105/48 |
| M33-0426-GXXX | | 230 | 50/60 | 7.2/7.3 | 1 | 3700/4000 | 125/52 | 105/48 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

M33 DIMENSIONAL DRAWING

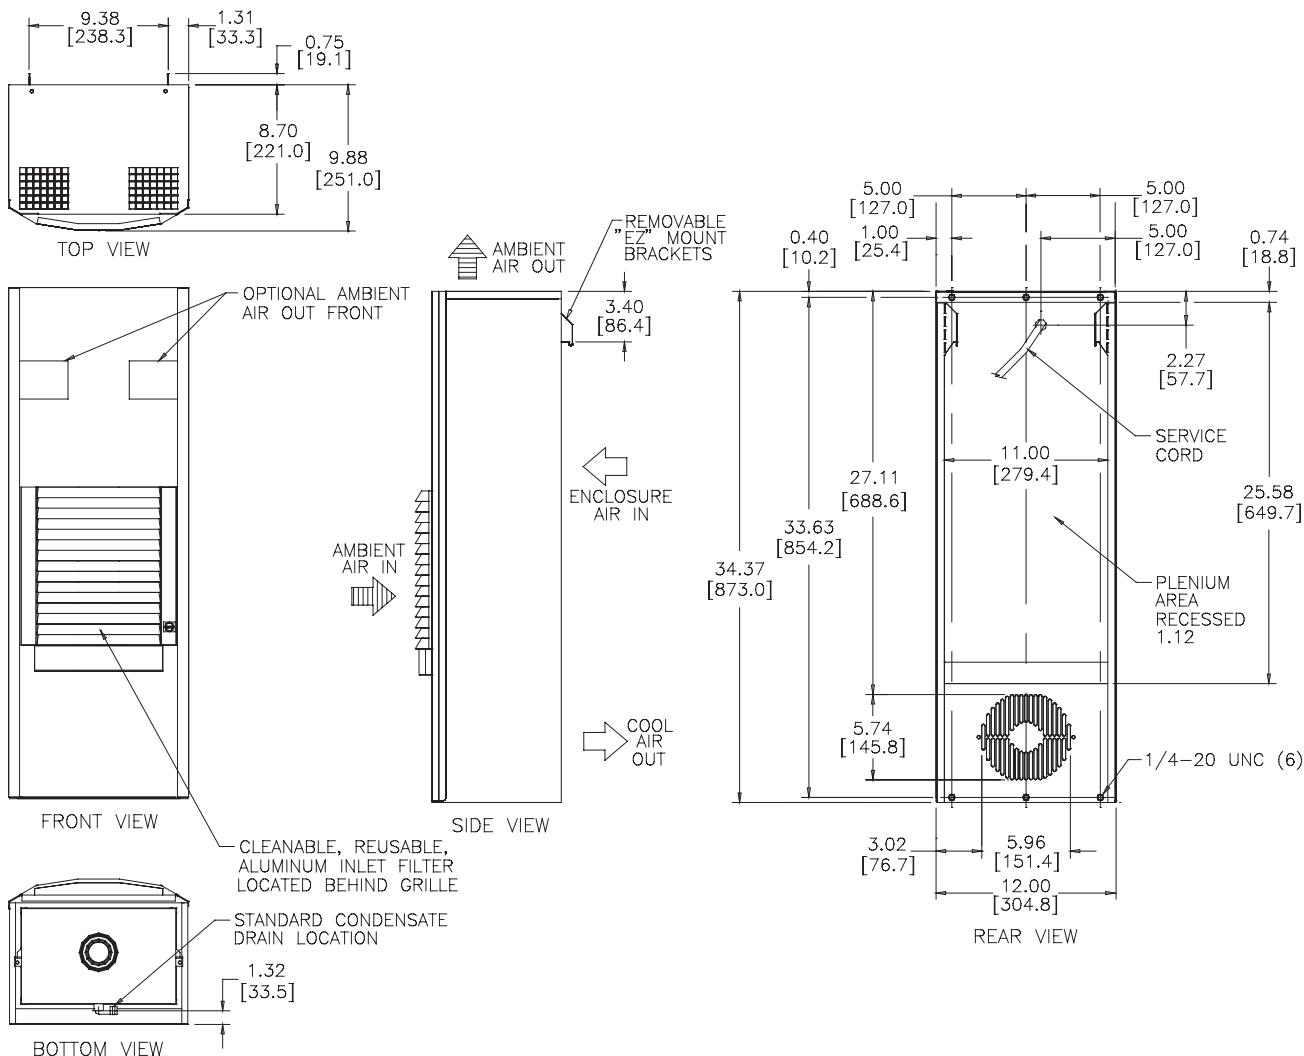


M33 MOUNTING GASKET AND CUTOUT DIMENSIONS

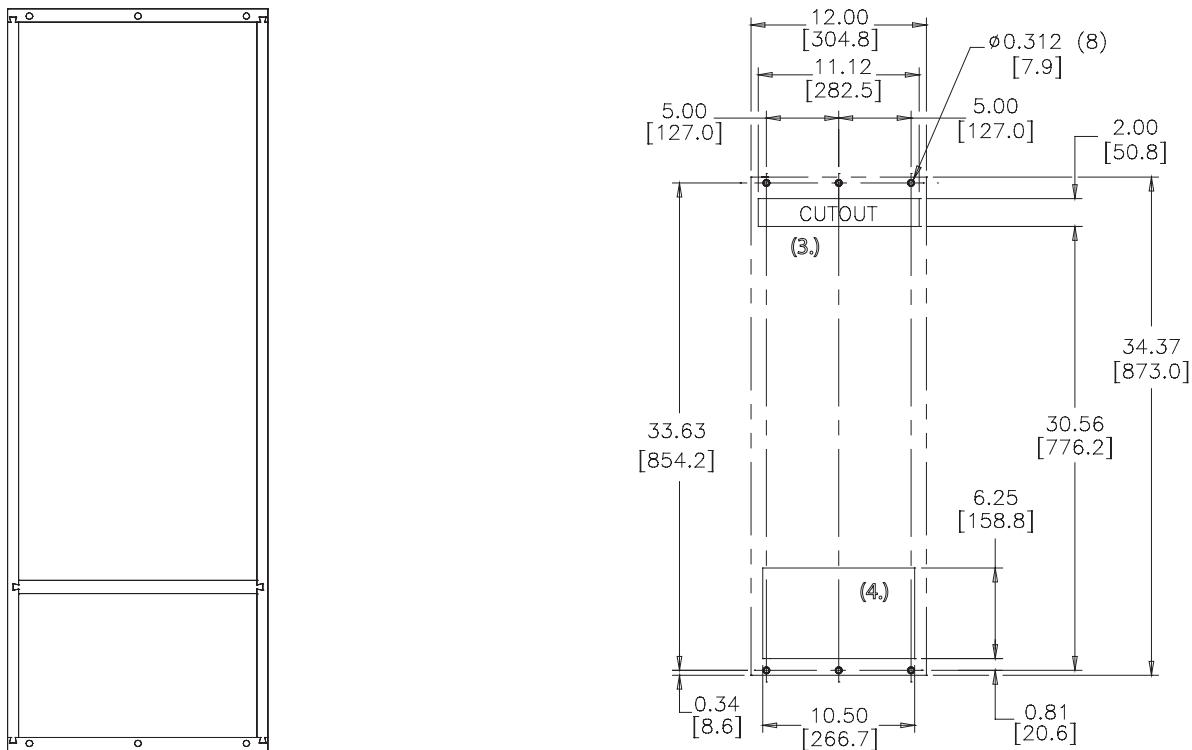

MOUNTING GASKET KIT 33-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.


1. Dashed lines represent aire conditioner.
2. Cutout dimensions for standard unit.
3. Service cord to be routed through 2.00 x 11.12 cutout.
4. Bottom cutout will accomodate air conditioner or heat exchanger.

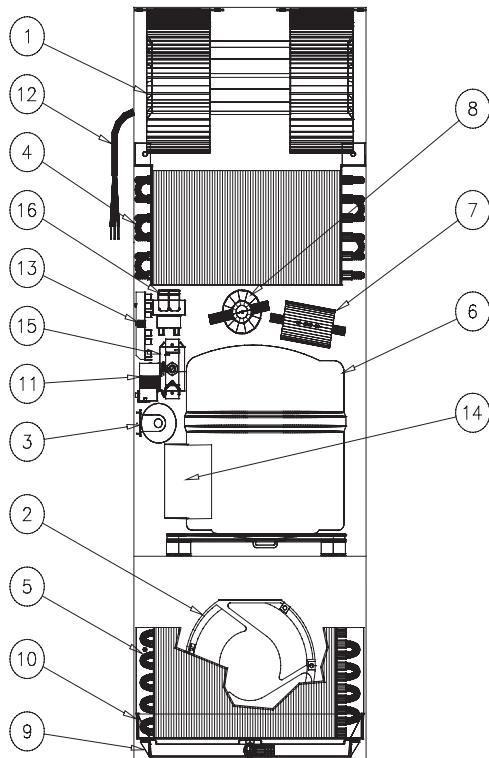

M33 COMPONENTS LIST

| Part Description | Item Number | Part Number (4000 BTU) | |
|------------------------------------|-------------|------------------------|-------------|
| | | 115 Volt | 230 Volt |
| Blower, Condenser, Top Discharge | 1 | 38-2019-04 | 38-2020-04 |
| Blower, Condenser, Front Discharge | 1 | 38-2019-00 | 38-2020-00 |
| Fan, Evaporator | 2 | 12-1012-01 | 12-1012-02 |
| Capacitor, Compressor, Start | 3 | 10-1032-13 | 10-1032-14 |
| Coil, Condenser | 4 | 33-2001-01 | 33-2001-01 |
| Coil, Evaporator | 5 | 33-2002-02 | 33-2002-02 |
| Compressor, AK | 6 | 10-1016-26 | 10-1026-77 |
| Control Panel Assembly, Narrow | N/S | 10-1106-100 | 10-1106-100 |
| Filter, Air, Reusable, Narrow | N/S | 10-1000-57 | 10-1000-57 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Narrow | N/S | 10-1130-01 | 10-1130-01 |
| Hot Gas By-Pass Valve | 8 | 52-6027-16 | 52-6027-16 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-16 | 10-1130-16 |
| Relay, Compressor, Start | 11 | 10-1028-14 | 10-1028-15 |
| Service Cord | 12 | 52-6035-143 | 52-6035-141 |
| Terminal Block (if installed) | 13 | 10-1003-03 | 10-1003-03 |
| Thermal Overload, Compressor | 14 | 10-1007-45 | 10-1007-51 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-115 |

M33 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT 4000 BTU

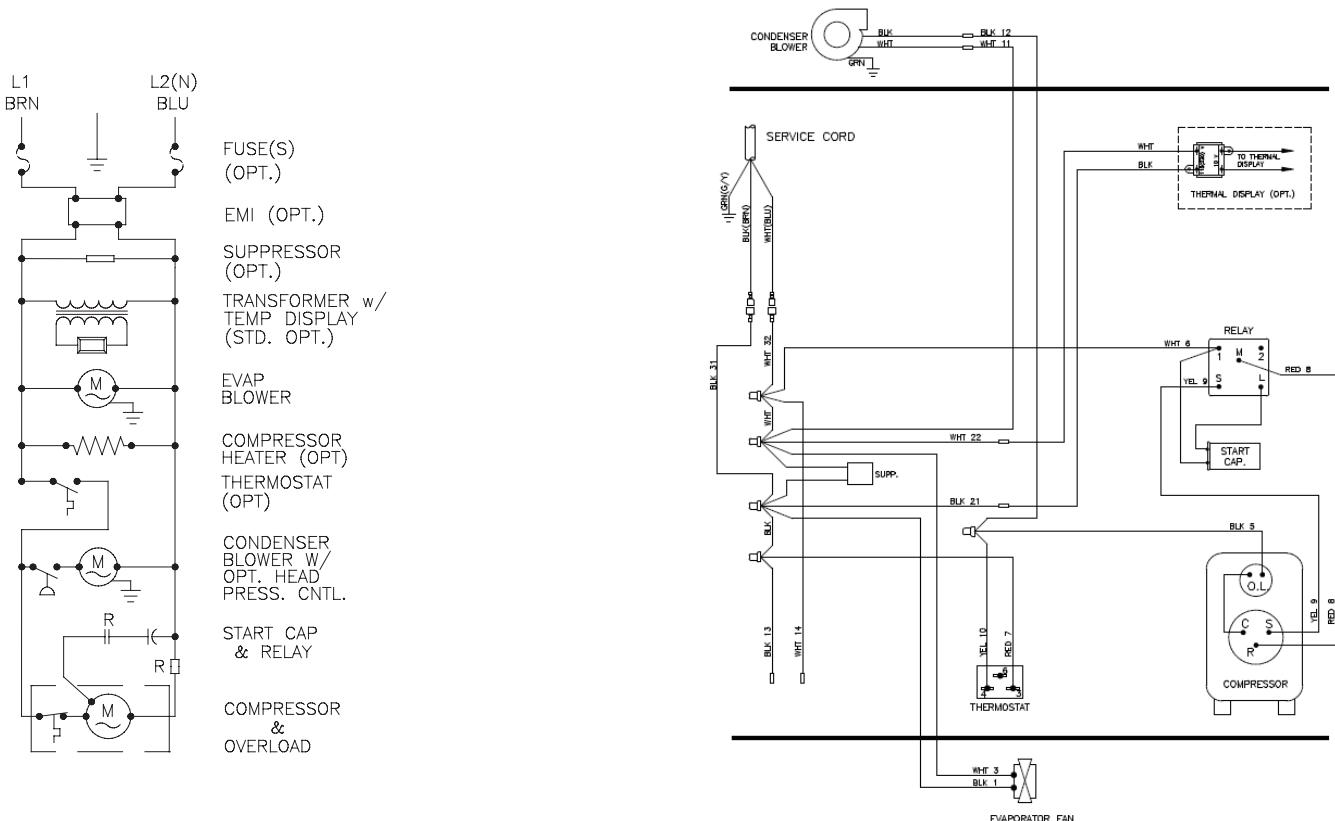


M36 DESIGN DATA


| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|---------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M36-0616-G307 | Stock | 115 | 50/60 | 10.0/10.0 | 1 | 5000/6000 | | 105/48 |
| M36-0616-GXXX | | 115 | 50/60 | 10.0/10.0 | 1 | 5000/6000 | | 105/48 |
| M36-0626-G306 | Stock | 230 | 50/60 | 5.0/5.0 | 1 | 5000/6000 | | 105/48 |
| M36-0626-GXXX | | 230 | 50/60 | 5.0/5.0 | 1 | 5000/6000 | | 105/48 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

M36 DIMENSIONAL DRAWING

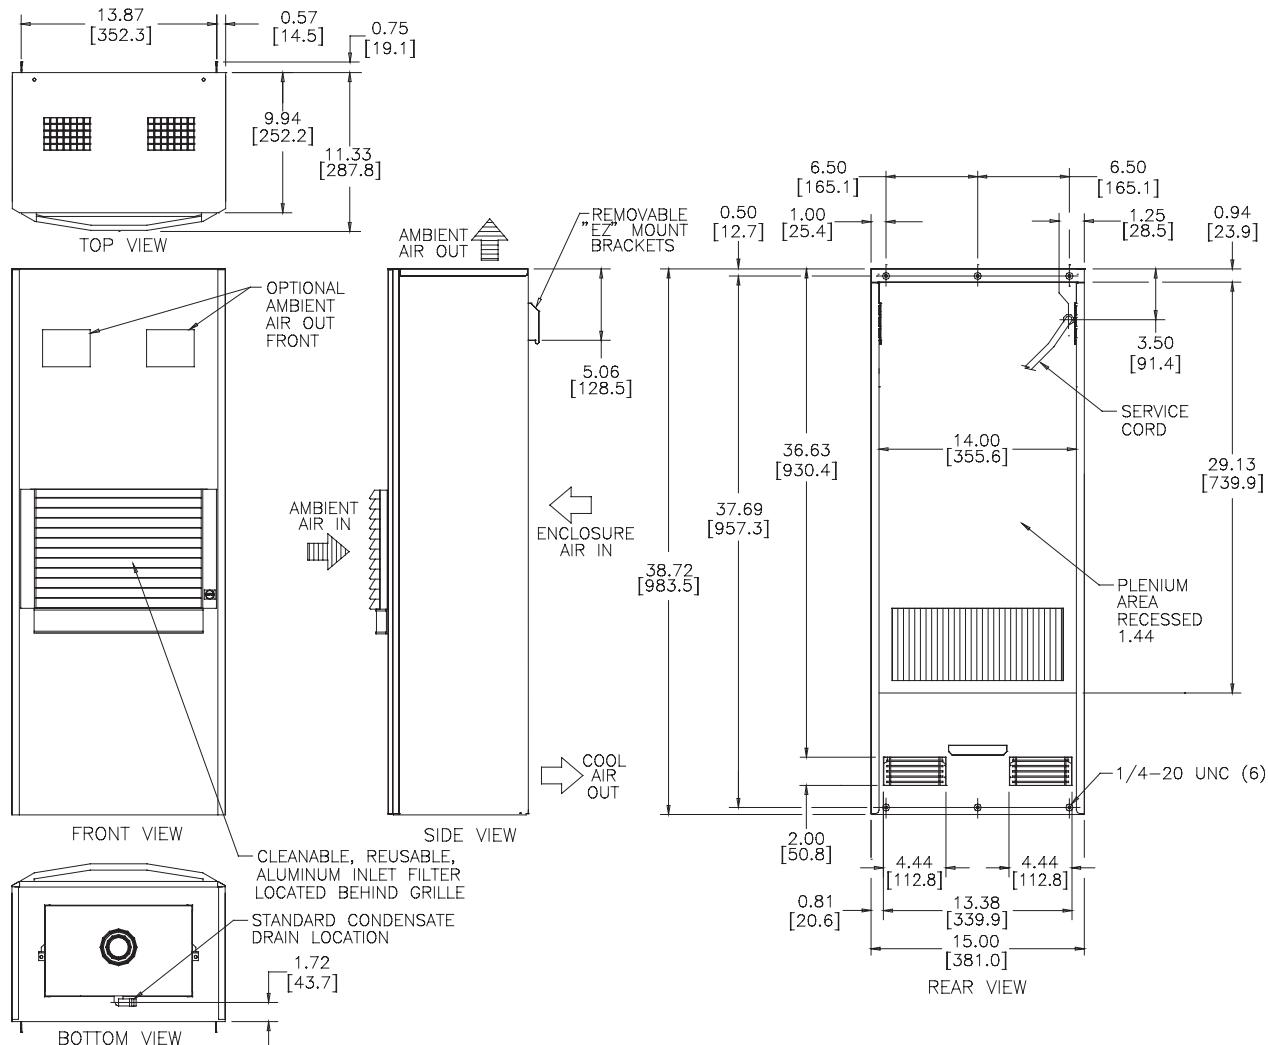


M36 MOUNTING GASKET AND CUTOUT DIMENSIONS

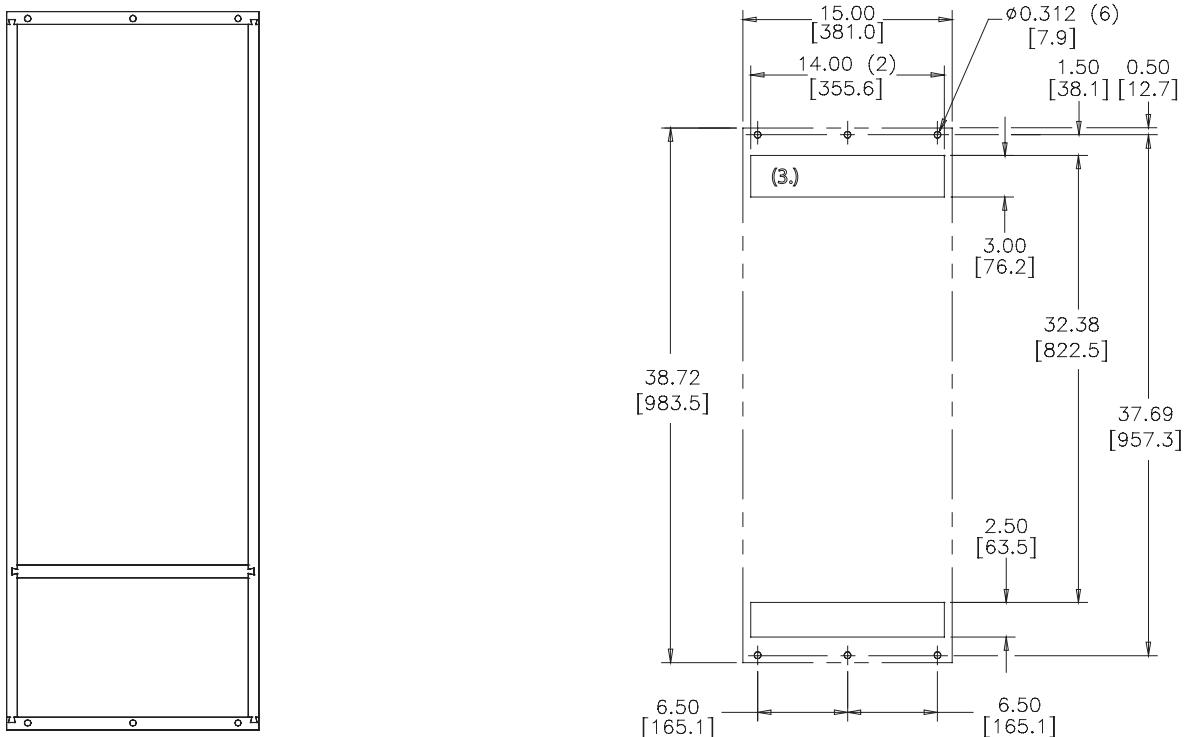

MOUNTING GASKET KIT 36-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.


1. Dashed lines represent aire conditioner.
2. Cutout dimensions for standard unit.
3. Service cord to be routed through 3.00 x 14.00 cutout.

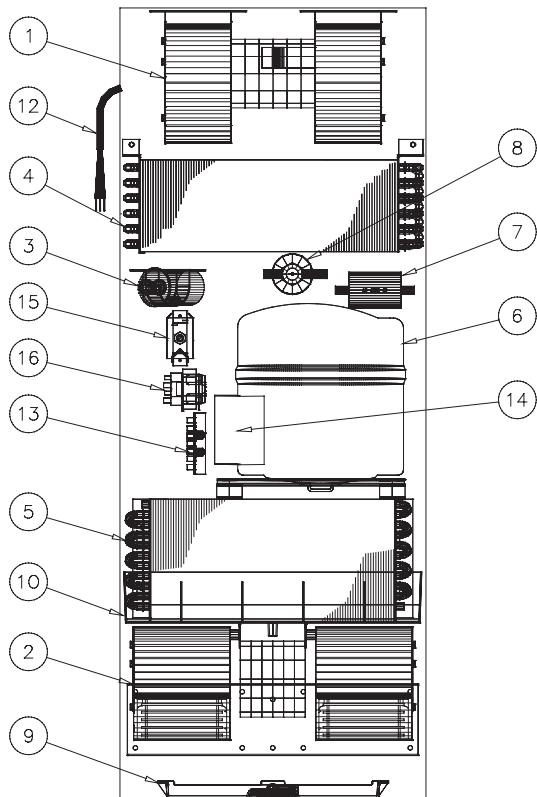

M36 COMPONENTS LIST

| Part Description | Item Number | Part Number (6000 BTU) | |
|--|-------------|------------------------|-------------|
| | | 115 Volt | 230 Volt |
| Blower, Condenser | 1 | 38-2019-04 | 38-2020-04 |
| Blower, Evaporator | 2 | 28-1064-06M | 28-1064-05M |
| Capacitor, Compressor, Run | 3 | 52-6032-06 | S-6173 |
| Coil, Condenser | 4 | 36-1017-01 | 36-1017-01 |
| Coil, Evaporator | 5 | 28-1001-01 | 28-1001-01 |
| Compressor, Rotary | 6 | 10-1016-91 | 10-1026-123 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-19 | 10-1130-19 |
| Relay, Compressor (optional) | N/S | 10-1042-06 | 10-1042-13 |
| Start Capacitor, Compressor (optional) | N/S | 10-1032-08 | 10-1032-08 |
| Time Delay Relay (optional) | N/S | 10-1005-71 | N/A |
| Contactor (optional) | N/S | 10-1005-41 | N/A |
| Service Cord | 12 | 52-6035-143 | 52-6035-141 |
| Thermal Overload, Compressor | 14 | 10-1007-18 | MRA5742-114 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-115 |

M36 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT 6000 BTU

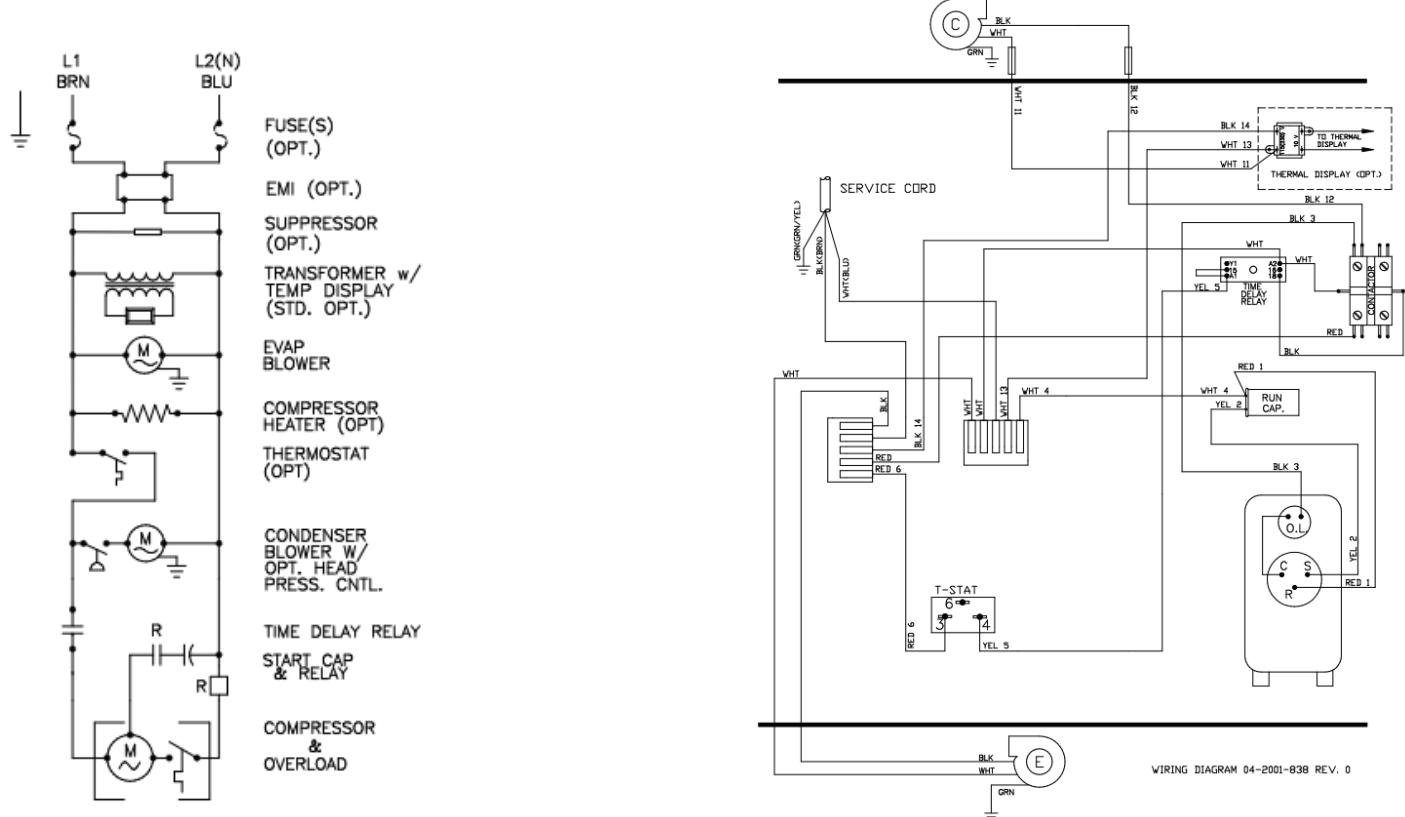


M52 DESIGN DATA

| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|---------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| M28-0626-GXXX | | 115 | 50/60 | 13.0/13.0 | 1 | 5000/6000 | 125/52 | 155/70 |
| M52-0626-XXX | | 230 | 50/60 | 6.5/6.5 | 1 | 5000/6000 | 125/52 | 155/70 |
| M52-0816-032 | Stock | 115 | 50/60 | 14.5/14.5 | 1 | 6700/8000 | 125/52 | 160/73 |
| M52-0816-XXX | | 115 | 50/60 | 14.5/14.5 | 1 | 6700/8000 | 125/52 | 160/73 |
| M52-0826-015 | Stock | 230 | 50/60 | 8.0/8.0 | 1 | 6700/8000 | 125/52 | 160/73 |
| M52-0826-XXX | | 230 | 50/60 | 8.0/8.0 | 1 | 6700/8000 | 125/52 | 160/73 |
| M52-1016-038 | Stock | 110/115 | 50/60 | 18.9/19.5 | 1 | 8300/10000 | 125/52 | 165/75 |
| M52-1016-XXX | | 110/115 | 50/60 | 18.9/19.5 | 1 | 8300/10000 | 125/52 | 165/75 |
| M52-1026-021 | Stock | 220/230 | 50/60 | 9.5/9.8 | 1 | 8300/10000 | 125/52 | 165/75 |
| M52-1026-XXX | | 220/230 | 50/60 | 9.5/9.8 | 1 | 8300/10000 | 125/52 | 165/75 |
| M52-1216-017 | Stock | 110/115 | 50/60 | 24.0/23.0 | 1 | 10000/12000* | 125/52 | 175/79 |
| M52-1216-XXX | | 110/115 | 50/60 | 24.0/23.0 | 1 | 10000/12000* | 125/52 | 175/79 |
| M52-1226-034 | Stock | 220/230 | 50/60 | 12.2/11.6 | 1 | 10000/12000* | 125/52 | 175/79 |
| M52-1226-XXX | | 220/230 | 50/60 | 12.2/11.6 | 1 | 10000/12000* | 125/52 | 175/79 |


-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

* Based on return air temperature slightly above ambient.

M52 DIMENSIONAL DRAWING

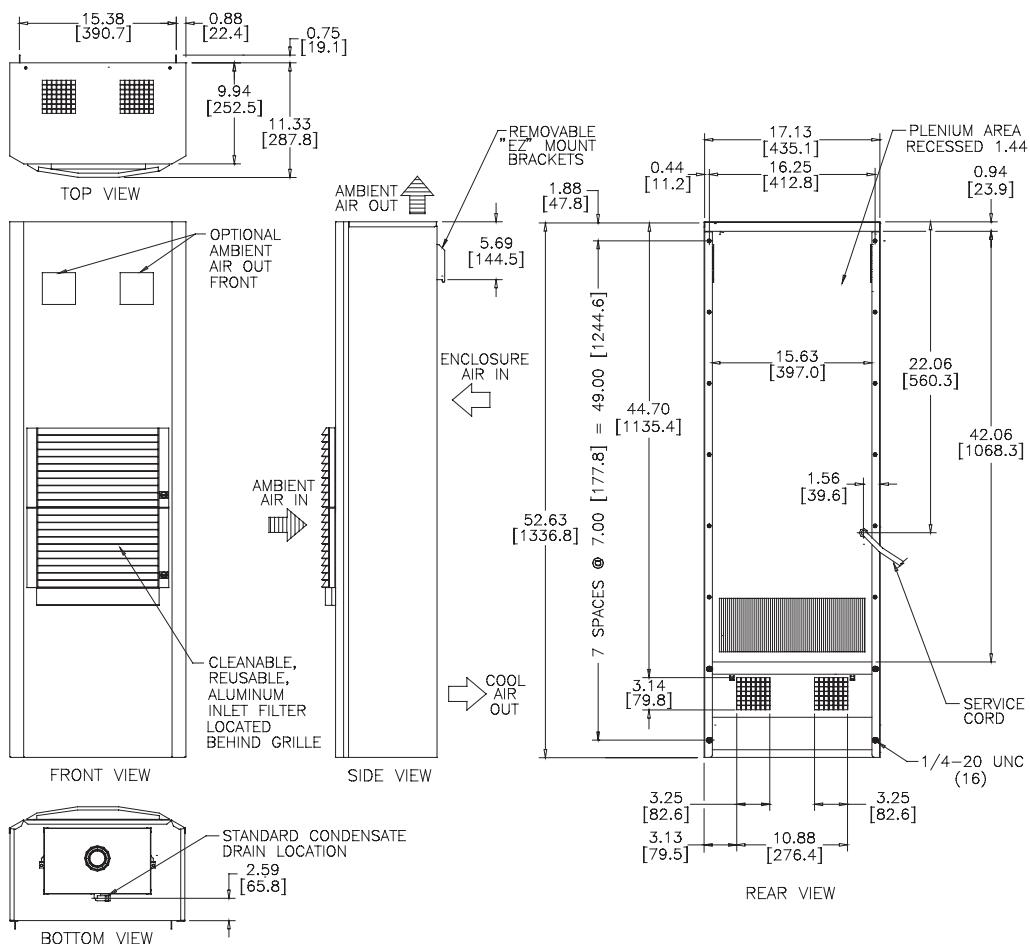


M52 MOUNTING GASKET AND CUTOUT DIMENSIONS

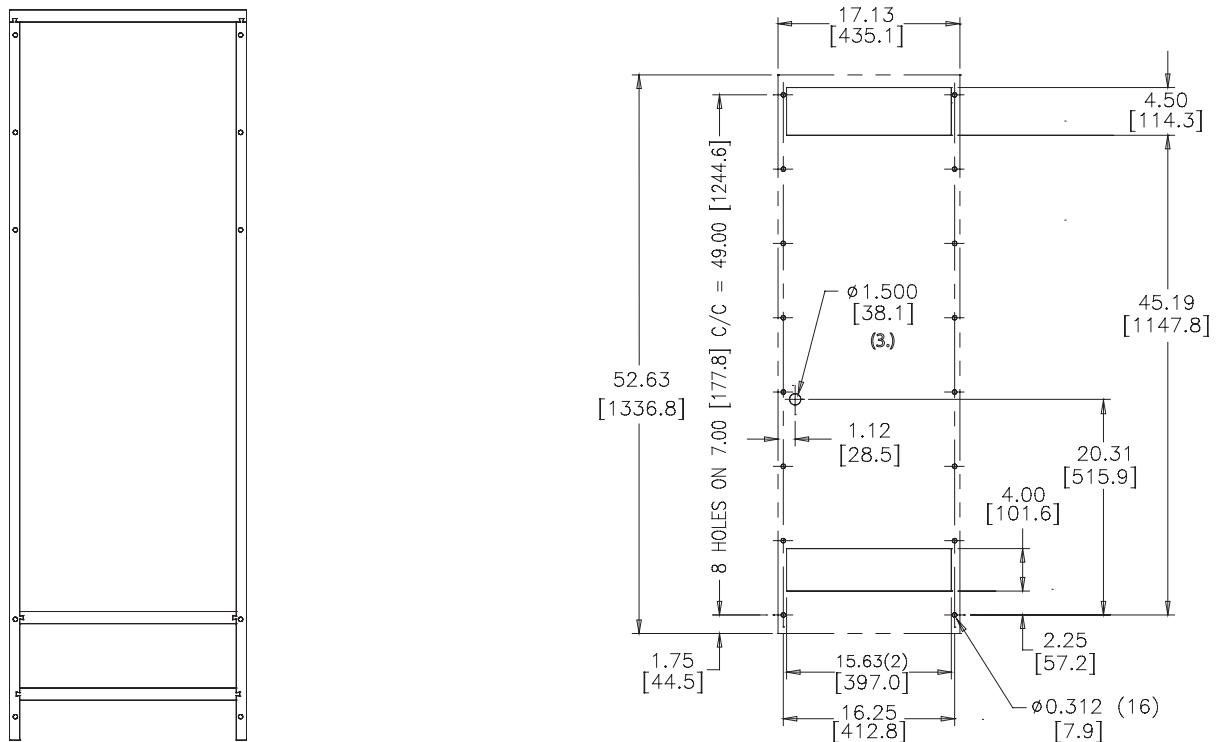

MOUNTING GASKET KIT 52-1000-50 INCLUDED. APPLY GASKET TO THE BACK OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.



1. Dashed lines represent air conditioner.
 2. Cutout dimensions for standard unit.
 3. Hole may be deleted if service cord is routed through
4.50 x 15.63 cutout (except on units with electric heat).

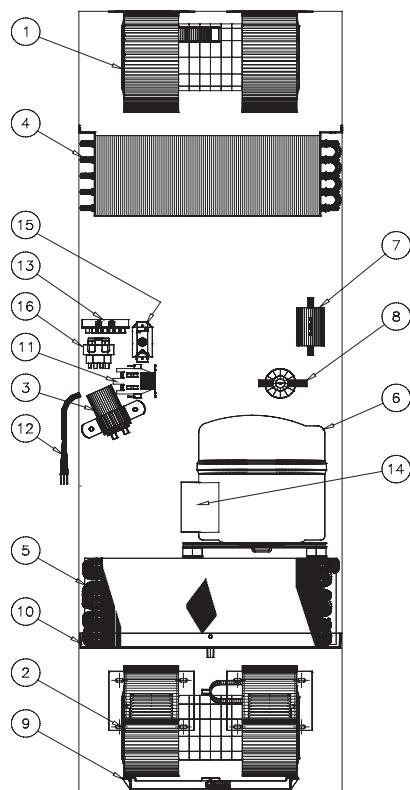



M52 COMPONENTS LIST

| Part Description | Item Number | Part Number (115 Volt) | | | |
|-------------------------------|-------------|------------------------|-------------|-------------|-------------|
| | | 6000 BTU | 8000 BTU | 10000 BTU | 12000 BTU |
| Blower, Condenser | 1 | 52-6034-10 | 52-6034-10 | 52-6034-10 | 52-6034-10 |
| Blower, Evaporator | 2 | 52-6075-00 | 52-6075-00 | 52-6075-00 | 52-6034-10 |
| Capacitor, Compressor, Run | 3 | 52-6031-01 | 52-6032-01 | 52-6032-01 | 52-6032-01 |
| Coil, Condenser | 4 | 52-6111-00 | 52-6111-00 | 52-6111-00 | 52-6111-03 |
| Coil, Evaporator | 5 | 28-1001-01 | 52-6002-02 | 52-6121-01 | 52-6121-01 |
| Compressor, AK | 6 | 10-1016-08 | 10-1016-10 | 10-1016-12 | 10-1016-12 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 | 10-1130-00 | 10-1130-00 |
| Hot Gas By-Pass Valve | 8 | 52-6027-00 | 52-6027-00 | 52-6027-00 | 52-6027-00 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-23 | 10-1130-23 | 10-1130-23 | 10-1130-23 |
| Contactor, Compressor, Start | 11 | N/A | N/A | 10-1005-41 | 10-1005-41 |
| Contactor Cover, Compressor | 11 | N/A | N/A | 10-1005-68 | 10-1005-68 |
| Service Cord | 12 | 52-6035-142 | 52-6035-142 | 52-6035-125 | 52-6035-125 |
| Terminal Block | 13 | 10-1003-31 | 10-1003-31 | 10-1003-31 | 10-1003-31 |
| Thermal Overload, Compressor | 14 | 10-1007-03 | 10-1007-04 | 10-1007-05 | 10-1007-05 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-114 | 10-1006-114 | 10-1006-114 |
| <hr/> | | | | | |
| Part Description | Item Number | Part Number (230 Volt) | | | |
| | | 6000 BTU | 8000 BTU | 10000 BTU | 12000 BTU |
| Part Description | Item Number | Part Number (230 Volt) | | | |
| | | 6000 BTU | 8000 BTU | 10000 BTU | 12000 BTU |
| Blower, Condenser | 1 | 52-6025-10 | 52-6025-10 | 52-6025-10 | 52-6025-10 |
| Blower, Evaporator | 2 | 52-6076-00 | 52-6076-00 | 52-6076-00 | 52-6025-10 |
| Capacitor, Compressor, Run | 3 | 52-6031-01 | 52-6031-01 | 52-6031-01 | 52-6031-01 |
| Coil, Condenser | 4 | 52-6111-00 | 52-6111-00 | 52-6111-00 | 52-6111-03 |
| Coil, Evaporator | 5 | 28-1001-01 | 52-6002-02 | 52-6121-01 | 52-6121-01 |
| Compressor, AK | 6 | 10-1026-08 | 10-1026-10 | 10-1026-12 | 10-1026-12 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 | 10-1130-00 | 10-1130-00 |
| Hot Gas By-Pass Valve | 8 | 52-6027-00 | 52-6027-00 | 52-6027-00 | 52-6027-00 |
| Pan, Condensate | 9 | 10-1130-17 | 10-1130-17 | 10-1130-17 | 10-1130-17 |
| Pan, Evaporator | 10 | 10-1130-23 | 10-1130-23 | 10-1130-23 | 10-1130-23 |
| Relay, Compressor | 11 | N/A | N/A | N/A | N/A |
| Service Cord | 12 | 52-6035-139 | 52-6035-139 | 52-6035-139 | 52-6035-141 |
| Terminal Block | 13 | 10-1003-31 | 10-1003-31 | 10-1003-31 | 10-1003-31 |
| Thermal Overload, Compressor | 14 | 10-1007-11 | 10-1007-12 | 10-1007-13 | 10-1007-13 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-115 | 10-1006-115 | 10-1006-115 | 10-1006-115 |

M52 SCHEMATIC AND WIRE DIAGRAM, 115 VOLT 10000 AND 12000 BTU

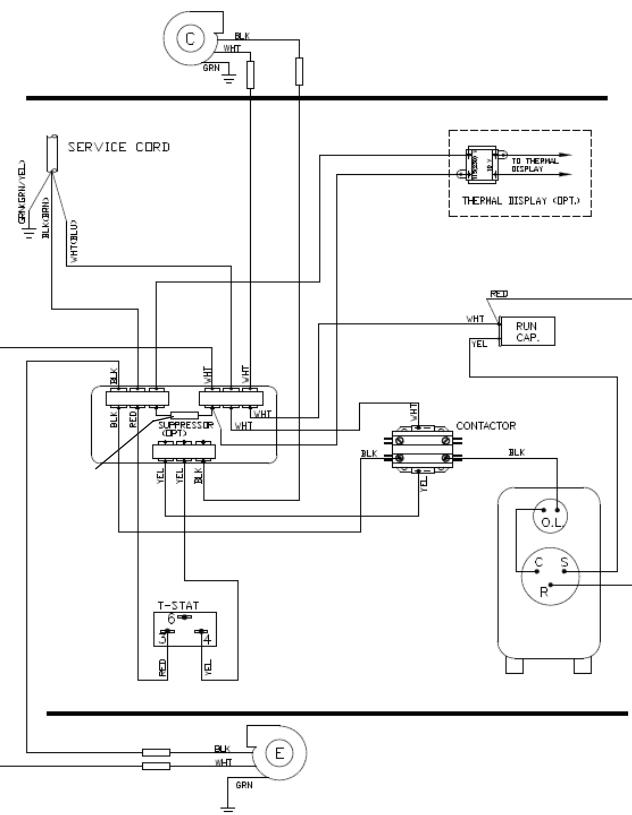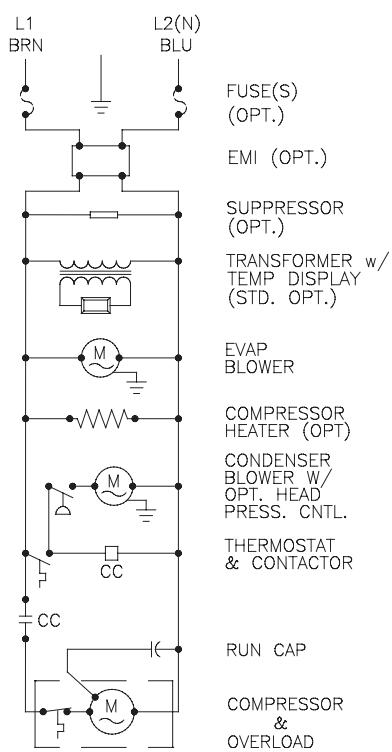

M52 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT 6000/8000 BTU AND 230 VOLT 10000/12000 BTU

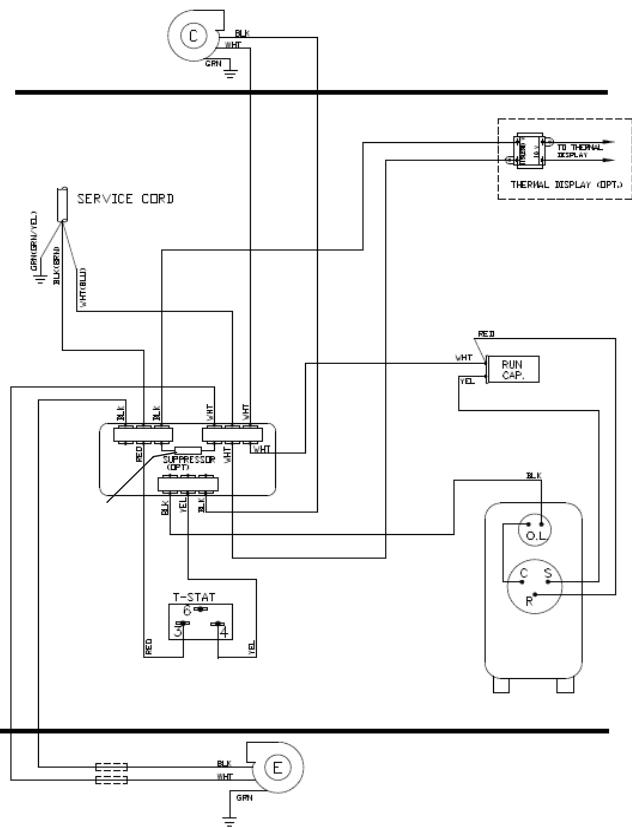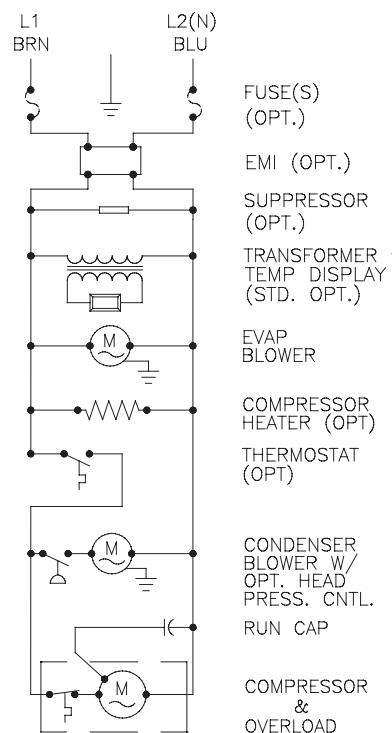


MHB11 DESIGN DATA



| Model | Availability | Voltage | Hz | Full Load Amps | Phase | BTU/Hr. @ Max Ambient Temperature | Max Ambient Temperature (°F/°C) | Shipping Weight (lb./kg) |
|-----------------|--------------|---------|-------|----------------|-------|-----------------------------------|---------------------------------|--------------------------|
| MHB11-0216-G306 | STOCK | 115 | 50/60 | 9.7/9.0 | 1 | 2200/2200 | 125/52 | 90/41 |
| MHB11-0216-G3XX | | 115 | 50/60 | 9.7/9.0 | 1 | 2200/2200 | 125/52 | 90/41 |
| MHB11-0226-G306 | STOCK | 230 | 50/60 | 5.5/4.6 | 1 | 2200/2200 | 125/52 | 90/41 |
| MHB11-0226-G3XX | | 230 | 50/60 | 5.5/4.6 | 1 | 2200/2200 | 125/52 | 90/41 |
| MHB11-0416-G307 | STOCK | 110/115 | 50/60 | 14.7/13.6 | 1 | 3300/4000 | 125/52 | 108/49 |
| MHB11-0416-G3XX | | 110/115 | 50/60 | 14.7/13.6 | 1 | 3300/4000 | 125/52 | 108/49 |
| MHB11-0426-G306 | STOCK | 220/230 | 50/60 | 8.0/7.5 | 1 | 3300/4000 | 125/52 | 108/49 |
| MHB11-0426-G3XX | | 220/230 | 50/60 | 8.0/7.5 | 1 | 3300/4000 | 125/52 | 108/49 |

-XXX will be replaced with a three-digit number designating all desired options. Consult the factory for specific model numbers.

MHB11 DIMENSIONAL DRAWING

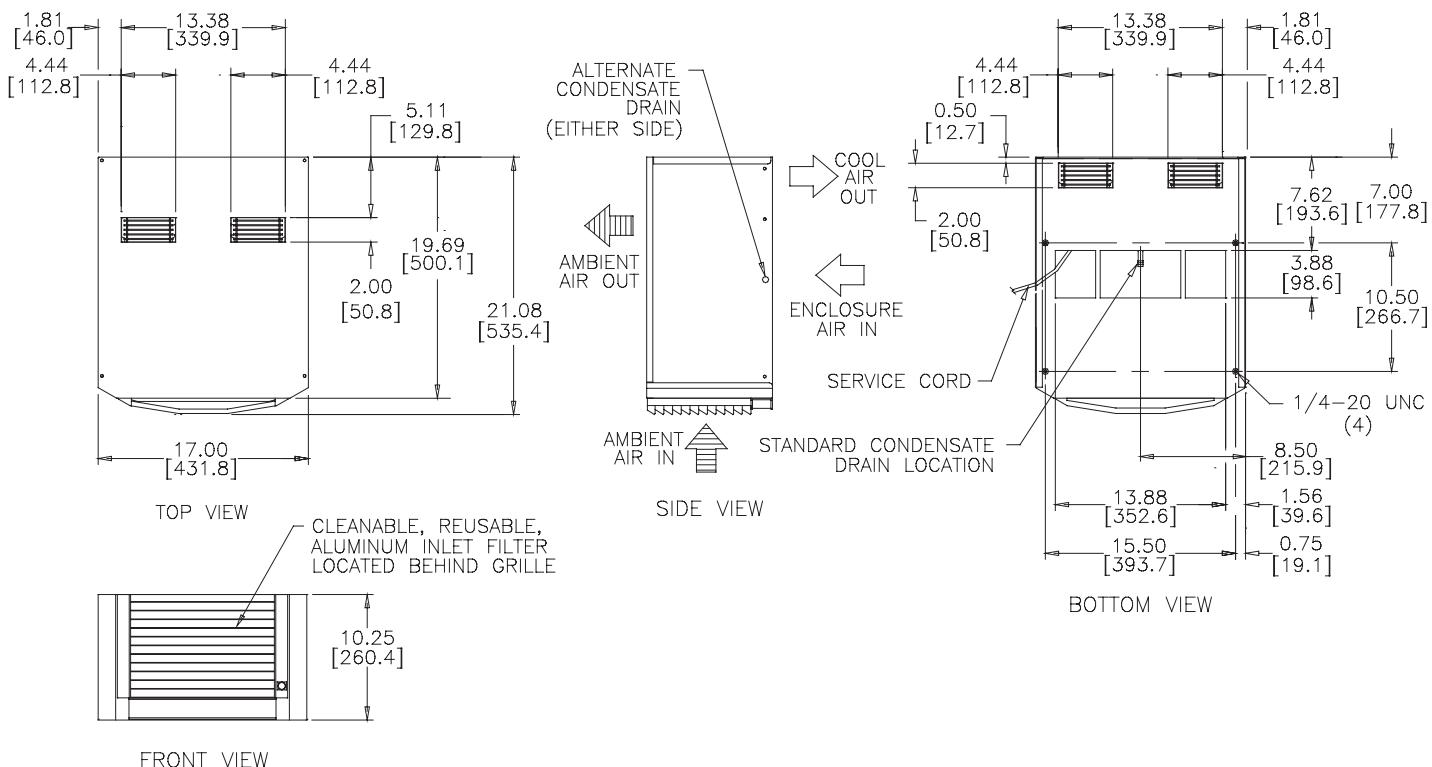

MHB11 MOUNTING GASKET AND CUTOUT DIMENSIONS

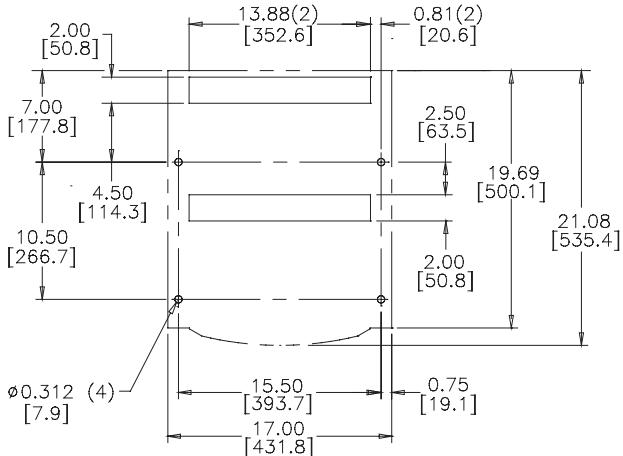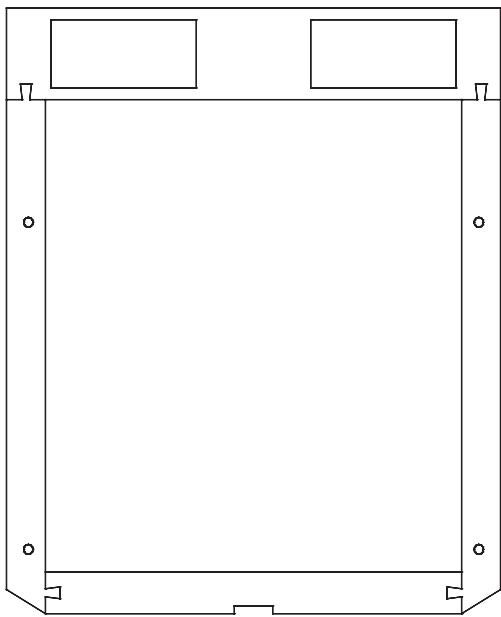


MOUNTING GASKET KIT 11-1000-50 INCLUDED. APPLY GASKET TO THE BOTTOM OF THE AIR CONDITIONER BEFORE MOUNTING TO ENCLOSURE.

1. Dashed lines represent air conditioner.
2. Cutout dimensions are for standard unit.

MHB11 COMPONENTS LIST


| Part Description | Item Number | Part Number (115 Volt) | | Part Number (230 Volt) | |
|-------------------------------|-------------|------------------------|-------------|------------------------|-------------|
| | | 2200 BTU | 4000 BTU | 2200 BTU | 4000 BTU |
| Blower, Condenser | 1 | 28-1064-06M | 28-1064-06M | 28-1064-05M | 28-1064-05M |
| Blower, Evaporator | 2 | 28-1064-06M | 28-1064-06M | 28-1064-05M | 28-1064-05M |
| Capacitor, Compressor, Start | 3 | N/A | 10-1032-13 | 10-1032-09 | 10-1032-14 |
| Coil, Condenser | 4 | 11-3001-03 | 11-3001-03 | 11-3001-03 | 11-3001-03 |
| Coil, Evaporator | 5 | 11-1002-00 | 11-1002-00 | 11-1002-00 | 11-1002-00 |
| Compressor, AE/AK/AE/AK | 6 | 10-1016-22 | 10-1016-26 | 10-1026-74 | 10-1026-77 |
| Control Panel Assembly, Wide | N/S | 10-1106-101 | 10-1106-101 | 10-1106-101 | 10-1106-101 |
| Filter, Air, Reusable, Wide | N/S | 10-1000-56 | 10-1000-56 | 10-1000-56 | 10-1000-56 |
| Filter/Dryer | 7 | 52-6028-00 | 52-6028-00 | 52-6028-00 | 52-6028-00 |
| Grille, Front, Wide | N/S | 10-1130-00 | 10-1130-00 | 10-1130-00 | 10-1130-00 |
| Hot Gas By-Pass Valve | 8 | 52-6027-16 | 52-6027-16 | 52-6027-16 | 52-6027-16 |
| Pan, Condensate | 9 | 10-1130-24 | 10-1130-24 | 10-1130-24 | 10-1130-24 |
| Pan, Evaporator | 10 | 10-1130-11 | 10-1130-11 | 10-1130-11 | 10-1130-11 |
| Relay, Compressor, Start | 11 | 10-1028-05 | 10-1028-14 | 10-1028-07 | 10-1028-15 |
| Service Cord | 12 | 52-6035-140 | 52-6035-143 | 52-6035-141 | 52-6035-141 |
| Terminal Block | 13 | 10-1003-31 | 10-1003-31 | 10-1003-31 | 10-1003-31 |
| Thermal Overload, Compressor | 14 | 10-1007-44 | 10-1007-45 | 10-1007-57 | 10-1007-51 |
| Thermostat, SPST, 55-100F | 15 | 10-1061-16 | 10-1061-16 | 10-1061-16 | 10-1061-16 |
| Transformer, 10 VAC Secondary | 16 | 10-1006-114 | 10-1006-114 | 10-1006-115 | 10-1006-115 |

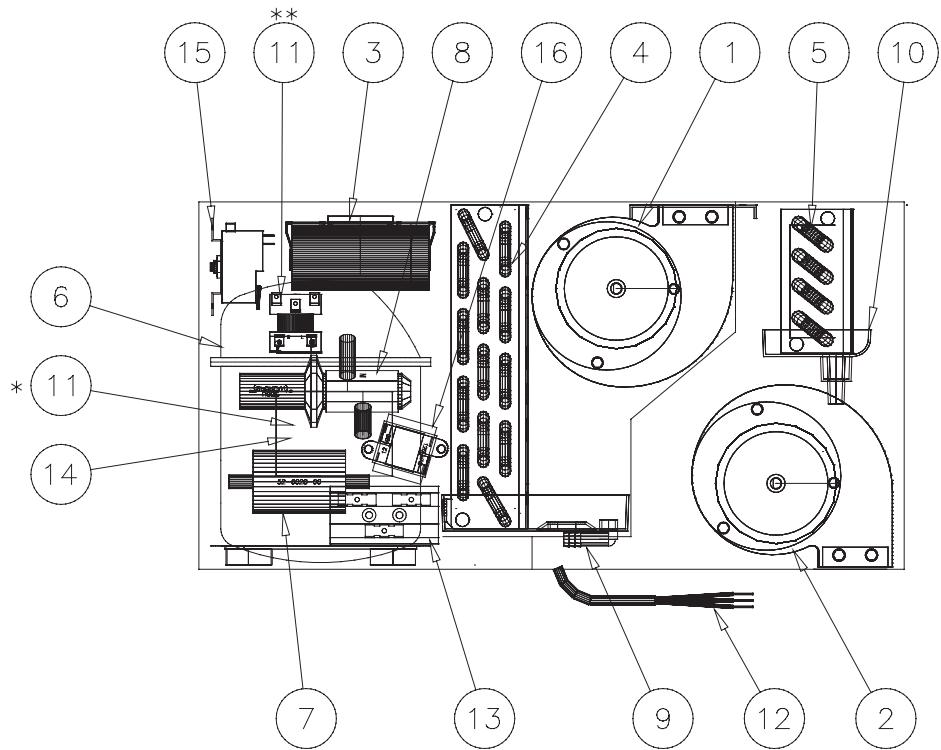


* 2200 BTU

** 4000 BTU


MHB11 SCHEMATIC AND WIRE DIAGRAM, 115 VOLT, 2200 BTU AND 230 VOLT 6000 BTU

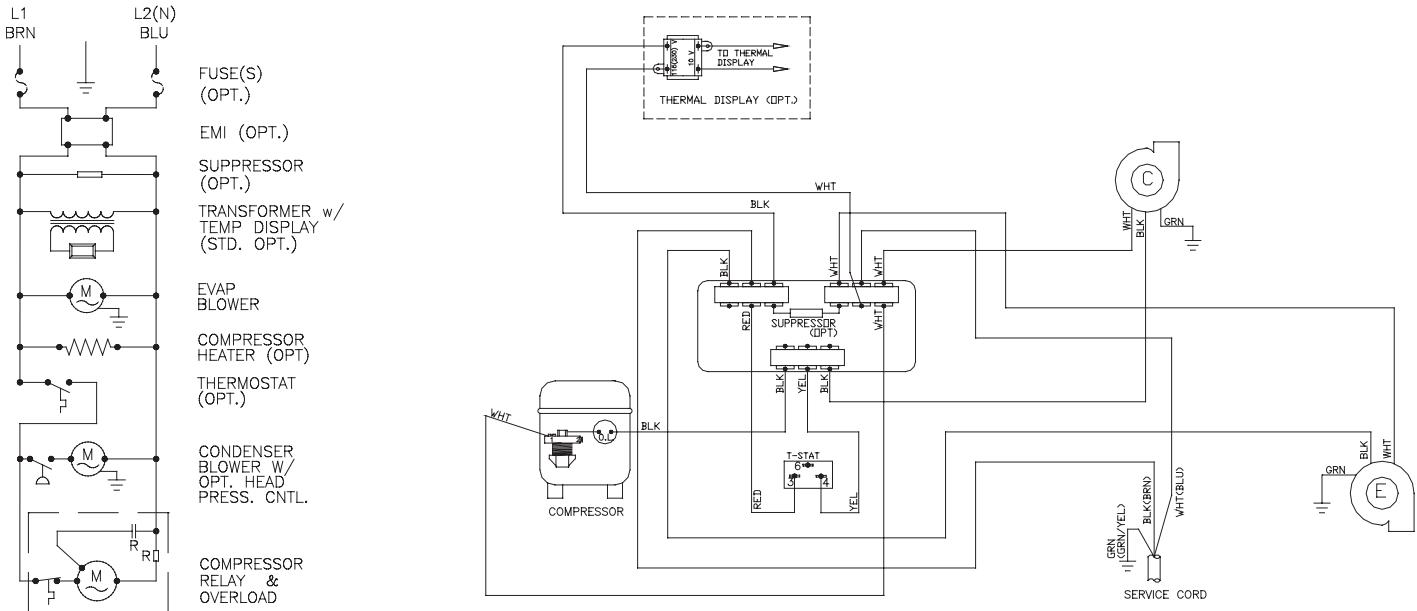

MHB11 SCHEMATIC AND WIRE DIAGRAM, 230 VOLT, 2200 BTU

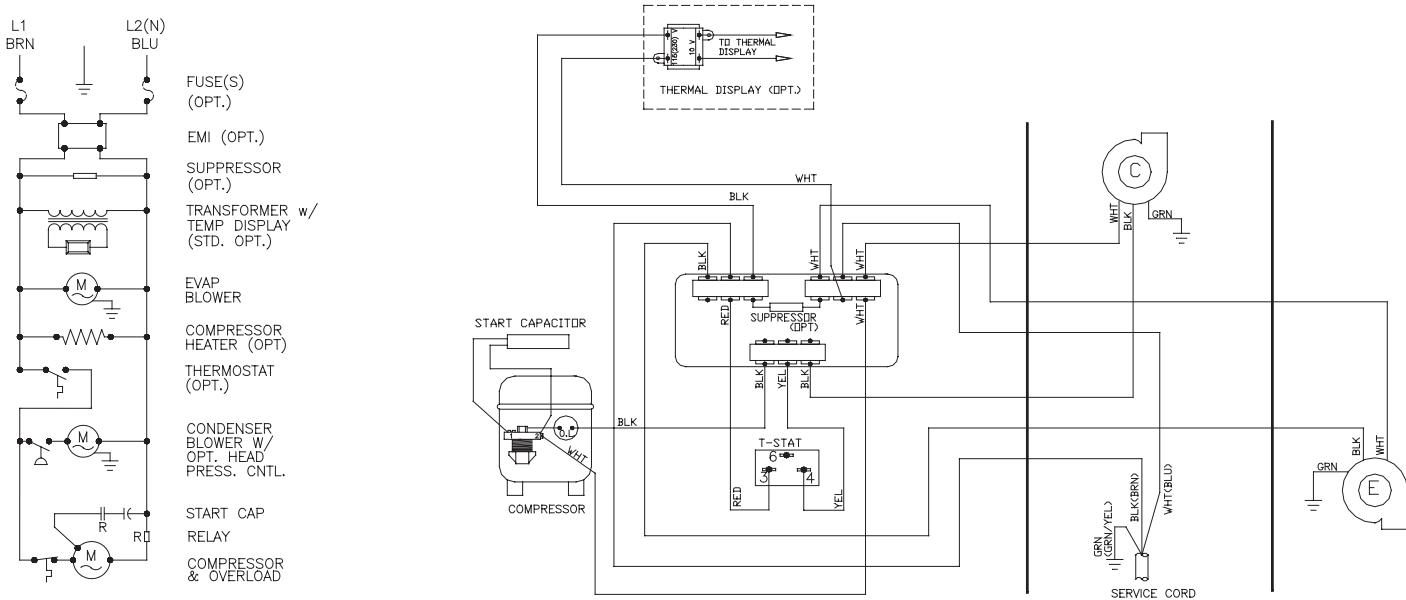

MHB11 SCHEMATIC AND WIRE DIAGRAM, 115/230 VOLT, 4000 BTU & 230 VOLT 6000 BTU

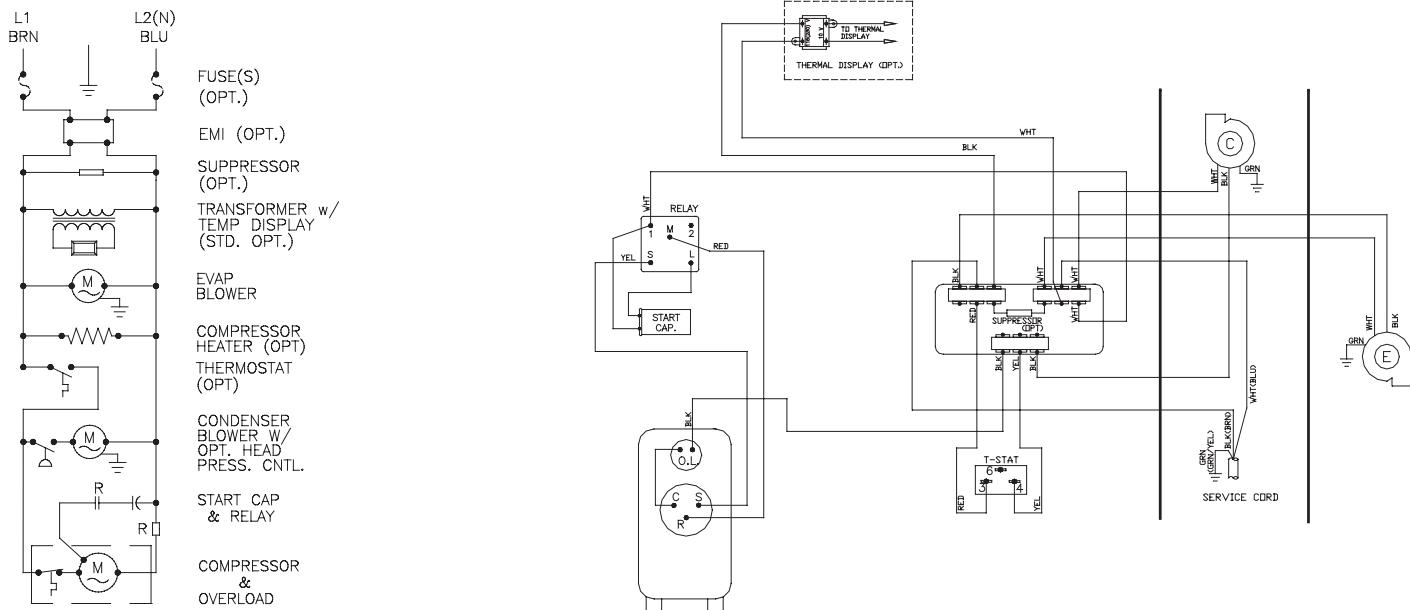

TEMPERATURE CONTROL

The electromechanical thermostat is factory preset to 75°F/23°C. To change the temperature setting, remove the front cover and screen. Use a standard screwdriver to adjust thermostat. For cooler temperatures turn clockwise, for warmer temperatures turn counterclockwise.

PRINCIPLES OF OPERATION

If electrical power to the air conditioner is interrupted and reapplied immediately, (within 3 to 5 seconds), the compressor may not restart due to the high back pressure of the compressor. It takes a minimum of one (1) minute after shut-down for the compressor suction and discharge pressures to equalize in order for the air conditioner to restart.

Operating the air conditioner below the minimum ambient temperature or above the maximum ambient temperatures indicated on the nameplate voids all warranties.

It is recommended that the warranty section of this manual be read in order to familiarize yourself with parameters of restricted operation.

The moisture that the enclosure air can contain is limited. If moisture flows from the drain tube continuously this can only mean that ambient air is entering the enclosure. Be aware that frequent opening of the enclosure's door admits humid air, which the air conditioner must then dehumidify.

MAINTENANCE

COMPRESSOR

The compressor requires no maintenance. It is hermetically sealed, properly lubricated at the factory and should provide years of satisfactory operating service.

Should the refrigerant charge be lost, recharging ports (access fittings) on the suction and discharge sides of the compressor are provided for recharging and/or checking suction and discharge pressures.

Under no circumstances should the access fitting covers be loosened, removed or tampered with.

Breaking of seals on compressor access fittings during warranty period will void warranty on hermetic system.

Recharging ports are provided for the ease and convenience of reputable refrigeration repair service personnel for recharging the air conditioner.

INLET AIR FILTER

Proper maintenance of the inlet air filter, located behind the front cover, will assure normal operation of the air conditioner. If filter maintenance is delayed or ignored, the maximum ambient temperatures under which the unit is designed to operate will be decreased.

If the compressor's operating temperature increases above designed conditions due to a dirty or clogged filter (or plugged condenser coil), the air conditioner's compressor will stop operating due to actuation of the thermal overload cutout switch located on the compressor housing. As soon as the compressor temperature has dropped to within the switch's cut-in setting, the compressor will restart automatically. However the above condition will continue to take place until the filter has been cleaned or replaced.

It is recommended that power to the air conditioner be interrupted intentionally when abnormally high compressor operating temperature causes automatic shutdown of the unit. The above described shutdown is symptomatic of clogged or dirty filter, thus causing a reduction in cooling airflow across the surface of the compressor and condenser coil.

Do not run the air conditioner for extended periods of time with the filter removed. Particles of dust, lint, etc., can plug the fins of the condenser coil which will give the same reaction as a plugged filter. The condenser coil is not visible through the filter opening, so protect it with a filter.

Continued operation under the above conditions can and will damage and shorten compressor life. The air conditioner is available with an easily removable inlet filter to facilitate necessary cleaning. There should be no reason to neglect this necessary maintenance.

HOW TO REMOVE, CLEAN OR INSTALL A NEW INLET AIR FILTER

RP aluminum washable air filters are designed to provide excellent filtering efficiency with a high dust holding capacity and a minimum amount of resistance to air flow. Because they are constructed entirely of aluminum they are lightweight and easy to service. Optimum filter performance is maintained by recoating the filters after washing with RP Super Filter Coat adhesive. To achieve maximum performance from your air handling equipment, air filters should be cleaned on a regular basis.

The inlet air filter is located behind the front cover. To access filter, pull ring protruding from slot in bottom of front cover. The filter may now be cleaned or new filter installed.


Cleaning Instructions:

1. Flush the filter with warm water from the exhaust side to the intake side. DO NOT USE CAUSTICS.
2. After flushing, allow filter to drain. Placing it with a corner down will assure complete drainage.
3. Recoat the filters with RP Super Filter Coat adhesive. When spraying filter do so from both sides for maximum concentration of adhesive.

CONDENSER AND EVAPORATOR AIR MOVERS

Blower and impeller motors require no maintenance. All bearings, shafts, etc. are lubricated during manufacturing for the life of the motor.

If the condenser blower motor (ambient blower) should fail, it is not necessary to remove the air conditioner from the cabinet or enclosure to replace the blower. The condenser blower is mounted on its own bulkhead and is easily accessible by removing the front cover.

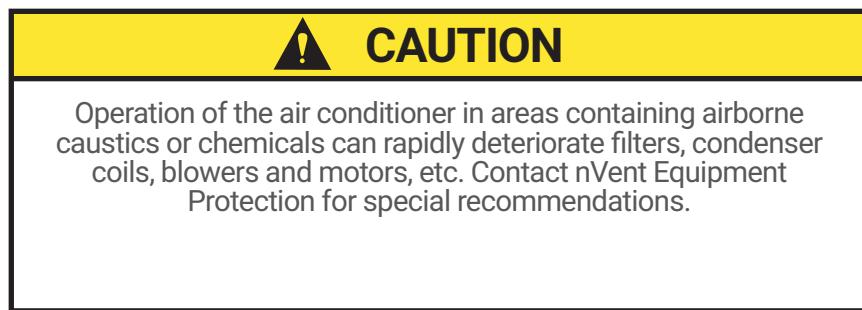

REFRIGERANT LOSS

Each air conditioner is thoroughly tested prior to leaving the factory to insure against refrigeration leaks. Shipping damage or microscopic leaks not found with sensitive electronic refrigerant leak detection equipment during manufacture may require repair or recharging of the system. This work should only be performed by qualified professionals, generally available through a local, reputable air conditioning repair or service company.


Refer to the data on the nameplate which specifies the type of refrigerant and the charge size in ounces.

Before recharging, make sure there are no leaks and that the system has been properly evacuated into a deep vacuum.


TROUBLE SHOOTING

BASIC AIR CONDITIONING TROUBLE SHOOTING CHECK LIST


1. Check manufacturer's nameplate located on the unit for correct power supply.
2. Turn on power to the unit. The evaporator (Enclosure or "COLD" air) blower should come on. Is there airflow?

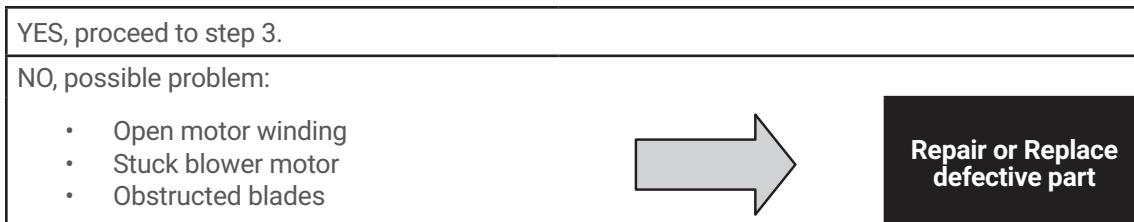


3. Check thermostat setting and adjust thermostat to the lowest setting. This should turn on the condenser blower and compressor. Did condenser blower and compressor come on when the thermostat was turned on?

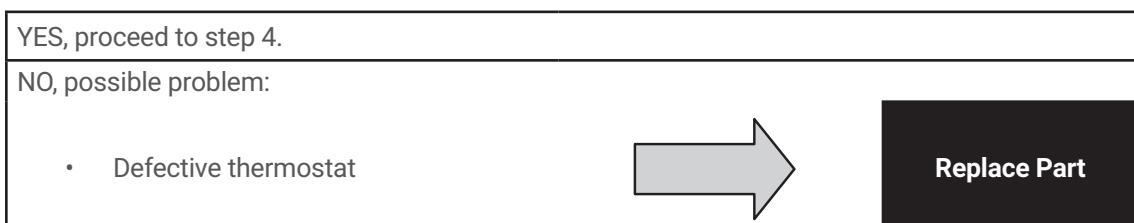


4. Are both blowers and the compressor running? If not the unit will not cool properly.
5. Check condenser (Ambient or "HOT" air) blower for airflow. Is there airflow?

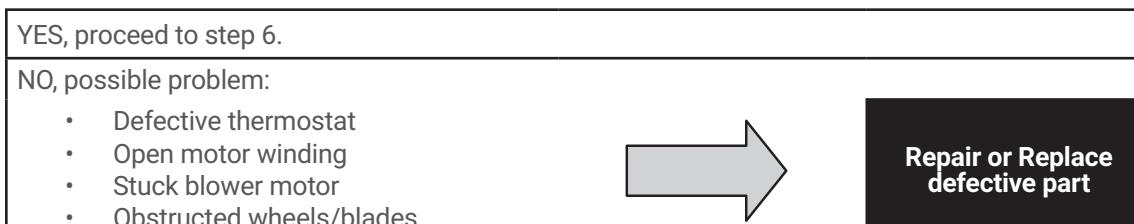

6. Carefully check the compressor for operation - motor should cause slight vibration, and the outer case of the compressor should be warm. Is the compressor showing signs of this?

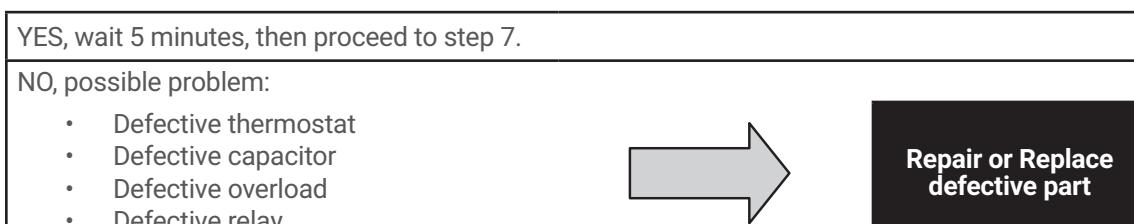

7. Make sure the coils are clean. Then check evaporator "air in" and "air out" temperatures. If the temperatures are the same:

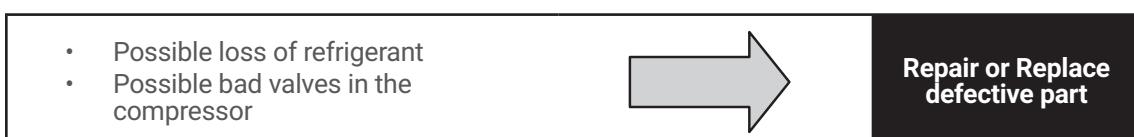

8. To check for a bad thermostat, turn power to the unit off. Remove the control box cover and place both thermostat wires onto one terminal (replace control box cover for safety). This will activate the switch in the thermostat. Turn the power on and if both blowers and the compressor come on, the thermostat needs to be replaced.

SYMPTOMS AND POSSIBLE CAUSES:

| SYMPTOM | POSSIBLE CAUSE |
|---|--|
| Unit won't cool | Impellers/blowers not running |
| | Compressor not running |
| | Compressor runs, but has bad valves |
| | Loss of refrigerant |
| Compressor tries to start but won't run | Low line voltage at start. Should be +/-10% rated voltage. |
| | Compressor motor stuck |
| | Bad contactor |
| | Bad overload switch |
| | Bad run/start capacitor |
| Unit blows breakers | Undersized breaker/fuse or not time delayed |
| | Short in system |
| Getting water in enclosure | Drain plugged |
| | Drain tube kinked |
| | Enclosure not sealed (allowing humidity in) |

For additional technical information (i.e., amp draw, pressures, temperatures) , contact nVent Equipment Protection at 800-896-2665.

NOTES

NOTES



nVent
2100 Hoffman Way
Anoka, MN 55303 USA
 +1.763.422.2211
 +1.763.576.3200

nVent.com