

QUICK START GUIDE  
**UPS NETWORK INTERFACE CARD**  
 UPS-OLIPCARD

**MIDDLE ATLANTIC**  
 A brand of **legrand**

**PRODUCT FEATURES**

- An Intelligent UPS Network Interface Card allowing a UPS system to be managed, monitored, and configured remotely via the web.
- Access the SNMP Card Configuration Tool, firmware updates, and the UPS Network Interface Card User Manual at [www.middleatlantic.com](http://www.middleatlantic.com).

**MIDDLE ATLANTIC**  
 A brand of **legrand**  
 I-00789 Rev F

**INSTALLATION**

**Step 1. Hardware Installation**


**WARNING:** Unplug and allow the equipment to fully discharge before performing installation steps.

**AVERTISSEMENT:** Débranchez et laissez l'appareil se décharger complètement avant peforming étapes d'installation.


**WARNING:** For safety instructions, refer to the UPS-OLIPCARD User Manual at [www.middleatlantic.com](http://www.middleatlantic.com).

**AVERTISSEMENT:** Pour obtenir des instructions de sécurité, se reporter à la UPS-OLIPCARD User Manual à [www.middleatlantic.com](http://www.middleatlantic.com).

1. Remove the two retaining screws of the expansion slot, and then remove the cover.
2. Install the Middle Atlantic UPS-OLIPCARD into the expansion slot.
3. Insert and tighten the retaining screws.
4. Connect an Ethernet cable to the Ethernet port of the Middle Atlantic UPS-OLIPCARD.

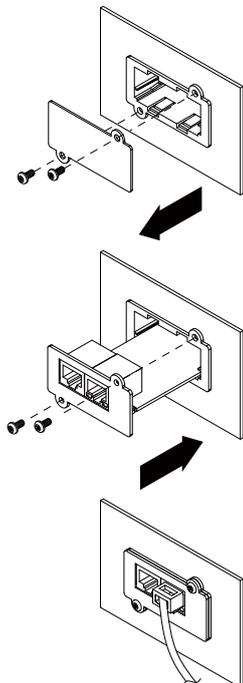

**NOTE:** The Middle Atlantic UPS-OLIPCARD is hot-swappable, so you do not need to turn off the device to install it.

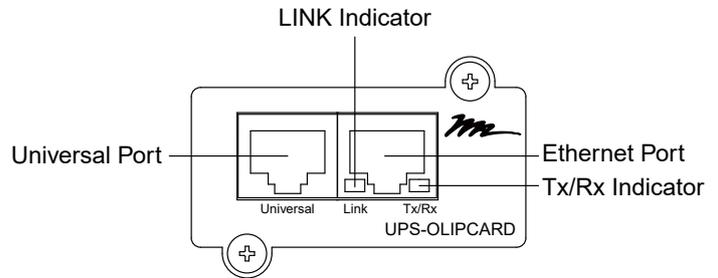

**Definitions for LED Indicators**

Link LED color	Condition
Off	The UPS-OLIPCARD is not connected to the Network or the UPS UPS-OLIPCARD power is off
On (Yellow)	The UPS-OLIPCARD is connected to the Network
Tx/Rx LED color	
Off	The UPS-OLIPCARD power is off
On (Green)	The UPS-OLIPCARD power is on
Flashing	<ul style="list-style-type: none"> <li>• Receiving or transmitting data packets</li> <li>• Reset finished</li> </ul>

**Step 2. Configure the IP address for the UPS-OLIPCARD**

**Method 1: Using the UPS-IPCARD Setup Utility**

**NOTE:** If you have any issues acquiring the software, please contact support at 1-800-266-7225.

1. After acquiring the UPS-IPCARD Setup Utility software, double click the installation file **MAP\_SNMP\_Setup.msi** to begin the installation.
2. After the installation is complete, run the Middle Atlantic UPS-OLIPCARD Setup Utility by selecting **All Programs > Middle Atlantic Products > UPS-IPCARD Setup Utility**.
3. The main dialog of the UPS-IPCARD Setup Utility is shown in Figure 1. The configuration tool shows all network interface cards present on the same network subnet. Click **Refresh** to search the local network subnet as desired.

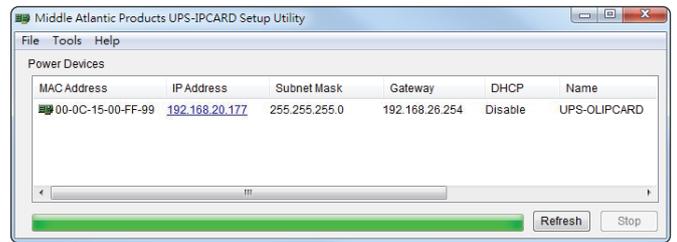


Figure 1. The main window of the Middle Atlantic Products UPS-IPCARD Setup Utility.

4. Select the UPS-OLIPCARD you are setting up. Click **Tools > Device Setup**, or double click the card you wish to configure from the list shown.
5. You can modify the IP Address, Subnet Mask, and Gateway address for the device's MAC address listed in the Device Network Settings window, as shown in Figure 2. The factory default IP Address is **192.168.20.177** and the default Subnet Mask is **255.255.255.0**.
6. Modify the IP, Subnet Mask, or Gateway Address. Enter the new addresses into the corresponding fields, and then click **Save**.

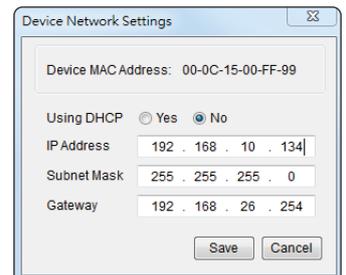


Figure 2. The Device Network setting window.

7. You will need to enter a User Name and Password for the UPS-OLIPCARD in the Authentication window, as shown in Figure 3.



Figure 3. Authentication window.

- Default user name: **admin**
- Default password: **admin**

After logging in for the first time, the system forces you to change the default password for security purposes.

8. If the IP Address change is successful, a confirmation message appears as shown in Figure 4.



Figure 4. Setup IP Address successfully message.

## Method 2: Using a command prompt

1. Obtain the MAC Address from the label on the UPS-OLIPCARD. Each card has a unique MAC Address.

2. Use the ARP command to set the IP Address.

### Example:

To assign the IP Address **192.168.10.134** on a card with a MAC Address of **00-0C-15-00-FF-99**, type the following in to a command prompt on a PC connected to the same network as the UPS-OLIPCARD:

- Type: `arp -s 192.168.10.134 00-0C-15-00-FF-99`
- Press **Enter**.

3. Use the Ping command to assign a size of 123 bytes to the IP Address:

- Type: `ping 192.168.10.134 -l 123`
- Press **Enter**.

If replies are received, your computer can communicate with the IP Address.

## WEB INTERFACE

### Logging into the Accounts

You will need to enter a User name and Password to login to the interface. There are two account types:

- Administrator
  - Default user name: **admin**
  - Default password: **admin**
- Viewer (Read Only)
  - Default user name: **guest**
  - Default password: **guest**

### NOTE:

- The administrator can access and control all functions, including enabling and disabling the viewer account. The viewer account can read all functions but with no ability to change any settings.
- After logging in as the administrator for the first time, the system forces you to change the default password for security purposes.

## Troubleshooting

Problem	Solution
Unable to configure the UPS-OLIPCARD using method 1 or method 2	<ol style="list-style-type: none"> <li>1. Check the LED status; the condition is normal when the yellow and green LEDs are both on. <b>If the green LED is off:</b> <ul style="list-style-type: none"> <li>• Verify the UPS-OLIPCARD is properly seated in the device and the power is turned on.</li> </ul> <b>If the yellow LED is off:</b> <ul style="list-style-type: none"> <li>• Verify your network connection is working.</li> </ul> </li> <li>2. Verify the PC being used is on the same network subnet as the UPS-OLIPCARD you are trying to communicate with.</li> </ol>
Unable to ping the UPS-OLIPCARD	<ol style="list-style-type: none"> <li>1. Use method 1 and/or method 2 to get or set a correct IP address for the UPS-OLIPCARD.</li> <li>2. If the PC being used is on a different network subnet from the UPS-OLIPCARD, verify the setting for the Subnet Mask and the IP Address of the Gateway.</li> </ol>
Forgotten user name and password	Refer to "Restoring Default Settings and Resetting Passwords" topic in the UPS Online IP Card User Manual at <a href="http://www.middleatlantic.com">www.middleatlantic.com</a> .

## Federal Communications Commission (FCC) Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

**REMARQUE:** Cet équipement a été testé et jugé conforme aux limites de la classe A des appareils numériques, conformément à la section 15 de la réglementation de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles lorsque l'équipement est utilisé dans un environnement commercial. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence et, si non installé et utilisé conformément au manuel d'instruction, peut provoquer des interférences dans les communications radio. Le fonctionnement de cet équipement dans une zone résidentielle est susceptible de provoquer des interférences nuisibles, auquel cas l'utilisateur sera tenu de corriger les interférences à ses propres frais.

**CAUTION!** Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**ATTENTION!** Les changements ou modifications non expressément approuvés par le fabricant peuvent annuler le droit de l'utilisateur à utiliser l'équipement.

ICES-003 Class A Notice - Avis NMB-003, Classe A This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

## WARRANTY

For warranty information, refer to [www.legrandav.com/policies/warranty\\_information](http://www.legrandav.com/policies/warranty_information).

### Contacting Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | [www.legrandav.com](http://www.legrandav.com) | [av.support@legrand.com](mailto:av.support@legrand.com)

### Contacting Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | [ca.middleatlantic.com](http://ca.middleatlantic.com) | [av.canada.customerservice@legrand.com](mailto:av.canada.customerservice@legrand.com)

### Contacting Middle Atlantic Europe, Middle East, and Africa (EMEA) Technical Support

P: +31 495-726-003 | [av.emea.middleatlantic.support@legrand.com](mailto:av.emea.middleatlantic.support@legrand.com)

United States (US)	European Union (EU)	United Kingdom (UK)
Legrand   AV Headquarters 6436 City West Parkway Eden Prairie, MN, 55344, USA	Legrand AV Netherlands B.V. Franklinstraat 14 6003 DK, Weert, Netherlands	Starline Holding Technology Ltd. (Authorized Representative) Unit C, Island Rd. Reading RG2, 0RP- UK

At Legrand AV Inc. we are always listening. Your comments are welcome.

Legrand AV is an ISO 9001 and ISO 14001 Registered Company.

