



**Blue-Point®**

**EEDF400-684 & EEDF400-683  
& EEDF400-385**


## Isuzu 4HK1TC 5.2L EGR Cleaning Instructions



Intake  
EEDF400-684



Exhaust  
EEDF400-683

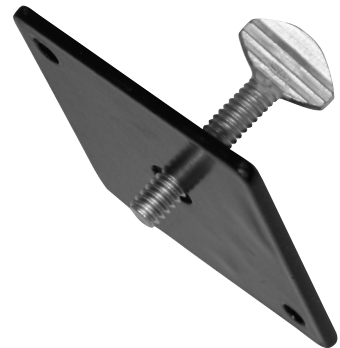

EGR Manual Opener  
EEDF400-385



**WARNING: Wear gloves and safety goggles (User and bystanders) when performing this service**

**IMPORTANT: A DPF Regeneration event is required after this service. Regeneration can be initiated for many engines using one of the following Snap-on Diagnostic Tools:**

- EEHD184040 Pro-Link Ultra (Snap-on)
- EEHD186030 Pocket IQ2 (Blue-Point)

### EGR System Consists of:

- Cold side EGR valve (after EGR cooler), which controls exhaust gases for proper emissions control of NOx gases
- EGR cooler (controls temperature of exhaust gases to the air intake to the engine)
- EGR temperature sensor (measures EGR cooler exhaust temperature and efficiency)

**These items are critical for proper emissions management control and must be cleaned on a regular basis for optimum efficiency.**


### First steps before any service can be performed.

1. Add Blue-Point® Diesel Fuel Injector Cleaner (EEDF400-INJ) to the vehicle's fuel tank.
2. Remove the plastic engine cover.
3. If the engine is hot, the EGR cooler must be cooled – see step 8

**Locations of EGR components:**

- EGR cooler (figure 1)

- EGR valve (figure 1)

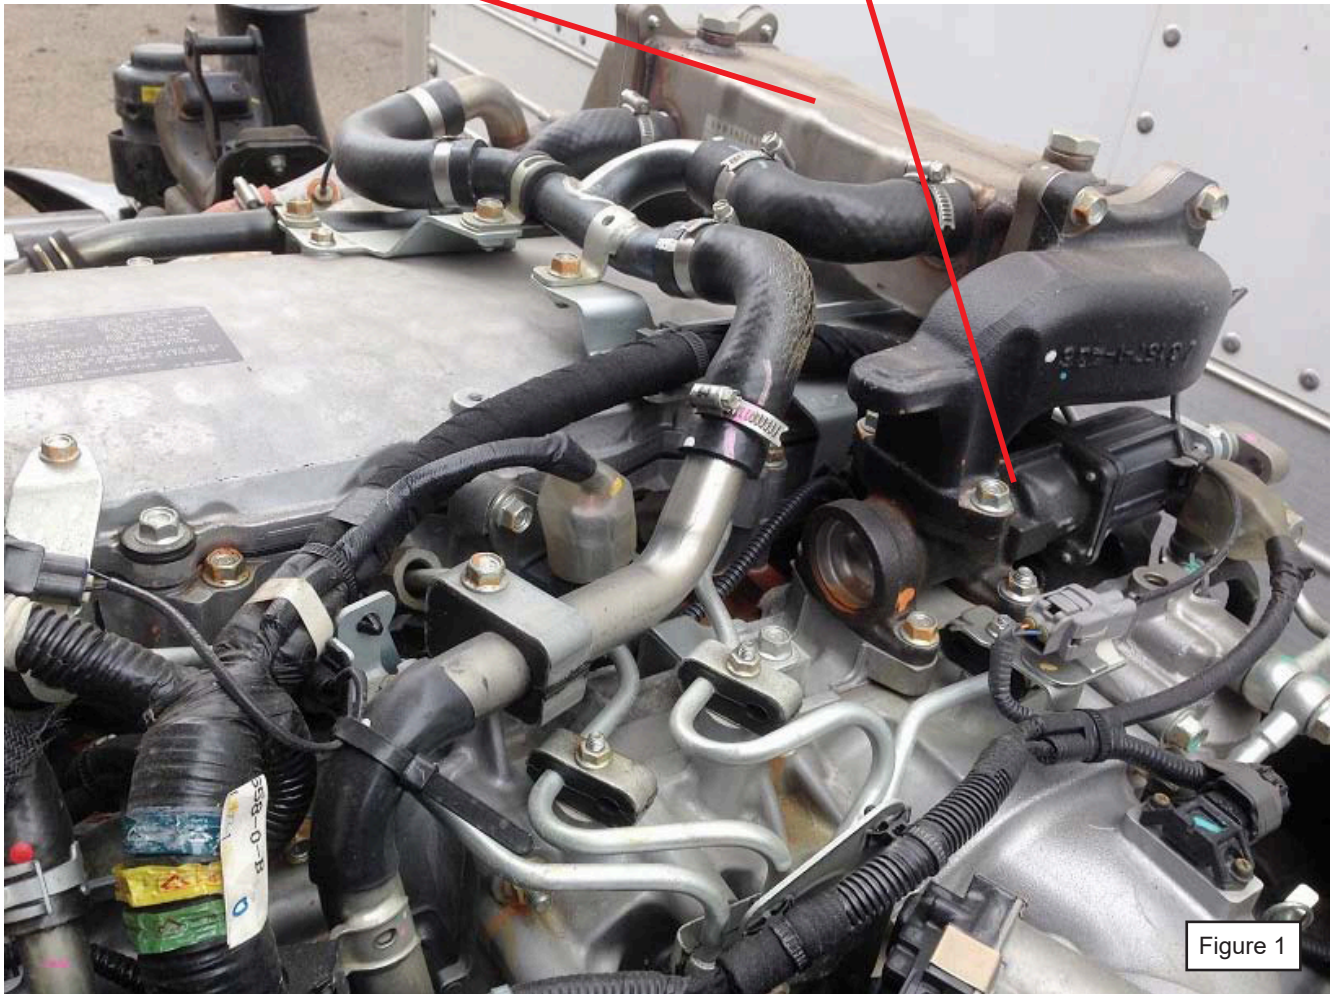

**Tool & Manifold Required:**

- EGR Tool (EEDF400)
- EGR Manifold (EEDF400M)



- Remove 6 bolts on the EGR cooler outlet where connected at the EGR valve (see Figure 2, 2A).

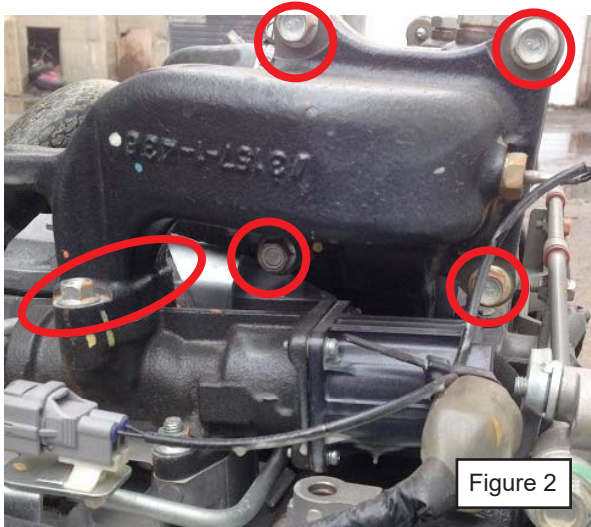


Figure 2



Figure 2a

- Turn thumbscrew on EGR Manual Opener (EEDF400-385) fully counterclockwise but do not remove it from the adapter. Remove EGR valve solenoid (4 screws) and set aside, install EGR Manual Opener in its place using only two screws (see Figure 3). Disconnect EGR valve solenoid electrical connector. Rotate thumb screw fully clockwise, EGR valve is now open.



Figure 3

**Note:** For easier installation of EGR manual opener, it is best to remove EGR valve assembly first (4 bolts). Install EGR Manual Opener and then reinstall EGR valve assembly.

**Quick Tip:** Place the EGR cooler outlet pipe into a bucket/container and fill container with EGR fluid until submerged, this will aid in the dislodging of soot from the pipe while the EGR cleaning procedure is performed see step 16.

6. Install EGR Intake adapter (EEDF400-684) and Exhaust Adapter (EEDF400-683) adapter using the existing bolts (see Figure 4).



7. Attach EGR manifold (EEDF400M) to EGR intake and exhaust adapters. Attach EGR tool (EEDF400) to EGR Manifold. Ensure air valve and fluid valve are closed – see EGR tool user guide.
8. Unscrew fill cap and fill with 64oz (1892mL) of EGR and Induction System Cleaner (EEDF400-EGR). For first application or severe coking, 128 oz. or more may be required.

**Note:** When using 128 oz, use 64 oz on exhaust side first then use 64 oz on intake side. In between exhaust and intake cleaning the air pressure must first be set to zero before adding the remaining 64 oz.

9. Reinstall the fill cap and hang tool from the hood latch. Connect shop air. Set air pressure on EGR tool to 40-50 psi.

**NOTE:** If engine is hot, the EGR cooler must be cooled before treatment can start. Before step 10 can proceed, open EGR tool air valve, keeping the fluid valve closed, turn valve on the EGR manifold to exhaust and flush cooler with air for 2 minutes.

10. Start vehicle engine. Set EGR manifold to exhaust.

11. Open air valve on EGR tool, adjust regulator to maintain initial pressure and then open the fluid valve on the EGR tool.
12. After 1/4 of the fluid has been consumed, turn the fluid valve off and let the air flow for an additional 2 minutes to flush deposits into exhaust stream.
13. Repeat step 11-12 allowing another ¼ of the fluid to be consumed.
14. Set valve on EGR Manifold to intake, open fluid valve and continue service until EGR tool is empty.

**Note: At any time during the intake service you hear a diesel knock sound, turn manifold adapter valve to off for 2 minutes. After two minutes then turn manifold valve to intake and continue service.**

**Let the vehicle operate for an additional 5 minutes and rev the engine several times to clear all residual fluid.**

15. Turn the fluid and air valve on tool to the closed position. Turn Vehicle off. Detach shop air line and depressurize the tool by rotating the regulator knob counter clockwise.
16. After EGR cooler outlet pipe has soaked for at least 15 minutes, clean the pipe using EGR cleaning fluid and a flexible 2" round brush inside a bucket or waste container. Fluid can be saved to be used on other EGR components if required.
17. Remove adapters and reassemble vehicle components in the reverse order of removal.

**IMPORTANT: A DPF Regeneration event is required after this service. Regeneration can be initiated for many engines using one of the following Snap-on Diagnostic Tools:**

- EEHD184040 Pro-Link Ultra (Snap-on)
- EEHD186030 Pocket IQ2 (Blue-Point)

18. Otherwise the vehicle must be driven at highway speeds (or in the case of non-highway equipment operated under a load) for approximately 30 minutes. This is necessary to remove all of the cleaning solution from the passages and cooler(s) and to combust any material that has reached the diesel oxidation catalyst (DOC) and diesel particulate filters (DPF).

**This must be completed immediately after the service.**

**Made in Canada**

Blue-Point is a trademark of Snap-on Incorporated.  
©Snap-on Incorporated 2017. Printed in Canada.  
Snap-on, 2801 80th St., Kenosha, WI 53143  
[www.snapon.com](http://www.snapon.com)

**Fait en Canada**

Blue-Point est une marque déposée de Snap-on Incorporated  
©Snap-on Incorporated 2017-Imprimé en Canada  
Snap-on, 2801 rue Kenosha WI 53143  
[www.snapon.com](http://www.snapon.com)

**Hecho en Canadá**

Blue-Point es una Marca Registrada de Snap-on incorporado  
©Snap-on incorporado 2017 Imprimido en Canadá  
Snap-on, 2801 80th St., Kenosha, WI 53143  
[www.snapon.com](http://www.snapon.com)