



Style 001RT coupling

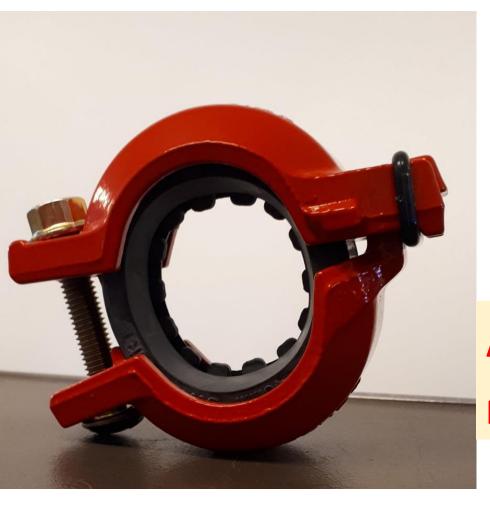

Installation instruction

A new quick connection coupling,


Part of the QUIKCOUP family of products

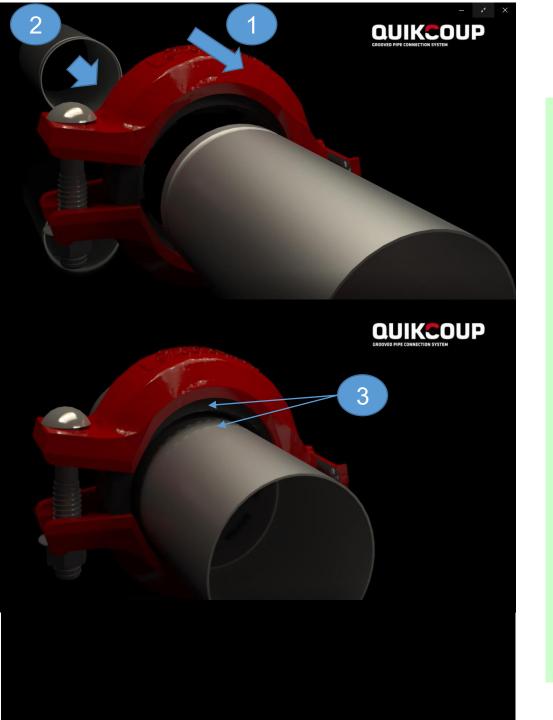



Assembly instructions:

- Slip the coupling on the first pipe end until gasket internal wall meets the pipe face and stops the initial installation movement.
- 2. Slip the second pipe into the opposite side of the coupling, until the secondary installation movement it stopped by the gasket internal wall.
- 3. Inspect that the coupling's external grooved channels are engaged into the pipe's grooved channels on both sides of the coupling installation.

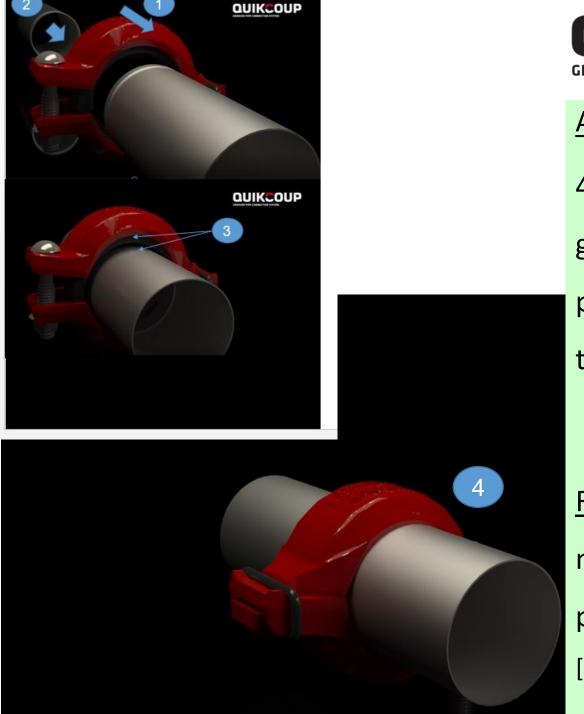



Assembly instructions:

4. Torque the bolt while watching the external grooved channels are completely aligned into the pipe's grooved channels, until achieving the required torque [*]

<< Assembly completed >>

Remark- After torqueing, make sure that the coupling meets visual inspection, by ensuring the coupling is pad to pad /metal to metal

[*]-See Style 001RT torque table last page



001R	T coupling
	Bolts Torqueing Table

Product Product size Bolt size style [mm / Inch] [mm\inch]			Bolts Torque	
	[mm\inch]	Nm [Min. – Max]	Lb-In [Min. – Max]	
001RT	33.7 / 1"	M10\3/8	100-110	885-974
001RT	42.4 / 1-1/4"	M10\3/8	100-110	885-974
001RT	48.3 / 1- ½"	M10\3/8	100-110	885-974
001RT	60.3 / 2"	M10\3/8	100-110	885-974
001RT	73.1 / 2-1/2"	M10\3/8	100-110	885-974
001RT	76.1	M10\3/8	100-110	885-974
001RT	88.9 / 3"	M10\3/8	100-110	885-974
001RT	114.3 / 4"	M10\3/8	100-110	885-974