


Flipper-48HR

48" Half-round Conference Table

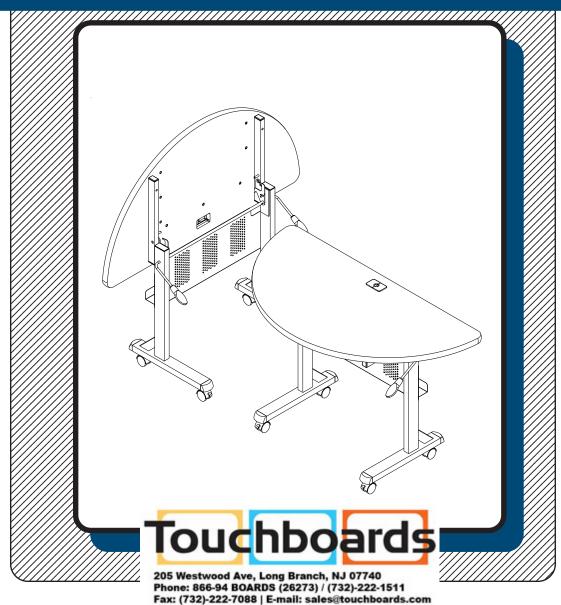

Assembly Instructions

Flipper-48HR

48" Half-round Conference Table

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		Top Platform	1 EA	P8		Crossbrace	1 EA
P2		Left Leg	1 EA			**	
						Hardware List	
				A	9)	9/16" Socket Screw	4 EA
P3		Right Leg (with Spring)	1 EA	A1		1-3/8" Socket Screw	2 EA
P4		Metal Stability Panel	1 EA	В		1-7/8" Socket Screw	4 EA
				С		Plastic Grommet	1 EA
P5	2	Welded Rod Assemb	ly 1 EA	D	O	2" Locking Caster	4 EA
	Z			E		Allen Wrench	1 EA
P6		Left Side Handle	1 EA	F		Caster Wrench	1 EA
P7		Right Side Handle	1 EA	 W		end that you assemi unit on a table.	ble this

Missing Parts or UPS Damaged Parts

For Your Convenience you can EMAIL us at

<u>furniture@baltinc.com</u> 24HOURS 7 DAYS A WEEK Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m.

Central Standard Time 1-800-749-2258


Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight. If parts are missing, broken, damaged, or worn, stop use of the product until repairs are made by your dealer using factory authorized parts.


Flipper-48HR Assembly Diagram




READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Slide the Right Side Handle (P7) Through the Right Leg (P-3) and into the Welded Rod (P5) as shown in illustration #1. Rotate Right Side Handle (P7) until holes are aligned (See illustration#1). Secure using 1 Screw (A).
- 3.) Slide the Left Side Handle (P6) Through the Left Leg (P-2) and into the Welded Rod (P5) as shown in illustration #1. Rotate Left Side Handle (P6) until holes are aligned (See illustration #1). Secure using 1 Screw (A).

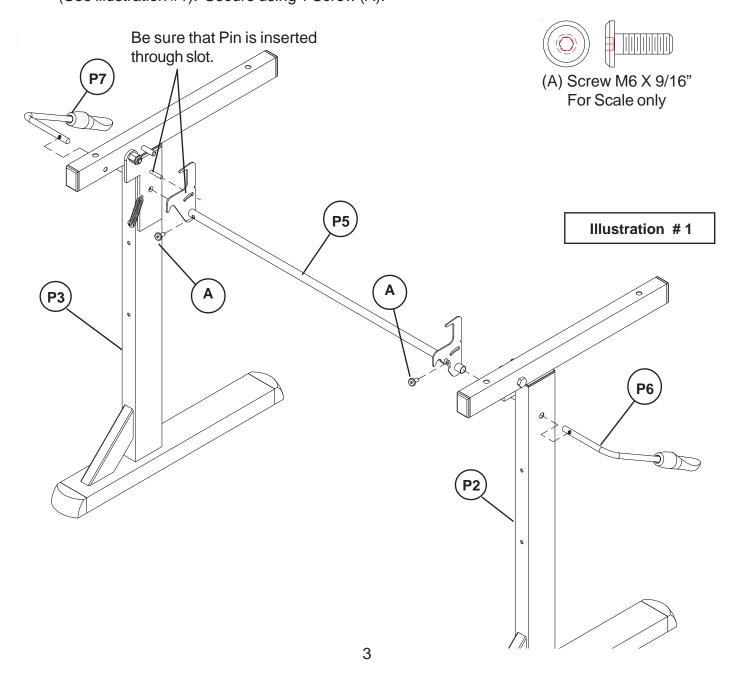

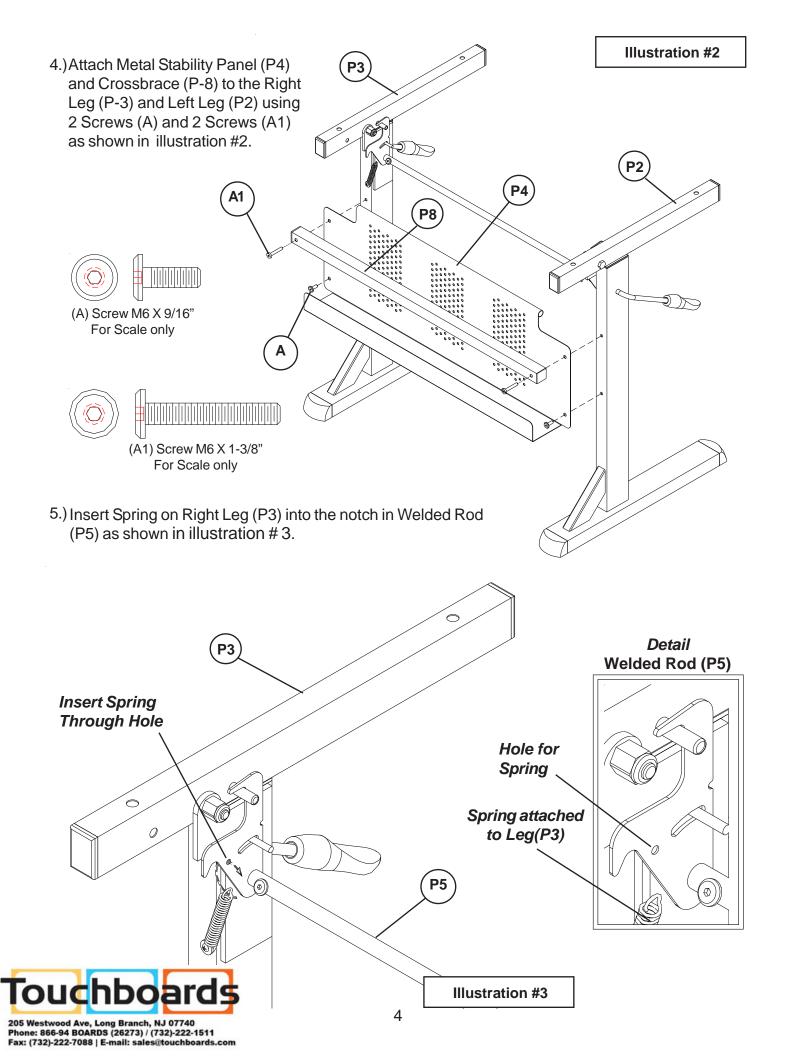



- 6.) Place the Top Platform (P1) with the insert nuts facing up. Attach Right Leg (P-3) and Left Leg (P2) using 4 each (B) screws as shown in illustration #4. (Finger tighten only)
- 7.) Attach 4 each (D) Locking Casters to the front and back of the Right Leg (P-3) and Left Leg (P2). Tighten Casters using Caster Wrench (F).

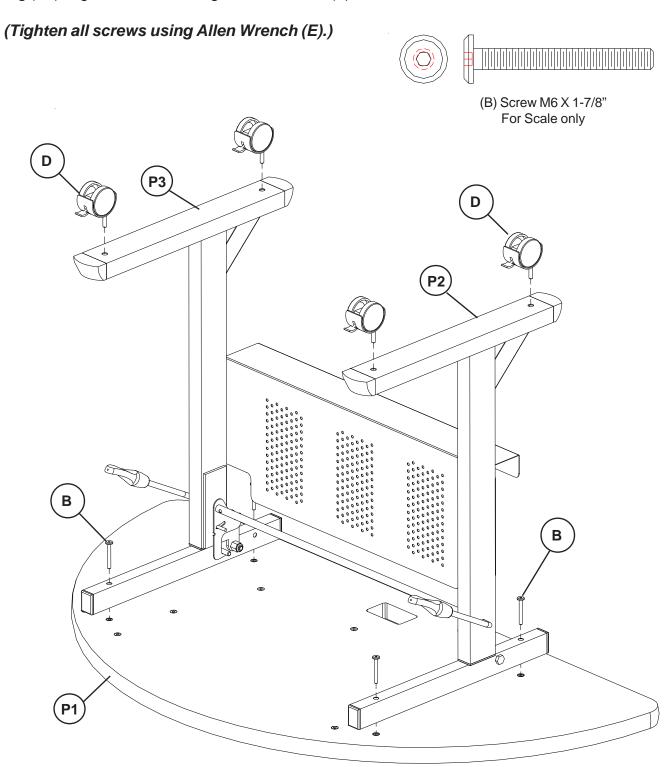

- 8.) To install Grommet (C), separate parts and press Grommet Sleeve in rectangular openings in Top Platform (P1) as shown in illustration #5.
- 9.) Snap 2 plastic Caps over top of Sleeve as shown in illustration #5.

Grommet(D) installation Illustration #5

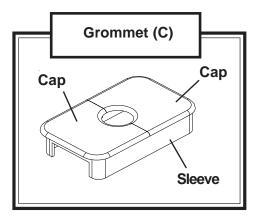

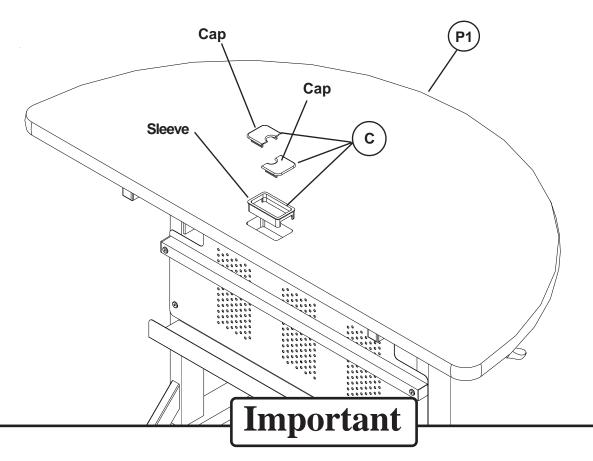

The Balt product you have purchased is guaranteed against material and workmanship defects. This guarantee extends 1 year from date of purchase. Should this product fail to function satisfactorily under normal use due to defect or imperfection, the defective part or product will be replaced. Damage caused by common carriers during shipment is not included in this guarantee.

This guarantee sets forth all applicable guarantees and remedies. No other warranty, expressed or implied shall apply. Failure to follow instructions found in Important Information Section of Owner Sheet shall void the guarantee. Consequential or incidental damages and or costs are not refundable.

TT-Connect Plates - Connecting Flipper Tables




Part Drawing	Description	Qty	Part	Drawing	Description	Qty
P-1 0	Connecting Plate	1 EA	A (ardware List od Screw 1/2"	4 EA

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Place 2 Flipper tables end to end, or other configuration as desired. Attach TT- Connecting Plate to both tables using 4 Wood Screws (A) as shown in illustration # 1.

Should you require assistance during assembly, please call our Customer Service Department Monday - Friday 8 a.m. - 5 p.m. Central Standard Time 1-800-749-2258

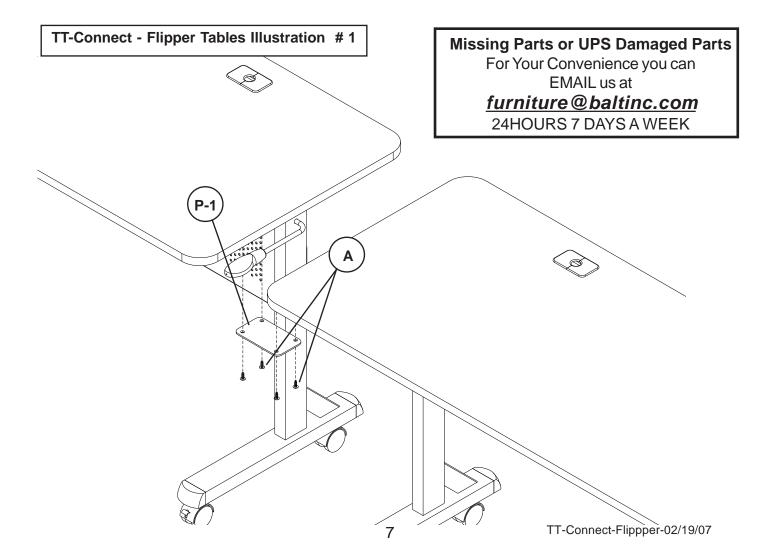

89773 Flipper-48HR

48" Half-round Conference Table



