

HIOKI

INSTRUCTION MANUAL

3169-20/21

CLAMP ON POWER HiTESTER

HIOKI E. E. CORPORATION

Tequipment
|.NET



205 Westwood Ave
Long Branch, NJ 07740
1-877-742-TEST (8378)
Fax: (732) 222-7088
salesteam@Equipment.NET

Contents

Introduction	1
Standard Accessories and Options	1
Safety Notes	4
Usage Notes	7

1 Overview **13**

1.1 Product Overview	13
1.2 Features	14

2 Parts Names **17**

2.1 Instrument Labels and Functions	18
2.2 Screen Names and Display Elements	22
2.2.1 Screen Configuration	22
2.2.2 Common Display	23
2.2.3 On-Screen Indicators	24

3 Measurement Preparations **25**

3.1 Connection Procedure	25
3.2 Connecting the Power Cord	26
3.3 Connecting the Voltage Cords	27
3.4 Using a Clamp-On Sensor (Option)	29
3.4.1 Clamp-On Sensor Specifications	29
3.4.2 Connecting a Clamp-on Sensor	31
3.5 Turning the Power On/Off	33

4 Connecting to Lines to be Measured 35

4.1 Connection Procedure 35

4.2 Connection Methods 36

 4.2.1 Displaying the Wiring Diagram36

 4.2.2 Basic Wiring for Single-Circuit Measurement39

 4.2.3 Wiring for Multiple-Circuit Measurement45

 4.2.4 Connection to a Line to Be Measured48

 4.2.5 Checking the Wiring49

4.3 Measurement Range 53

5 Setting Procedure 55

5.1 Setting Screen 55

5.2 Setting on the Measurement Setting Screen
(MEASUREMENT) 56

 5.2.1 Setting the Wiring Method57

 5.2.2 Setting the Synchronization Method59

 5.2.3 Setting the Reactive-Power-Meter Method60

 5.2.4 Setting the Display Average Times62

 5.2.5 Setting the Voltage Range63

 5.2.6 Setting the VT Ratio (PT Ratio)64

 5.2.7 Setting the Current Range65

 5.2.8 Setting the CT Ratio66

 5.2.9 Setting the Clamp-On Sensor67

5.3 Setting on the Data Output Setting Screen
(DATA OUTPUT) 68

 5.3.1 Setting the Time-Series Measurement Start
 Method69

 5.3.2 Setting Time-Series Measurement Stop Method
 71

 5.3.3 Setting Interval74

 5.3.4 Setting Medium for Saving Data75

 5.3.5 Setting the Data File Name76

 5.3.6 Setting Device to Be Connected to the RS-232C

5.3.7	Setting the Medium to which the Screen is to be Copied	78
5.4	Setting on the Save/Print Items Setting Screen (SAVE, PRINT ITEMS)	79
5.4.1	Checking the number of output data items and Storable Time	79
5.4.2	Setting Normal Measurement-Data Output Items	80
5.4.3	Setting Integrated power and Demand Measurement-data Output Items	81
5.4.4	Setting Harmonic Measurement-data Output Items	82
5.5	Setting on the System Setting Screen	85
5.5.1	Setting the THD Calculation Method	86
5.5.2	Setting the Harmonic Order for Display	87
5.5.3	Setting the RS-232C	88
5.5.4	Setting the LCD Backlight	89
5.5.5	Setting the Beep Sound	90
5.5.6	Setting the ID No.	91
5.5.7	Setting the Clock	92
5.5.8	Setting the Language	93
5.5.9	Displaying the Serial No. and Version	94

6 Measurement Method 95

6.1	Measuring the Voltage, Current, and Power (Instantaneous Values)	95
6.2	Measuring the Power of Each Phase (Instantaneous values)	97
6.3	Displaying a Waveform	98
6.4	Measuring the Average, Maximum, and Minimum Values	100
6.4.1	Displaying the Voltage, Current, and Power (Average, Maximum, and Minimum Values)	101
6.4.2	Displaying the Average, Maximum, and Minimum Power Measurements of Each Phase	102
6.5	Measuring Integrated power	103

6.6	Performing Demand Measurement	104
6.7	Measuring Harmonic	105
6.7.1	Displaying a Harmonic List	105
6.7.2	Displaying a Harmonic Graph	108
6.8	Displaying on a Zoom Screen	113
6.9	Holding Displayed Measurement Data	114

7 Loading and Saving Settings and Measured Data 115

7.1	Types of Files	115
7.2	Using a PC Card	117
7.2.1	Selecting a PC Card	117
7.2.2	Inserting and Removing the PC Card	118
7.3	File Operation	119
7.3.1	Initializing (Formatting) the Internal Memory ..	120
7.3.2	Initializing (Formatting) the PC Card	121
7.3.3	Saving a Setting File	122
7.3.4	Loading a Setting File	124
7.3.5	Deleting a File	126
7.3.6	Copying a File in the Internal Memory to a PC Card	128
7.4	Saving Measurement Data	129
7.4.1	Automatic Storage of Measurement Data	129
7.4.2	Saving Measurement Data Manually	133
7.5	Copying Screen	135

8 Using a Printer 137

8.1	Connecting the Printer	138
8.2	Setting the Printer	140
8.2.1	Setting the Device to Be Connected to the RS-232C	140
8.2.2	Setting the RS-232C	141

8.3	Automatic Output of Measurement Data to the Printer	142
8.4	Copying a Screen to the Printer	144

9 Using the Instrument with a Computer 145

9.1	RS-232C Connection	146
9.2	Setting the RS-232C	148

10 Using the External Input/Output Terminal 151

10.1	Connecting the External Input/Output Terminal	151
10.2	Functions of the External Input/Output Terminal	152
10.3	Controlling Multiple Units of the 3169-20/21 ..	155


11 Using D/A Output (3169-21 only) 157

11.1	Connecting the D/A Output Terminal	157
11.2	Setting D/A Output	159
11.2.1	Setting D/A Output Items	159
11.2.2	Setting the Integrated Power Output Rate	161
11.3	Response of Output	162
11.4	Output Waveform	164

12 Operations in the Event of Power Outage 169

13 Specifications 171

13.1	Formulae	180
13.2	Range Configuration and Accuracy by Clamp-On-Sensor	184




14 Maintenance and Service 189

14.1 Cleaning and Storage 189
14.2 Repair and Servicing 190
14.3 Instrument Disposal 192

Appendix 195

Power Measurement by the 2 Power-Meter Method and
U3/I3 Measurement Theory (3P3W2M mode) 195
Headers of Output Data 197
Harmonic Phase Angles 201
Output Data 203
Error Messages 207



Introduction


Thank you for purchasing the HIOKI "3169-20/21 CLAMP ON POWER HiTESTER". To obtain maximum performance from the product, please read this manual first, and keep it handy for future reference.

- Refer to the Quick Start Manual provided with this device.
- For current input with this device, a clamp-on sensor (optional) is required. For details, refer to the instruction manual for the clamp-on sensor you are using.

Standard Accessories and Options

Checking the contents of the package

When you receive the product, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories, panel switches, and connectors. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

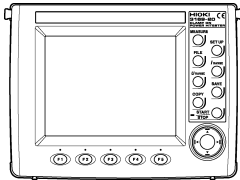

3169-20/21
CLAMP ON POWER
HiTESTER




Quick Start Manual



Instruction
Manual




- Instruction Manual
- RS-232C Instruction Manual
- CSV Conversion Software (CD-R)



Power Cord



Input Cord Label

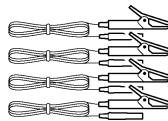

9438-03 VOLTAGE CORD
1 set (4 cords)
(One each red, yellow, blue, and
black cords.)



9441 CONNECTION CABLE
(for D/A output, 3169-21 only)

Options

Clamps Voltage output type:

- 9660 CLAMP ON SENSOR (100 A rms rating)
- 9661 CLAMP ON SENSOR (500 A rms rating)
- 9667 FLEXIBLE CLAMP ON SENSOR (5000 A rms rating)
- 9669 CLAMP ON SENSOR (1000 A rms rating)
- 9694 CLAMP ON SENSOR (5 Arms rating)
- 9695-02 CLAMP ON SENSOR (50 Arms rating)
- 9695-03 CLAMP ON SENSOR (100 Arms rating)
- 9290 CLAMP ON ADAPTER
(continuous 1000 A, up to 1500 A, CT ratio 10:1)
- 9219 CONNECTION CABLE (for 9695-02/03)

- Interface**
- 9440 CONNECTION CABLE (for external input/output terminal)
 - 9441 CONNECTION CABLE (for D/A output, 3169-21 only)
 - 9612 RS-232C CABLE (for PC)

- Printers**
- 9442 PRINTER (with 1 roll of thermally sensitized paper supplied, with battery pack)
 - 9443-01 AC ADAPTER (for printers) for Japan
 - 9443-02 AC ADAPTER (for printers) for EU
 - 9443-03 AC ADAPTER (for printers) for USA
 - 1196 RECORDING PAPER (25 m, 10 rolls)

- Transport case**
- 9720-01 CARRYING CASE (The voltage cables and clamp-on sensor are also housed in the case.)
(9720 CARRYING CASE)

- Other peripherals**
- 9626 PC Card 32 MB (32 MB compact Flash card + adapter)
 - 9627 PC Card 64 MB (64 MB compact Flash card + adapter)
 - 9726 PC Card 128 MB (128 MB compact Flash card + adapter)
 - 9727 PC Card 256 MB (256 MB compact Flash card + adapter)
 - 9728 PC Card 512 MB (512 MB compact Flash card + adapter)

- Software**
- 9625 POWER MEASUREMENT SUPPORT SOFTWARE
(PC application software)

Before using the 3169-20/21

- Before using the product the first time, verify that it operates normally to ensure that no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.
- Before using the product, make sure that the insulation on the 9438-03 VOLTAGE CORD is undamaged and that no bare conductors are improperly exposed. Using the product in such conditions could cause an electric shock, so contact your dealer or Hioki representative for repair.

Shipping precautions

Use the original packing materials when reshipping the product, if possible.


Safety Notes





This product is designed to conform to IEC 61010 Safety Standards, and has been thoroughly tested for safety prior to shipment. However, mishandling during use could result in injury or death, as well as damage to the product. Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from product defects.

Safety Symbols

This manual contains information and warnings essential for safe operation of the product and for maintaining it in safe operating condition. Before using the product, be sure to carefully read the following safety notes.

In the manual, the  symbol indicates particularly important information that the user should read before using the product.



The  symbol printed on the product indicates that the user should refer to a corresponding topic in the manual (marked with the  symbol) before using the relevant function.



Indicates AC (Alternating Current).






Indicates the ON side of the power switch.






Indicates the OFF side of the power switch.

The following symbols in this manual indicate the relative importance of cautions and warnings.

 <u>DANGER</u>	Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.
 <u>WARNING</u>	Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user.
 <u>CAUTION</u>	Indicates that incorrect operation presents a possibility of injury to the user or damage to the product.
<u>NOTE</u>	Advisory items related to performance or correct operation of the product.

Other Symbols

	Indicates the prohibited action.
	Indicates the reference.
	Indicates quick references for operation and remedies for troubleshooting.
*	Indicates terminology explained at the bottom of the page.

Accuracy

We define measurement tolerances in terms of f.s. (full scale), rdg. (reading) and dgt. (digit) values, with the following meanings:

f.s. (maximum display value or scale length)

The maximum displayable value or the full length of the scale.

This is usually the maximum value of the currently selected range.

rdg. (reading or displayed value)

The value currently being measured and indicated on the measuring product.

dgt. (resolution)


The smallest displayable unit on a digital measuring product, i.e., the input value that causes the digital display to show a "1".

Measurement categories (Overvoltage categories)

This product conforms to the safety requirements for CAT III measurement products.

To ensure safe operation of measurement products, IEC 61010 establishes safety standards for various electrical environments, categorized as CAT I to CAT IV, and called measurement categories. These are defined as follows.

- CAT I Secondary electrical circuits connected to an AC electrical outlet through a transformer or similar device.
- CAT II Primary electrical circuits in equipment connected to an AC electrical outlet by a power cord (portable tools, household appliances, etc.)
- CAT III Primary electrical circuits of heavy equipment (fixed installations) connected directly to the distribution panel, and feeders from the distribution panel to outlets.
- CAT IV The circuit from the service drop to the service entrance, and to the power meter and primary overcurrent protection device (distribution panel).

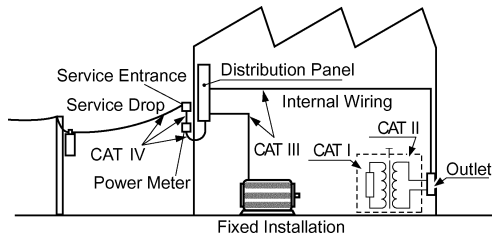

Higher-numbered categories correspond to electrical environments with greater momentary energy, so a measurement product designed for CAT III environments can endure greater momentary energy than one designed for CAT II. Using a measurement product in an environment designated with a higher-numbered category than that for which the product is rated could result in a severe accident, and must be carefully avoided.

Never use a CAT I measuring product in CAT II, III, or IV environments.


The measurement categories comply with the Overvoltage Categories of the IEC60664 Standards.

Usage Notes

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

WARNING



Do not get wet.



Do not touch with bare hands.



Check the voltage.

-  AC 100 V
-  to 240 V



To avoid electric shock

- Do not allow the product to get wet, and do not use it when your hands are wet.
- When measuring live lines, wear appropriate protective gear, such as insulated rubber gloves, boots and a safety helmet.
- Before turning the product on, make sure the source voltage matches that indicated on the product's power connector. Connection to an improper supply voltage may damage the product and present an electrical hazard.
- To avoid electric shock and ensure safe operation, connect the power cable to a grounded (3-contact) outlet.
- Do not use the product where it may be exposed to corrosive or combustible gases. The product may be damaged or cause an explosion.

Setting up the 3169-20/21

! CAUTION

Avoid the following:

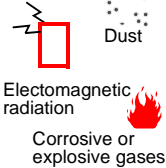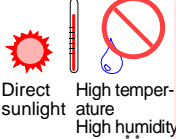

- This product is designed for indoor use, and operates reliably from 0°C to 40°C.
- Do not store or use the product where it could be exposed to direct sunlight, high temperature or humidity, or condensation. Under such conditions, the product may be damaged and insulation may deteriorate so that it no longer meets specifications.
- This product is not designed to be entirely water- or dust-proof. To avoid damage, do not use it in a wet or dusty environment.
- Do not use the product near a device that generates a strong electromagnetic field or electrostatic charge, as these may cause erroneous measurements.

Handling this device

! CAUTION

- To avoid damage to the product, protect it from vibration or shock during transport and handling, and be especially careful to avoid dropping.
- Be careful to avoid dropping the clamps or otherwise subjecting them to mechanical shock, which could damage the mating surfaces of the core and adversely affect measurement.

Using the clamp-on sensors and voltage



Connect the clamp-on sensors or voltage cords to the instrument first, and then to the active lines to be measured. Observe the following to avoid electric shock and short circuits.

- To avoid short circuits and potentially life-threatening hazards, never attach the clamp to a circuit that operates at more than the maximum rated voltage to earth (9660: 300 VAC, 9661: 600 VAC, 9667: 1000 VAC, 9669: 600 VAC, 9694: 300 VAC, 9695-02/03: 300 VAC), or over bare conductors.
- Clamp sensor and voltage cable should only be connected to the secondary side of a breaker, so the breaker can prevent an accident if a short circuit occurs. Connections should never be made to the primary side of a breaker, because unrestricted current flow could cause a serious accident if a short circuit occurs.
- Do not allow the voltage cable clips to touch two wires at the same time. Never touch the edge of the metal clips.
- Use only the supplied 9438-03 VOLTAGE CORD to connect the product input terminals to the circuit to be tested.
- When the clamp sensor is opened, do not allow the metal part of the clamp to touch any exposed metal or to short across two lines, and do not use over bare conductors.
- The current input terminals of the 3169-20/21 are not insulated. To avoid the risk of electric shock, only use the specified optional clamp-on sensor.

Handling the cords

CAUTION

- Keep in mind that, in some cases, conductors to be measured may be hot.
- To avoid damaging the power cord, grasp the plug, not the cord, when unplugging the cord from the power outlet.
- To avoid damaging the voltage cords or clamp sensor cables, do not bend or pull near their ends.
- Avoid stepping on or pinching the cable, which could damage the cable insulation.
- Keep the cables well away from heat sources, as bare conductors could be exposed if the insulation melts.
- When disconnecting the BNC connector, be sure to release the lock before pulling off the connector. Forcibly pulling the connector without releasing the lock, or pulling on the cable, can damage the connector.
- Failure to fasten the connectors properly may result in sub-specification performance or damage to the equipment.

Input

DANGER

Maximum input voltage and maximum rated voltage to earth

- The maximum input voltage of the product is 780 Vrms, 1103 V peak. Do not measure the voltage exceeding that. It causes the personal injury as well as damages the product.
- The maximum rated voltage to earth of the product is 600 Vrms. Do not measure the voltage to earth exceeding that. It causes the personal injury as well as damages the product.
- The maximum rated voltage to earth of clamp sensor depends on the type of clamp sensor used.
To avoid electric shock, refer to the instruction manual of a clamp sensor used.

CAUTION

- To avoid damage to the product, do not short-circuit the output terminal and do not input voltage to the output terminal.
- Voltage input terminals U_1 , U_2 , and U_3 are common to the N terminal and are not insulated. To avoid the risk of electric shock, do not touch the terminals.
- Note that the product may be damaged if current or voltage exceeding the selected measurement range is applied for a long time
- When the power is turned off, do not apply voltage or current to the voltage input terminals or clamp sensor. Doing so may damage the product.
- To prevent damage to the instrument and sensor, never connect or disconnect a sensor while the power is on, or while the sensor is clamped around a conductor.

Using VT(PT) and CT**NOTE**

- When the voltage or current for the power line being measured exceeds the maximum input for this device, use an external VT(PT) or CT.
- When using an external VT(PT) or CT, make sure you use a device with a minimal phase difference. By setting the VT(PT) or CT ratio, you can read measurement values directly.

Measurement values

NOTE

- To ensure measurements are precise, warm up the device for at least 30 minutes after plugging it in.
- This device is designed to measure commercial power lines with a frequency of 50 or 60 Hz. It cannot measure power lines of other frequencies or power lines where the waveforms are controlled using an inverter.
- This device cannot measure power lines with superposed direct current.
- This device uses algorithms to measure values for input voltage and current waveforms using (see the specifications). On devices using different operation principles or algorithms differ, differences in measurement values may result.
- The voltage and current measurements will be reduced to zero when inputs are less than 0.4% of the measurement range. When the voltage or current is zero, the active power, reactive power, and apparent power measurements will be reduced to zero and the power factor will be treated as invalid data.

Overview

1

1

1.1 Product Overview

The 3169-20/21 CLAMP ON POWER HiTESTER is a clamp-on wattmeter designed to measure lines ranging from a single-phase line to a three-phase 4-wire line.

The 3169-20/21 can measure demand and harmonics, which are important for power management, as well as such basic measurements of voltage, current, power, power factor, and integrated power (watt-hours).

The 3169-20/21 supports extended data acquisition and automated measurement, thanks to the use of the PC card and RS-232C interface. This makes the 3169-20/21 suitable for power measurement at commercial frequencies involved in the power maintenance and management of a building or factory.

1.2 Features

◆ **Safe design**

Designed to comply with safety standard EN61010-1.

◆ **Supports a variety of power lines**

Measures single-phase 2-wire, single-phase 3-wire, three-phase 3-wire and three-phase 4-wire systems.

Capable of measuring multiple circuits of the same voltage system (same transformer) using one 3169-20/21 unit.

- Single-phase 2-wire: 4 circuits
- Single-phase 3-wire: 2 circuits
- Three-phase 3-wire: 2 circuits

◆ **Detection of Incorrect Connection**

On the wiring check screen, you can check whether the phase sequence is correct, voltage cable is connected, and whether the clamp-on sensor is connected in reverse to avoid incorrect connection.

◆ **Simultaneous Display of Various Measurements**

Measurements of voltage, current, active/reactive/apparent power, power factor, and frequency are displayed simultaneously.

◆ **Independent Integration for Different Polarities**

Capable of integrating different polarities independently, such as active power consumption/regeneration and reactive power lag/lead.

◆ **Three-Voltage, Three-Current Measurement**

Capable of measuring 3-voltage, 3-current when the 3169-20/21 is connected to a three-phase, 3-wire line.

◆ **Harmonic Measurement**

Capable of measuring the harmonics of a power line simultaneously with integrated power (watt-hour) measurement.

◆ **Maximum, Minimum, and Average Measurement**

Capable of measuring the maximum, minimum, and average values of the voltage, current, and power calculated for each waveform (per interval.)

◆ **PC Card Interface**

Saves measurement data on a PC card for an extended period. The settings can be saved or read out using the PC card.

◆ **RS-232C Interface**

The 3169-20/21 includes an RS-232C interface as standard equipment. The instrument is connected to a PC by the interface, and is used for automated measurement.

◆ **High-Speed D/A Output (3169-21 only)**

The 3169-21 features D/A output for 4-channel, high-speed analog output.

◆ **Compact and light weight**

The compact size and light weight allows installation even in limited space, such as in a cubicle.

◆ **A choice of optional clamp-on sensors**

The following clamp-on sensors are compatible with the 3169-20/21.

9660 CLAMP ON SENSOR (100 A rms rating)

9661 CLAMP ON SENSOR (500 A rms rating)

9667 FLEXIBLE CLAMP ON SENSOR (5000 A rms rating)

9669 CLAMP ON SENSOR (1000 A rms rating)

9694 CLAMP ON SENSOR (5 Arms rating)

9695-02 CLAMP ON SENOSR (50 Arms rating)

9695-03 CLAMP ON SENSOR (100 Arms rating)



Parts Names

2

❖4 "Connecting to Lines to be Measured" (page 35)

❖11 "Using D/A Output (3169-21 only)"
(page 157)

Recorder, logger

❖10 "Using the External Input/
Output Terminal" (page 151)

D/A output
(3169-21)

❖9 "Using the Instrument with
a Computer" (page 145)

RS-232C

Printer

PC


PC card

❖7.2 "Using a PC Card"
(page 117)

❖8 "Using a Printer"
(page 137)


❖3 "Measurement Pre-
parations" (page 25)

*: The RS-232C is connected to a printer or PC.

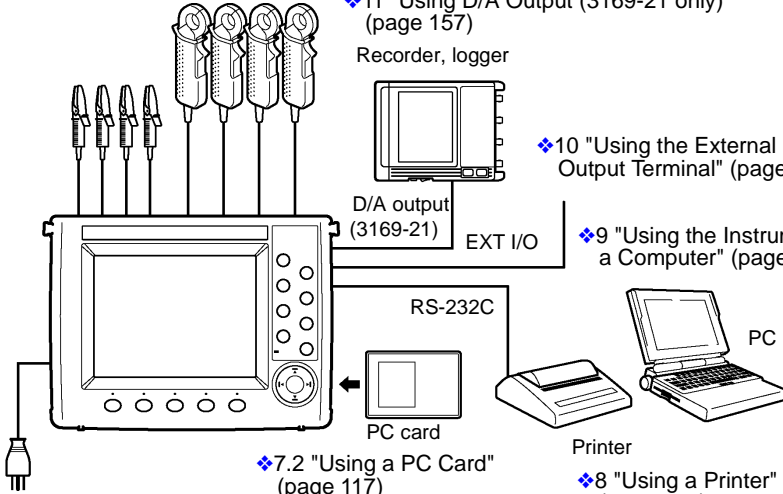


2.1 Instrument Labels and Functions

Front Panel

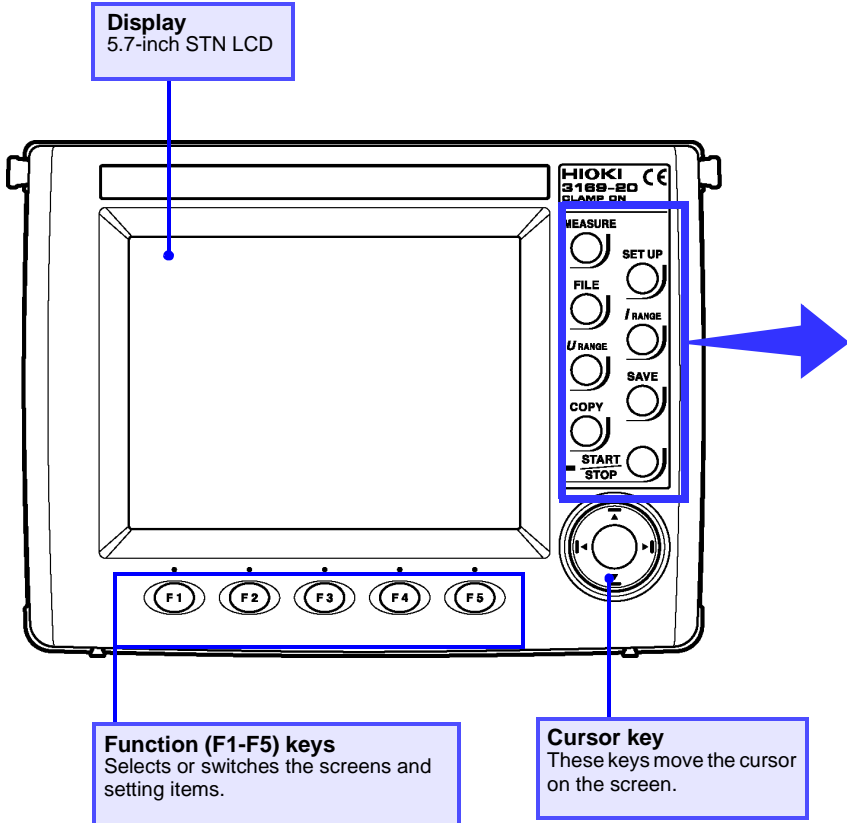


Front Panel Enhanced View

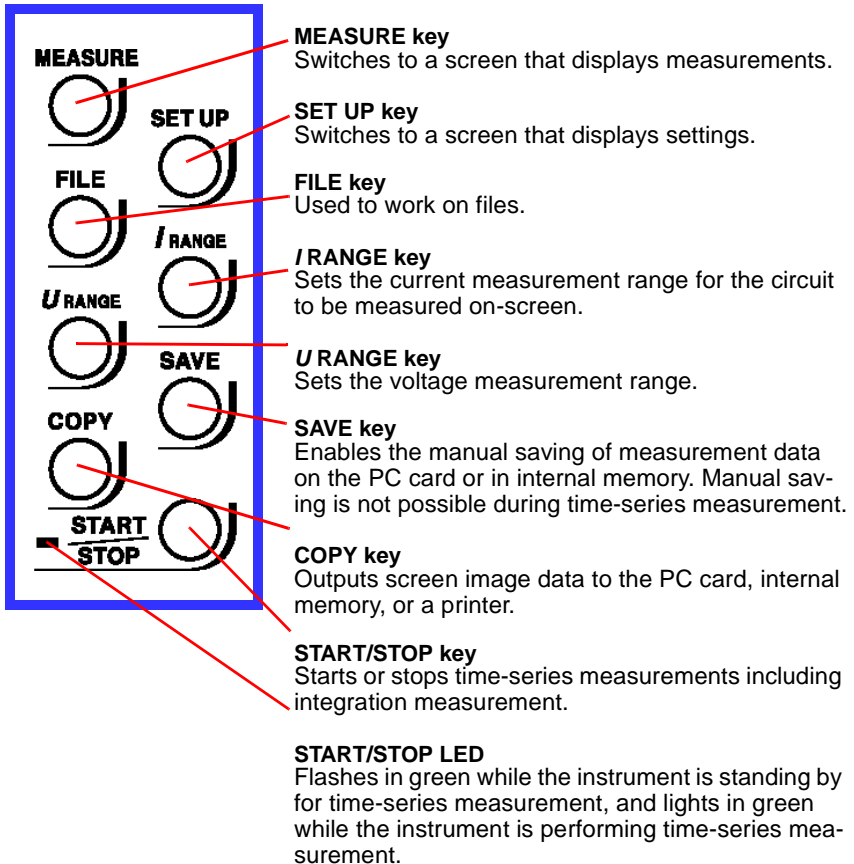

Top Panel

Voltage Input terminals

Connect the supplied 9438-03 VOLTAGE CORD.

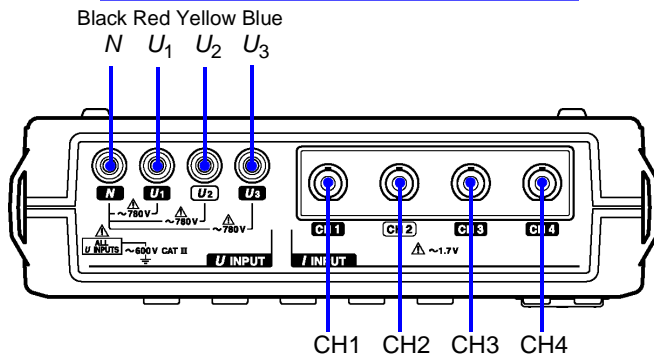

Current Input terminals

Connect an optional clamp-on sensor.


Left Panel

Contrast Control Knob (CONTRAST)

Adjusts the contrast of the screen.

KEY LOCK switch

Sliding this switch in the direction of the arrow disables all key operation except the POWER switch.

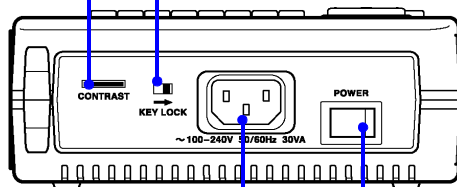

AC Power Inlet

Connects the power cord. The supply voltage ranges from 100 V to 240 V.

POWER switch

Turns the instrument on and off.

○ : Power OFF
 | : Power ON


Right Panel

PC Card slot

A PC Card can be inserted here.

RS-232C Interface connector

Connects to a PC or printer using an RS-232C cable.

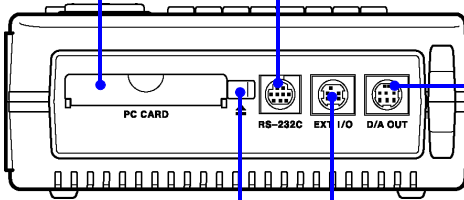

D/A Output Terminal (D/A OUT)

Installed in the 3169-21 only. Connects the supplied 9441 connection cable. Used for analog output.

Eject button

Press this button to eject a PC Card from the slot.


External Input/Output Terminal (EXT I/O)

Connects the optional 9440 connection cable. Used to start and stop time-series measurement, and control data storage on the PC card.

Rear Panel

Number plate

Contains manufacturer's ID numbers. Please do not remove, as this information is required for product management.

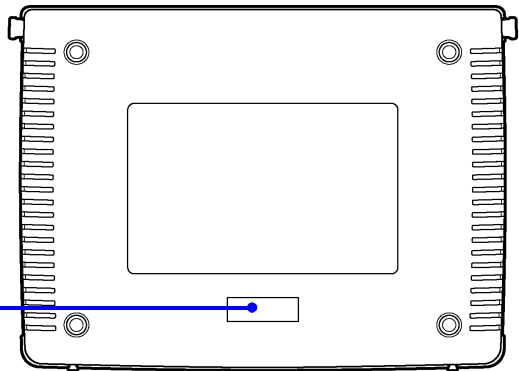

2.2 Screen Names and Display Elements

2.2.1 Screen Configuration

The screens are divided into three basic types: measurement screens, setting screens, and file screens. Each screen is selected using three panel keys: **MEASURE**, **SET UP**, and **FILE**.

Measurement screen

MAIN POWER INTEGRATE DEMAND ZOOM HARMONIC LIST HARMONIC GRAPH WAVEFORM WIRING CHECK WIRING DIAGRAM	MAIN	INST.	CIRCUIT1	2002/05/19 19:12:21
	U1	201.09 V	I1	9.092 A
	U2	201.09 V	I2	9.096 A
	U3	200.97 V	I3	9.094 A
	Uave	201.05 V	Iave	9.094 A
			I4	0.1378 A
	P1	1.5864kW	Q	2.7221kvar
	P2	1.5886kW	S	5.4350kVA
	P3	1.5866kW	PF	0.8682
	P	4.7618kW	f	49.998 Hz
WP+	0.00000kWh		0:00:00	
	SCREEN	AVERAGE	HOLD	



FILE MAIN	2002/07/24 19:22:02
INTERNAL SETTINGS	
INTERNAL MEMORY	
PC CARD	
FIRMWARE UPDATE	
SELECT	



SET UP	1/5 MEASUREMENT	2002/07/24 19:08:18		
WIRING	1P2W x4			
SAMPLING	PLL	50Hz		
VAR METHOD	OFF			
AVERAGE TIMES	1			
VOLTAGE	U1			
RANGE	300 V			
VT(PT)	0001.00			
CURRENT	CH1	CH2	CH3	CH4
RANGE	100 A	500 A	5 A	10 A
CT	0001.00	0001.00	0001.00	0001.00
SENSOR	9661	9661	9660	9660
change				NEXT SCR

INTERNAL SETTINGS
INTERNAL MEMORY
PC CARD
FIRMWARE UPDATE

MEASUREMENT
DATA OUTPUT
SAVE, PRINT ITEMS
SYSTEM
D/A OUTPUT (3169-21 only)

2.2.2 Common Display

This section of the screen shows information common to all measurement screens (except the zoom screen and the wiring diagram screen).

Common Display

MAIN	INST.	CIRCUIT1		2002/05/19 17:12:21
U1	201.09 V	I1	9.092 A	U 300V × 1.00
U2	201.09 V	I2	9.096 A	I 10A × 1.00
U3	200.97 V	I3	9.094 A	I4 50 × 1.00
Uave	201.05 V	Iave	9.094 A	WIRING 3P4W4I
		I4	0.1378 A	CIRCUIT x1
P1	1.5864kW	Q	2.7221kvar	PLL U1 50Hz
P2	1.5888kW	S	5.4850kVA	INTVL. 1min
P3	1.5866kW	PF	0.8682	
P	4.7618kW	f	49.998 Hz	
WP+	0.00000kWh		0:00:00	
SCREEN			AVERAGE	HOLD

Annotations in the image point to the following elements in the right-hand column:

- Time: 2002/05/19 17:12:21
- Range: U 300V, I 10A, I4 50
- Wiring: WIRING 3P4W4I
- No. of circuits: CIRCUIT x1
- Synchronization method: PLL U1 50Hz
- Interval: INTVL. 1min

Time	Displays the current time.
Range	Displays the voltage range and current range of the on-screen circuit. The VT(PT) ratio and CT ratio are shown under these ranges. The current range and CT ratio of I4 are shown only when 3P4W4I is set as the wiring method.
Wiring	Displays the wiring method set on the setting screen.
No. of circuits	Displays the number of circuits to be measured as set on the setting screen.
Synchronization method	Displays the synchronization method and frequency of the line to be measured as set on the setting screen.
Interval	Displays the interval set on the setting screen.

2.2.3 On-Screen Indicators

MAIN	INST.	CIRCUIT1	VAR	2002/05/25 14:05:55
U1 over V	I1 over A	U x 150V		
U2 over V	I2 over A	I x 5A		
U3* over V	I3* over A	x 1.00		
Uave over V	Iave over A			
P over kW	Q over kvar	WIRING		
	S over kVA	3P3W2M		
	PF over	CIRCUIT		
	f 50.000 Hz	x2		
WP+ 0.000 Wh	0:00:00	PLL 50Hz		
		INTVL. 1min		
SCREEN	CIRCUIT AVERAGE	HOLD		

	Goes on when the reactive-power-meter method is ON.
	Goes on when the displayed measurement is held.
	Goes on when the medium for saving data is set to PC card. Flashes when the PC card is accessed.
	Goes on when the medium for saving data is set to internal memory. Flashes when the internal memory is accessed.
	Goes on when the PC card or internal memory is full.
	Goes on when the device to be connected to the RS-232C is set to PC.
	Goes on when the device to be connected to the RS-232C is set to printer.
	Goes on when the PLL is unlocked; the synchronization method is automatically switched over to the fixed clock.
	Goes on when the keys are locked.
	Goes on when the voltage or current dynamic range is exceeded.
over	Displayed when the range is exceeded.

NOTE

U3* and I3* indicate that the data is obtained by calculating the 2-voltage, 2-current measurement results when 3P3W2M (three-phase, 3-wire, 2-power-meter method) is selected.

❖ "Appendix" (page 195)

Measurement Preparations


3

Please read the Usage Notes (page 7) before setting up this instrument.

3.1 Connection Procedure

3

Refer to the indicated reference items before installing and connecting.

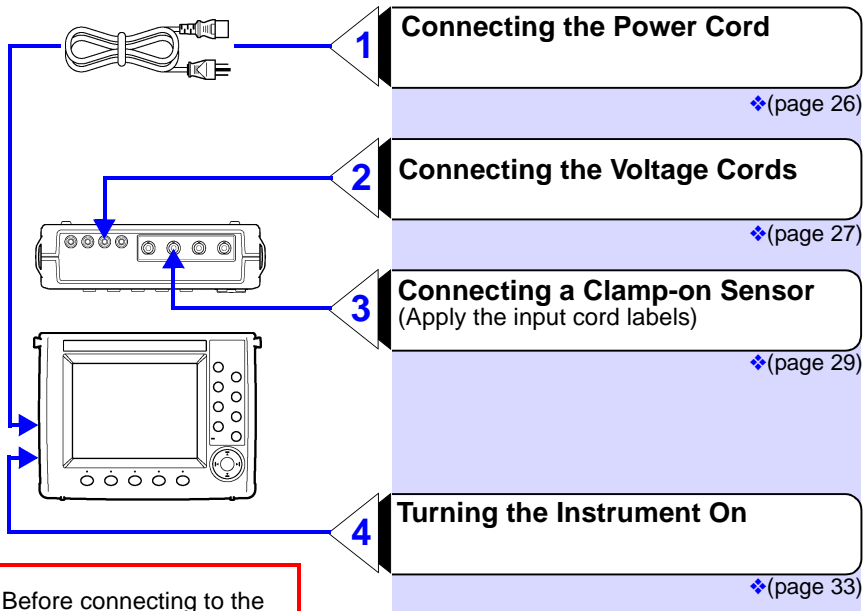

Before connecting to the lines to be measured, be sure steps 1 - 4 have been completed.

Connect to the lines to be measured
❖ 4 Connecting to Lines to be Measured


3.2 Connecting the Power Cord



!WARNING

- Before turning the product on, make sure the source voltage matches that indicated on the product's power connector. Connection to an improper supply voltage may damage the product and present an electrical hazard.
- To avoid electric shock and ensure safe operation, connect the power cable to a grounded (3-contact) outlet.

Connecting the Power Cords

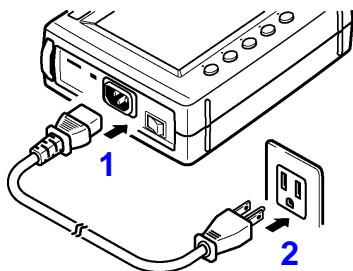

1. Connect the power cord to the AC power inlet.
2. Plug the power cord into the AC mains outlet.

3.3 Connecting the Voltage Cords



! DANGER


Connect the voltage cords to the product first, and then to the active lines to be measured. Observe the following to avoid electric shock and short circuits.

- Voltage cable should only be connected to the secondary side of a breaker, so the breaker can prevent an accident if a short circuit occurs. Connections should never be made to the primary side of a breaker, because unrestricted current flow could cause a serious accident if a short circuit occurs.
- Do not allow the voltage cable clips to touch two wires at the same time. Never touch the edge of the metal clips.
- Voltage input terminals U_1 , U_2 , and U_3 are common to the N terminal and are not insulated. To avoid the risk of electric shock, do not touch the terminals.

! CAUTION

- For safety reasons, when taking measurements, only use the 9438-03 VOLTAGE CORD provided with the product.
- The supplied voltage cords consist of one each red, yellow, blue and black cords. Connect only the cords actually needed for measurement. Cords not being used for measurement should be disconnected.

Connecting the voltage cords to the instrument

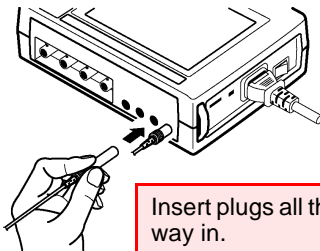


1. Connect the voltage cables to the voltage input terminals of the 3169-20/21. The number of voltage cables required depends on the line to be measured.
2. Fully insert the cable plug.

NOTE

Be sure to hold the voltage cable by its plug when connecting or disconnecting the cable.

Voltage cords and measurement lines


Single-phase 2-wire (1P2W)

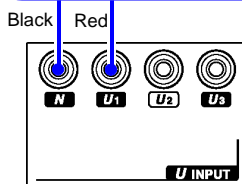


Measurement Line type

Voltage input terminals


Single-phase 3-wire (1P3W)

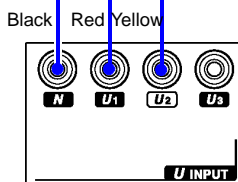


Three-phase 3-wire (3P3W2M)

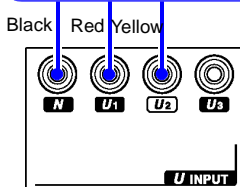

Three-phase 3-wire (3P3W3M)

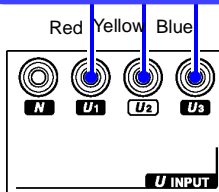

Three-phase 4-wire (3P4W, 3P4W4I)

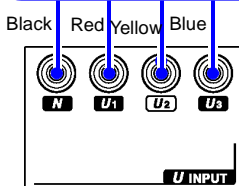

3.4 Using a Clamp-On Sensor (Option)



Connect the clamp-on sensors to the product first, and then to the active lines to be measured. Observe the following to avoid electric shock and short circuits.


- Clamp sensor should only be connected to the secondary side of a breaker, so the breaker can prevent an accident if a short circuit occurs. Connections should never be made to the primary side of a breaker, because unrestricted current flow could cause a serious accident if a short circuit occurs.
- When the clamp sensor is opened, do not allow the metal part of the clamp to touch any exposed metal, or to short between two lines, and do not use over bare conductors.
- To prevent damage to the product and sensor, never connect or disconnect a sensor while the power is on.
- The current input terminals of the 3169-20/21 are not insulated. To avoid the risk of electric shock, only use the specified optional clamp-on sensor.

3


Use Hioki clamp-on sensor 9660, 9661, 9667, 9669, 9694, or 9695-02/03.

3.4.1 Clamp-On Sensor Specifications

Refer to the Instruction Manual for the specific model for more details.

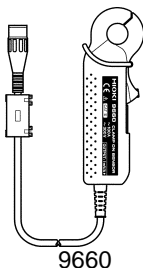

9660

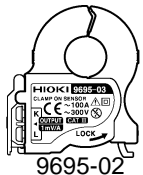


9695-02


9660 CLAMP ON SENSOR/ 9695-02 CLAMP ON SENSOR

Rated primary current	100 A AC
Output voltage	1 mVAC/A
Maximum permissible input	130 A continuous (at 45 to 66 Hz, 50°C)
Amplitude accuracy	$\pm 0.3\% \text{rdg.} \pm 0.02\% \text{f.s.}$ (f.s.=100 A, 45 to 66 Hz)
Phase accuracy	Within $\pm 1^\circ$ (45 Hz to 5 kHz)
Amplitude frequency characteristics	Within $\pm 1\%$ at 40 Hz to 5 kHz (deviation from accuracy)
Maximum rated voltage to earth	300 Vrms
Measurable conductor diameter	15 mm max.
Operating temperature and humidity	0 to 50°C (32°F to 122°F), 80% RH or less (no condensation)
Option	9219 CONNECTION CABLE (for 9695-02/03)


3.4 Using a Clamp-On Sensor (Option)

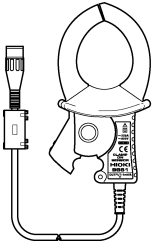**9661 CLAMP ON SENSOR**

Rated primary current	500 A AC
Output voltage	1 mVAC/A
Maximum permissible input	550 A continuous (at 45 to 66 Hz, 50°C)
Amplitude accuracy	±0.3% rdg. ±0.01% f.s. (f.s.=500 A, 45 to 66 Hz)
Phase accuracy	Within ±0.5° (45 Hz to 5 kHz)
Amplitude frequency characteristics	Within ±1% at 40 Hz to 5 kHz (deviation from accuracy)
Maximum rated voltage to earth	600 Vrms
Measurable conductor diameter	46 mm max.
Operating temperature and humidity	0 to 50°C (32°F to 122°F), 80% RH or less (no condensation)

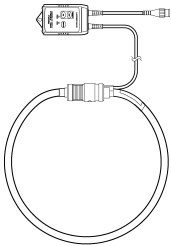
9667 FLEXIBLE CLAMP ON SENSOR

Rated primary current	50A to 500A AC 500A to 5000A AC
Output voltage	500 mV AC f.s. (1 mVAC/A) 500 mV AC f.s. (0.1 mVAC/A)
Maximum permissible input	10000 A continuous at 45 to 66 Hz
Amplitude accuracy	±2.0% rdg. ±1.5 mV (45 to 66 Hz)
Phase accuracy	Within ±1° (45 to 66 Hz)
Amplitude frequency characteristics	Within ±3dB, 10 Hz to 20 kHz
Maximum rated voltage to earth	1000 Vrms
Measurable conductor diameter	254 mm max.
Operating temperature and humidity	0 to 40°C (32°F to 104°F), 80% RH or less (no condensation)
Power supply	LR03 alkaline battery x 4 or 9445-02/03 AC ADAPTER

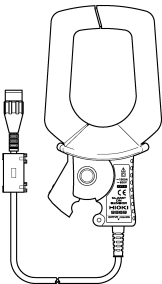
9669 CLAMP ON SENSOR

Rated primary current	1000 A AC
Output voltage	0.5 mVAC/A
Maximum permissible input	1000 A continuous (at 45 to 66 Hz, 50°C)
Amplitude accuracy	±1.0% rdg. ±0.01% f.s. (f.s.=1000 A, 45 to 66 Hz)
Phase accuracy	Within ±1° (45 Hz to 5 kHz)
Amplitude frequency characteristics	Within ±2% at 40 Hz to 5 kHz (deviation from accuracy)
Maximum rated voltage to earth	600 Vrms
Measurable conductor diameter	55 mm max.
Operating temperature and humidity	0 to 50°C (32°F to 122°F), 80% RH or less (no condensation)

3.4 Using a Clamp-On Sensor (Option)

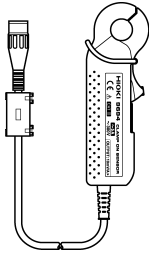

9694

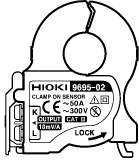

9695-03


9694 CLAMP ON SENSOR/ 9695-03 CLAMP ON SENSOR

Rated primary current	9694: 5 A AC/ 9695-03: 50 A AC
Output voltage	10 mVAC/A
Maximum permissible input	9694: 50 A continuous (at 45 to 66 Hz , 50°C) 9695-02: 60 A continuous (at 45 to 66 Hz , 50°C)
Amplitude accuracy	9694: $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s.(f.s.=5 A, 45 to 66 Hz) 9695-02: $\pm 0.3\%$ rdg. $\pm 0.02\%$ f.s. (f.s.=5 A, 45 to 66 Hz)
Phase accuracy	Within $\pm 2^\circ$ (45 Hz to 5 kHz)
Amplitude frequency characteristics	Within $\pm 1\%$ at 40 Hz to 5 kHz (deviation from accuracy)
Maximum rated voltage to earth	300 Vrms
Measurable conductor diameter	15 mm max.
Operating temperature and humidity	0 to 50°C (32°F to 122°F), 80% RH or less (no condensation)
Option	9219 CONNECTION CABLE (for 9695-02/03)

3.4.2 Connecting a Clamp-on Sensor

Connecting a Clamp Sensor to the Instrument

3169-20/21 Current input terminal connector guide pins


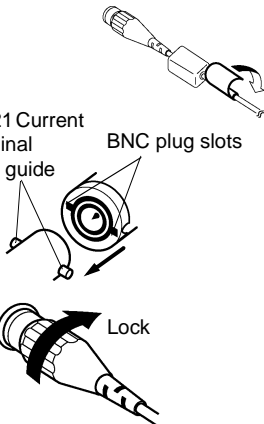


1. At each end of the cable, apply the input cord labels having the same color as the current input terminal to which it is to be connected.
2. Align the slots in the BNC plug with the guide pins on the connector at the instrument side, then push and turn the plug clockwise.
(to unplug the connector, push the plug and turn it counterclockwise before pulling it apart.)

NOTE








When disconnecting the BNC connector, be sure to release the lock before pulling the connectors apart. Forcibly pulling the connector without releasing the lock, or pulling on the cable, can damage the connector.

Clamp-on sensors and measurement lines

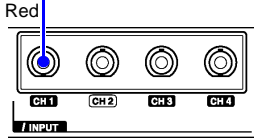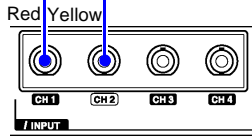Single-phase 2-wire
(1P2W)Single-phase 3-wire
(1P3W)

Measurement Line type

Current Input terminals

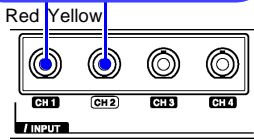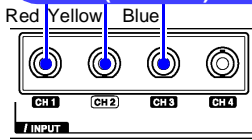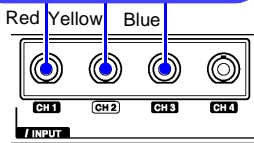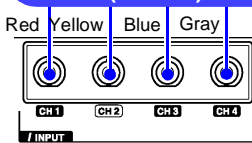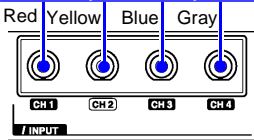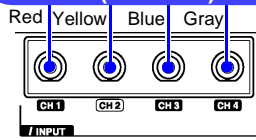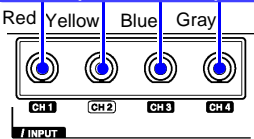Three-phase 3-wire
(3P3W2M)Three-phase 3-wire
(3P3W3M)Three-phase 4-wire
(3P4W)Three-phase 4-wire
(3P4W4I)Single-phase 2-wire X 4
(1P2W X 4)Single-phase 3-wire X 2
(1P3W X 2)Three-phase 3-wire X 2
(3P3W2M X 2)

3.5 Turning the Power On/Off




WARNING

Before turning the product on, make sure the source voltage matches that indicated on the product's power connector. Connection to an improper supply voltage may damage the product and present an electrical hazard.

Turning the Instrument On/Off

Powering On

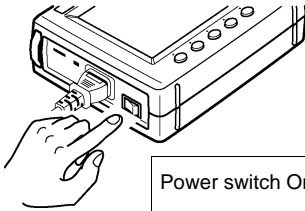

Power switch On:

Turn the POWER switch ON ().

As soon as the power is turned on, the self-test screen appears. Upon completion of the self test, display switches to the measurement screen.


Screen after the power is turned on (Self-test screen)

HIOKI 3169 ← Model No. of the product
CLAMP ON POWER HITESTER

Version 1.00 ← Version No.

BACKUPTEST OK
FLASH TEST OK
DRAM TEST OK
SRAM TEST OK
VRAM TEST OK
ADJUSTEST OK ← Internal memory test result

Powering Off

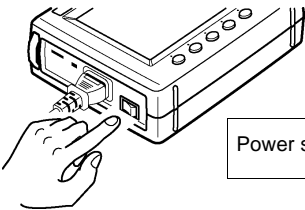

Power switch Off:

Turn the POWER switch OFF ().

NOTE

If an error occurs during self-testing, the instrument may be damaged. Contact your dealer or HIOKI representative.







Connecting to Lines to be Measured

4

Please read the Usage Notes (page 7) before making connections.

4.1 Connection Procedure

- ❖ 3.3 Connecting the Voltage Cords (page 27)
- ❖ 3.4 Using a Clamp-On Sensor (Option) (page 29)
- ❖ 3.5 Turning the Power On/Off (page 33)

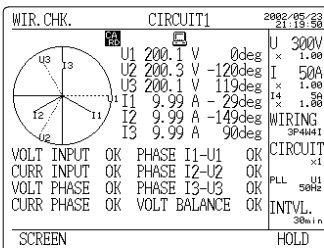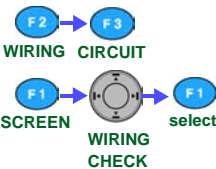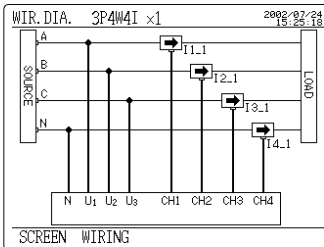

1

Verify that the voltage cord or clamp-on sensor is properly connected to the input terminals.

2

Turn on (|) the 3169-20/21.

3

Select the wiring diagram screen on the measurement screen to view the wiring diagram.

❖ (page 36)

4

Set the wiring method and number of circuits by using the F2 (WIRING) and F3 (CIRCUIT) keys.

❖ (page 36)

5

Connect the voltage cords and clamp-on sensor to the lines to be measured in accordance with the displayed wiring diagram.

❖ (page 48)

6

Select the wiring check screen to check the current connection.

❖ (page 49)

OK To 7 NG To 5

7

Set the parameters on the setting screen.

❖ 5 Setting Procedure (page 55)

Measurement

❖ 6 Measurement Method (page 95)

4.2 Connection Methods

4.2.1 Displaying the Wiring Diagram

MEASURE



Press the **MEASURE** key to display the measurement screen.



SCREEN

Press the **F1** (SCREEN) key to display the selection window.




Select "WIRING DIAGRAM" by using the cursor key.




select

Press the **F1** (select) key; the wiring diagram will appear.

(Example: 3P3W2M x 1 (three-phase, 3-wire))

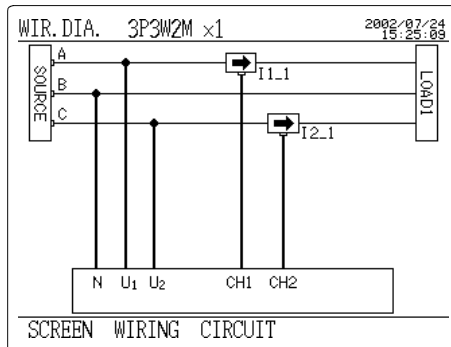

Wiring diagram screen

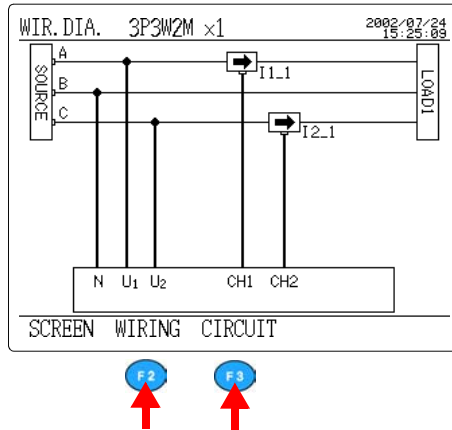**(1) Set the Wiring Method.**

F2 **WIRING** Press the **F2** (WIRING) key to display the selection window.

1P2W	Measurement of a single-phase, 2-wire line
1P3W	Measurement of a single-phase, 3-wire line
3P3W2M	Measurement of a three-phase, 3-wire line (by the two-power-meter method) *: Select this method to measure three-phase power by measuring the current at two positions only.
3P3W3M	Measurement of a three-phase, 3-wire line (by the three-power-meter method)
3P4W	Measurement of a three-phase, 4-wire line
3P4W4I	Measurement of a three-phase, 4-wire line (used for neutral conductor measurement)

Select a wiring method by using the cursor key.

F1 **select** Press the **F1** (select) key.

(2) Set the Number of Circuits (when measuring multiple circuits).

**CIRCUIT**Press the **F3** (CIRCUIT) key to display the selection window.

1P2W	1 (1 circuit), 2 (2 circuits), 3 (3 circuits), 4 (4 circuits)
1P3W	1 (1 circuit), 2 (2 circuits)
3P3W2M	1 (1 circuit), 2 (2 circuits)
3P3W3M,3P4W, 3P4W4I	1 (1 circuit)




Select a number of circuits by using the cursor key.


**select**Press the **F1** (select) key.

4.2.2 Basic Wiring for Single-Circuit Measurement


Single-phase 2-wire (1P2W)

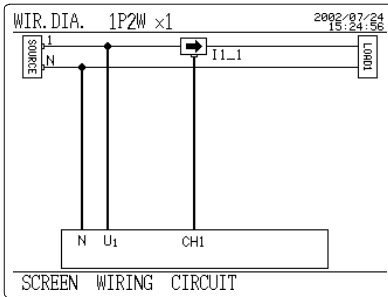

Wiring diagram screen

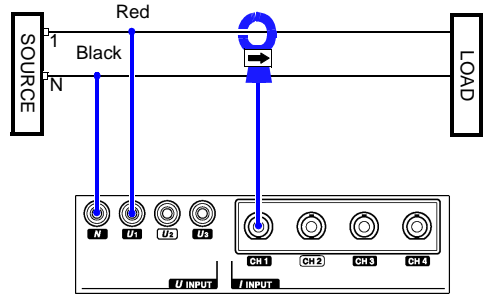


Face the arrow toward the Load

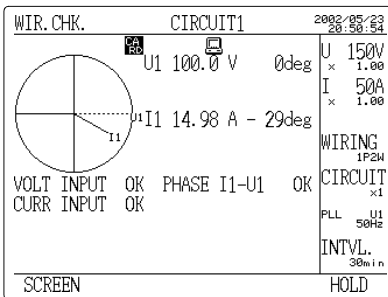


Wiring check screen (Power factor: 0.87)

◆4.2.5 Checking the Wiring (page 49)


Single-phase 3-wire (1P3W)

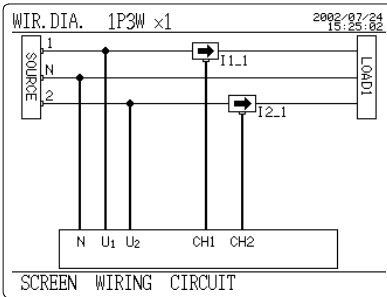

Wiring diagram screen

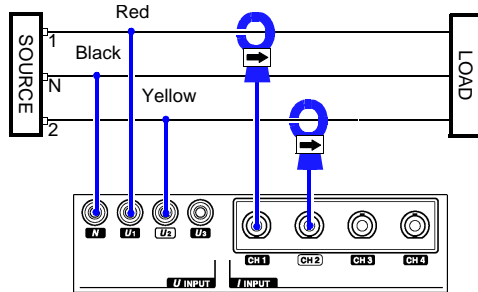


➡ Face the arrow toward the Load

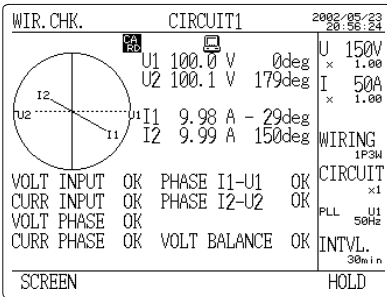



Wiring check screen (Power factor: 0.87)

❖ 4.2.5 Checking the Wiring (page 49)

Three-phase 3-wire (3P3W2M) 2-Power-Meter Method

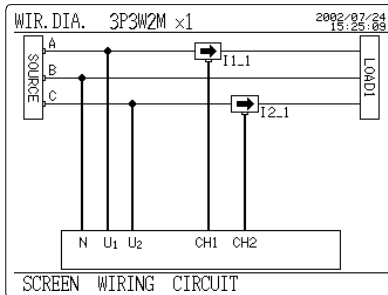


Wiring diagram screen

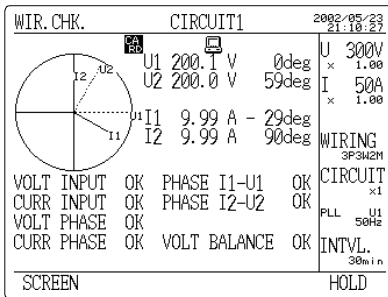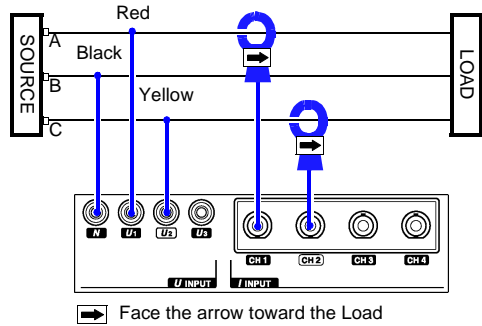


Wiring check screen (Power factor: 1)


❖ 4.2.5 Checking the Wiring (page 49)

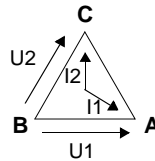



Three-phase 3-wire (3P3W3M) 3-Power-Meter Method

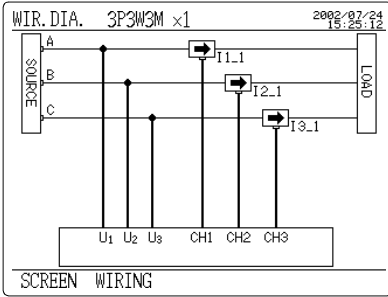

Wiring diagram screen

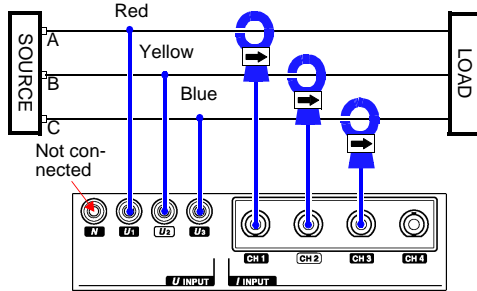


➡ Face the arrow toward the Load

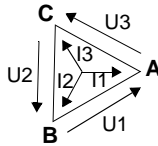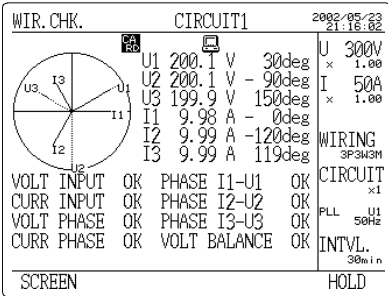



Wiring check screen (Power factor: 1)

❖4.2.5 Checking the Wiring (page 49)

Three-phase 4-wire (3P4W)

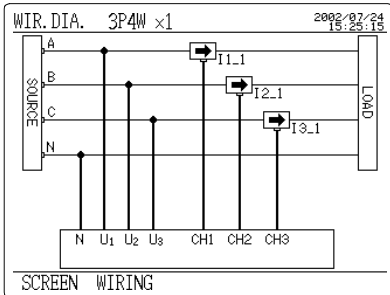


Wiring diagram screen

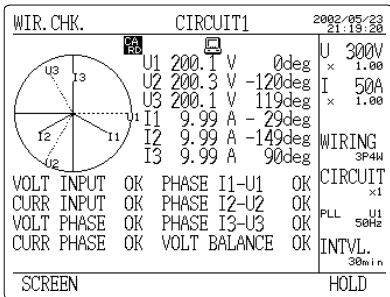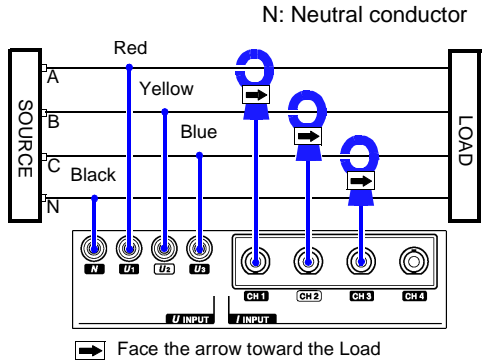


Wiring check screen (Power factor: 0.87)

❖4.2.5 Checking the Wiring (page 49)

Three-phase 4-wire (3P4W4I) Neutral Current Measurement

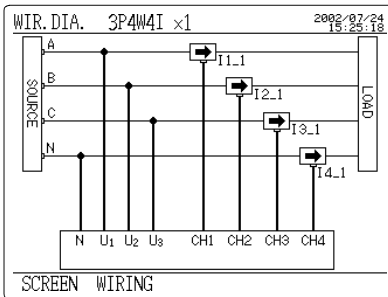


Wiring diagram screen

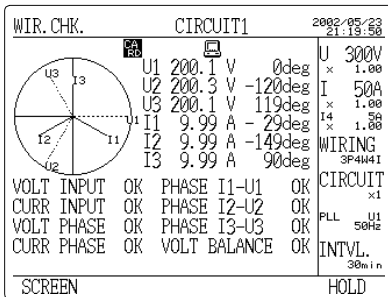

Wiring check screen (Power factor: 0.87)

❖ 4.2.5 Checking the Wiring (page 49)

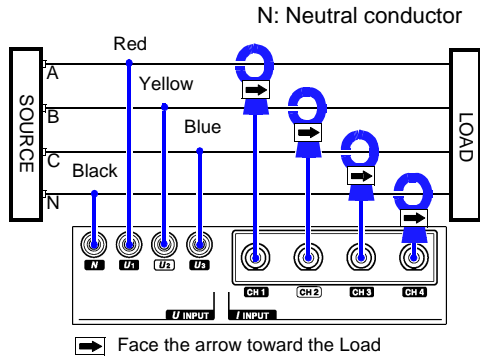


The connection for neutral current I4 is not checked.

4.2.3 Wiring for Multiple-Circuit Measurement


NOTE

- One 3169-20/21 unit can measure multiple circuits of the same voltage system (same transformer).
- The wiring mode is common to all circuits.
- Measurements of the current channels will not be zeroed when the device is not connected to the clamp-on sensor.

Single-phase 2-wire, 4circuits (1P2W X 4)

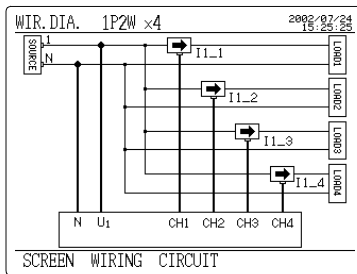


Wiring diagram screen

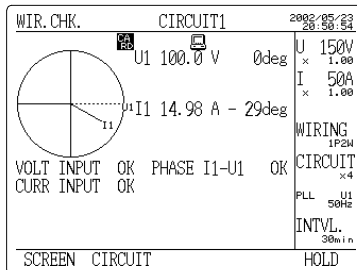

F2 changes the circuit to display.


Wiring check screen (Power factor: 0.87)

❖ 4.2.5 Checking the Wiring (page 49)

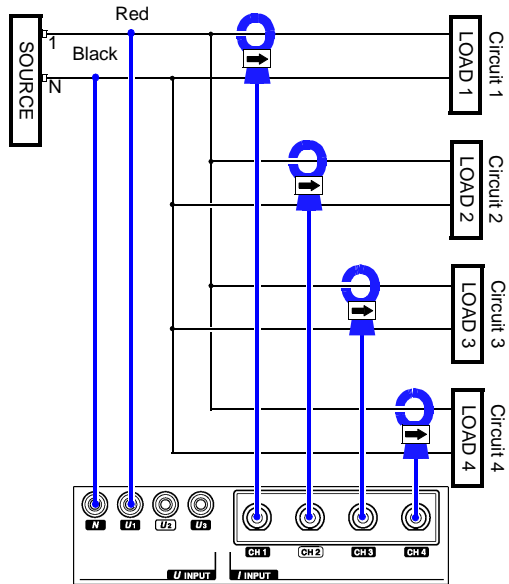


➡ Face the arrow toward the Load

Single-phase 3-wire, 2circuits (1P3W X 2)

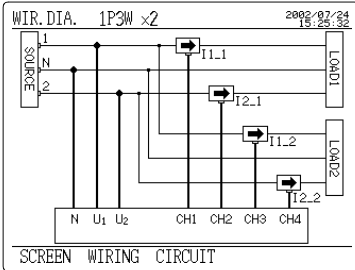


Wiring diagram screen

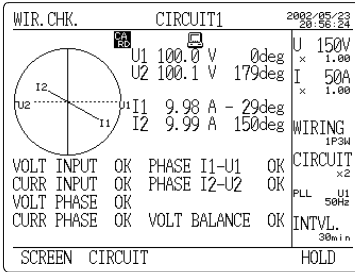


F2 changes the circuit to display.

Wiring check screen (Power factor: 0.87)


❖ 4.2.5 Checking the Wiring (page 49)

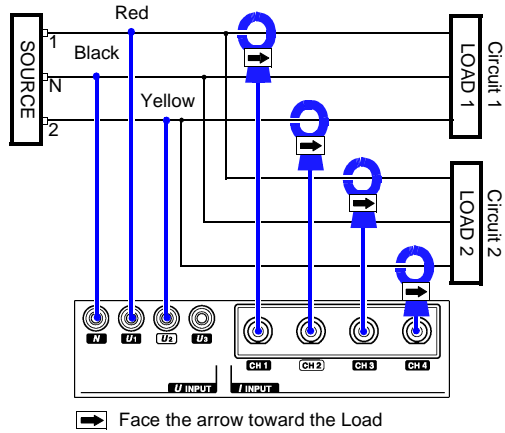

Three-phase 3-wire, 2circuits (3P3W2M X 2) 2-Power-Meter Method

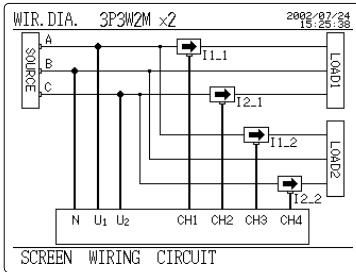


Wiring diagram screen

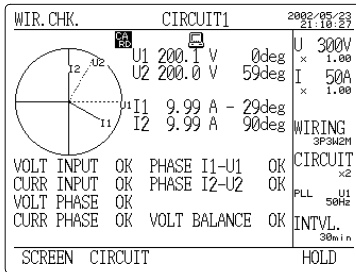

F2 changes the circuit to display.

Wiring check screen (Power factor: 1)

❖4.2.5 Checking the Wiring (page 49)

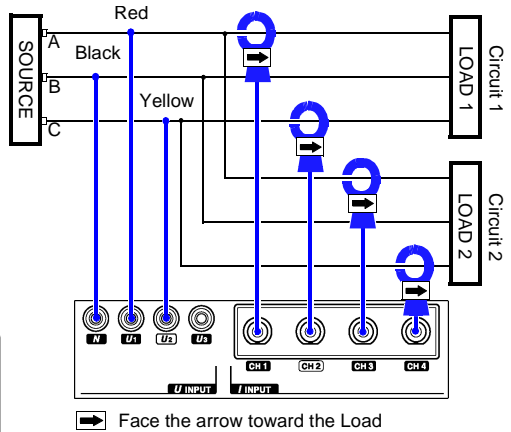

4.2.4 Connection to a Line to Be Measured


Connect the voltage cables and clamp-on sensor to the line to be measured, while referring to the wiring diagram.

NOTE

To ensure correct measurement results, follow the instrument setup and wiring instructions precisely.

Connecting the Voltage Cords to the Lines to be Measured



(Example)

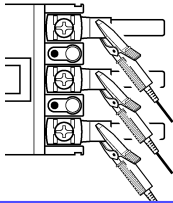

Clip securely to metal parts such as connection screws or bus bars at the power side.


Clamping a Sensor to a Line to be Measured

(Example: 9660)




Clamp around only one conductor. Measurement is not possible if the clamp is placed around two lines in a single-phase circuit, or three lines in a three-phase circuit.

(Example: 9660)

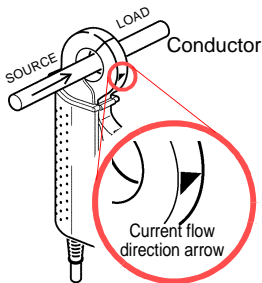

(Example: 9661)

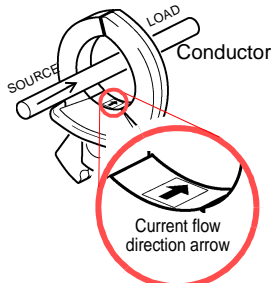

The arrows on the clamp indicating the direction of current flow should point toward the load side.

4.2.5 Checking the Wiring

Check to see if the 3169-20/21 is correctly connected to the line to be measured.

MEASURE



Press the **MEASURE** key to display the measurement screen.




F1 SCREEN Press the **F1 (SCREEN)** key to display the selection window.



Select "WIRING CHECK" by using the cursor key.




F1 select Press the **F1 (select)** key; the wiring check will appear. The connection status is shown by the voltage, current vectors, and the connection check result.

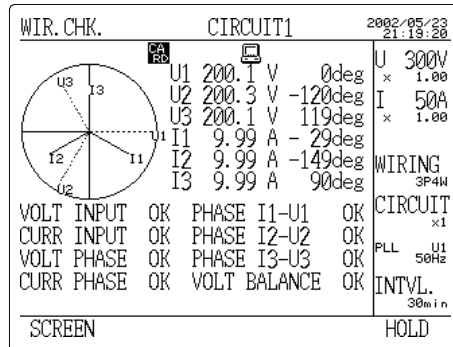

NOTE

- The wiring check function may indicate incorrect connection even when the actual connection is correct, or vice versa. Check the vectors and measurements as well.
- The length of a vector is not related to input level. It only indicates the phase relationship.
- A minus sign (-) with the phase angle indicates a lag phase angle; a plus sign (+) indicates a lead phase angle. The phase angle is calculated using the phase of the fundamental of the PLL source (U₁) as a reference.
- The voltage levels, current levels, and phase angles displayed on-screen are those of the fundamental component.

(1) Display the Screen of Another Circuit (when measuring multiple circuits).

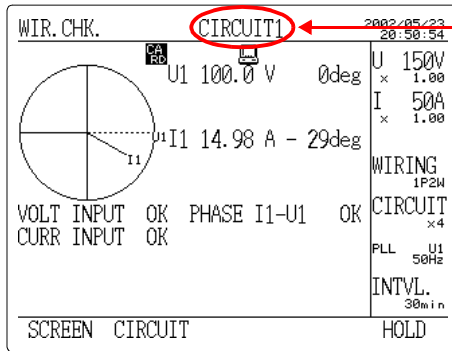

Indicates the circuit No.



F2 **CIRCUIT** Pressing the **F2** (**CIRCUIT**) key repeatedly changes the circuit on the screen as follows:

"Circuit 1" → "Circuit 2" → "Circuit 3" → "Circuit 4"



(Up to Circuit 2 when 1P3W or 3P3W2M is selected.)

(2) Change the Voltage Range.



Pressing the **U Range** key repeatedly changes the range as follows:

"150 V" → "300 V" → "600 V"



(3) Change the Current Range.



Pressing the **I RANGE** key repeatedly changes the range for the circuit on the screen as follows:

When using the 9660/9695-03:	"5 A" → "10 A" → "50 A" → "100 A" ↑ └──────────────────────────┘
When using the 9661:	"5 A" → "10 A" → "50 A" → "100 A" → "500 A" ↑ └──────────────────────────┘
When using the 9667: 5000/500-A range	"5 kA" / "500 A" fixed
When using the 9669:	"100 A" → "200 A" → "1 kA" ↑ └──────────────────────────┘
When using the 9694:	"500 mA" → "1 A" → "5 A" ↑ └──────────────────────────┘
When using the 9695-02:	"500 mA" → "1 A" → "5 A" → "10 A" → "50 A" ↑ └──────────────────────────┘

❖5.2.9 Setting the Clamp-On Sensor (page 67)

The table below lists the wiring check items and criteria.

Wiring Check Item	Criteria
Voltage input	NG when input is less than 10% of the voltage range
Current input (except for I4 when 3P4W4I is selected)	NG when input is less than 1% of the current range
Phase difference (current - voltage)	NG when each current is not within ± 60 degrees with respect to the voltage of each phase
Voltage phase	1P3W: NG when U2 is not within 180 degrees ± 10 degrees with respect to U1 3P3W2M: NG when the phase lead of U2 is not within 60 degrees ± 10 degrees with respect to U1 3P3W3M, 3P4W, 3P4W4I: NG when the phase lag of U2 is not within 120 degrees ± 10 degrees with respect to U1, or when the phase lead of U3 is not within 120 degrees ± 10 degrees with respect to U1
Current phase (for three-phase lines only)	NG when current phase sequence is negative
Voltage balance (except for 1P2W)	NG when one voltage is 70% or less than the other voltage


The wiring check result is NG.

The voltage input is NG.	<ul style="list-style-type: none"> • Do the voltage clips grip the wires properly? • Is the voltage cable properly inserted into the voltage input terminal of the 3169-20/21?
The current input is NG.	<ul style="list-style-type: none"> • Is the clamp-on sensor securely inserted into the current input terminals? • Is the set current range too large for the input level?
The voltage phase is NG.	<ul style="list-style-type: none"> • Are the voltage cables connected to the correct terminals?
The current phase is NG.	<ul style="list-style-type: none"> • Does the arrow of the clamp-on sensor point to the load side? • Is the clamp-on sensor connected to the correct terminals?
The phase difference (I-U) is NG.	<ul style="list-style-type: none"> • Are the voltage cables and clamp-on sensor properly connected? • Does the arrow of the clamp-on sensor point to the load side? • Is the power factor of the line to be measured too low, such as 0.5 or less?
The voltage balance is NG.	<ul style="list-style-type: none"> • Does the connection method of the line to be measured differ from that set? • Do the voltage clips grip the wires properly? • Is the voltage cable properly inserted into the voltage input terminal?


4.3 Measurement Range

This unit is not equipped with an automatic range selection function, therefore you must select the operation ranges. The display and effective measurement ranges (ranges where accuracy is certain) of measurement ranges are as follows.

Voltage Range

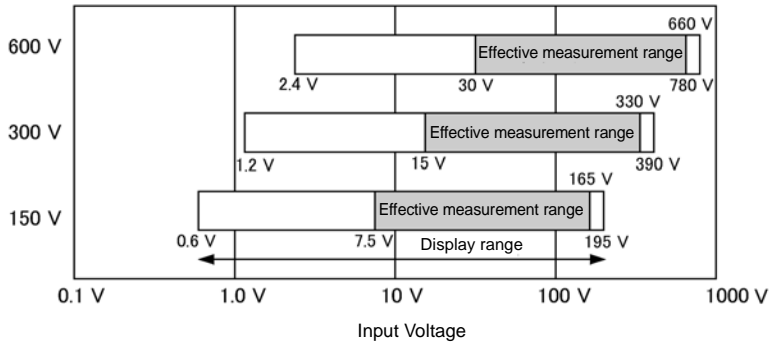

4.3 Measurement Range

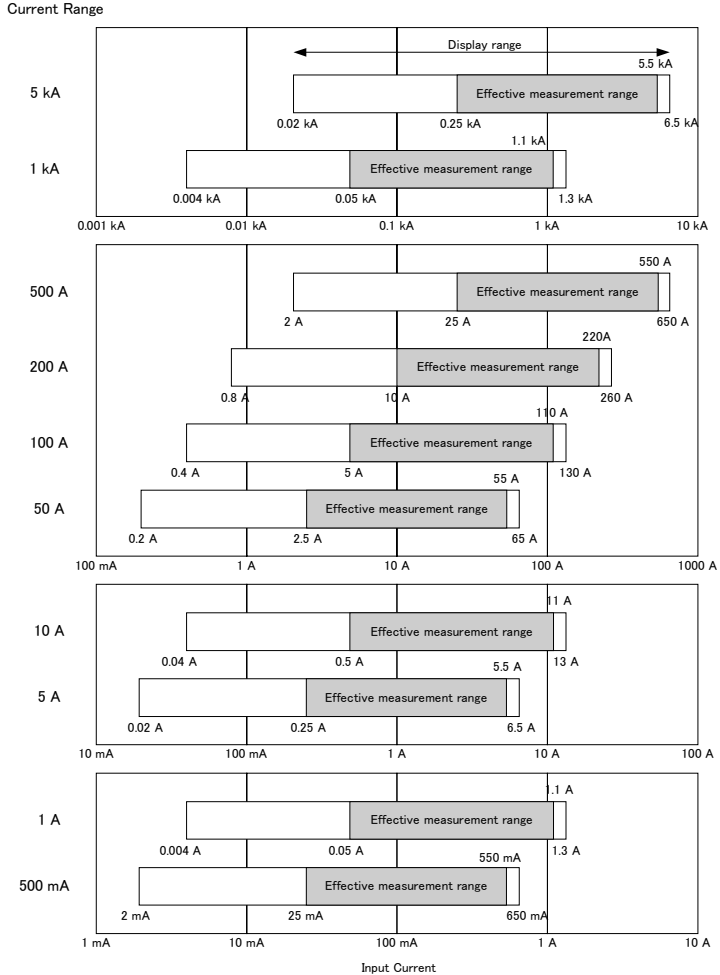**NOTE**

- **Dynamic range overflow warning**
This warning is indicated when the input signal exceeds the maximum or falls below the minimum (out of crest factor) during waveform acquisition (A/D conversion). In either case, change the range setting to that with a sufficient margin. (Indicator: I_{ow} I_{ow})
- **Over range**
This warning is indicated when a measurement exceeds 130% f.s. of the range. Change the range setting to that with a sufficient margin. (Indicator: over)

Setting Procedure

5

5.1 Setting Screen

SET UP



F 5


NEXT
SCR

Press the **SET UP** key to display the setting screen.

SET UP	1/5 MEASUREMENT	2002/07/24 16:26:28
WIRING	1P2W	x1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	0661	
change		NEXT SCR

F 5

Pressing the **F5** (NEXT SCR) key or **SET UP** key repeatedly switches the screen as follows:

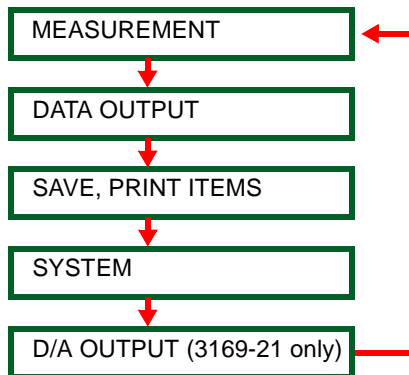

5.2 Setting on the Measurement Setting Screen (MEASUREMENT)

The measurement setting screen enables the items below to be set.

- Wiring method
- Number of circuits to be measured
- Synchronization method
- Reactive-power-meter method
- Display averaging times
- Voltage range
- VT (PT) ratio
- Current range
- CT ratio
- Clamp-on sensor

SET UP 1/5 MEASUREMENT		2002/07/24 16:26:28
WIRING	1P2W	×1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
change	NEXT SCR	

Measurement setting screen

5.2.1 Setting the Wiring Method

SET UP	1/5 MEASUREMENT	2002/07/24 16:26:28
WIRING	1P2W	×1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
change		NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

F5 NEXT SCR



Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "WIRING."

F1 change



Press the **F1** (change) key to display the selection window.

1P2W	Measurement of a single-phase, 2-wire line
1P3W	Measurement of a single-phase, 3-wire line
3P3W2M	Measurement of a three-phase, 3-wire line (by the two-power-meter method) *: Select this method to measure three-phase power by measuring the current at two positions only.
3P3W3M	Measurement of a three-phase, 3-wire line (by the three-power-meter method)
3P4W	Measurement of a three-phase, 4-wire line
3P4W4I	Measurement of a three-phase, 4-wire line (used for neutral conductor measurement)

Select a wiring method by using the cursor key.

F1 select



Press the **F1** (select) key.


NOTE

3P3W2M and 3P3W3M

The active power measurement results will be the same regardless of whether measurement is conducted by 3P3W2M (i.e., 2-voltage, 2-current, 2-power-meter method) or 3P3W3M (i.e., 3-voltage, 3-current, 3-power-meter method). When 3P3W2M is selected, U3 and I3 will be calculated based on the U1, U2, or I1, I2 measurements.

Set the Number of Circuits to Be Measured.

SET UP 1/5 MEASUREMENT		2002/07/24 16:27:03
WIRING	1P2W	<input checked="" type="checkbox"/>
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
x1		x2
x3		x4
		NEXT SCR



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to Number of Circuits.


Set the number of circuits by using the function keys.

1P2W	X 1 (1 circuit), X 2 (2 circuits), X 3 (3 circuits), X 4 (4 circuits)
1P3W	X 1 (1 circuit), X 2 (2 circuits)
3P3W2M	X 1 (1 circuit), X 2 (2 circuits)
3P3W3M,3P4W, 3P4W4I	X 1 (1 circuit) only

The 3169-20/21 can measure multiple circuits of the same voltage system (same transformer).

5.2.2 Setting the Synchronization Method

SET UP 1/5 MEASUREMENT		2002/07/24 16:27:14
WIRING	1P2W	x1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
PLL	FIXED	NEXT SCR

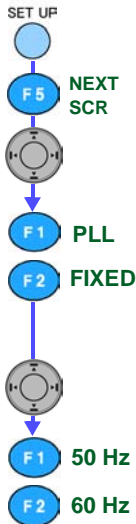

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "**SAMPLING.**"

Set the synchronization method by using the function keys.

PLL	PLL (default)
FIXED	Fixed clock

* Normally set to PLL

Move the cursor to Measured Frequency.

Set to the frequency of the line to be measured by using the function keys. (Default: 50 Hz)



What is PLL?

PLL stands for "Phase Locked Loop" and is a phase synchronization circuit. The 3169-20/21 uses PLL to generate a frequency synchronized with the fundamental wave (50/60 Hz) and multiplied by 128, to sample input waveforms of voltage and current. If there is no PLL input (PLL source), there is no means of sampling input waveforms, and calculation cannot be performed. This is called "PLL unlock." When there is no PLL source, the 3169-20/21 switches the synchronization method over to the internal clock (50/60 Hz fixed clock).

5.2.3 Setting the Reactive-Power-Meter Method

SET UP 1/5 MEASUREMENT		2002/07/24 18:27:21
WIRING	1P2W	×1
SAMPLING	PT	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	↓	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
OFF	ON	NEXT SCR

SET UP



F5

NEXT
SCR

F1

OFF

F2

ON

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "**VAR METHOD.**"

Use the function keys to set whether to use the reactive-power-meter method.

OFF	Do not use the reactive-power meter method (default).
ON	Use the reactive-power-meter method.

NOTE

When the reactive-power-meter method is OFF (not to be used), the signs for lag and lead will not be added to reactive-power measurements.

◆ **What is the Reactive-power-meter method?**

- The reactive-power-meter method is used to measure reactive power directly from the voltage and current, like a reactive power meter installed for large power consumers.
- With some voltage and current waveforms, reactive power, apparent power, and power factor measurements may vary depending on the reactive-power-meter setting.
- <Influence on the Power Factor>

When the reactive-power-meter method is OFF (not to be used), the power factor is obtained as a ratio of the active power to apparent power. Because calculation includes the harmonic component, the power factor will decrease as the harmonic current increases.

When the reactive-power-meter method is ON (to be used), the power factor is obtained as a cosine of the phase difference between the fundamental voltage and fundamental current. Calculation is performed using the fundamental component only, and does not include the harmonic component.

5.2.4 Setting the Display Average Times

SET UP 1/5 MEASUREMENT		2002/07/24 16:27:25
WIRING	1P2W	×1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
change		NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)



Move the cursor to "**AVERAGE TIMES.**"



change

Press the **F1** (change) key to display the selection window.

1 (default), 2, 5, 10, 20 times

Select a display averaging times by using the cursor key.



select

Press the **F1** (select) key.

NOTE

- The display averaging times is the number of moving averages calculated for instantaneous values (i.e., instantaneous measurements excluding harmonics).
- The moving average is obtained by totaling the set number of measurements and dividing the sum by the set number. After the set number of measurements have been acquired, the 3169-20/21 discards the oldest measurement data every time it acquires new measurement data, and continues to average the set number of measurements.

$$\text{Value to be displayed on-screen} = (Z_{(n - (N - 1))} + Z_{(n - (N - 2))} + \dots + Z_n) / N$$


Z_n : The nth measurement

N: Set number

If measurements fluctuate drastically, use the averaging function to stabilize the values displayed on-screen.

5.2.5 Setting the Voltage Range

SET UP 1/5 MEASUREMENT		2002/07/24 16:27:34
WIRING	1P2W	×1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	CH1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
-	+	NEXT SCR



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "**VOLTAGE RANGE.**"

Set the voltage range by using the function keys as follows:
(Select a range from 150 V, 300 V, and 600 V.)

-	Changes to a smaller range.
+	Changes to a larger range.

NOTE

A range can be selected using the **U RANGE** key on the measurement screen.

5.2.6 Setting the VT Ratio (PT Ratio)

SET UP 1/5 MEASUREMENT		2002/07/24 18:27:33
WIRING	1P2W	×1
SAMPLING	PLL	50Hz
VAR METHOD	OFF	
AVERAGE TIMES	1	
VOLTAGE	U1	
RANGE	300 V	
VT(PT)	0001.00	
CURRENT	CH1	
RANGE	100 A	
CT	0001.00	
SENSOR	9661	
-	+	NEXT SCR

SET UP



F5

NEXT
SCR

F1



-

F2



+

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to the "VT" digit to be changed.

Set the VT ratio by using the function keys as follows:

(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)

-	Decrements the number.
+	Increments the number.

Setting range: 0.01 to 9999.99 (Default: 1.00)

NOTE

This ratio is used for measurement conducted on the secondary side of an external voltage transformer (VT) to convert the voltage measured to the primary voltage to be displayed.




What is VT?

VT stands for "voltage transformer." It is also referred to as "PT" (potential transformer). VT is used in high-voltage measurement to convert (step-down) the voltage measured to a smaller level and supply the conversion result to an instrument.

VT ratio (voltage transformation ratio): A ratio used to convert the secondary voltage of VT to the primary voltage.

5.2.7 Setting the Current Range

SET UP 1/5 MEASUREMENT		2002/07/24 16:28:31		
WIRING	1P2W	×4		
SAMPLING	PLL	50Hz		
VAR METHOD	OFF			
AVERAGE TIMES	1			
VOLTAGE	U1			
RANGE	300 V			
VT(PT)	0001.00			
CURRENT	CH1	CH2	CH3	CH4
RANGE	100 A	100 A	100 A	100 A
CT	0001.00	0001.00	0001.00	0001.00
SENSOR	9661	9661	9661	9661
-	+	NEXT SCR		



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "**CURRENT RANGE**" of the circuit to be changed.

Set the current range by using the function keys as follows:

-	Changes to a smaller range.
+	Changes to a larger range.

Clamp-On Sensor and Current Range


9660/ 9695-03	5 A, 10 A, 50 A, 100 A
9661	5 A, 10 A, 50 A, 100 A, 500 A
9667-5 kA (5000 A range)	5 kA
9667-500 A (500 A range)	500 A
9669	100 A, 200 A, 1 kA
9694	0.5 A, 1 A, 5 A
9695-02	0.5 A, 1 A, 5 A, 10 A, 50 A

NOTE

The selectable current ranges vary depending on the clamp-on sensor used. When the connection method is 3P4W4I, a current range can be set for I4 that differs from that for I1 to I3.

5.2.8 Setting the CT Ratio

SET UP 1/5 MEASUREMENT		2002/07/24 16:28:35		
WIRING	1P2W	×4		
SAMPLING	PLL	50Hz		
VAR METHOD	OFF			
AVERAGE TIMES	1			
VOLTAGE	U1			
RANGE	300 V			
VT (PT)	0001.00			
CURRENT	CH1	CH2	CH3	CH4
RANGE	100 A	100 A	100 A	100 A
CT	0001.00	0001.00	0001.00	0001.00
SENSOR	9661	9661	9661	9661
-	+			NEXT SCR



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to the digit of "**CT**" of the circuit to be changed.

Set the CT ratio for each circuit by using the function keys.
(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)

-	Decrements the number.
+	Increments the number.

Setting range: 0.01 to 9999.99 (Default: 1.00)

NOTE

This ratio is used for measurement on the secondary side of an external current transformer (CT) to convert the current measured to the primary current to be displayed.




What is CT?

CT stands for "current transformer." CT is used to measure large current to reduce the current measured to a smaller level and supply the conversion result to an instrument.

CT ratio (current transformation ratio): A ratio used to convert the secondary current of CT to the primary current.

5.2.9 Setting the Clamp-On Sensor

SET UP 1/5 MEASUREMENT		2002/07/24 16:28:41		
WIRING	1P2W	×4		
SAMPLING	PLL	50Hz		
VAR METHOD	OFF			
AVERAGE TIMES	1			
VOLTAGE	U1			
RANGE	300 V			
VT(PT)	0001.00			
CURRENT	CH1	CH2	CH3	CH4
RANGE	100 A	100 A	100 A	100 A
CT	0001.00	0001.00	0001.00	0001.00
SENSOR	9661	9661	9661	9661
change				NEXT SCR

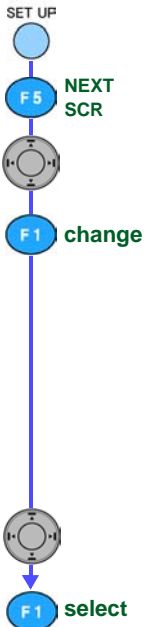

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the measurement setting screen. (3169-20: SET UP 1/4, 3169-21: SET UP 1/5)

Move the cursor to "**SENSOR**" of the circuit to be changed.

Press the **F1** (change) key to display the selection window.

9660	Use the 9660 CLAMP ON SENSOR (100 A rated).
9661	Use the 9661 CLAMP ON SENSOR (500 A rated).
9667-5kA	Use the 9667 FLEXIBLE CLAMP ON SENSOR (5000 A rated). (5000 A range)
9667-500A	Use the 9667 FLEXIBLE CLAMP ON SENSOR (500 A rated). (500 A range)
9669	Use the 9669 CLAMP ON SENSOR (1000 A rated).
9694	Use the 9694 CLAMP ON SENSOR (5 A rated).
9695-02	Use the 9695-02 CLAMP ON SENSOR (50 A rated).
9695-03	Use the 9695-03 CLAMP ON SENSOR (100 A rated).

Select a clamp-on sensor for each circuit by using the cursor key.

Press the **F1** (select) key.

NOTE

- When the wiring method is 3P4W4I, a clamp-on sensor can be set for I4 that differs from that for I1 to I3.
- The range setting for the 9667 sensor is made on the sensor (500/5000 A range). When power to the 9667 is turned off, then back on again, the range is always set to 5000 A. When the 9667 is to be used for an extended period with the AC adapter, we recommend that a battery be used as well.

5.3 Setting on the Data Output Setting Screen (DATA OUTPUT)

The data output setting screen allows setting of the following items.

- Time-series measurement start method
- Time-series measurement ending method
- Interval
- Medium for saving data
- Data file name
- Device to be connected to RS-232C
- Medium to which the screen is to be copied

SET UP 2/5 DATA OUTPUT		2002/07/24 18:15:23
MEAS. START	TIME	2002/07/24 19:30
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
MANUAL	TIME	JUST NEXT SCR

5.3.1 Setting the Time-Series Measurement Start Method

SET UP 2/5 DATA OUTPUT		2002/07/24 19:15:25
MEAS. START	TIME	2002/07/24 19:30
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
MANUAL TIME	JUST	NEXT SCR

SET UP



F5 NEXT SCR



F1 MANUAL



F3 JUST



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)

Move the cursor to "MEAS. START."

Set the time-series measurement start method using the function **MANUAL** keys.

MANUAL	Manual Measurement starts when the START/STOP key is pressed (default setting).
TIME	Measurement starts at the set time.*1
JUST	Measurement will begin as soon as the internal clock reaches a time that is evenly divisible by the set interval. Example: If the current time is 10:41:22, and the measurement interval is set to 30 minutes, then measurement will start at 11:00:00 (:00 minutes [or :60 minutes] is evenly divisible by 30 as $60/30 = 2$ with no remainder) with the next recording at 11:30:00, 12:00:00, etc.). If the interval is set to 10 minutes, measurement will start at 10:50:00.

*1: The 3169-20/21 will enter into waiting status when the **START/STOP** key is pressed to start measurement. Measurement will then start at the set time.

NOTE

The **START/STOP** key is effective only when the measurement screen is displayed. It is not effective when the setting screen is displayed.

Notes for long term measurement

The longest measurement period of this unit is one year. The instrument will automatically stop time-series measurement when one year has elapsed since the start of the time-series measurement. To continue measurement, restart the unit and then resume the time-series measurement.

- The measurement settings are saved even after restarting the unit.
Set the time again when using the "TIME" start and stop.

Set the Time-Series Measurement Start Time (when the start method is set to time).

SET UP 2/5 DATA OUTPUT	2002/07/24 19:15:42
MEAS. START	TIME
	2002/07/24 19:30
MEAS. STOP	MANUAL
INTERVAL TIME	30 min
SAVE IN...	PC CARD
DATA FILE NAME	
RS CONNECTION	PC
DISPLAY COPY	PC CARD
- +	AUTO NEXT SCR



F1 -

F2 +

F3 AUTO

Move the cursor to the digit to be changed in the measurement start date and time.

Set the start time using the function keys.

(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)


-	Decrements the number.
+	Increments the number.
AUTO	Set the start time to any subsequent time.

NOTE

If the set measurement start time has already expired when the **START/STOP** key is pressed, the 3169-20/21 displays an error message and starts measurement by the "Just" start method, which commences measurement at the optimal time.

5.3.2 Setting Time-Series Measurement Stop Method

SET UP 2/5 DATA OUTPUT		2002/07/24 19:16:04	
MEAS. START	MANUAL		
MEAS. STOP	MANUAL		
INTERVAL TIME	30 min		
SAVE IN..	PC CARD		
DATA FILE NAME			
RS CONNECTION	PC		
DISPLAY COPY	PC CARD		
MANUAL	TIME	TIMER	NEXT SCR

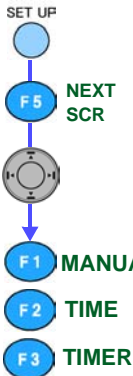

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)

Move the cursor to "**MEAS. STOP**."

Set the time-series measurement stop method using the function keys.


MANUAL	Manual Measurement stops when the START/STOP key is pressed (default setting).
TIME	Measurement stops at the exact time set by users.
TIMER	Measurement stops when the duration set by the users has elapsed. 1 second to 8784 hours

NOTE

When the stop method is set to Time or Timer, if the **START/STOP** key is pressed during measurement, a message is displayed requesting confirmation. Pressing the **F1** (yes) key stops measurement immediately.

Set the Time-Series Measurement Stop Time (when the stop method is set to Time).

SET UP 2/5 DATA OUTPUT		2002/07/24 13:16:23
MEAS. START	MANUAL	
MEAS. STOP	TIME 2002/07/25 01:00	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
-	+	NEXT SCR



Move the cursor to the digit to be changed in the measurement stop date and time.

Set the measurement stop time using the function keys.

(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)

-	Decrements the number.
+	Increments the number.

5.3 Setting on the Data Output Setting Screen (DATA OUTPUT)

Set the Timer (when the stop method is set to Timer).

SET UP 2/5 DATA OUTPUT		2003-07-24 19:16:56
MEAS. START	MANUAL	
MEAS. STOP	TIMER	
	0000:01:00	
INTERVAL TIME	1 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
-	+	NEXT SCR



Move the cursor to the digit of the timer setting to be changed.

Set the timer using the function keys.

(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)

5

-	Decrements the number.
+	Increments the number.

5.3.3 Setting Interval

SET UP 2/5 DATA OUTPUT		2002/07/24 19:17:18
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
change		NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)



Move the cursor to "**INTERVAL TIME.**"

F1



change

Press the **F1** (change) key to display the selection window.

Standard interval	1, 2, 5, 10, 15, 30 s, 1, 2, 5, 10, 15, 30, 60 m
Short-term interval	Full wave (Each one cycle), 100m, 200m, 500ms

Select an interval with the cursor key.

F1



select

Press the **F1** (select) key.

NOTE

- The data storable time varies depending on the setting of the data storage items and interval.
- The setting ranges for data output items vary depending on the setting of the interval.
- When the interval is 30 seconds or less, harmonic measurement-data output and printer output are not available.
- When a short-term interval is selected, the 3169-20/21 outputs the instantaneous values of normal measurement only. The file will be in binary format and must be converted to a text file to be read into a generally available spreadsheet software. For details on spreadsheet software, see the CD-R supplied with the 3169-20/21.

5.3 Setting on the Data Output Setting Screen (DATA OUTPUT)

NOTE

Observe the following precautions when setting the interval to 2 seconds or less:

- Use the optional PC card.
- Be sure to format the PC card.
- Insert the PC card before starting time-series measurement.
- Do not remove the PC card during measurement.
- Do not perform communications.
- Do not operate the keys too frequently.

5.3.4 Setting Medium for Saving Data

SET UP 2/5 DATA OUTPUT		2002/07/24 18:17:18
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
CARD	MEMORY	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.



**NEXT
SCR**

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)



Move the cursor to "**SAVE IN...**"



CARD

Set the medium for saving data using the function keys.



MEMORY

NOTE

When the PC card is selected, if a PC card is not installed or the 3169-20/21 fails to write data onto the PC card, the data will be stored in the internal memory as backup data.

5.3.5 Setting the Data File Name

SET UP 2/5 DATA OUTPUT		2002/07/24 19:18:01
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME	ABCDEFGH	
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
change	NEXT SCR	

SET UP



Press the **SET UP** key to display the setting screen.

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)



Move the cursor to "**DATA FILE NAME.**"

F1

change

Press the **F1** (Change) key to display the file-name input window.



Set the file name using the cursor and function keys (up to 8 letters and numbers).

F1

input

Cursor	Selects characters
input	Inputs the selected character
BS	Backspace (deletes the inputted character)
enter	Accepts the file name entry
cancel	Exits the file name input window unchanged

F2

BS

F3

enter

F4

cancel


NOTE

If no file name is set, the 3169-20/21 will automatically name the file.

❖ 7.1 Types of Files (page 115)

5.3.6 Setting Device to Be Connected to the RS-232C

SET UP 2/5 DATA OUTPUT		2002/07/24 19:18:53
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
PC	PRINTER	NEXT SCR

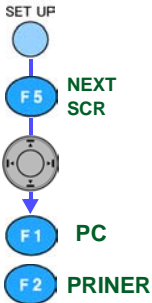

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)

Move the cursor to "**RS CONNECTION.**"

Use the function keys to set the device to be connected to the RS-232C interface (Default: PC).

5.3.7 Setting the Medium to which the Screen is to be Copied

SET UP 2/5 DATA OUTPUT		2002/07/24 18:18:55
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
CARD	MEMORY	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.



F5 NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data output setting screen. (3169-20: SET UP 2/4, 3169-21: SET UP 2/5)



Move the cursor to "**DISPLAY COPY**."



F1 CARD

Use the function keys to set the medium to which the screen is to be copied.



F2 MEMORY



F3 PRINTER

NOTE

The **F3** (Printer) key will not be displayed on the screen unless the printer is selected as the device to be connected to the RS-232C.

5.4 Setting on the Save/Print Items Setting Screen (SAVE, PRINT ITEMS)

The save/print items setting screen allows the following items to be set or displayed:

- Display the number of output data items and storable time.
- Set the normal measurement-data output items.
- Set the integrated power and demand measurement-data output.
- Set the harmonic measurement-data output items.

5.4.1 Checking the number of output data items and Storable Time

SET UP 3/5 SAVE, PRINT ITEMS				2003/05/13 13:27:04
		NO. OF ITEMS		25
NORM. MEAS.	ON	INST. AVE.	OFF	ON
HARMONIC	OFF	MAX. MIN.	OFF	OFF
INTEG. & DEM.		ON		
SAVE TIME AVAIL.		114d 4h 4m 0s		
OFF		ON		
				NEXT SCR


← Displays the number of output data items.

Make sure the number of output data items does not exceed 256 when reading stored data into a generally available spreadsheet.

Save/print items setting screen

Displays the storable time

Displays the data storable time of the set medium for saving data (PC card/internal memory) (xxx days: xx hours: xx minutes: xx seconds)



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the save/print items setting screen. (3169-20: SET UP 3/4, 3169-21: SET UP 3/5)

5.4.2 Setting Normal Measurement-Data Output Items

SET UP 3/5 SAVE, PRINT ITEMS		2003/05/13 15:24:08	
		NO. OF ITEMS 25	
NORM. MEAS.	ON	INST.	OFF
		AVE.	ON
HARMONIC	OFF	MAX.	OFF
		MIN.	OFF
INTEG. & DEM.		ON	
SAVE TIME AVAIL. 114d 4h 4m 0s			
OFF	ON	NEXT SCR	

SET UP



Press the **SET UP** key to display the setting screen.

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the save/print items setting screen. (3169-20: SET UP 3/4, 3169-21: SET UP 3/5)



Move the cursor to "**NORM. MEAS.**"



ON

Press the **F2** (ON) key to turn ON normal measurement.



Move the cursor to "**INST.**"(instantaneous values.)



OFF

Turn data output ON/OFF using the function keys.



ON


Turn the output of other items (average, maximum, and minimum values) ON/OFF in a similar way.

NOTE

- Normal measurement data includes, for each channel, the voltage, current, active power, reactive power, apparent power, power factor, frequency, and each phase power.
- Detailed setting is not available for each piece of normal measurement data above.

5.4.3 Setting Integrated power and Demand Measurement-data Output Items

SET UP 3/5 SAVE, PRINT ITEMS				2003-05-13
				15:24:33
			NO. OF ITEMS	25
NORM. MEAS.	ON	INST.	OFF	
		AWE.	ON	
HARMONIC	OFF	MAX.	OFF	
		MIN.	OFF	
INTEG. & DEM.		ON		
SAVE TIME AVAIL.		114d 4h 4m 0s		
OFF	ON	NEXT SCR		



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the save/print items setting screen. (3169-20: SET UP 3/4, 3169-21: SET UP 3/5)

Move the cursor to "**INTEG. & DEM..**"

Press the **F2** (ON) key to turn ON the integrated power/demand measurement data.

NOTE

- Integrated power/demand measurement data includes the total integrated power, integrated power within interval, demand value, and maximum demand value.
- Detailed setting cannot be performed for each piece of integrated power/demand measurement data above.

5.4.4 Setting Harmonic Measurement-data Output Items

(1) Set the Harmonic Measurement-data Output.

SET UP 3/5 SAVE, PRINT ITEMS		2003/05/13 15:24:54	
		NO. OF ITEMS 48	
NORM. MEAS.	ON	INST.	OFF
		AVE.	ON
HARMONIC	ON	MAX.	OFF
		MIN.	OFF
INTEG. & DEM.		ON	
SAVE TIME AVAIL. 59d 10h 31m 0s			
OFF	ON	DETAILS	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

F5 NEXT SCR



Press the **F5** (NEXT SCR) key to display the save/print items setting screen. (3169-20: SET UP 3/4, 3169-21: SET UP 3/5)

Move the cursor to "**HARMONIC.**"

F2 ON



Press the **F2** (ON) key to turn ON harmonic measurement.

Move the cursor to "**INST.**"(instantaneous values.)

F1 OFF



Turn data output ON/OFF using the function keys.

F2 ON



Turn the output of other items (average, maximum, and minimum values) ON/OFF in a similar way.

(2) Set the Details of Harmonic Measurement-data Output.

SET UP 3/5 SAVE, PRINT ITEMS		2003/05/13	
Detailed settings		NO. OF ITEMS 67	
CIRCUIT	ON		
CH	U1 ON U2 OFF U3 OFF P ON		
	I1 ON I2 OFF I3 OFF I4 OFF		
TYPE	LEVEL ON %ofFND OFF PHASE OFF		
	THD ON TOTAL OFF WAVE OFF		
ORDER	SELECT		
	*01 02 *03 04 *05 06 *07 08 *09 10		
	*11 12 *13 14 15 16 17 18 19 20		
	21 22 *23 24 25 26 27 28 29 30		
	31 32 *33 34 35 36 37 38 39 40		
SAVE TIME AVAIL.	42d 13h 46m 0s		
OFF	ON		RETURN

F3 DETAILSPress the **F3** (Detail Setting) key on the save/print items setting screen to display the harmonic output detail setting screen.**F1** OFF**F2** ON

Turn the output of each piece of data ON/OFF using the cursor and function keys.

NOTE

- The waveform data is not printed in the auto print function.
- The waveform data of U3 and I3 are not saved in the 3P3W2M wiring system.

Select Order for Output.

SET UP 3/5 SAVE, PRINT ITEMS					2003.05.13
Detailed settings					NO. OF ITEMS 67
CIRCUIT	1 ON				
CH	U1 ON	U2 OFF	U3 OFF	P ON	
	I1 ON	I2 OFF	I3 OFF	I4 OFF	
TYPE	LEVEL ON	%ofFND OFF	PHASE OFF		
	THD ON	TOTAL OFF	WAVE OFF		
ORDER	SELECT				
	*01	02	*03	04	*05
	*11	12	*13	14	*15
	21	22	23	24	25
	31	32	33	34	35
	06	07	08	09	10
	16	17	18	19	20
	26	27	28	29	30
	36	37	38	39	40
SAVE TIME AVAIL.	42d 13h 46m 0s				
ALL	ODD	EVEN	SELECT	RETURN	



Move the cursor to "ORDER."



Set orders using the function keys.



When **F4** (SELECT) is selected



Move the cursor to the order of the data to be output.



Turn data output ON/OFF using function keys.
(When an asterisk "*" marks the order, the data will be output.)



5.5 Setting on the System Setting Screen

The system setting screen allows setting of the following items:

- Total harmonic distortion (THD) calculation method
- Harmonic order for display
- RS-232C
- LCD backlight
- Beep sound
- ID No.
- Clock
- Language
- Display of the Version/serial No.

SET UP 4/5 SYSTEM		2002/07/24 19:23:55
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
THD-F	THD-R	NEXT SCR

5.5.1 Setting the THD Calculation Method

SET UP 4/5 SYSTEM		2002/07/24 19:23:55
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
THD-F	THD-R	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)



Move the cursor to "**THD.**"



THD-F

Set the THD calculation method using the function keys.



THD-R


THD-F	Total Harmonic Distortion (Fundamental reference) Ratio of the harmonic to the fundamental (default)
THD-R	Total Harmonic Distortion (RMS reference) Ratio of the harmonic to the total harmonic RMS values, including fundamental and all other harmonics

NOTE

The selected THD calculation method will be used for both the harmonic voltage and harmonic current.

5.5.2 Setting the Harmonic Order for Display

SET UP 4/5 SYSTEM		2002/07/24 19:24:09
THD	THD F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
ALL ORD	ODD	NEXT SCR



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)

Move the cursor to "**HARM. DISP. ORD.**"

Use the function keys to set the harmonic orders to be displayed on the harmonic graph screen and harmonic list screen.

5.5.3 Setting the RS-232C

SET UP 4/5 SYSTEM	2002/07/24 19:24:16
THD	THD-F
HARM. DISP. ORD.	ALL ORDERS
RS-232C	
BAUD RATE	9600bps
TERMINATOR	CR+LF
FLOW CONTROL	NONE
BACKLIGHT	AUTO
BEEP SOUND	ON
ID	001
TIME AND DATE	2002/07/24 19:22:56
LANGUAGE	ENGLISH
SERIAL NUMBER	020437412 Ver. 1.02
change	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.



F5 NEXT
SCR

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)



Move the cursor to "**BAUD RATE.**"



F1 change

Press the **F1** (change) key to display the selection window.

2400 bps, 9600 bps, 19200 bps, 38400 bps



Select a baud rate using the cursor keys.



F1 select

Press the **F1** (select) key.



Move the cursor to the "**TERMINATOR.**"



F1 CR+LF

Set the end-of-line code using the function keys.



F2 CR



Move the cursor to "**FLOW CONTROL.**"

Set the flow control using the function keys.



F1 NONE



F2 XON/XOFF




F3 RTS/CTS



F4 BOTH

5.5.4 Setting the LCD Backlight

SET UP 4/5 SYSTEM		2002/07/24 19:24:25	
THD	THD-F		
HARM. DISP. ORD.	ALL ORDERS		
RS-232C			
BAUD RATE	9600bps		
TERMINATOR	CR+LF		
FLOW CONTROL	NONE		
BACKLIGHT	AUTO		
BEEP SOUND	ON		
ID	001		
TIME AND DATE	2002/07/24 19:22:56		
LANGUAGE	ENGLISH		
SERIAL NUMBER	020437412 Ver. 1.02		
OFF	ON	AUTO	NEXT SCR

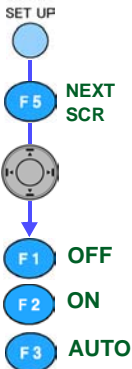

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)

Move the cursor to "**BACKLIGHT.**"

Set the LCD backlight using the function keys.

OFF	The backlight remains OFF.
ON	The backlight remains ON.
AUTO	The backlight is automatically turned OFF 5 minutes after the last key operation (Default).

NOTE

The life of the backlight is approximately 50,000 hours.

5.5.5 Setting the Beep Sound

SET UP 4/5 SYSTEM		2002/07/24 19:24:28
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
OFF	ON	NEXT SCR

SET UP

NEXT
SCR

OFF



ON

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)


Move the cursor to "**BEEP SOUND.**"

Set the beep sound using the function keys.

OFF	The beep sound is not used.
ON	The beep sound is used (Default).

5.5.6 Setting the ID No.

SET UP 4/5 SYSTEM		2002/07/24 19:24:33
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412	Ver. 1.02
-	+	NEXT SCR



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)

Move the cursor to "ID."

(Cursor ◀: Moves left to next digit; Cursor ▶: Moves right to next digit)

-	Decrements the number.
+	Increments the number.

Setting range: 001 to 999 (Default: 001)

NOTE

Set a number for the 3169-20/21 to identify the instrument. This ID No. is included in the setting data at the head of the stored data. The No. does not have to be set, if not necessary.

5.5.7 Setting the Clock

SET UP 4/5 SYSTEM		2002/07/24 19:24:36
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
-	+	UPDATE NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)



Move the cursor to "**TIME AND DATE.**"



-

Set the date and time using the function keys.



+

-	Decrements the number.
+	Increments the number.



UPDATE

Press the **F3** (UPDATE) key.

NOTE

Set the clock using the time signal or other similar device before starting measurement.

5.5.8 Setting the Language

SET UP 4/5 SYSTEM	2002/07/24 19:24:43
THD	THD-F
HARM. DISP. ORD.	ALL ORDERS
RS-232C	
BAUD RATE	9600bps
TERMINATOR	CR+LF
FLOW CONTROL	NONE
BACKLIGHT	AUTO
BEEP SOUND	ON
ID	001
TIME AND DATE	2002/07/24 19:22:56
LANGUAGE	ENGLISH
SERIAL NUMBER	020437412 Ver.1.02
JAPANESE ENGLISH	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)



Move the cursor to "**LANGUAGE.**"



change

Press the **F1** (change) key to display the selection window.

JAPANESE, ENGLISH, DEUTSCH (GERMAN), ITALIANO (ITALIAN), CHINESE SIMPLE, CHINESE TRAD, FRANCAIS (FRENCH), ESPANOL (SPANISH), KOREAN

Set the language for display using the cursor keys.



select

Press the **F1** (select) key.

5.5.9 Displaying the Serial No. and Version

```

SET UP  4/5 SYSTEM                               2002/07/24
                                                19:23:55
THD      THD-F
HARM. DISP. ORD.  ALL ORDERS
RS-232C
  BAUD RATE      9600bps
  TERMINATOR     CR+LF
  FLOW CONTROL   NONE
BACKLIGHT  AUTO
BEEP SOUND  ON
ID         001
TIME AND DATE 2002/07/24 19:22:56
LANGUAGE     ENGLISH
SERIAL NUMBER 02043741Z Ver. 1.02
THD-F      THD-R                                NEXT SCR
  
```

SET UP

NEXT
SCR

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen. (3169-20: SET UP 4/4, 3169-21: SET UP 4/5)

The serial No. and version will appear at "**SERIAL NUMBER.**"

Measurement Method

6

Please read the Usage Notes (page 7) and Connecting to Lines to be Measured (page 35) before making connections.


6.1 Measuring the Voltage, Current, and Power (Instantaneous Values)

MAIN	INST.	CIRCUIT1	2002/06/13 00:06:59
U1	208.00 V	I1	4.9935 A
U2	207.97 V	I2	4.9958 A
U3*	207.80 V	I3*	4.9940 A
Uave	207.93 V	Iave	4.9944 A
P	1.5610kW	Q	0.8937kvar
		S	1.7987kVA
		PF	0.8678
		f	49.998 Hz
WP+	0.00000kWh		0:00:00
SCREEN		CIRCUIT AVERAGE	HOLD

Indicates the item currently displayed



Switches over to the screen for the data of another circuit (when multiple circuits are measured)

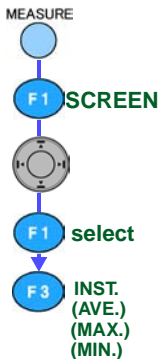

Press the **MEASURE** key to display the measurement screen.

Press the **F1** (SCREEN) key to display the selection window.

Select "**MAIN**" using the cursor key.

Press the **F1** (select) key to display the main screen.

Every time the **F3** key is pressed, the item to be displayed changes as follows:

"INST." → "AVE." → "MAX." → "MIN."



NOTE

- When 3P3W2M is selected as the wiring method, U3 and I3 are obtained by vector calculation. See the Appendix (page 195).
- When 3P3W3M is selected, P1, P2, and P3 are data for reference purposes only.
- When 3P4W or 3P4W4I is selected, the voltage is obtained as the phase to neutral voltage.
- When multiple circuits are measured, use the **F2** (CIRCUIT) key to display the data of other circuits.

6.2 Measuring the Power of Each Phase (Instantaneous values)

POWER	INST.	CIRCUIT1	2002.05.13 00:11:43
P1	0.8655kW	Q1	0.4963kvar
P2	0.8684kW	Q2	0.4949kvar
P3	0.8673kW	Q3	0.4964kvar
P	2.6013kW	Q	1.4876kvar
S1	0.9977kVA	PF1	0.8675
S2	0.9995kVA	PF2	0.8688
S3	0.9994kVA	PF3	0.8679
S	2.9966kVA	PF	0.8681

WIRING 3P4W
CIRCUIT x1
PLL U1 50Hz
INTVL. 1min

SCREEN AVERAGE HOLD

Indicates the item currently displayed

MEASURE



Press the **MEASURE** key to display the measurement screen.



F1 SCREEN

Press the **F1** (SCREEN) key to display the selection window.



F1 select

Select "**POWER**" using the cursor key.



F3
INST.
(AVE.)
(MAX.)
(MIN.)

Press the **F1** (select) key to display the power display screen of each channel.

Every time the **F3** key is pressed, the item to be displayed changes as follows:

"INST." → "AVE." → "MAX." → "MIN."



NOTE

- When 3P3W2M is selected, the active power (P1, P2), reactive power (Q1, Q2), apparent power (S1, S2), and power factor (PF1, PF2) of each channel are meaningless data. Use the total values of P, Q, S, and PF only. The data of each channel is used as reference data for checking the wiring.
- When 3P3W3M is selected, the active power (P1, P2, P3), reactive power (Q1, Q2, Q3), and apparent power (S1, S2, S3) of each channel are data for reference purposes only.
- When the reactive-power-meter method is OFF, the reactive power (Q1, Q2, Q3) and apparent power (S1, S2, S3) of each channel are obtained by calculation using the line to line voltage.
- When multiple circuits are measured, use the **F2** (CIRCUIT) key to display the data of other circuits.

6.3 Displaying a Waveform

Display the voltage and current waveforms of a selected channel.

MEASURE



Press the **MEASURE** key to display the measurement screen.



SCREEN

Press the **F1** (SCREEN) key to display the selection window.




Select "**WAVEFORM**" using the cursor key.



select

Press the **F1** (select) key to display the waveform display screen.

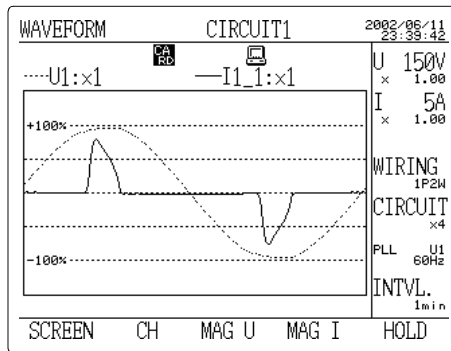

NOTE

- The voltage waveform in the 3P3W3M wiring system is the phase voltage waveform referring to a virtual neutral point.
- The waveform of U3 and I3 is not displayed on the screen in the 3P3W2M is set as the wiring method.

(1) Change the Channel to be Displayed.

F2 CH Every time the **F2** (CH) key is pressed, the channel to be displayed is changed as follows.

1P2W	U1, I1 → U1, I1 → U1, I1 → U1, I1 Circuit1 Circuit2 Circuit3 Circuit4 ↑
1P3W	U1, I1 → U2, I2 → U1, I1 → U2, I2 Circuit1 Circuit1 Circuit2 Circuit2 ↑
3P3W2M	U1, I1 → U2, I2 → U1, I1 → U2, I2 Circuit1 Circuit1 Circuit2 Circuit2 ↑
3P3W3M	U1, I1 → U2, I2 → U3, I3 ↑
3P4W	U1, I1 → U2, I2 → U3, I3 ↑
3P4W4I	U1, I1 → U2, I2 → U3, I3 → I4 ↑

(2) Change the Voltage Y-Axis Magnification.

6

F3 MAG U Every time the **F3** (MAG U) key is pressed, the voltage y-axis magnification is changed as follows:

X1/2 → X1 → X2 → X5 → X10
↑

(3) Change the Current Y-Axis Magnification.

F4 MAG I Every time the **F4** (MAG I) key is pressed, the current y-axis magnification is changed as follows:


X1/2 → X1 → X2 → X5 → X10
↑

6.4 Measuring the Average, Maximum, and Minimum Values

Measures the average, maximum, and minimum values of the voltage, current, power, and harmonic

Set the parameters on the measurement setting, data output setting, and save/print items setting screens.

❖5 Setting Procedure (page 55)

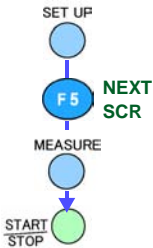

Press the **MEASURE** key to display the measurement screen.

Press the **START/STOP** key to start measurement. When the time-series measurement has started, the LED lights up, indicating that the 3169-20/21 is performing measurement. When the measurement start method is set to "Time" or "Just", the 3169-20/21 will stand by until the start time (the LED blinks) and start measurement at the start time.

<Ending of Time-Series Measurement>



The time-series measurement stops by the method set on the data-output setting screen. Press the **START/STOP** key to stop the measurement when the stopping method is set to manual, or stop it immediately in any other mode.

NOTE

- If time-series measurement has been started by pressing the **START/STOP** key, the average, maximum, and minimum values will be displayed on the screen.
- The display shows the average, maximum, and minimum values of the measurements taken up to the current time from the start of time-series measurement.
- The pieces of data to be stored or printed out are the average, maximum, and minimum values of every interval.
- The average, maximum, and minimum values are not displayed for harmonic measurements.

6.4.1 Displaying the Voltage, Current, and Power (Average, Maximum, and Minimum Values)

MAIN	INST.	CIRCUIT1	2002-06-13	
	F3	F2	00:00:59	
U1	208.00 V	I1	4.9935 A	U × 300V
U2	207.97 V	I2	4.9958 A	I × 1.00
U3*	207.80 V	I3*	4.9940 A	I × 5A
Uave	207.93 V	Iave	4.9944 A	I × 1.00
P	1.5610kW	Q	0.8937kvar	WIRING
		S	1.7987kVA	3P3W2M
		PF	0.8678	CIRCUIT
		f	49.998 Hz	x2
WP+	0.00000kWh		0:00:00	PLL U1
				50Hz
				INTVL.
				1min
SCREEN	CIRCUIT	AVERAGE		HOLD

Indicates the item currently displayed

F2 ← Changes the circuit to display (when multiple circuits are measured).

F1 SCREEN



F1 select



F3 INST.
(AVE.)
(MAX.)
(MIN.)

Press the **F1** (SCREEN) key on the measurement screen to display the selection window. Select "**MAIN**" using the cursor key.

Press the **F1** (select) key to display the main screen.

Every time the **F3** key is pressed, the item to be displayed is changed as follows:

"INST." → "AVE." → "MAX." → "MIN."

↑

NOTE

When multiple circuits are measured, use the **F2** (CIRCUIT) key to display the data of other circuits.

6.4.2 Displaying the Average, Maximum, and Minimum Power Measurements of Each Phase

POWER	INST.	CIRCUIT1	2002/06/13 00:11:43
P1	0.8655kW	Q1	0.4963kvar
P2	0.8684kW	Q2	0.4949kvar
P3	0.8673kW	Q3	0.4964kvar
P	2.6013kW	Q	1.4876kvar
S1	0.9977kVA	PF1	0.8675
S2	0.9995kVA	PF2	0.8688
S3	0.9994kVA	PF3	0.8679
S	2.9966kVA	PF	0.8681
SCREEN		AVERAGE	HOLD

Indicates the item currently displayed

F1 SCREEN

Press the **F1** (SCREEN) key on the measurement screen to display the selection window.



Select **"POWER"** using the cursor key.

F1 select

Press the **F1** (select) key to show the power display screen of each channel.

F3 INST.
(AVE.)
(MAX.)
(MIN.)

Every time the **F3** key is pressed, the item to be displayed is changed as follows:

"INST." → "AVE." → "MAX." → "MIN."



NOTE

When multiple circuits are measured, use the **F2** (CIRCUIT) key to display the data of other circuits.


❖ 6.2 Measuring the Power of Each Phase (Instantaneous values) (page 97)

6.5 Measuring Integrated power

Measures integrated power (Wh)

INTEG.	CIRCUIT1	VAR	2002/06/13 00:17:38
RUNNING	CRB		
ACTIVE POWER			U 300V x 1.00
CONSUMP.	WP+	0.07360kWh	I 5A x 1.00
REGEN.	WP-	-0.00000kWh	
REACTIVE POWER			WIRING 3P3W2M
LAG	WQ+	0.05421kvarh	CIRCUIT x2
LEAD	WQ-	-0.00000kvarh	PLL 50Hz U1
START TIME	2002/06/13	00:15:00	INTVL. 1min
STOP TIME	2002/07/13	00:00:00	
ELAPSED TIME		0:02:32	
SCREEN	CIRCUIT		HOLD

F2 ← Changes the circuit to display
(when multiple circuits are measured).

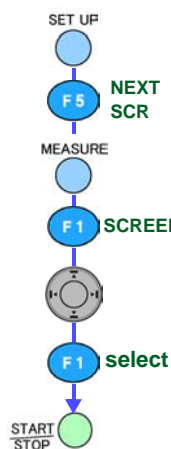

Set the measurement start/stop methods, interval, medium for saving data, and data output items on the measurement setting, data-output setting, and save/print items setting screens.

❖ 5 Setting Procedure (page 55)

Press the **MEASURE** key to display the measurement screen.

Press the **F1** (SCREEN) key to display the selection window.

Select "**INTEGRATE**" using the cursor key.

Press the **F1** (select) key to show the integrated power display screen.

Press the **START/STOP** key to start integrated power measurement.


NOTE


- The display shows the total integrated power from the start of time-series measurement.
- When the reactive-power-meter method is OFF, the display does not show the lead (WQ-) values of the integrated reactive power.
- When multiple circuits are measured, use the **F2** (CIRCUIT) key to display data of other circuits.

6.6 Performing Demand Measurement

Performs demand measurement, which repeats integration measurement at every demand interval.

DEMAND		CIRCUIT1	VAR	2002/06/13 00:17:58
RUNNING				
PREVIOUS VALUE	LATEST VALUE	U 300V × 1.00		
P 1.7339kW	WP+ 0.01581kWh	I 5A × 1.00		
Q 1.2769kvar	WP- -0.00000kWh			
PF 0.8052	WQ+ 0.01164kvarh			
	WQ- -0.00000kvarh			
MAX DEMAND		WIRING 3P3W2H		
P 1.7339kW	2002/06/13 00:16:00	CIRCUIT ×2		
START TIME	2002/06/13 00:17:00	PLL U1 50Hz		
STOP TIME	2002/06/13 00:18:00	INTVL. 1min		
ELAPSED TIME	0:00:32			
SCREEN	CIRCUIT	HOLD		

 **F2** Changes the circuit to display
(when multiple circuits are measured).

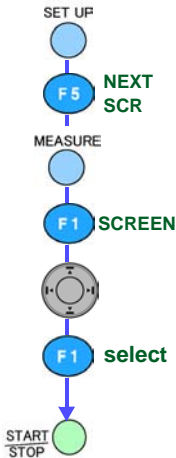

Set the measurement start/stop methods, interval, medium for saving data, and data output items on the measurement setting, data-output setting, and save/print items setting screens.
 ❖5 Setting Procedure (page 55)

Press the **MEASURE** key to display the measurement screen.

Press the **F1** (SCREEN) key to display the selection window.

Select "**DEMAND**" using the cursor key.

Press the **F1** (select) key to show the demand display screen.

Press the **START/STOP** key to start demand measurement.

NOTE

- The display shows the demand at every interval (previous value), the integrated power within each interval (latest value), the maximum demand from the start of time-series measurement, and the time of occurrence.
- When the reactive-power-meter method is OFF, the display does not show the lead (WQ-) values of the integrated reactive power.
- When multiple circuits are measured, use the **F2** (CIRCUIT) key to display data of other circuits.

6.7 Measuring Harmonic

Harmonic level	Level of each order of harmonic
Harmonic content	Content of each order of harmonic as a percentage of the fundamental
Harmonic-voltage (current) phase angle	Phase angle of each order of harmonic with respect to the phase of the fundamental component of U_1
Harmonic-power phase angle	Power factor of each order of harmonic expressed as an angle

Harmonic-Voltage-Level List Screen

U1	[V]	[%]	[deg]	U1	ORD 01	U	150V
104.72	100.00	-15.99	1.00	104.72 V	I	5A	
0.17	0.16	154.16	1.00	100.00 %	x	1.00	
0.09	0.09	154.16	1.00	0.00deg			
0.07	0.07	154.16	1.00	TOTAL	WIRING		
0.03	0.03	154.16	1.00	104.75 V	IP2M		
0.02	0.02	154.16	1.00	THD-F	CIRCUIT		
0.04	0.04	154.16	1.00	2.35 %	x4		
0.01	0.01	154.16	1.00	f	U1		
0.01	0.01	154.16	1.00	59.950 Hz	60Hz		
0.04	0.04	154.16	1.00		INTVL.		
					1min		

Harmonic level, Harmonic content, and phase-angle data of the specified order
The order is changed using \leftarrow/\rightarrow of the cursor key.

Total value up to the 40th piece of data

Total harmonic distortion (THD-F or THD-R)

* Not shown for power data

Harmonic level

Harmonic content

Phase angle

Frequency

6.7.2 Displaying a Harmonic Graph

MEASURE



Press the **MEASURE** key to display the measurement screen.

F1

SCREEN




Select "**HARMONIC GRAPH**" using the cursor key.

F1

select

Press the **F1** (select) key to display the harmonic graph display screen.

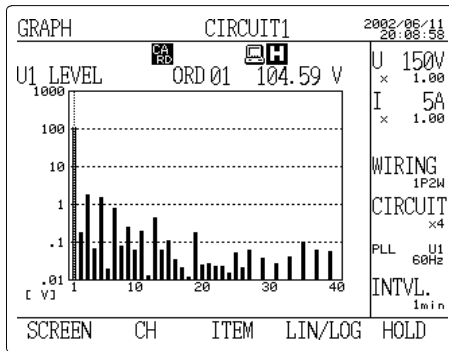

F2

F3

❖ (1) Change the Channel to be Displayed. (page 111)


❖ (2) Change the Item to be Displayed. (page 111)

NOTE


Graphs of the harmonic level, content, and phase angle are available for the voltage, current, and power.

Harmonic level	Level of each order of harmonic
Harmonic content	Content of each order of harmonic as a percentage of the fundamental
Harmonic-voltage (current) phase angle	Phase angle of each order of harmonic with respect to the phase of the fundamental component of U_1
Harmonic-power phase angle	Power factor of each order of harmonic expressed as an angle


Harmonic-current-level graph screen

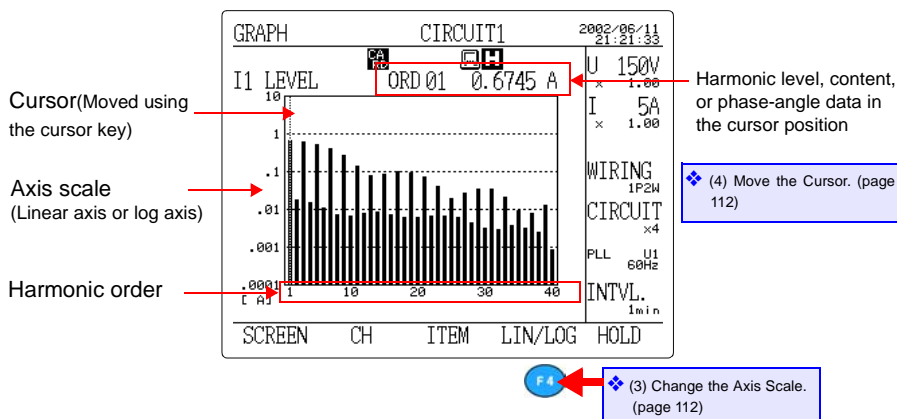

Harmonic-current phase-angle graph screen

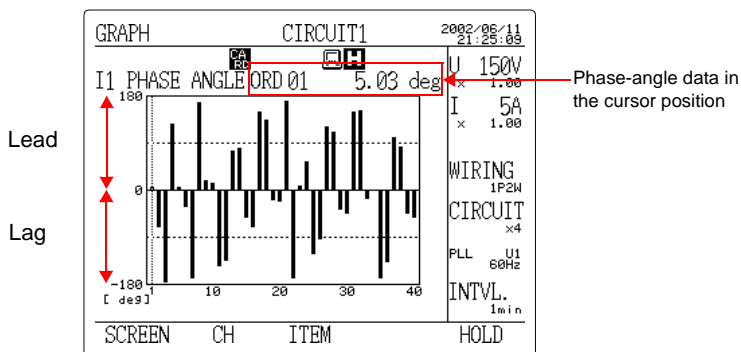

Phase-angle data for each order of harmonic

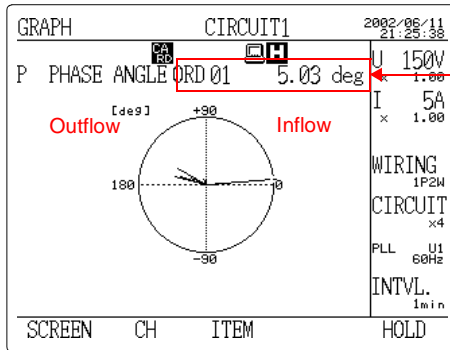


The order is changed using \leftarrow/\rightarrow of the cursor key. The vector of the on-screen order is marked with "+" at its tip.

NOTE

- In the event of inflow, an order of harmonic flows into the load. In the event of outflow, the harmonic flows out from the load.
- The length of the vector represents the ratio of the apparent power of the order of harmonic as a percentage of the apparent power of the fundamental component.
- The x-axis represents active power and the y-axis represents reactive power. They are plotted on log axes.
- When the reactive-power-meter method is turned ON on the measurement setting screen, the harmonic-power phase angle is expressed as a number between 0 and ± 180 degrees. When the reactive-power-meter method is OFF, the phase angle is expressed as a number between 0 and ± 180 degrees.

(1) Change the Channel to be Displayed.

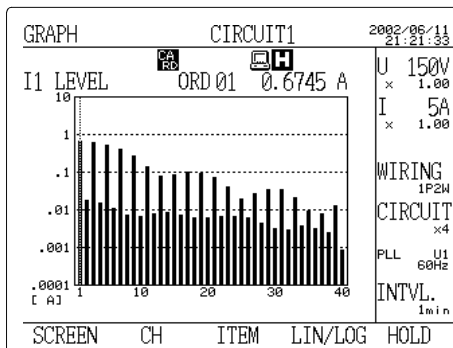

Press the **F2** (CH) key to display the selection window.

1P2W	U1, I1, P
1P3W	U1, U2, I1, I2, P
3P3W2M	U1, U2, U3, I1, I2, I3, P
3P3W3M	U1, U2, U3, I1, I2, I3, P
3P4W	U1, U2, U3, I1, I2, I3, P
3P4W4I	U1, U2, U3, I1, I2, I3, I4, P

*: When multiple circuits are set, I and P are followed by a circuit number. (Ex., I1_1, I1_2, P_1, P_2)



Select a channel to be displayed using the cursor key.



Press the **F1** (select) key.

(2) Change the Item to be Displayed.



Press the **F3** (ITEM) key to display the selection window.

Level, Percentage, Phase angle



Select an item to be displayed using the cursor key.



Press the **F1** (select) key.

(3) Change the Axis Scale.

LIN/
LOG



Press the **F4** (LIN/LOG) key to change the axis scale.

NOTE

- When the y-axis represents the linear scale (log scale), if the **F4** (LIN/LOG) key is pressed, the scale is changed to log (linear).
- The full scale of the linear axis depends on the range.

(4) Move the Cursor.



Press   of the cursor key to move the cursor (dotted line) on the screen. The level of each order of harmonic, content, or phase angle at the cursor position is shown as a number.

(5) Change the Harmonic Order to be Displayed.

Select "All order" or "Odd order" as the harmonic order to be displayed.

❖ 5.5.2 Setting the Harmonic Order for Display (page 87)

6.8 Displaying on a Zoom Screen

ZOOM		2002/08/13 08:18:33	
U1		199.89	V
I1	_1	4.9917	A
P1	_1	0.8655	kW
PF1	_1	0.8675	
f		49.995	Hz
SCREEN	ITEM	HOLD	

MEASURE



Press the **MEASURE** key to display the measurement screen.

**SCREEN**

Press the **F1** (SCREEN) key to display the selection window.



Select "**ZOOM**" using the cursor key.

**select**

Press the **F1** (select) key.



Select an item to be changed using the cursor key.

**ITEM**

Press the **F2** (ITEM) key to display the selection window.



Select an item to be displayed using the cursor key.

**select**

Press the **F1** (select) key to display the selected item on a zoom screen.

NOTE

- Display on a zoom screen is available for the instantaneous value and integrated power in normal measurement only.
- On a zoom screen, the **U RANGE** and **I RANGE** keys are disabled.

6.9 Holding Displayed Measurement Data

F5 HOLD

MAIN	INST.	CIRCUIT1	2002-05-13 00:06:53
U1	208.00 V	I1	4.9935 A
U2	207.97 V	I2	4.9958 A
U3*	207.80 V	I3*	4.9940 A
Uave	207.93 V	Iave	4.9944 A
P	1.5610kW	Q	0.8937kvar
		S	1.7987kVA
		PF	0.8678
		f	49.998 Hz
WP+	0.00000kWh		0:00:00
SCREEN CIRCUIT AVERAGE			HOLD

Lights up when the displayed measurement is held



When the **F5** (HOLD) key is pressed on a measurement screen, the on-screen measurement data will be held. Pressing the **F5** key again releases the Hold.

NOTE

- The **START/STOP** key is disabled during Hold.
- If the **SAVE** key is pressed for manual data storage during Hold, the held instantaneous value is saved.
- The automatic-output function during time-series measurement outputs data of every interval, regardless of whether the Hold function is ON.

Loading and Saving Settings and Measured Data

7

7.1 Types of Files

Types of Files

File	Mode		File Name	Format	Remarks
Setting file			69SET00.SET to 69SET99.SET #####.SET	Text	
Measurement data file	Automatic output	Standard interval	69MEAS00.CSV to 69MEAS99.CSV #####.CSV	Text	
		Short-term interval	69INST00.BIN to 69INST99.BIN #####.BIN	Binary	
	Manual (Not during time-series measurement)		69MANU00.CSV to 69MANU99.CSV	Text	
Waveform data file	Automatic output	Standard interval	69WAVE00.WUI to 69WAVE99.WUI #####.WUI	Binary	
	Manual (Not during time-series measurement)		69MANU00.WUI to 69MANU99.WUI	Binary	
Backup data file	Automatic output	Standard interval (measurement data)	69BACK00.CSV to 69BACK99.CSV	Text	Stored in the interval memory only
		Standard interval (waveform data)	69BACK00.WUI to 69BACK99.WUI	Binary	
		Short-term interval (measurement data)	69BACK00.BIN to 69BACK99.BIN	Binary	
Screen copy file	Manual		69BMP00.BMP to 69BMP99.BMP	BMP	

- ##### represents a file name set by a user.
- The same file cannot be stored in both the PC card and the internal memory.
- When the medium for saving data is set to PC card, if the PC card is not installed or the 3169-20/21 fails to write data to the PC card, the data will be stored in the internal memory as a backup data file (automatic output data only).
- The PC card and internal memory each hold up to 100 files: measurement data files, waveform data files, backup data files, and screen copy files.
The PC card holds up to 10 setting files. The internal memory holds up to 5 setting files.
- When reading a file in binary format into commercially available spreadsheet software, convert the file into a text file. The CD-R supplied with the 3169-20/21 contains the conversion software.
- For the headers of measurement data, see the list in the "Appendix" (page 197).

Status Data (STATUS)

Status data is added to measurement data files (standard interval). Status data consists of a 10-bit binary number, as shown below. It indicates the occurrence of over-range, excessive input (excessive crest factor), power outage, or other situations that may occur during time-series measurement.

Bit	bit9	bit8	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
Item	PLL	pd	or	ovl4	ovl3	ovl2	ovl1	ovU3	ovU2	ovU1

ov: Excessive input: The file contains data with an excessive crest factor.

or: Over-range: The file contains data exceeding 130% of the range.

pd: A power outage has occurred.

PLL: PLL unlock: PLL unlock has occurred.

For example, if a power outage occurred during time-series measurement, the status data will be shown as "0100000000."

NOTE

The zero of the upper bit may not be indicated on commercially available spreadsheet software.

7.2 Using a PC Card

7.2.1 Selecting a PC Card

WARNING

Use only PC Cards sold by HIOKI.

Compatibility and performance are not guaranteed for PC cards made by other manufacturers. You may be unable to read from or save data to such cards.

HIOKI options

PC cards (includes adapter)

- 9626 PC CARD 32M
- 9627 PC CARD 64M
- 9726 PC CARD 128M
- 9727 PC CARD 256M
- 9728 PC CARD 512M

CAUTION

- PC Cards should always be formatted before use (format the Card within the instrument.)
- When formatting a PC card on a PC, use the FAT-16 format. Formatting a card in FAT-32 format may result in incompatibility problems.
- Do not handle Cards in dusty environments, or where caustic vapors may be present. The connector contacts can be fouled in such conditions.
- 9729 PC Card 1G is not compatible with this instrument.


7.2.2 Inserting and Removing the PC Card

CAUTION

- The PC Card or the instrument can be damaged if the card is inserted forcefully in the wrong direction.
- Never eject a PC Card while it is being accessed by the instrument. Data on the PC Card may be lost.
- Keep the cover closed when a PC Card is not installed.
- When the instrument is to be transported, remove the PC Card and close the cover.


Inserting and Removing the PC Card

Inserting the PC Card

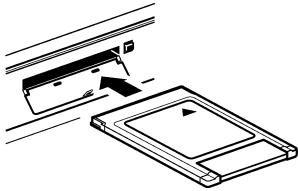

Open the cover and insert the PC card with the arrow facing up and in the direction of the PC card slot, as far as it will go.

Removing the PC Card

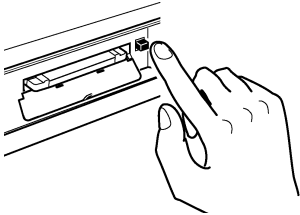


Press the eject button and pull out the PC card.

7.3 File Operation

FILE



Press the **FILE** key to display the file main screen.

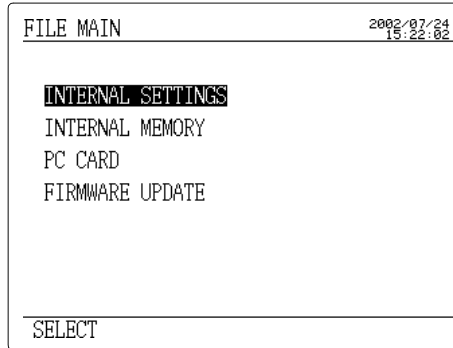

INTERNAL SETTINGS

Loading, saving, deleting, and copying setting files in the internal memory

INTERNAL MEMORY

Formatting and copying the internal memory

PC CARD

Deleting files, loading and saving setting files on the PC card, and formatting the PC card

FIRMWARE UPDATE

Upgrading the 3169-20/21

NOTE

The file list screen shows only the files with the same extension as that of the files used on the 3169-20/21.

7.3.1 Initializing (Formatting) the Internal Memory

Use this function to delete files from the internal memory. In the internal memory, individual files cannot be deleted separately (except for setting files).

FILE



Press the **FILE** key to display the file main screen.



Move the cursor to "**INTERNAL MEMORY.**"

F1

SELECT

Press the **F1** (SELECT) key to display the internal memory-file list screen.

INTERNAL MEMORY				2002/06/13 13:16:37
69MEAS00.CSV	2002/06/13	19:07	4KB	
69MEAS01.CSV	2002/06/13	19:07	4KB	
69BMP00.BMP	2002/06/13	19:07	10KB	
69BMP01.BMP	2002/06/13	19:07	10KB	
69MEAS02.CSV	2002/06/13	19:07	4KB	
69BMP02.BMP	2002/06/13	19:08	10KB	
SELECT ALL COPY FORMAT RETURN				

F4

FORMAT

Press the **F4** (FORMAT) key; a confirmation message will appear.

F1

yes

Press the **F1** (yes) key to start formatting.

*: While the memory is being formatted, the display shows the message "Busy... Please wait." (The message disappears upon completion of formatting.)

F5

RETURN


Press the **F5** (RETURN) key to return to the file main screen.

NOTE

- If the internal memory is formatted, all files in the memory will be deleted. The deleted files cannot be restored.
- Even if data is to be saved on the PC card, we recommend that the internal memory be formatted before time-series measurement is begun, in order to secure space in the memory for backup files in case data fails to be saved on the PC card. If the internal memory is full, data unable to be saved on the PC card will not be backed up.

7.3.2 Initializing (Formatting) the PC Card

The PC card must be formatted when it is used for the first time after purchase. In addition, format the PC card when all files on it are to be deleted.

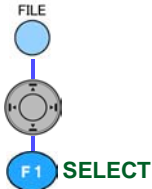

Press the **FILE** key to display the file main screen.

Move the cursor to "**PC CARD.**"

Press the **F1** (SELECT) key to display the PC card-file list screen.

PC CARD		2002/06/13
		20:53:20
69BMP00 .BMP	2002/06/13 00:01	10KB
69BMP01 .BMP	2002/06/13 00:05	10KB
69BMP02 .BMP	2002/06/13 00:52	10KB
69MEAS00 .CSV	2002/06/13 00:07	2KB
MAINMIN .BMP	2002/06/13 00:08	10KB
POWERAVE .BMP	2002/06/13 00:12	10KB
69MEAS01 .CSV	2002/06/13 00:12	2KB
POWERMIN .BMP	2002/06/13 00:12	10KB
69BMP03 .BMP	2002/06/13 10:11	10KB
69MEAS02 .CSV	2002/06/13 00:14	2KB
SET. SAVE LOAD FORMAT <-- RETURN		

If (→) is shown above the **F4** key, use the **F4** (→) key to change the functions for the function keys.



Press the **F3** (FORMAT) key; a confirmation message will appear.



Press the **F1** (yes) key to start formatting.

*: While the memory is being formatted, the display shows the message "Busy... Please wait." (The message disappears upon completion of formatting.)



Press the **F5** (RETURN) key to return to the file main screen.


NOTE

If the PC card is formatted, all files on the PC card will be deleted. The deleted files cannot be restored.

7.3.3 Saving a Setting File

Save the current settings of the 3169-20/21 in the internal memory or on the PC card.

(1) Save in the Internal Memory.

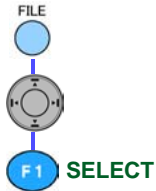

Press the **FILE** key to display the file main screen.

Move the cursor to "**INTERNAL SETTINGS.**"

Press the **F1** (SELECT) key to display the internal setting-file list screen.

INTERNAL SETTINGS		2002/06/13 19:10:04
AB	.SET 2002/06/13 19:08	1KB
CC	.SET 2002/06/13 19:09	1KB
01	.SET 2002/06/13 19:09	1KB
KLMNO	.SET 2002/06/13 19:09	1KB
SET. SAVE LOAD DELETE <-- RETURN		

If (→) is shown above the **F4** key, use the **F4** (→) key to change the functions for the function keys.

Press the **F1** (SET. SAVE) key to display the file-name input window.

Set the file name using the cursor and function keys.

Cursor	Select characters
input	Inputs the selected character.
BS	Backspace (deletes the selected character)


Press the **F3** (enter) key to save the setting file in the internal memory.

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

- The extension for setting files is ".SET" (the extension is added automatically).
- If the **F3** (enter) key is pressed without setting a file name, the 3169-20/21 automatically names the file. "69SETXX.SET" (XX: 00 to 99)
- The internal memory holds up to 5 setting files.

(2) Save on the PC Card.

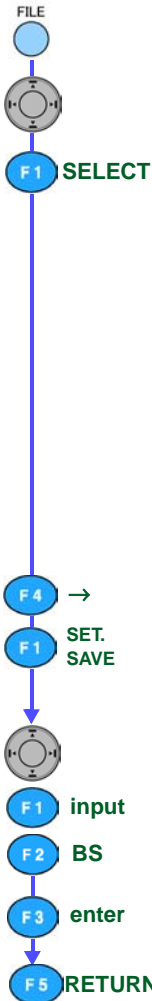

Press the **FILE** key to display the file main screen.

Move the cursor to "**PC CARD.**"

Press the **F1** (SELECT) key to display the PC card-file list screen.

PC CARD		2002/06/13
69BMP00 .BMP	2002/06/13 00:01	10KB
69BMP01 .BMP	2002/06/13 00:05	10KB
69BMP02 .BMP	2002/06/13 00:52	10KB
69MEAS00.CSV	2002/06/13 00:07	2KB
MAINMIN .BMP	2002/06/13 00:08	10KB
POWERAVE.BMP	2002/06/13 00:12	10KB
69MEAS01.CSV	2002/06/13 00:12	2KB
POWERMIN.BMP	2002/06/13 00:12	10KB
69BMP03 .BMP	2002/06/13 10:11	10KB
69MEAS02.CSV	2002/06/13 00:14	2KB
SET. SAVE	LOAD	FORMAT <-- RETURN

If (→) is shown above the **F4** key, use the **F4** (→) key to change the functions for the function keys.

Press the **F1** (SET. SAVE) key to display the file-name input window.

Set the file name using the cursor and function keys.

Cursor	Select characters
input	Inputs the selected character.
BS	Backspace (deletes the selected character)

Press the **F3** (enter) key to save the setting file in the PC card.

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

- The extension for setting files is ".SET" (the extension is added automatically).
- If the **F3** (enter) key is pressed without setting a file name, the 3169-20/21 automatically names the file. "69SETXX.SET" (XX: 00 to 99)
- The PC card holds up to 5 setting files.

7.3.4 Loading a Setting File

Load a setting file on the PC card or in the internal memory into the 3169-20/21, and set the instrument with the settings.

(1) Load a File in the Internal Memory.

FILE



Press the **FILE** key to display the file main screen.



Move the cursor to "**INTERNAL SETTINGS.**"



F1 SELECT

Press the **F1** (SELECT) key to display the internal setting-file list screen.

INTERNAL SETTINGS				2002/06/13 19:10:04
AB	.SET	2002/06/13 19:08	1KB	
CC	.SET	2002/06/13 19:09	1KB	
01	.SET	2002/06/13 19:09	1KB	
KLMNO	.SET	2002/06/13 19:09	1KB	
SET. SAVE LOAD DELETE <-- RETURN				



If (→) is shown above the **F4** key, use the **F4** (→) key to change the functions for the function keys.



Select a file to be load using the cursor key.



F2 LOAD

Press the **F2** (LOAD) key; a confirmation message will appear.



F1 yes

Press the **F1** (yes) key to load the setting file in the internal memory.



F5 RETURN

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

Files cannot be load during time-series measurement.

(2) Load a File on the PC Card.



Press the **FILE** key to display the file main screen.

Move the cursor to "**PC CARD**."

Press the **F1** (SELECT) key to display the PC card-file list screen.

PC CARD		2002/06/14 00:04:20	
69BMP14	.BMP	2002/06/13 19:06	10KB
69BMP15	.BMP	2002/06/13 20:53	10KB
69BMP16	.BMP	2002/06/13 19:08	10KB
69BMP17	.BMP	2002/06/13 19:08	10KB
69BMP18	.BMP	2002/06/13 19:09	10KB
69BMP21	.BMP	2002/06/13 19:09	10KB
012	.SET	2002/06/14 00:03	1KB
69BMP23	.BMP	2002/06/13 19:10	10KB
CARDDEL	.BMP	2002/06/13 20:55	10KB
CARDSAVE	.BMP	2002/06/13 18:50	10KB
SET. SAVE LOAD FORMAT <-- RETURN			

If (→) is shown above the **F4** key, use the **F4** (→) key to change the functions for the function keys.

Select a file to be load using the cursor key.

Press the **F2** (LOAD) key; a confirmation message will appear.

Press the **F1** (yes) key to load the setting file on the PC card.

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

Files cannot be load during time-series measurement.

7.3.5 Deleting a File

(1) Delete a Setting File from the Internal Memory.

FILE



Press the **FILE** key to display the file main screen.



Move the cursor to "**INTERNAL SETTINGS.**"

F1 SELECT

Press the **F1** (SELECT) key to display the internal setting-file list screen.

INTERNAL SETTINGS		2002/06/13 23:49:41
AB	.SET 2002/06/13 19:08	1KB
CC	.SET 2002/06/13 19:09	1KB
01	.SET 2002/06/13 19:09	1KB
*KLMNO	.SET 2002/06/13 19:09	1KB

SET.SAVE LOAD DELETE <-- RETURN

F4 ←

If (←) is shown above the **F4** key, use the **F4** (←) key to change the functions for the function keys.



Select a file to be deleted from the file list.

F1 SELECT

SELECT	Select one file.
ALL	Select all files.

F2 ALL

(the selected file will be marked with an asterisk "*" to its left)

F4 →

Use the **F4** (→) key to change the functions for the function keys.

F3 DELETE

Press the **F3** (DELETE) key; a confirmation message will appear.

F1 yes

Press the **F1** (yes) key to delete the selected file.

F5 RETURN

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

While the cursor is on the selected file, if the **F1** (SELECT) or **F2** (ALL) key is pressed again, the selection is canceled.

(2) Delete a File from the PC Card.




Press the **FILE** key to display the file main screen.

Move the cursor to "**PC CARD.**"

Press the **F1** (SELECT) key to display the PC card-file list screen.

PC CARD		2002/06/13 20:55:03	
*69BMP00	.BMP	2002/06/13 00:01	10KB
69BMP01	.BMP	2002/06/13 00:05	10KB
69BMP02	.BMP	2002/06/13 00:52	10KB
69MEAS00	.CSV	2002/06/13 00:07	2KB
MAINMIN	.BMP	2002/06/13 00:08	10KB
POWERAVE	.BMP	2002/06/13 00:12	10KB
69MEAS01	.CSV	2002/06/13 00:12	2KB
POWERMIN	.BMP	2002/06/13 00:12	10KB
69BMP03	.BMP	2002/06/13 10:11	10KB
69MEAS02	.CSV	2002/06/13 00:14	2KB
SELECT ALL DELETE --> RETURN			

If (←) is shown above the **F4** key, use the **F4** (←) key to change the functions for the function keys.



Select a file to be deleted from the file list.

F1 **SELECT**

SELECT	Select one file.
ALL	Select all files.

F2 **ALL**

(the selected file will be marked with an asterisk "*" to its left)

F3 **DELETE**

Press the **F3** (DELETE) key; a confirmation message will appear.

F1 **yes**

Press the **F1** (yes) key to delete the selected file.

F5 **RETURN**

Press the **F5** (RETURN) key to return to the file main screen.

NOTE

While the cursor is on the selected file, if the **F1** (SELECT) or **F2** (ALL) key is pressed again, the selection is canceled.

7.3.6 Copying a File in the Internal Memory to a PC Card

FILE



Press the **FILE** key to display the file main screen.



Move the cursor to "**INTERNAL MEMORY.**"

F1

SELECT

Press the **F1** (SELECT) key to display the internal memory-file list screen.

INTERNAL MEMORY				2002/07/25 22:16:47
69MEAS00.CSV	2002/07/25	22:12	3KB	
69INST00.BIN	2002/07/25	22:13	18KB	
69MEAS01.CSV	2002/07/25	22:13	2KB	
69MEAS02.CSV	2002/07/25	22:13	5KB	
69BMP00.BMP	2002/07/25	22:13	10KB	
69BMP01.BMP	2002/07/25	22:13	10KB	
*69BMP02.BMP	2002/07/25	22:13	10KB	
SELECT ALL COPY FORMAT RETURN				



Select a file to be copied from the file list.

F1

SELECT

SELECT	Select one file.
ALL	Select all files.

F2

ALL

(the selected file will be marked with an asterisk "*" to its left)

F3

COPY

Press the **F3** (COPY) key. A confirmation message will appear.

F1

yes

Press the **F1** (yes) key to copy the selected file in the interval memory to the PC card.

F5

RETURN


Press the **F5** (RETURN) key to return to the file main screen.

NOTE

- While the cursor is on the selected file, if the **F1** (SELECT) or **F2** (ALL) key is pressed again, the selection is canceled.
- If the same file name exists on the PC card, the file on the PC card will be overwritten.

7.4 Saving Measurement Data

7.4.1 Automatic Storage of Measurement Data



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data-output setting screen.

Set the time-series measurement start method, stop method, interval, data-output file name, and medium for saving data (PC card or internal memory (1 MB)).

❖ 5.3 Setting on the Data Output Setting Screen (DATA OUTPUT) (page 68)

SET UP 2/5 DATA OUTPUT		2002-07-24 20:01:47	
MEAS. START	MANUAL		
MEAS. STOP	MANUAL		
INTERVAL TIME	1 min		
SAVE IN...	PC CARD		
DATA FILE NAME			
RS CONNECTION	PC		
DISPLAY COPY	PC CARD		
MANUAL TIME	JUST		NEXT SCR

F5 NEXT
SCR

Press the **F5** (NEXT SCR) key to display the save/print items setting screen. Set the items to be stored.

❖5.4 Setting on the Save/Print Items Setting Screen (SAVE, PRINT ITEMS) (page 79)

SET UP 3/5 SAVE, PRINT ITEMS		2003/05/13	
		15:24:05	
		NO. OF ITEMS	25
NORM. MEAS.	ON	INST.	OFF
		AVE.	ON
HARMONIC	OFF	MAX.	OFF
		MIN.	OFF
INTEG. & DEM.		ON	
SAVE TIME AVAIL. 114d 4h 4m 0s			
OFF ON		NEXT SCR	

MEASURE

Press the **MEASURE** key to display the measurement screen.

START
STOP

Press the **START/STOP** key to start time-series measurement. Measurement data is saved in the set medium for saving data at every interval.

Storable Data According to Interval Setting

Interval setting	Normal measurement data	Integrated power/demand measurement data	Harmonic measurement data
1/2/5/10/15/30/60 minutes	Yes	Yes	Yes
1/2/5/10/15/30 seconds	Yes	Yes	No
All wave/100/200/500 ms	Yes (Instantaneous values only) Binary data	No	No

Storable Time

All Normal Measurement Items ON and Integrated power/Demand ON

Wiring	1P2W X 4	1P3W X 2	3P3W2M X 2	3P3W3M, 3P4W	3P4W4I
No. of Data Items	160	180	196	118	122
PC card 128 MB					
Interval time					
1 minute	45 days	41 days	37 days	62 days	60 days
2 minutes	91 days	82 days	75 days	125 days	121 days
5 minutes	229 days	205 days	188 days	313 days	303 days
10 minutes	366 days	366 days	366 days	366 days	366 days
15 minutes	366 days	366 days	366 days	366 days	366 days
30 minutes	366 days	366 days	366 days	366 days	366 days
60 minutes	366 days	366 days	366 days	366 days	366 days
Internal memory					
Interval time					
1 minutes	8 hours	7 hours	7 hours	12 hours	11 hours
2 minutes	17 hours	15 hours	14 hours	24 hours	23 hours
5 minutes	1.8 days	1.6 days	1.5 days	2.5 days	2.4 days
10 minutes	3 days	3 days	3 days	5 days	4 days
15 minutes	5 days	4 days	4 days	7 days	7 days
30 minutes	11 days	9 days	9 days	15 days	14 days
60 minutes	22 days	19 days	18 days	30 days	29 days

All Normal Measurement Items ON and Integrated power/Demand ON,
All Harmonic Items ON (Interval: 1 minute)

Wiring	1P2W X 4	1P3W X 2	3P3W2M X 2	3P3W3M, 3P4W	3P4W4I
No. of Data Items	4536	4076	5556	3530	4022
PC card 128 MB	37 hours	40 hours	30 hours	46 hours	40 hours
Internal memory	16 minutes	19 minutes	13 minutes	22 minutes	19 minutes

7.4 Saving Measurement Data

All Normal Measurement Items ON and Integrated power/Demand ON,
All Harmonic Items OFF (Interval: 1 second)

Wiring	1P2W X 4	1P3W X 2	3P3W2M X 2	3P3W3M, 3P4W	3P4W4I
No. of Data Items	160	180	196	118	122
PC card 128 MB	18 hours	16 hours	15 hours	25 hours	24 hours
Internal memory	8 minutes	7 minutes	7 minutes	12 minutes	11 minutes

Normal Measurement Instantaneous Value Only

Wiring	1P2W X 4	1P3W X 2	3P3W2M X 2	3P3W3M, 3P4W	3P4W4I
No. of Data Items	25	18	21	14	15
PC card 128 MB					
Interval time					
All wave	4 hours	6 hours	5 hours	7 hours	7 hours
100ms	29 hours	38 hours	34 hours	46 hours	44 hours
200ms	59 hours	77 hours	68 hours	93 hours	88 hours
500ms	147 hours	192 hours	170 hours	233 hours	221 hours
Internal memory					
Interval time					
All wave	2 minutes	3 minutes	2 minutes	3 minutes	3 minutes
100ms	14 minutes	18 minutes	16 minutes	22 minutes	21 minutes
200ms	28 minutes	37 minutes	33 minutes	45 minutes	43 minutes
500ms	72 minutes	94 minutes	83 minutes	113 minutes	109 minutes

NOTE

- Short-term interval (All wave/100 ms/200 ms/500 ms) data and harmonic waveform data are saved in binary format files. Binary format files must be converted to text files to be read into commercially available spreadsheet software. The conversion software is provided in the supplied CD-R.
- If the number of output-data items on the save/print items setting screen exceeds 256, it may not be possible to read all data into commercially available spreadsheet software. Make sure that the number of output-data items does not exceed 256 when they are to be read into such spreadsheet software.

7.4.2 Saving Measurement Data Manually

Save instantaneous data manually.



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data-output setting screen.

Set the medium for saving data (PC card or internal memory (1 MB)).

❖ 5.3 Setting on the Data Output Setting Screen (DATA OUTPUT) (page 68)

SET UP 2/5 DATA OUTPUT		2002-07-24 20:01:47	
MEAS. START	MANUAL		
MEAS. STOP	MANUAL		
INTERVAL TIME	1 min		
SAVE IN..	PC CARD		
DATA FILE NAME			
RS CONNECTION	PC		
DISPLAY COPY	PC CARD		
MANUAL TIME	JUST		NEXT SCR

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the save/print items setting screen.

To output harmonic-measurement data, set the items to be stored on the harmonic-measurement detail setting screen.

❖5.4 Setting on the Save/Print Items Setting Screen (SAVE, PRINT ITEMS) (page 79)

SET UP 3/5 SAVE, PRINT ITEMS		2003/05/13	
		15:24:05	
		NO. OF ITEMS	25
NORM. MEAS.	ON	INST. AVE.	OFF ON
HARMONIC	OFF	MAX. MIN.	OFF OFF
INTEG. & DEM.		ON	
SAVE TIME AVAIL.		114d 4h 4m 0s	
OFF	ON	NEXT SCR	

MEASURE



SAVE



Press the **MEASURE** key to display the measurement screen.

Press the **SAVE** key to save the measurement data manually.

NOTE

- Data cannot be saved manually during time-series measurement.
- The files are named automatically.
Measurement data: 69MANUXX.CSV (XX: 00 to 99)
Waveform data: 69MANUXX.WUI (XX: 00 to 99) binary data
- The instantaneous values are saved regardless of the ON/OFF setting of the instantaneous, average, maximum, and minimum values on the save/print items setting screen. In the case of harmonic measurement data, the instantaneous data of the items selected on the save/print items setting screen are saved.

7.5 Copying Screen

Copy the screen onto the PC card or to internal memory.

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the data-output setting screen.

SET UP	2/5 DATA OUTPUT	2002/07/24
		20:01:47
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	1 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
MANUAL TIME	JUST	NEXT SCR

Move the cursor to "**DISPLAY COPY.**"

Set the medium for copying the screen using the function keys.

PC CARD	Save on the PC card.
MEMORY	Save in the internal memory (1 MB).

❖ 5.3.7 Setting the Medium to which the Screen is to be Copied (page 78)

Display a screen to be copied.

Press the **COPY** key to save the screen currently on display.

SET UP



NEXT
SCR



CARD



MEMORY






Using a Printer

8

CAUTION

- To avoid damaging the instrument and printer, do not connect and disconnect the connectors when the power is on.
- As much as possible, avoid printing in hot and humid environments. Otherwise, printer life may be severely shortened.

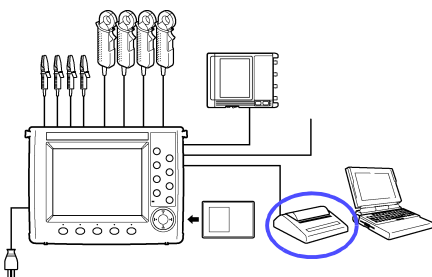

The instrument can produce hard copies of the screen and print measurement data on the Model 9442 PRINTER connected to the RS-232C interface.

9442 PRINTER (option)

The following items are required to use the 9442 PRINTER.

- 9442 PRINTER
(with 1 roll of thermally sensitized paper supplied)
- 9443-02 AC ADAPTER (AC230 V, 50 Hz)
- 9443-03 AC ADAPTER (AC120 V, 60 Hz)
- 1196 RECORDING PAPER
(thermally sensitized paper 112 x 25 m, 10 rolls)
- 9721 RS-232C CABLE (for printer)


NOTE

- For printer handling, see the operations manual for the printer.
- Use 1196 RECORDING PAPER or the equivalent for the printer.

8.1 Connecting the Printer

Connecting the 9442 PRINTER to the 3169-20/21

Required for connection:
9721 RS-232C CABLE

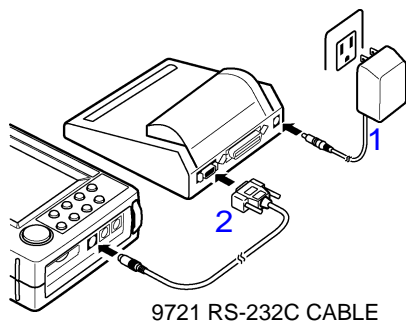

9443-03 AC ADAPTER

1. Connect the 9443-02/03 AC ADAPTER to the 9442 PRINTER.
2. Connect the RS-232C connector of the 3169-20/21 and the serial connector of the printer using the 9721 RS-232C CABLE.
3. Turn the instrument and printer on.

Setting the 9442 PRINTER

The 9442 printer is factory-set for use with the 3166 or 3169-20/21 CLAMP ON POWER HiTESTER. When the printer is used with the 3169-20/21, it is not necessary to edit the settings. The software DIP switches of the 9442 printer are set as shown below.

For the DIP-switch setting procedure, see the DPU-414 operations manual supplied with the 9442 printer.

(1) Software DIP SW1

Switch No.	Setting	Function	ON	OFF
1	OFF	Input method	Parallel	Serial
2	ON	Printing speed	High speed	Low speed
3	ON	Auto-loading	Enabled	Disabled
4	OFF	CR function	Carriage return and line feed	Carriage return
5	ON	Setting command	Enabled	Disabled
6	OFF	Printing density selection 100%		
7	ON			
8	ON			

(2) Software DIP SW2

Switch No.	Setting	Function	ON	OFF
1	ON	Printing mode	Normal printing (40 columns)	Condensed printing (80 columns)
2	ON	User-defined character backup	Enabled	Disabled
3	ON	Character type	Ordinary	Special
4	ON	Zero font	0	φ
5	ON	Japanese - International Character Set		
6	ON			
7	ON			
8	ON			

The 3169-20/21 automatically turns off the printing-mode switch (condensed printing).

(3) Software DIP SW3

Switch No.	Setting	Function	ON	OFF
1	ON	Data bit length	8 bits	7 bits
2	ON	Parity	Without	With
3	ON	Parity condition	Odd	Even
4	OFF	Flow control	H/W BUSY	XON/XOFF
5	OFF	Baud rate: 9600 bps		
6	ON			
7	ON			
8	ON			

8.2 Setting the Printer

8.2.1 Setting the Device to Be Connected to the RS-232C

SET UP 2/5 DATA OUTPUT		2002/07/24 19:18:53
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	30 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
PC	PRINTER	NEXT SCR

SET UP



Press the **SET UP** key to display the setting screen.

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data-output setting screen.



Move the cursor to "**RS CONNECTION.**"

F2

PRINTER




Press the **F2** (PRINTER) key to set the device to be connected to the RS-232C to printer.

NOTE

- The device to be connected to the RS-232C is set to the PC by default.
- When the interval is set to 30 seconds or less, measurement data cannot be output to a printer.
- To output measurement data to a printer automatically, set the interval to 1 minute or more.

8.2.2 Setting the RS-232C

SET UP 4/5 SYSTEM		2002/07/24 19:24:16
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
change	NEXT SCR	



Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the system setting screen.

Move the cursor to "**RS-232C**."

Set the following using the function keys.

Setting Item	Presets
BAUD RATE	9600 bps
TERMINATOR	CR+LF
FLOW CONTROL	XON/XOFF

❖ 5.5.3 Setting the RS-232C (page 88)

8.3 Automatic Output of Measurement Data to the Printer

SET UP



Press the **SET UP** key to display the setting screen.

Set the printer.

❖8.2 Setting the Printer (page 140)

F5

NEXT
SCR


Press the **F5** (NEXT SCR) key to display the data-output setting screen.

Set the time-series measurement start/stop methods and interval.

❖5.3 Setting on the Data Output Setting Screen (DATA OUTPUT) (page 68)

SET UP	2/5 DATA OUTPUT	2002/07/24
		20:01:47
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	1 min	
SAVE IN..	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
MANUAL	TIME	JUST
		NEXT SCR

8.3 Automatic Output of Measurement Data to the Printer

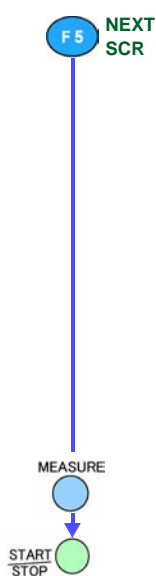

Press the **F5** (NEXT SCR) key to display the save/print items setting screen. Set the items to be printed out.

❖5.4 Setting on the Save/Print Items Setting Screen (SAVE, PRINT ITEMS) (page 79)

SET UP 3/5 SAVE, PRINT ITEMS		2002.05.13	
		15:24:05	
		NO. OF ITEMS 25	
NORM. MEAS.	<input checked="" type="checkbox"/> ON	INST.	OFF
		AVE.	ON
HARMONIC	OFF	MAX.	OFF
		MIN.	OFF
INTEG. & DEM.		ON	
SAVE TIME AVAIL. 114d 4h 4m 0s			
OFF ON		NEXT SCR	

Press the **MEASURE** key to display the measurement screen.

Press the **START/STOP** key to start time-series measurement. Measurement data will be printed out on the printer at every interval.

NOTE

- When the interval is set to 30 seconds or less, data cannot be output to the printer automatically.
- If many items are set to be printed, printing may not be completed within the interval. If many items are set to print, printing may not be completed within the interval. In this case, the interval data outputted when the buffer memory (about 28KB) of the printer is full is not printed.

8.4 Copying a Screen to the Printer

SET UP



Press the **SET UP** key to display the setting screen.
Set the printer.

❖8.2 Setting the Printer (page 140)

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data-output setting screen.

SET UP	2/5 DATA OUTPUT	2002-07-24
		20:01:47
MEAS. START	MANUAL	
MEAS. STOP	MANUAL	
INTERVAL TIME	1 min	
SAVE IN...	PC CARD	
DATA FILE NAME		
RS CONNECTION	PC	
DISPLAY COPY	PC CARD	
MANUAL TIME	JUST	NEXT SCR

Move the cursor to "**DISPLAY COPY.**"

F3

PRINTER

Press the **F3** (PRINTER) key.

❖5.3.7 Setting the Medium to which the Screen is to be Copied (page 78)

Display a screen
to be copied.


COPY



Press the **COPY** key to print out the screen currently on display.

Using the Instrument with a Computer

9

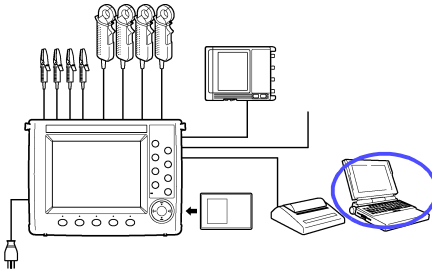

The 3169-20/21 includes an RS-232C interface as standard equipment. Using the RS-232C interface, settings of the 3169-20/21 can be made and measurement data can be acquired on a PC. This chapter explains how to connect the 3169-20/21 to a PC. For details including communications commands, see the RS-232C instruction manual (CD-R version).

NOTE

For communications using the RS-232C interface, the optional 9612 RS-232C cable is required.

9.1 RS-232C Connection

!WARNING

- To avoid electric shock, always remove the power cord from the instrument and disconnect any test leads before connecting the RS-232C cable to the instrument.
- The instrument and modem should be turned off before connecting them.
- Do not connect or disconnect the cable with power on. Otherwise, the devices could be damaged.


!CAUTION

Align the 9612 RS-232C cable with the connector of the 3169-20/21, and insert the cable straight in. To prevent damage and contact failure, do not exert excessive force on the cable.

NOTE

- Always tighten the screws when connecting the RS-232C cable.
- If the connector of the PC is not a D-sub9-pin connector, use a commercially available conversion adapter.


Connection to the PC to the 3169-20/21

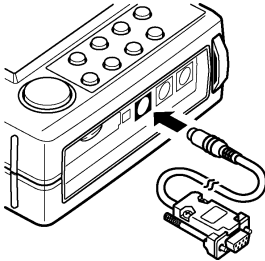

9612 RS-232C CABLE
(cross cable)

To connect the 3169-20/21 to a PC, you need the optional 9612 RS-232C cable. The 9612 RS-232C cable is a cross cable.

1. Turn off the power to the 3169-20/21 and the PC.
2. Using the 9612 RS-232C cable, connect the RS-232C connectors of the 3169-20/21 to the PC.

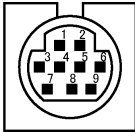

RS-232C
connector

Pin	Functions	CCITT	EIA	JIS	Signal Name
		Circuit No.	Code Addr.	Code Addr.	
2	Receive Data	104	BB	RD	RxD
3	Send Data	103	BA	SD	TxD
5	Signal Ground	102	AB	SG	GND
7	Request to Send	105	CA	RS	RTS
8	Clear to Send	106	CB	CS	CTS

9.2 Setting the RS-232C

Set the RS-232C. For communications between the 3169-20/21 and the PC, the 3169-20/21 must have the same RS-232C settings as those of the PC.

SET UP



Press the **SET UP** key to display the setting screen.

F5

NEXT
SCR

Press the **F5** (NEXT SCR) key to display the data-output setting screen.

SET UP 2/5 DATA OUTPUT	2002/07/24 20:01:44
MEAS. START	MANUAL
MEAS. STOP	MANUAL
INTERVAL TIME	1 min
SAVE IN..	PC CARD
DATA FILE NAME	
RS CONNECTION	PC
DISPLAY COPY	PC CARD
MANUAL TIME	JUST
	NEXT SCR

Move the cursor to "**RS CONNECTION.**"



F1

PC

Press the **F1** (PC) key to set the device to be connected to the RS-232C to PC.

F5 NEXT
SCR

Press the **F5** (NEXT SCR) key to display the system setting screen.

SET UP 4/5 SYSTEM		2002/07/24 19:23:55
THD	THD-F	
HARM. DISP. ORD.	ALL ORDERS	
RS-232C		
BAUD RATE	9600bps	
TERMINATOR	CR+LF	
FLOW CONTROL	NONE	
BACKLIGHT	AUTO	
BEEP SOUND	ON	
ID	001	
TIME AND DATE	2002/07/24 19:22:56	
LANGUAGE	ENGLISH	
SERIAL NUMBER	020437412 Ver. 1.02	
THD-F	THD-R	NEXT SCR



Move the cursor to an RS-232C setting item to be changed. Set the RS-232C setting items.

Setting Item	Presets
BAUD RATE	2400, 9600, 19200, 38400 bps
TERMINATOR	CR+LF, CR
FLOW CONTROL	OFF, XON/XOFF, RTS/CTS, Both

NOTE

- In the event of an over-run error or framing error, select a lower baud rate.
- Do not edit the settings during communications with the 3169-20/21.
 - ❖ 5.5.3 Setting the RS-232C (page 88)




Using the External Input/Output Terminal

10

The external input/output terminal uses 0/5-V logic signals or short/open contact signals to control the 3169-20/21. For connection, the optional 9440 cable is required.


10.1 Connecting the External Input/Output Terminal

Connecting the External Input/Output Terminal

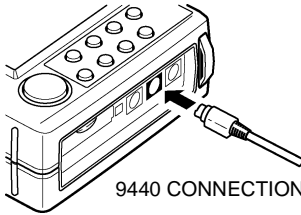

9440 CONNECTION CABLE

Insert the 9440 connection cable into the external input/output terminal (EXIT I/O), aligning the connector guide grooves (the connector is equipped with a lock). When removing the connection cable, hold it by the plastic part.

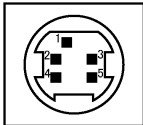

External input/output connector (EXT I/O)

Pin No.	Signal Name	9440 Cable Color
1	Start/stop (input)	Red
2	--	White
3	Status (output)	Black
4	Data storage (input)	Yellow
5	Ground (common)	Blue

NOTE

A plastic connector is used for the connection cable. Do not insert it into the terminal without aligning the guide grooves or pull it without releasing the lock, to prevent damage to the connector.

10.2 Functions of the External Input/Output Terminal


CAUTION

To prevent damage to the 3169-20/21, do not input to the input terminal a voltage beyond the range -0.5 V to +5.5 V.

NOTE

- The external I/O functions will not operate properly if a signal with noise or chattering is input.
- The external I/O functions are enabled even when the keys are locked.

Input Terminal

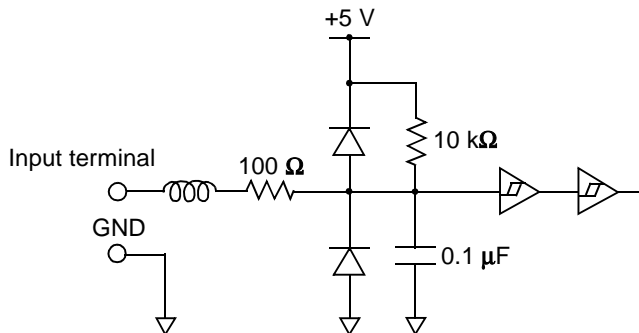


An 0/5-V logic signal or short/open contact signal is used for control.

10.2 Functions of the External Input/Output Terminal

(1) Start/Stop of Time-Series Measurement

Open (High level)→Short (low level): Starts measurement
 Short (Low level) →Open (high level): Stops measurement

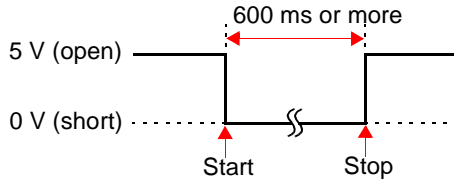


NOTE

There is lag of approximately 600 ms from when the measurement start signal is input until the 3169-20/21 starts measurement.

(2) Data Storage into the Selected Medium

Saves measurement data manually on the PC card or in the internal memory, whichever is selected as the medium for saving data
 Short (low level): Manual storage

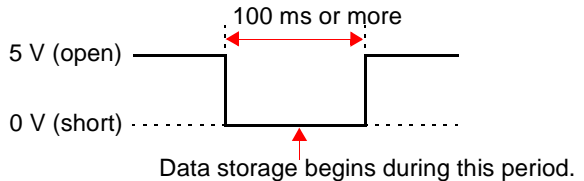

Input-voltage range: High level: 2.5 V to 5.0 V


Low level: 0 V to 1.0 V

Maximum input voltage: -0.5 to 5.5 V

NOTE

- This function is disabled during time-series measurement.
- The function does not operate properly if the pulse is less than 100 ms.

Output terminal

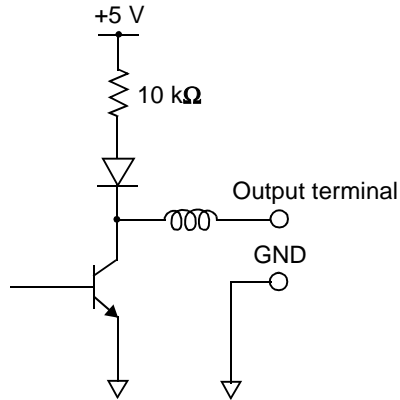

Status Output

Outputs a status signal indicating that the 3169-20/21 is performing time-series measurement.

During time-series measurement: Short (low level)

Status other than time-series measurement: Open (high level)

NOTE

- When the 3169-20/21 is standing by for measurement, it is treated as status other than time-series measurement.
- The lag of a signal is approximately 600 ms.

Output signal: Open-collector output (with voltage output)


Output-voltage range: High level: 4.5 V to 5.0 V
Low level: 0 V to 0.5 V

Maximum input voltage: 0 to 30 V, 50 mAmax., 200 mWmax.


10.3 Controlling Multiple Units of the 3169-20/21

When using multiple units of the 3169-20/21, their start/stop of time-series measurement may be synchronized using the external I/O terminal.

Control Parallel

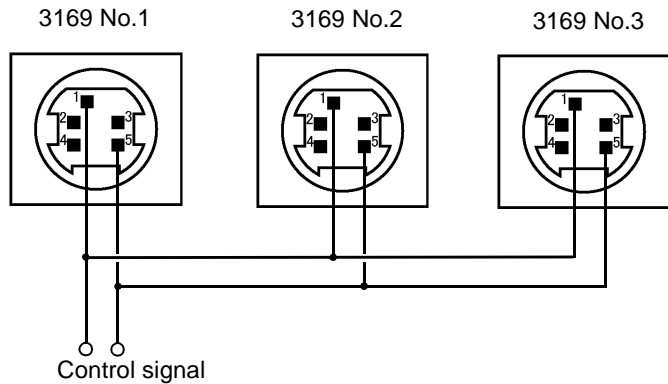

Master-Slave Connection

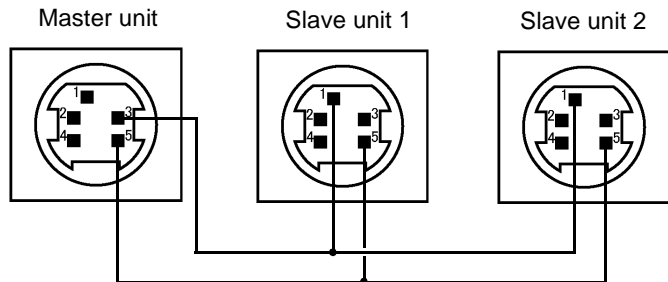

The slave units start time-series measurement, synchronized with the time-series measurement start signal output from the master unit.



Using D/A Output (3169-21 only)

11

When the D/A output function is used, measurement data such as the voltage, current, and power is output in analog (D/A) form.

11.1 Connecting the D/A Output Terminal


WARNING

To avoid electrocution, turn off the power to all devices before plugging or unplugging any of the D/A output connectors.

CAUTION


- To prevent damage to the instrument, never connect or disconnect the connector with the power on (the D/A output is insulated from the voltage input and current input).
- Four output channels are available. Exercise great care when handling, as these channels are not insulated from each other.
- Use the optional 9441 connection cable.
- To prevent damage to the 3169-20/21, do not short-circuit the output terminal or input a voltage.

Connection to the D/A Output Terminal

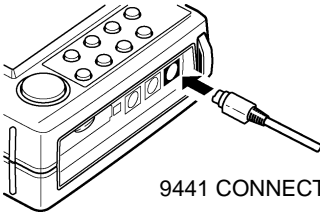

9441 CONNECTION CABLE

Insert the 9441 CONNECTION CABLE into the D/A output terminal, aligning the connector guide grooves (the connector is equipped with a lock). When removing the connection cable, hold it by its plastic part.

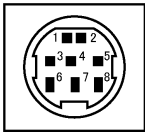D/A output connector
(D/A OUT)

Pin No.	Signal Name	9441 Cable Color
1	D/A output ch1	Red
2	D/A output ch2	White
3	D/A output ch3	Black
4	D/A output ch4	Yellow
5	Ground	Blue
6	Ground	Green
7	Ground	Brown
8	Ground	Gray

NOTE

- Pins 5 to 8 are common ground pins.
- A plastic connector is used for the connection cable. To prevent damage to the connector, do not insert it into the terminal without aligning the guide grooves, and do not pull it without releasing the lock.
- The output resistance of the output terminal is approximately 100 Ω . Make sure a recorder or other device to be connected to the terminal has an input resistance of 100 k Ω or more.

11.2 Setting D/A Output

11.2.1 Setting D/A Output Items

SET UP



Press the **SET UP** key to display the setting screen.



F5 NEXT
SCR

Press the **F5** (NEXT SCR) key to display the D/A output setting screen. (SET UP 5/5)

SET UP 5/5 D/A OUTPUT		2002/06/25 11:25:35		
D/A OUTPUT ITEMS				
	TYPE	ITEM	ORDER	MAG.
CH1	POWER	U1	--	1
CH2	POWER	I1 _1	--	1
CH3	POWER	P _1	--	1
CH4	POWER	Q _1	--	1
INTEG. OUTPUT RATE			5V/5kWh	
change			NEXT SCR	



Move the cursor to the item to be changed.



F1 change

Press the **F1** (change) key to display the selection window.



Select an item to be changed out of the selection list* using the cursor key.



F1 select

Press the **F1** (select) key.

*: Selection List

Type	Item	Order	Magnification
Power	Voltage (U1,U2,U3,Uave) Current (I1,I2,I3,I4,Iave) Power (P,Q,S) Power factor (PF) Frequency (f) Integrated power (WP+,WP-,WQ+,WQ-)	--	1
Harmonic level	Voltage (U1,U2,U3) Current (I1,I2,I3,I4) Power (P)	1 to 40	1,10,100
Harmonic content	Voltage (U1,U2,U3) Current (I1,I2,I3,I4) Power (P)	1 to 40	1,10,100
Harmonic phase angles	Voltage (U1,U2,U3) Current (I1,I2,I3,I4) Power (P)	1 to 40	1
Total value	Voltage (U1,U2,U3) Current (I1,I2,I3,I4) Power (P)	--	1
THD-F or THD-R	Voltage (U1,U2,U3) Current (I1,I2,I3,I4)	--	1

When multiple circuits are measured, the items for each circuit can be set separately. The items will be followed by a circuit No. (for example, I1_1, I1_2, P_1, P_2).

NOTE

- The selectable items vary depending on the wiring method.
- The full-scale ranges vary depending on the setting of "Magnification" of "Harmonic level."
5-A Range

Magnification	Full-Scale Output
1	5 A
10	0.5 A
100	0.05 A

- The full-scale output (DC 5 V) varies as shown below, depending on the setting of "Magnification" of "Harmonic content."

Magnification	Full-Scale Output
1	100%
10	10%
100	1%

11.2.2 Setting the Integrated Power Output Rate

Set the output rate when integrated power is output from the D/A terminal. The output rate will be DC ± 5 V with respect to the set full scale of integrated power.

Select an integration output rate using the cursor keys.

SET UP



F5

NEXT
SCR

Press the **SET UP** key to display the setting screen.

Press the **F5** (NEXT SCR) key to display the D/A output setting screen. (SET UP 5/5)

SET UP 5/5 D/A OUTPUT		2002/06/25 11:25:41		
D/A OUTPUT ITEMS				
	TYPE	ITEM	ORDER	MAG.
CH1	POWER	U1	--	1
CH2	POWER	I1 _1	--	1
CH3	POWER	P _1	--	1
CH4	POWER	WP+ _1	--	1
INTEG. OUTPUT RATE				5V/5kWh
change			NEXT SCR	



Move the cursor to "**INTEG. OUTPUT RATE.**"

F1

change

Press the **F1** (change) key to display the selection window.

5V/1kWh,5V/5kWh (default),5V/10kWh,5V/50kWh,5V/100kWh,
5V/500kWh,5V/1MWh



Select integration output rate using the cursor key.

F1

select


Press the **F1** (select) key.

11.3 Response of Output

The 3169-20/21 continuously performs calculation in every cycle. (However, during harmonic measurement, calculation is performed after every 16 cycles.) D/A output is also updated in this cycle. Therefore, the output reflects even transient changes in input waveforms, such as the inrush current.

Normal Measurement Data

Output is updated every cycle (50 Hz: approx. 20 msec; 60 Hz: approx. 17 msec).

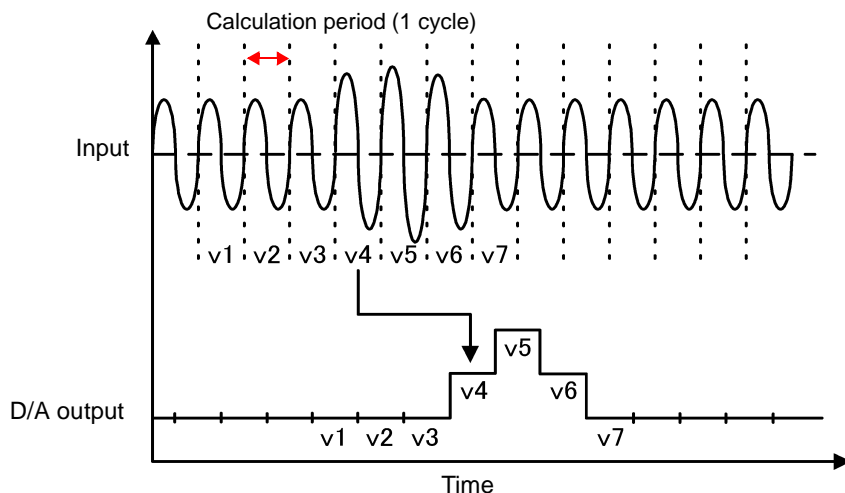


NOTE

Although the output is updated every cycle, there is a lag of 2 to 3 cycles between the input of a waveform and the D/A output.

Harmonic Measurement Data

Output is updated every 16 cycles (50 Hz: approx. 320 msec; 60 Hz: approx. 270 msec).

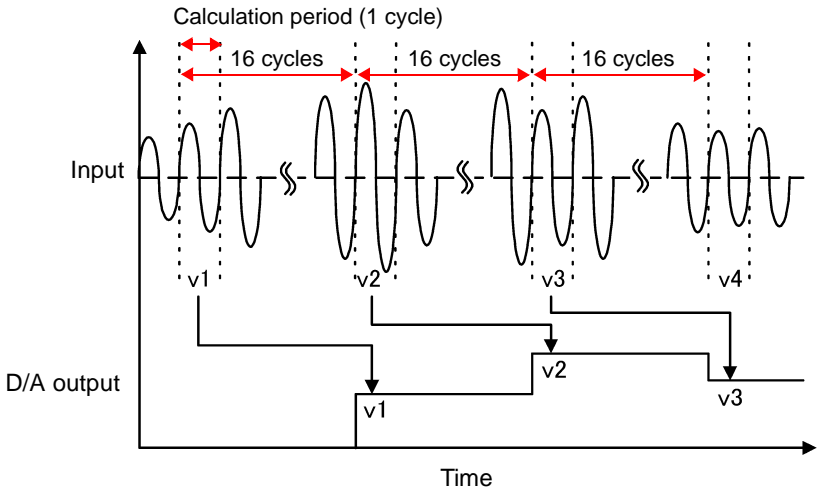

NOTE





The changed settings for D/A output items become effective when the screen is returned to the measurement screen.


11.4 Output Waveform

The format of output waveforms varies depending on the D/A output item. Use the following examples as a guide.


NOTE

- The output rate will be DC±5 Vf.s.
- In the event of over-range on the plus side, the D/A terminal outputs approximately 6.6 V. In the event of over-range on the minus side, it outputs approximately -6.6 V.
- If the integrated power measurement increases constantly, the output voltage returns to 0 V when it reaches the set full scale, and then the output begins to rise again (the output is recorded as a sawtooth waveform).
- When the VT and CT ratios are set to a number other than 1, the full scale of the range will be the product of the full scale multiplied by the scaling value.
- The D/A output is updated regardless of whether the on-screen measurement data is held.

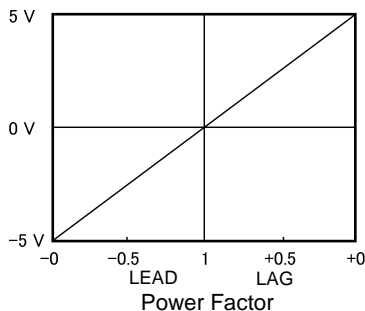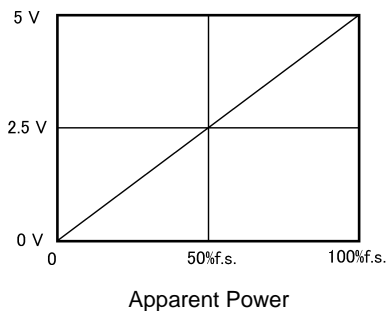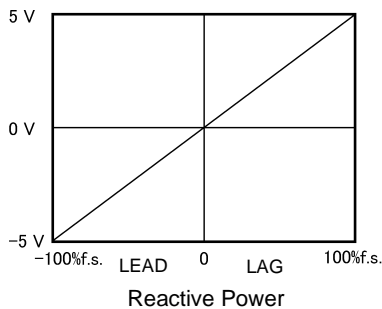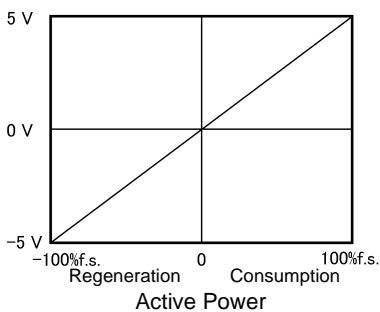

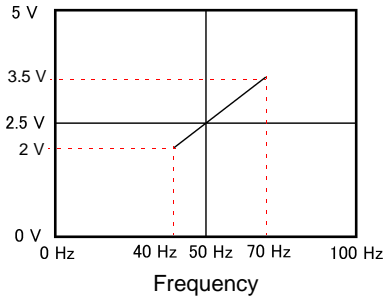


The D/A terminal outputs approximately 6.6V at the frequency other than between 40 and 70 Hz.

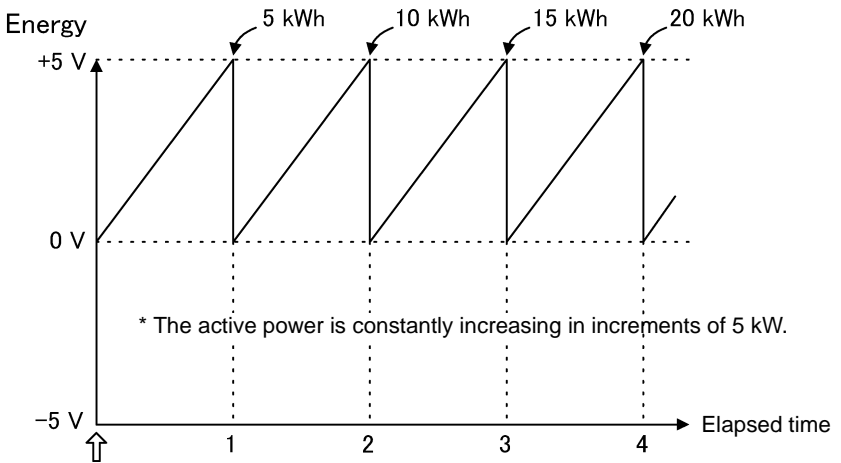


Time-series measurement starts.

* The unit of kvarh is used for integrated reactive power.

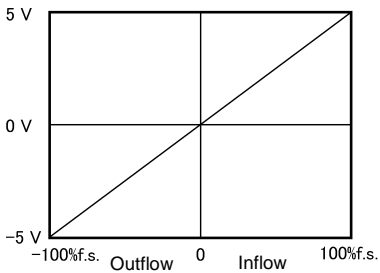


Harmonic Power Level (magnification: 1)

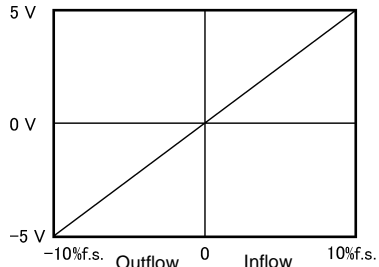


Harmonic Power Level (magnification: 10)


11.4 Output Waveform

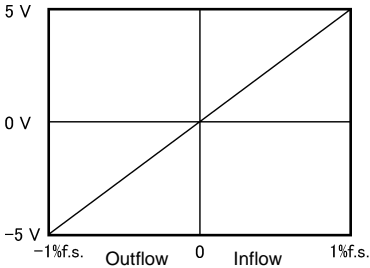


Harmonic Power Level (magnification: 100)

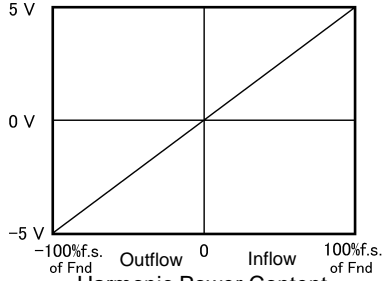


Harmonic Power Content (magnification: 1)

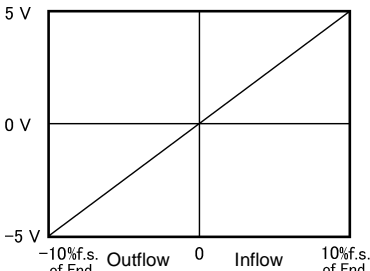


Harmonic Power Percentage Content (magnification: 10)

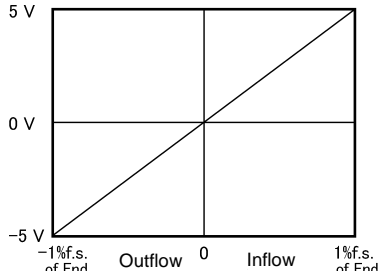



Harmonic Power Content (magnification: 100)

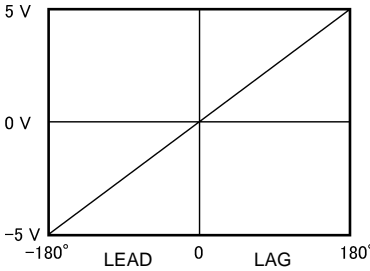

Harmonic Voltage (Current) Phase Angles

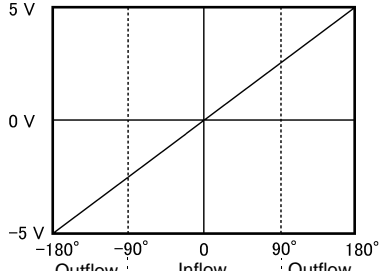

Harmonic Power Phase Angles

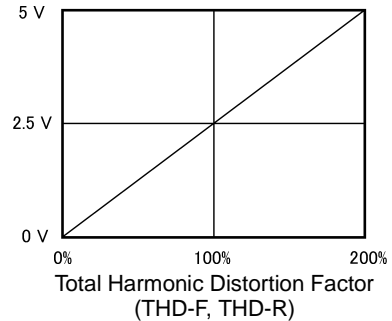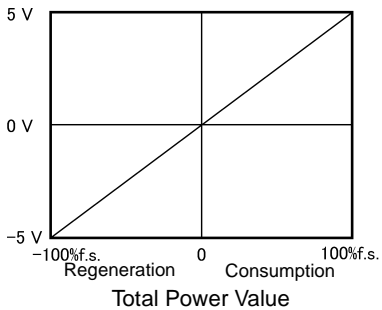**NOTE**

- The harmonic voltage, the current level, voltage and the current content are not output in negative numbers.
- The harmonic voltage and the current phase angle are based on the phase of the fundamental of the PLL synchronization source, U_1 .
- The phase angle of harmonic power is the power factor of each order of harmonic expressed as an angle.
- The total voltage (current) is not output in negative numbers.



Operations in the Event of Power Outage

12

12

A power-supply outage of the 3169-20/21 may occur for various reasons during measurement. Such an outage will stop the measurement operation, but the 3169-20/21 has a function for backing up the measurement data and settings made prior to the outage.

- ◆ **Clock**
Continues to run
- ◆ **Settings**
All settings are retained.
- ◆ **Measurement data**
The maximum, minimum, and average values and integrated power measurements taken up to the outage are retained. The demand value at the demand time (i.e., the penultimate time before the outage) is retained. When time-series measurement is performed at a short-term intervals (all wave/100 ms/200 ms/500 ms), the data obtained up until 10 seconds prior to the outage is retained.

◆ **Operations after Reset**

3169-20/21	<p>Outage during standby state</p> <ul style="list-style-type: none"> • If the instrument is reset before the set time-series measurement start time, the instrument returns to the standby state. It starts time-series measurement at the set start time. • If the instrument is reset after the set time-series measurement start time, the instrument starts time-series measurement at the next interval time. <p>Outage during time-series measurement</p> <ul style="list-style-type: none"> • The time-series measurement is suspended during the outage. After the instrument is reset, it performs time-series measurement for the remaining time. The measurements during the outage will be treated as "0."
PC Card/ Internal Memory	<ul style="list-style-type: none"> • If a power outage occurs while the memory is being accessed, the data being saved may be lost or, in the worst case, the file may be broken. If the outage occurs during time-series measurement, the outage time and reset time will be saved after the reset. • If the memory is not accessed during the outage and the outage occurs during time-series measurement, the outage time and reset time will be saved after the reset.
Printer	<p>If a power outage occurs during printing, the printer stops printing immediately (except when the printer is operating on battery power).</p>

Specifications

13

13

The specifications below apply to the 3169-20/21 CLAMP ON POWER HI-ESTER.

Environmental and Safety Specifications

Operating environment	Indoors, < 2000 m ASL (6562-ft.)
Storage temperature and humidity	-10°C to 50°C (-14°F to 122°F), 80% RH or less (no condensation)
Operating temperature and humidity	0°C to 40°C (32°F to 104°F), 80% RH or less (non-condensating)
Dielectric strength (50/60 Hz for 15 sec.)	5.55 kVrms (current sensitivity 1 mA) Between voltage input terminals and instrument case 3.32 kVrms (current sensitivity 1 mA) Between voltage input terminals and current input terminals, between external interface terminals 2.3 kVrms (current sensitivity 1 mA) Between power supply and instrument case 1.39 kVrms (current sensitivity 10 mA) Between power supply and current input terminals, between external interface terminals
Power supply	Rated power supply voltage: AC100 to 240 V Rated power supply frequency: 50/60 Hz (Voltage fluctuations of $\pm 10\%$ from the rated supply voltage are taken into account.)
Maximum rated power	30 VA
Dimensions	Approx. 210W X 160H X 60D mm (not including protrusions) (8.27"W X 6.30"H X 2.36"D)
Mass	Approx. 1.2 kg (3169-20/21) (42.3 oz.)
Standards applying	Safety EN61010-1:2001 Pollution Degree 2, Measurement Category III (anticipated transient overvoltage 6000V) EMC EN61326:1997+A1:1998+A2:2001+A3:2003 Class A EN61000-3-2:2000 EN61000-3-3:1995+A1:2001

Input Specifications

Measurement line type	Single-phase 2-wire (1P2W), single-phase 3-wire (1P3W), three-phase 3-wire (3P3W2M,3P3W3M) or three-phase 4-wire (3P4W,3P4W4I)
Number of circuits to be measured	4 circuits (1P2W), 2 circuits (1P3W,3P3W2M), 1 circuit (3P3W3M,3P4W,3P4W4I) The voltage is the same.
Frequency of the measured line	50/60 Hz
Input methods	Voltage: Isolated inputs (No insulation between U1,U2,U3, and N) Current: input is isolated by the clamp-on sensor
Measurement method	Simultaneous digital sampling of voltage and current PLL synchronization or 50/60-Hz fixed clock
PLL synch channel source	Voltage U1
PLL synch frequency range	45 to 66 Hz
Sampling frequency	128 points/cycle
A/D converter resolution	16 bits
Input resistance (50/60 Hz)	Voltage: $2.0 \text{ M}\Omega \pm 10\%$ (differential operation) Current: $200 \text{ k}\Omega \pm 10\%$
Maximum input voltage	Voltage inputs: AC780 Vrms, 1103 Vpeak Current inputs: AC1.7 Vrms, 2.4 Vpeak
Maximum rated voltage to earth	Voltage input terminals: AC600 Vrms (50/60 Hz)

Measurement Items

Measurement Items	Voltage, Current, Active power, Reactive power, Apparent power, Power factor, Integrated active power, Integrated reactive power, Frequency, harmonic
-------------------	---

Display

Display update rate	Approx. 0.5 seconds (Except when the PC card or internal memory is accessed or during RS-232C communications)
Display range	Voltage/current: 0.4% to 130% of the range (zero-suppressed at below 0.4%) Power: 0% to 130% of the range (zero-suppressed when the voltage or current is zero) Harmonic level: 0% to 130% of the range
Effective measurement range	5 to 110% of the range
Display language	Japanese/ English
Display monitor	5.7-inch STN monochrome LCD (320 x 240 dots)
Backlight	Auto OFF/ON/OFF
Contrast	Control using a dial

Miscellaneous Measurement Items

Voltage/Current Measurement

Measurement method	True RMS type
Measurement range	Voltage: 150.00/300.00/600.00 V Current: When the 9669 (0.5 mV/A) is used : 100.00/200.00/1.0000k A When the 9661/9695-03 (1 mV/A) is used: 5.0000/10.000/50.000/ 100.00/500.00 A When the 9660 (1 mV/A) is used: 5.0000/10.000/50.000/100.00 A When the 9667 5000 A range (0.1 mV/A) is used : 5.0000 kA When the 9667 500 A range (1 mV/A) is used : 500.00 A When the 9694 (10 mV/A) is used : 500.00 m/1.0000/5.0000 A When the 9695-02 (10 mV/A) is used: 500.00 m/ 1.0000/ 5.0000/ 10.000/ 50.000 A (Selectable separately for each circuit)
Range selection	Manual range (separate current range selectable for each circuit)
Measurement accuracy	Voltage: $\pm 0.2\% \text{rdg.} \pm 0.1\% \text{f.s.}$ Current: $\pm 0.2\% \text{rdg.} \pm 0.1\% \text{f.s.}$ + clamp-on-sensor specification
Crest factor	Voltage: 2 or less (for full-scale input) Current: 4 or less (for full-scale input, 2 or less with the 500 A, 1 kA, and 5 kA ranges)

Active Power Measurement

Measurement range	Depends on the voltage x current range combination.
Measurement accuracy	$\pm 0.2\% \text{rdg.} \pm 0.1\% \text{f.s.}$ + clamp-on-sensor specification (power factor = 1)
Power factor influence	$\pm 1.0\% \text{rdg.}$ (45 to 66 Hz, power factor = 0.5)
Polarity display	For (consumption) No symbol For (regeneration) "-"

Reactive Power Measurement

Measurement range	Depends on the voltage x current range combination.
Reactive-power-meter method	Not used: Calculate using the voltage, current, and active-power measurements. Used: Measure the reactive power directly using the reactive-power-meter method.
Measurement accuracy	When the reactive-power-meter method is not used Each calculation result ± 1 dgt. When the reactive-power-meter method is used $\pm 0.2\% \text{rdg.} \pm 0.1\% \text{f.s.}$ + clamp-on-sensor specification (reactive factor = 1)
Influence of the reactive factor	$\pm 1.0\% \text{rdg.}$ (45 Hz to 66 Hz; reactive factor = 0.5; reactive-power-meter method used)
Polarity display	For lag phase (LAG: current is slower than voltage): no symbol For lead phase (LEAD: current is faster than voltage): "-" (Only when the reactive-power-meter method is used)

Apparent Power Measurement

Measurement range	Depends on the voltage x current range combination.
Measurement accuracy	Each calculation result ± 1 dgt.
Polarity display	No symbol

Power Factor Measurement

Measurement range	-1.0000 (lead) to 0.0000 to +1.0000 (lag)
Measurement accuracy	± 1 dgt. for calculations derived from the various measurement values.
Polarity display	For lag phase (LAG: current is slower than voltage): no symbol For lead phase (LEAD: current is faster than voltage): "-" Measurement range

Frequency Measurement

Measurement method	Reciprocal frequencies
Measurement range	40.000 to 70.000 Hz
Measurement source	Voltage U1 (same as the PLL synchronization source)
Measurement accuracy	$\pm 0.5\%$ rdg. ± 1 dgt. For a sine wave input with a voltage range of 10% to 110%.

Integrated Power Measurement

Measurement range	Integrated active power Consumption: 0.00000 mWh to 99999.9 GWh Regeneration: -0.00000 mWh to -99999.9 GWh Integrated reactive power Lag: 0.00000 mvarh to 99999.9 Gvarh Lead: -0.00000 mvarh to -99999.9 Gvarh
Measurement accuracy	Measurement accuracy of active power/reactive power ± 1 dgt.
Integration time accuracy	± 10 ppm ± 1 second (23°C, 73°F)
Measurement display	Integrated active power: Displays consumption/regeneration separately Integrated reactive power: Displays lag/lead separately

Harmonic Measurement

Measurement range	Fundamental frequency: 45 Hz to 66 Hz
Measurement method	PLL synchronization
Analysis frequencies	Up to the 40th order
Window width	One cycle
Window type	Rectangular
Number of pieces of analysis data	128 points

Harmonic Measurement

Analysis rate	Once/16 cycles
Analysis item	<p>Harmonic level: Level of each order of harmonic for voltage, current, and power</p> <p>Harmonic content: The content of each order of harmonic for voltage, current, and power</p> <p>Harmonic phase angle: Phase angle of each order of harmonic for voltage, current, and power</p> <p>Total value: Total up to the 40th order harmonics of voltage, current, and power</p> <p>Total THD: Voltage and current (THD-F or THD-R)</p>
Measurement accuracy	<p>Harmonic level</p> <p>1st to 20th orders: $\pm 1.0\%rdg. \pm 0.2\%f.s.$</p> <p>21st to 30th orders: $\pm 1.0\%rdg. \pm 0.3\%f.s.$</p> <p>31st to 40th orders: $\pm 2.0\%rdg. \pm 0.3\%f.s.$</p> <p>For the current and voltage, the clamp-on-sensor specification shall be taken into account.</p> <p>Harmonic power-phase angle</p> <p>The accuracy guarantee range is 1% and over of the range for each order of the harmonic voltage (current) level.</p> <p>1st to 6th orders: $\pm 3^\circ$</p> <p>7th to 40th orders: $\pm (0.3^\circ \times k+1^\circ)$</p> <p>The clamp-on-sensor specification shall be taken into account ($k =$ order of the harmonic).</p>

Settings

VT (PT) ratio	0.01 to 9999.99
CT ratio	0.01 to 9999.99 (Set separately for each circuit)
Measurement start method	<p>Manual/time setting</p> <p>Time is set as: year (4 digits)/month/day/hour: minute (24-hour clock)</p>
Measurement stop method	<p>Manual/timer/time setting</p> <p>Time is set as: year (4 digits)/month/day/hour: minute (24-hour clock)</p> <p>The timer is set to between 1 second and 8784 hours.</p>
Data-output interval	<p>Standard/short-term</p> <p>The maximum measurement period is one year. Measurement stops immediately after the elapse of that period.</p> <p>When the memory capacity is exceeded, measurement is continued.</p> <p>Performance-assured PC card: 9626,9627,9726,9727,9728 (optional)</p> <p>Standard interval: 1/2/5/10/15/30 seconds 1/2/5/10/15/30/60 minutes</p> <p>The number of output items depends on the interval setting.</p> <p>Short-term interval: 1 cycle/0.1/0.2/0.5 seconds</p> <p>Only instantaneous values are output.</p> <p>Data is saved in the internal buffer memory (no backup function) temporarily, and is then saved in the set medium (PC card/internal memory) every 10 seconds.</p>
Medium for saving data	<p>Memory: PC card/internal memory</p> <p>When the PC card is selected, if it is not installed, data is saved in the internal memory.</p>

Settings

File name	The file name is set by the user (using up to 8 half-size letters and numbers). If the file name is not set by the user, the instrument sets a file name automatically.
Device to be connected to the RS-232C	PC/printer No output to the printer when the interval is less than 1 minute
THD selection	THD-F (based on the fundamental)/THD-R (based on the fundamental and all harmonics)
Harmonic order for display	All order/odd order
Sampling method	PLL synchronization/fixed clock (50/60 Hz)
Backlight	Auto OFF/ON/OFF Auto OFF turns off the backlight automatically 5 minutes after the last key operation. After the backlight is turned off by Auto OFF, it can be turned on again by pressing any key (the same applies when the keys are locked).
Display average times	OFF/2/5/10/20 (moving average of continuous waveform)
Medium for copying screen	Printer/internal memory/PC card
Beep sound	ON/OFF
Language	Japanese/English/German/Italian/Chinese (Simple, Trad)/French/Spanish/Korean
ID No.	1 to 999
Clock setting	Year (4 digits)/month/day/hour/minute (24-hour clock)

Other

Life of backup lithium battery	Approx. 6 years (reference data at 23°C, 73°F); for backup of clock and settings (lithium battery)
Clock function	Auto-calendar, automatic leap-year adjustment, 24-hour clock
Clock Accuracy	±10 ppm ±1 second (23°C, 73°F) (with ±1.9 seconds/day (23°C, 73°F))
Internal-memory capacity	1 MB
Frequency characteristics	±3% f.s. + measurement accuracy up to the 50th frequency of the fundamental, with a fundamental frequency of 45 Hz to 66 Hz
Temperature coefficient	Within ±0.03% f.s. / °C
Influence of common-mode voltage	Within ±0.2% f.s. (AC 600 Vrms, 50/60 Hz, between the voltage input terminal (shorted) and the case)
Influence of the external magnetic field	Within ±1.5% f.s. (in a magnetic field of AC 400 Arms/m, 50/60 Hz)
Effect of radiated radio-frequency electromagnetic field	Influence of a radioactive radio-frequency electromagnetic field With a current of ±3% f.s. at 10 V/m (when the 9667 is used; f.s. is the rated primary current of the 9667)

Other

Effect of conducted radio-frequency electromagnetic field	Influence of a conductive radio-frequency electromagnetic field With a current of $\pm 3\%$ f.s. at 3 V (when the 9667 is used; f.s. is the rated primary current of the 9667)
---	---

13

Conditions of Guaranteed Accuracy

Conditions of Guaranteed Accuracy	Warmup time of more than 30 minutes, input of a sine wave, power factor = 1, and PLL synchronization
Temperature and humidity for guaranteed accuracy	$23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ ($73^{\circ}\text{F} \pm 9^{\circ}\text{F}$), 80% RH or less
Fundamental waveform range for guaranteed accuracy	45 to 66 Hz
Display area for guaranteed accuracy	Effective measurement area
Period of guaranteed accuracy	1 year

External Interface Specifications

PC card interface

Slot	PC Card Standard Type II slot x 1
Card	Flash ATA card
Storage capacity	Up to 528 MB
Data format	MS-DOS format
Stored data	Setting, measurement, and screen data

RS-232C interface

Method	EIA RS-232C
Connector	Mini DIN 9-pin connector x 1
Transfer method	Asynchronous communication method, full duplex
Baud rate	2400/ 9600/ 19200/ 38400 bps
Data length	8 bits
Parity check	None
Stop bit	1
Flow control	None, XON/XOFF, RTS/CTS
Delimiter	CR+LF/ CR

D/A Output (3169-21 only)

Number of output channels	4 channels
Output level	DC \pm 5 V/f.s.
Resolution	Polarity + 11 bits
Output accuracy	Measurement accuracy \pm 0.2% f.s.
Temperature coefficient	\pm 0.02% f.s./ $^{\circ}$ C or less
Output resistance	100 Ω \pm 5%
Output update rate	Normal measurement items: Every cycle of measurement input Harmonic measurement items: Every 16 cycles of measurement input
Output items	Selectable from among 4 items Instantaneous value Voltage, current, average voltage, average current, active power, reactive power, apparent power, power factor, frequency Integrated power Integrated active power (consumption/regeneration), Integrated reactive power (lag/lead) Harmonic Harmonic level, harmonic content, and harmonic phase angle of each order; total value; THD-F/THD-R
Integrated power output rate	5 V/1 kWh, 5 V/5 kWh, 5 V/10 kWh, 5 V/50 kWh, 5 V/100 kWh, 5 V/500 kWh, 5 V/1000 kWh
External Input/Output	
Control items	Start/stop of time-series measurement Status output (Low level during time-series measurement) Data storage
Signal level	0/5-V logic signal, short/open contact signal

Accessories and Options

Accessories	9438-03 VOLTAGE CORD Power cord Instruction manual (Booklet and CD-R) Quick start manual (Booklet) RS-232C instruction manual (CD-R) Input cord label 9441 CONNECTION CABLE (3169-21 only)
Options	9660 CLAMP ON SENSOR (100 A rms rating) 9661 CLAMP ON SENSOR (500 A rms rating) 9667 FLEXIBLE CLAMP ON SENSOR (5000 A rms rating) 9669 CLAMP ON SENSOR (1000 A rms rating) 9694 CLAMP ON SENSOR (5 A rms rating) 9695-02 CLAMP ON SENSOR (50 Arms rating) 9695-03 CLAMP ON SENSOR (100 Arms rating) 9219 CONNECTION CABLE (for 9695-02/03) 9290 CLAMP ON ADAPTER (continuous 1000 A, up to 1500 A, CT ratio 10:1) 9440 CONNECTION CABLE (for external input/output terminal) 9441 CONNECTION CABLE (for D/A output, 3169-21 only) 9612 RS-232C CABLE (for PC) 9442 PRINTER (with 1 roll of thermally sensitized paper supplied, with battery pack) 9443-01 AC ADAPTER (for printers) for Japan 9443-02 AC ADAPTER (for printers) for EU 9443-03 AC ADAPTER (for printers) for USA 1196 RECORDING PAPER (25 m, 10 rolls) 9721 RS-232C CABLE (for printer) 9720-01 CARRYING CASE (The voltage cords and clamp-on sensor are also housed in the case.) 9626 PC card 32MB (32 MB compact Flash card + adapter) 9627 PC card 64MB (64 MB compact Flash card + adapter) 9726 PC card 128MB (128 MB compact Flash card + adapter) 9727 PC card 256MB (256 MB compact Flash card + adapter) 9728 PC card 512MB (512 MB compact Flash card + adapter)

13.1 Formulae

Instantaneous-Value Formulae

Wiring setting Item	Single-phase 2-wire	Single-phase 3-wire	Three-phase 3-wire		Three-phase 4-wire
	1P2W	1P3W	3P3W2M	3P3W3M	3P4W,3P4W4I
Voltage U [Vrms]	U_1	U_1 U_2	U_1 U_2 $U_3(U_{3s}=U_{1s}-U_{2s})$ *1	$U_1(U_{1s}=u_{1s}-u_{2s})$ $U_2(U_{2s}=u_{2s}-u_{3s})$ $U_3(U_{3s}=u_{3s}-u_{1s})$	U_1 U_2 U_3
	$U_i = \sqrt{\frac{1}{M} \sum_{s=0}^{M-1} (U_{is})^2}$	$U_{ave} = \frac{U_1 + U_2}{2}$	$U_{ave} = \frac{U_1 + U_2 + U_3}{3}$		
Current I [Arms]	I_1	I_1 I_2	I_1 I_2 $I_3(I_{3s}=I_{1s}-I_{2s})$ *2	I_1 I_2 I_3 I_4 (3P4W4I only)	
	$I_i = \sqrt{\frac{1}{M} \sum_{s=0}^{M-1} (I_{is})^2}$	$I_{ave} = \frac{I_1 + I_2}{2}$	$I_{ave} = \frac{I_1 + I_2 + I_3}{3}$		
Active power P [W]	P_1	$P_1 + P_2$		$P_1 + P_2 + P_3$ U_i represents the phase to neutral voltage.	
	$P_i = \frac{1}{M} \sum_{s=0}^{M-1} (U_{is} \times I_{is})$				
Reactive power Q [var]	Q_1	$\sqrt{S^2 - P^2}$			
	The reactive-power-meter method is not used. $Q_i = \sqrt{S_i^2 - P_i^2}$	$Q_1 + Q_2$		$Q_1 + Q_2 + Q_3$ U_i represents the phase to neutral voltage.	
Apparent power S [VA]	S_1	$S_1 + S_2$		$\frac{\sqrt{3}}{3}(S_1 + S_2 + S_3)$ U_i represents the line to line voltage.	
	The reactive-power-meter method is not used. $S_i = U_i \times I_i$			$\frac{\sqrt{3}}{3}(S_1 + S_2 + S_3)$ U_i represents the line to line voltage.	
	The reactive-power-meter method is used.	$\sqrt{P^2 + Q^2}$			
	$S_i = \sqrt{P_i^2 + Q_i^2}$				
Power factor PF	$PF = \cos \left \frac{P}{S} \right $				

*1: Provided that $U_{1s} + U_{2s} + U_{3s} = 0$

*2: Provided that $I_{1s} + I_{2s} + I_{3s} = 0$

NOTE

- U : Line to line voltage (phase to neutral voltage for a three-phase 4-wire line); I : Line to line current; U_{ave}/I_{ave} : Average voltage/average current within the circuit; s_i : Polarity of lead/lag (detected by the reactive-power-meter method, no indication for lag, or a minus sign indicated for lead); u : Phase voltage from a virtual neutral point; i : Measurement channel; M : Number of samples; s : Sample point No.; m : Number of samples in a cycle (128)
- The power flow direction is indicated using the polarity signs for active power P : "+" indicates consumption and "-" indicates regeneration.
- If $S < |P|$ due to a measurement error, unbalance, or other factor, the 3169-20/21 will process data such that $S = |P|$, $Q = 0$, and PF = 1.
- If $S = 0$, the instrument processes the data such that PF = over.

13

Basic Formulae for Harmonic

Processing Item	k th harmonic		Total up to the 40th	
Voltage U [Vrms]	U_k	$\sqrt{U_{kr}^2 + U_{ki}^2}$	U_K	$\sqrt{\sum_{k=1}^{40} (U_k)^2}$
Voltage phase angles ϕU [deg]	ϕU_k	$\tan^{-1}\left(\frac{U_{kr}}{-U_{ki}}\right)$ *1	--	--
Current I [Arms]	I_k	$\sqrt{I_{kr}^2 + I_{ki}^2}$	I_K	$\sqrt{\sum_{k=1}^{40} (I_k)^2}$
Current phase angles ϕI [deg]	ϕI_k	$\tan^{-1}\left(\frac{I_{kr}}{-I_{ki}}\right)$ *1	--	--
Power P [W]	P_k	$U_{kr} \times I_{kr} + U_{ki} \times I_{ki}$	P_K	$\sum_{k=1}^{40} P_k$
Reactive power Q [var] *3	Q_k	The reactive-power-meter method is used. $U_{kr} \times I_{ki} - U_{ki} \times I_{kr}$ *2	The reactive-power-meter method is not used. $\sqrt{S_k^2 - P_k^2}$	--
Apparent power S [VA] *3	S_k	$\sqrt{P_k^2 + Q_k^2}$	$U_k \times I_k$	--
Harmonic voltage content [%]	Voltage	$U_k / U_1 \times 100$ (%)		--
	Current	$I_k / I_1 \times 100$ (%)		--
	Power	$P_k / P_1 \times 100$ (%)		--

Processing Item	kth harmonic		Total up to the 40th	
Total harmonic distortion-F THD-F [%]	--	--	THD _{UF}	$\frac{\sqrt{\sum_{k=2}^{40} (U_k)^2}}{U_1} \times 100 (\%)$
	--	--	THD _{IF}	$\frac{\sqrt{\sum_{k=2}^{40} (I_k)^2}}{I_1} \times 100 (\%)$
Total harmonic distortion-R THD-R [%]	--	--	THD _{UR}	$\frac{\sqrt{\sum_{k=2}^{40} (U_k)^2}}{\sqrt{\sum_{k=1}^{40} (U_k)^2}} \times 100 (\%)$
	--	--	THD _{IR}	$\frac{\sqrt{\sum_{k=2}^{40} (I_k)^2}}{\sqrt{\sum_{k=1}^{40} (I_k)^2}} \times 100 (\%)$

- *1: The harmonic phase angle is displayed after it is corrected using the phase of the fundamental of the PLL synchronization/frequency source as the reference phase (0.0°). When $U_{ki} = U_{kr} = 0$, $\phi U_k = 0^\circ$. When $I_{ki} = I_{kr} = 0$, $\phi I_k = 0^\circ$.
- *2: Reactive power is calculated with the phase of the harmonic component of the current lagged by 90 degrees.
- *3: The calculation is performed internally and the result is not displayed on-screen.

NOTE

k: Harmonic order (k = 1 to 40), K: K = 40
 r: resistance component after FFT
 i: reactance component after FFT

Harmonic Formulae for Each Connection Method

Item	Wiring	Single-phase 2-wire	Single-phase 3-wire	Three-phase 3-wire		Three-phase 4-wire
		1P2W	1P3W	3P3W2M	3P3W3M	3P4W,3P4W4I
Voltage U_k [Vrms]		U_{1k}	U_{1k} U_{2k}	U_{1k} U_{2k} U_{3k} *6	U_{1k} U_{2k} U_{3k} *4	U_{1k} U_{2k} U_{3k}
Current I_k [Arms]		I_{1k}	I_{1k} I_{2k}	I_{1k} I_{2k} I_{3k} *5	I_{1k} I_{2k} I_{3k}	I_{1k} I_{2k} I_{3k} I_{4k}
Active power P_k [W]		P_{1k}	$P_{1k} + P_{2k}$	$P_{1k} + P_{2k}$	$P_{1k} + P_{2k} + P_{3k}$ *3	$P_{1k} + P_{2k} + P_{3k}$
Reactive power Q_k [var] *1		Q_{1k}	$Q_{1k} + Q_{2k}$	$Q_{1k} + Q_{2k}$	$Q_{1k} + Q_{2k} + Q_{3k}$ *3	$Q_{1k} + Q_{2k} + Q_{3k}$

Wiring Item	Single-phase 2-wire	Single-phase 3-wire	Three-phase 3-wire		Three-phase 4-wire
	1P2W	1P3W	3P3W2M	3P3W3M	3P4W,3P4W4I
Apparent power S_k [VA] *2	S_{1k}	$S_{1k} + S_{2k}$	The reactive-power-meter method is used. $\sqrt{P_k^2 + Q_k^2}$		$S_{1k} + S_{2k} + S_{3k}$
			The reactive-power-meter method is not used. $\frac{\sqrt{3}}{3}(S_{1k} + S_{2k} + S_{3k})$		
Power phase angles ϕ_k [deg]	The reactive-power-meter method is used. $\tan^{-1}\left(\frac{Q_k}{P_k}\right)$ *7				
	The reactive-power-meter method is not used. $\cos^{-1}\left(\frac{P_k}{S_k}\right)$ *8				

*1: The calculation is performed internally, and the result is not displayed on-screen, when the reactive-power-meter method is used. The calculation is not performed when the reactive-power-meter method is not used.

*2: The calculation is performed internally, and the result is not displayed on-screen.

*3: The phase voltage from a virtual neutral point is used for calculation of P , Q .

$$P_k = u_{1kr} \cdot I_{1kr} + u_{1ki} \cdot I_{1ki} + u_{2kr} \cdot I_{2kr} + u_{2ki} \cdot I_{2ki} + u_{3kr} \cdot I_{3kr} + u_{3ki} \cdot I_{3ki}$$

$$Q_k = (u_{1kr} \cdot I_{1ki} - u_{1ki} \cdot I_{1kr}) + (u_{2kr} \cdot I_{2ki} - u_{2ki} \cdot I_{2kr}) + (u_{3kr} \cdot I_{3ki} - u_{3ki} \cdot I_{3kr})$$

*4: $U_{1s} = u_{1s} - u_{2s}$, $U_{2s} = u_{2s} - u_{3s}$, $U_{3s} = u_{3s} - u_{1s}$

U : Line to line voltage; u : Phase to neutral voltage from a virtual neutral point

*5: $I_{3s} = -I_{1s} - I_{2s}$ (provided that $I_{1s} + I_{2s} + I_{3s} = 0$)

*6: $U_{3s} = U_{1s} - U_{2s}$ (provided that $U_{1s} + U_{2s} + U_{3s} = 0$)

*7: When $P_k = Q_k = 0$, $\phi_k = 0^\circ$.

*8: When $S_k = 0$, $\phi_k = 0^\circ$.

NOTE

- The subscript numbers represent measurement-channel numbers. (k : Analysis order)
- The expressions above represent the k th harmonic. In the expressions for total values, k is replaced by K .

13.2 Range Configuration and Accuracy by Clamp-On-Sensor

Power Range Configuration (when the 9660, 9661, or 9695-03 is used)

Voltage	Wiring	Current				
		9661 CLAMP ON SENSOR				
		9660/9695-03 CLAMP ON SENSOR (CAT III 300 V)				
		5.0000 A	10.000 A	50.000 A	100.00 A	500.00 A
150.00 V	1P2W	750.00 W	1.5000 kW	7.5000 kW	15.000 kW	75.000 kW
	1P3W 3P3W2M 3P3W3M	1.5000 kW	3.0000 kW	15.000 kW	30.000 kW	150.00 kW
	3P4W 3P4W4I	2.2500 kW	4.5000 kW	22.500 kW	45.000 kW	225.00 kW
300.00 V	1P2W	1.5000 kW	3.0000 kW	15.000 kW	30.000 kW	150.00 kW
	1P3W 3P3W2M 3P3W3M	3.0000 kW	6.0000 kW	30.000 kW	60.000 kW	300.00 kW
	3P4W 3P4W4I	4.5000 kW	9.0000 kW	45.000 kW	90.000 kW	450.00 kW
600.00 V	1P2W	3.0000 kW	6.0000 kW	30.000 kW	60.000 kW	300.00 kW
	1P3W 3P3W2M 3P3W3M	6.0000 kW	12.000 kW	60.000 kW	120.00 kW	600.00 kW
	3P4W, 3P4W4I	9.0000 kW	18.000 kW	90.000 kW	180.00 kW	900.00 kW

NOTE

- The range-configuration table shows the full-scale display value of each measurement range.
- Voltage and current measurements are indicated as 0.4% to 130% f.s. of the range. If a measurement is below 0.4% f.s., it will be zero-suppressed.
- Power measurement is indicated as 0% to 130% f.s. of the range. It will be zero-suppressed when the voltage or current is 0.
- The accuracy-guarantee ranges of the 9660/9695-03 and 9661 sensors are 5 A to 100 A and 5 A to 500 A, respectively.
- The range configuration for apparent power (S) and reactive power (Q) is the same, except that the unit is changed to VA and var, respectively.
- When the VT ratio and CT ratio are set, the ranges will be multiplied by (VT ratio x CT ratio) (when a range falls below 1.0000 mW or exceeds 9.9999 GW, a scaling error occurs and the setting is not accepted).

Accuracy by Clamp-On Sensor (when the 9660, 9661, or 9695-03 is used)

Range	9660 CLAMP ON SENSOR 9695-03 CLAMP ON SENSOR	9661 CLAMP ON SENSOR
500.00 A		$\pm 0.5\% \text{rdg.} \pm 0.11\% \text{f.s.}$
100.00 A	$\pm 0.5\% \text{rdg.} \pm 0.12\% \text{f.s.}$	$\pm 0.5\% \text{rdg.} \pm 0.15\% \text{f.s.}$
50.000 A	$\pm 0.5\% \text{rdg.} \pm 0.14\% \text{f.s.}$	$\pm 0.5\% \text{rdg.} \pm 0.2\% \text{f.s.}$
10.000 A	$\pm 0.5\% \text{rdg.} \pm 0.3\% \text{f.s.}$	$\pm 0.5\% \text{rdg.} \pm 0.6\% \text{f.s.}$
5.0000 A	$\pm 0.5\% \text{rdg.} \pm 0.5\% \text{f.s.}$	$\pm 0.5\% \text{rdg.} \pm 1.1\% \text{f.s.}$

Power Range Configuration (when the 9669 is used)

Voltage	Wiring	Current		
		9669 CLAMP ON SENSOR		
		100.00 A	200.00 A	1.0000 kA
150.00 V	1P2W	15.000 kW	30.000 kW	150.00 kW
	1P3W 3P3W2M 3P3W3M	30.000 kW	60.000 kW	300.00 kW
	3P4W 3P4W4I	45.000 kW	90.000 kW	450.00 kW
300.00 V	1P2W	30.000 kW	60.000 kW	300.00 kW
	1P3W 3P3W2M 3P3W3M	60.000 kW	120.00 kW	600.00 kW
	3P4W 3P4W4I	90.000 kW	180.00 kW	900.00 kW
600.00 V	1P2W	60.000 kW	120.00 kW	600.00 kW
	1P3W 3P3W2M 3P3W3M	120.00 kW	240.00 kW	1.2000 MW
	3P4W 3P4W4I	180.00 kW	360.00 kW	1.8000 MW

NOTE

- The range-configuration table shows the full-scale display value of each measurement range.
- Voltage and current measurements are indicated as 0.4% to 130% f.s. of the range. If a measurement is below 0.4% f.s., it will be zero-suppressed.
- Power measurement is indicated as 0% to 130% f.s. of the range. It will be zero-suppressed when the voltage or current is 0.
- The range configuration for apparent power (S) and reactive power (Q) is the same, except that the unit is changed to VA and var, respectively.
- When the VT ratio and CT ratio are set, the ranges will be multiplied by (VT ratio x CT ratio) (when a range falls below 1.0000 mW or exceeds 9.9999 GW, a scaling error occurs and the setting is not accepted).

Accuracy by Clamp-On Sensor (when the 9669 is used)

Range	9669 CLAMP ON SENSOR
1.0000 kA	$\pm 1.2\% \text{rdg.} \pm 0.11\% \text{f.s.}$
200.00 A	$\pm 1.2\% \text{rdg.} \pm 0.15\% \text{f.s.}$
100.00 A	$\pm 1.2\% \text{rdg.} \pm 0.2\% \text{f.s.}$

Power Range Configuration (when the 9667 is used)

Voltage	Wiring	Current	
		9667 FLEXIBLE CLAMP ON SENSOR	
		500 A range	5000 A range
150.00 V	1P2W	500.00 A	5.0000 kA
	1P3W 3P3W2M 3P3W3M	75.000 kW	750.00 kW
	3P4W 3P4W4I	225.00 kW	2.2500 MW
300.00 V	1P2W	150.00 kW	1.5000 MW
	1P3W 3P3W2M 3P3W3M	300.00 kW	3.0000 MW
	3P4W 3P4W4I	450.00 kW	4.5000 MW
600.00 V	1P2W	300.00 kW	3.0000 MW
	1P3W 3P3W2M 3P3W3M	600.00 kW	6.0000 MW
	3P4W 3P4W4I	900.00 kW	9.0000 MW

NOTE

- The range-configuration table shows the full-scale display value of each measurement range.
- Voltage and current measurements are indicated as 0.4% to 130% f.s. of the range. If a measurement is below 0.4% f.s., it will be zero-suppressed.
- Power measurement is indicated as 0% to 130% f.s. of the range. It will be zero-suppressed when the voltage or current is 0.
- The range configuration for apparent power (S) and reactive power (Q) is the same, except that the unit is changed to VA and var, respectively.
- When the VT ratio and CT ratio are set, the ranges will be multiplied by (VT ratio x CT ratio) (when a range falls below 1.0000 mW or exceeds 9.9999 GW, a scaling error occurs and the setting is not accepted).

Accuracy by Clamp-On Sensor (when the 9667 is used)

Range	9667 FLEXIBLE CLAMP ON SENSOR ON SENSOR 5000 A range	9667 FLEXIBLE CLAMP ON SENSOR ON SENSOR 500 A range
5.0000 kA	± 2.2%rdg. ± 0.4%f.s.	
500.00 A		± 2.2%rdg. ± 0.4%f.s.

Power Range Configuration (when the 9694 or 9695-02 is used)

Voltage	Wiring	Current				
		9695-02 CLAMP ON SENSOR (CAT III 300 V)				
		9694 CLAMP ON SENSOR (CAT III 300 V)			100.00 A	500.00 A
		500.00 mA	1.0000 A	5.0000 A		
150.00 V	1P2W	75.000 W	150.00 W	750.00 W	15.000 kW	75.000 kW
	1P3W 3P3W2M 3P3W3M	150.00 W	300.00 W	1.5000 kW	30.000 kW	150.00 kW
	3P4W 3P4W4I	225.00 W	450.00 W	2.2500 kW	45.000 kW	225.00 kW
300.00 V	1P2W	150.00 W	300.00 W	1.5000 kW	30.000 kW	150.00 kW
	1P3W 3P3W2M 3P3W3M	300.00 W	600.00 W	3.0000 kW	60.000 kW	300.00 kW
	3P4W 3P4W4I	450.00 W	900.00 W	4.5000 kW	90.000 kW	450.00 kW
600.00 V	1P2W	300.00 W	600.00 W	3.0000 kW	60.000 kW	300.00 kW
	1P3W 3P3W2M 3P3W3M	600.00 W	1.2000 kW	6.0000 kW	120.00 kW	600.00 kW
	3P4W 3P4W4I	900.00 W	1.8000 kW	9.0000 kW	180.00 kW	900.00 kW

NOTE

- The range-configuration table shows the full-scale display value of each measurement range.
- Voltage and current measurements are indicated as 0.4% to 130% f.s. of the range. If a measurement is below 0.4% f.s., it will be zero-suppressed.
- Power measurement is indicated as 0% to 130% f.s. of the range. It will be zero-suppressed when the voltage or current is 0.
- The range configuration for apparent power (S) and reactive power (Q) is the same, except that the unit is changed to VA and var, respectively.
- When the VT ratio and CT ratio are set, the ranges will be multiplied by (VT ratio x CT ratio) (when a range falls below 1.0000 mW or exceeds 9.9999 GW, a scaling error occurs and the setting is not accepted).
- The accuracy-guarantee ranges of the 9694 and 9695-02 sensors are 500 mA to 5 A, respectively.

Accuracy by Clamp-On Sensor (when the 9694 or 9695-02 is used)

Range	9694 CLAMP ON SENSOR	9695-02 CLAMP ON SENSOR
50.000 A	--	± 0.5%rdg. ± 0.12%f.s.
10.000 A	--	± 0.5%rdg. ± 0.2%f.s.
5.0000A	± 0.5%rdg. ± 0.12%f.s.	± 0.5%rdg. ± 0.3%f.s.
1.0000A	± 0.5%rdg. ± 0.2%f.s.	± 0.5%rdg. ± 1.1%f.s.
500.00mA	± 0.5%rdg. ± 0.3%f.s.	± 0.5%rdg. ± 2.1%f.s.



Maintenance and Service

14

14.1 Cleaning and Storage

14

Cleaning



- To clean the product, wipe it gently with a soft cloth moistened with water or mild detergent. Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.
- Wipe the LCD gently with a soft, dry cloth.
- Measurements are degraded by dirt on the mating surfaces of the clamp-on sensor, so keep the surfaces clean by gently wiping with a soft cloth.

Storage

- Storage temperature and humidity should be kept between -20 and 50°C, at less than 80% RH.
- Do not store or use the product where it could be exposed to direct sunlight, high temperature or humidity, or condensation. Under such conditions, the product may be damaged and insulation may deteriorate so that it no longer meets specifications.
- When storing the instrument for a long time (one year or more), the specifications are no longer guaranteed. Therefore, before use, have the instrument recalibrated.

14.2 Repair and Servicing

CAUTION

- Adjustments and repairs should be made only by technically qualified personnel.
- If damage is suspected, check the "Troubleshooting" section before contacting your dealer or Hioki representative.
- Pack the product carefully so that it will not be damaged during shipment, and include a detailed written description of the problem. Hioki cannot be responsible for damage that occurs during shipment.

Troubleshooting


If problems are encountered with operation, check the appropriate items below.

Symptom	Check Items
The POWER LED lights, but the screen is blank.	<ul style="list-style-type: none"> • Is the Power switch turned on? • Are the AC Adapter and power cord securely connected? • Is the LCD Auto Off setting enabled?
Keys do not operate.	<ul style="list-style-type: none"> • Is a key stuck? • Is the Key Lock switch on?
Measurements are unstable	<ul style="list-style-type: none"> • Is the line frequency 50 or 60 Hz? 400-Hz line measurements are not supported.
Measurement data cannot be acquired as intended.	<ul style="list-style-type: none"> • Are the voltage cords and clamp sensors connected properly? • Do the actual measurement lines match the measurement line settings?
Data cannot be saved to a PC Card.	<ul style="list-style-type: none"> • Is the PC Card firmly inserted? • Is the PC Card initialized (formatted)? • Is the PC Card already full?
Operation is incorrect when connected to a PC.	<ul style="list-style-type: none"> • Is the instrument turned on? • Is the interface cable connected properly? • Are the interface settings correct?
Unable to print.	<ul style="list-style-type: none"> • Is the printer turned on? • Is the interface cable connected properly? • Are the interface settings correct? • Is the recording paper loaded properly (front and back)?
Power does not turn on.	<ul style="list-style-type: none"> • The power protection circuitry may be damaged. As this cannot be replaced or repaired by the user, please contact your supplier or nearest Hioki representative.

If the cause of the problem still cannot be found, try resetting the system. This returns most of the system settings to their factory defaults.

System Reset

Turn the power OFF and then ON again while holding down the **SET UP** key to perform a system reset.

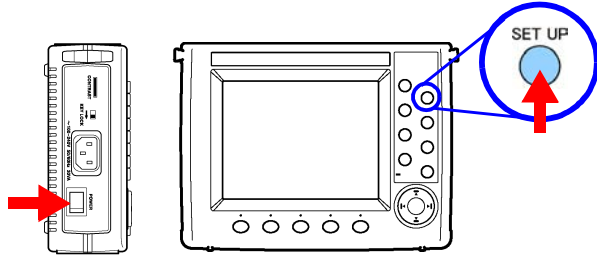

NOTE

A system reset will return all settings of the 3169-20/21 (except for the clock) to the defaults.

14.3 Instrument Disposal

The instrument contains a lithium battery for system backup.


WARNING

- To avoid electrocution, turn off the power switch and disconnect the power cord before removing the lithium battery.
- To avoid the possibility of explosion, do not short circuit, disassemble or incinerate batteries.

CAUTION

- If the protective functions of the instrument are damaged, either remove it from service or mark it clearly so that others do not use it inadvertently.
- When disposing of this instrument, remove the lithium battery and dispose of battery and instrument in accordance with local regulations.


Lithium Battery Removal

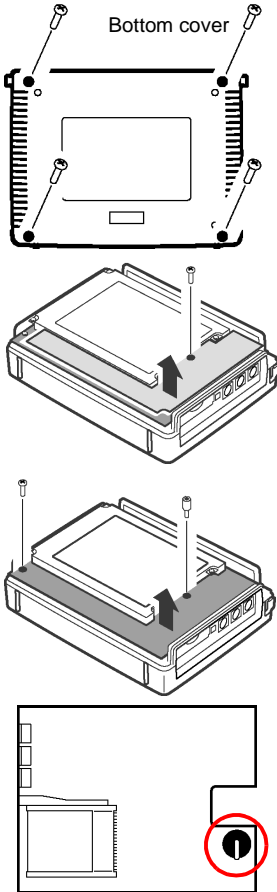

Required tools:

- Phillips screwdriver 1
- Wire cutter 1
- Hexagonal wrench 1


1. Turn OFF the power to the 3169-20/21.
2. Turn the instrument upside down and remove the four screws affixing the bottom cover.
3. Turn the instrument right side up and remove the top cover.
4. Remove one screw, and then remove the key circuit board.
5. Cut the two leads of the button-type lithium battery near the corner of the circuit boards.
6. Remove two screws, and then remove the circuit board fastening the LCD.

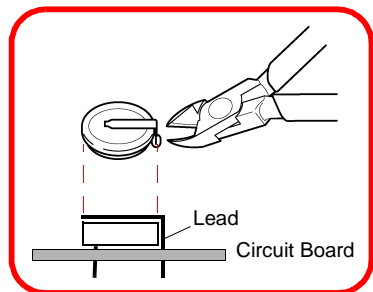



Appendix

Power Measurement by the 2 Power-Meter Method and U₃/I₃ Measurement Theory (3P3W2M mode)

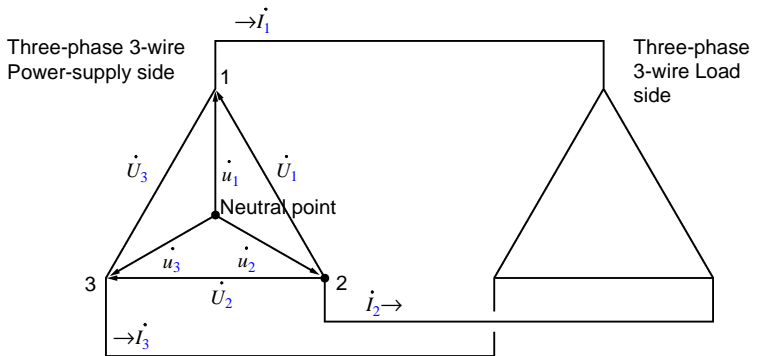

The figure above shows an artificial circuit of a three-phase 3-wire line. In the figure, \dot{U}_1 , \dot{U}_2 , and \dot{U}_3 represent the vectors of line to line voltage; \dot{I}_1 , \dot{I}_2 , and \dot{I}_3 represent the line (phase) current vectors; \dot{u}_1 , \dot{u}_2 , and \dot{u}_3 represent the phase to neutral voltage vectors. Normally, three-phase power P is obtained as the sum of the power of the phases.

$$P = \dot{u}_1 \dot{I}_1 + \dot{u}_2 \dot{I}_2 + \dot{u}_3 \dot{I}_3 \quad (1)$$

A three-phase 3-wire line, however, doesn't have a neutral point, and the power of each phase cannot be measured directly. If a neutral point hypothetically existed, three power meters must be used simultaneously. For this reason, the 2-power-meter method (2 voltages and 2 currents) using the line voltage is generally used instead. Theoretically, the power of each phase is obtained using the following equation:

If measuring \dot{U}_1 , \dot{U}_2 , \dot{I}_1 , and \dot{I}_3 using power meters,

$$\begin{aligned} P &= \dot{U}_1 \dot{I}_1 + \dot{U}_2 \dot{I}_3 && (\dot{U}_1 = \dot{u}_1 - \dot{u}_2, \dot{U}_2 = \dot{u}_3 - \dot{u}_2) \\ &= (\dot{u}_1 - \dot{u}_2) \dot{I}_1 + (\dot{u}_3 - \dot{u}_2) \dot{I}_3 \\ &= \dot{u}_1 \dot{I}_1 + \dot{u}_2 (-\dot{I}_3 - \dot{I}_1) + \dot{u}_3 \dot{I}_3 && (\text{because } \dot{I}_1 + \dot{I}_2 + \dot{I}_3 = 0 \text{ provided that} \\ &&& \text{the circuit is closed}) \\ &= \dot{u}_1 \dot{I}_1 + \dot{u}_2 \dot{I}_2 + \dot{u}_3 \dot{I}_3 \quad (2) \end{aligned}$$

Equation (1) coincides with equation (2). This proves that the power of a three-phase 3-wire line is measured by the 2-power-meter method. In addition, there is no special precondition required, except that the circuit must be closed and without leakage current. Therefore, three-phase power can be obtained regardless of whether the cable way is balanced or unbalanced. The 3P3W2M mode of the 3169-20/21 employs this method. In addition, because the sum of the voltage (current) vectors is always zero, the 3169-20/21 internally implements the following equations to measure the 3rd voltage and current:

$$\begin{aligned} |\dot{U}_3| &= |\dot{U}_1 - \dot{U}_2| \\ |\dot{I}_2| &= |-\dot{I}_1 - \dot{I}_3| \end{aligned}$$

Regarding U_3 and I_2 , measurement is performed regardless of whether distortion is present. These values are reflected in the three-phase apparent power and power factor (when the reactive-power-meter method is not used).

NOTE

In the 3P3W2M mode of the 3169-20/21, the phase C current of the three-phase line is input to I2 of each circuit. On the display, the current measurement of phase C is shown as I2, and the calculation result of phase B is shown as I3.

Headers of Output Data

Instantaneous-Value Data (Normal Measurement), Integrated Power and Demand Value

Classification	Data Header	Contents	Unit
Date and Time	DATE	Data-output date, yyyy/m/d	
	TIME	Data-output time, h:mm:ss	
	ETIME	Elapsed time, hhhh:mm:ss	
Information	STATUS	10-bit data showing various pieces of status information	
Voltage	U1_INST[V]	Voltage RMS value, CH1	V
	U2_INST[V]	Voltage RMS value, CH2	V
	U3_INST[V]	Voltage RMS value, CH3	V
	Uave_INST[V]	Voltage RMS value, Average value of channels	V
Current	I1_INST[A]_1 to I1_INST[A]_4	Current RMS value, CH1, Circuit 1-4	A
	I2_INST[A]_1 to I2_INST[A]_2	Current RMS value, CH2, Circuit 1-2	A
	I3_INST[A]_1 to I3_INST[A]_2	Current RMS value, CH3, Circuit 1-2	A
	Iave_INST[A]_1 to Iave_INST[A]_2	Current RMS value, Average value of channels, Circuit 1-2	A
	I4_INST[A]_1	Current RMS value, CH4	A
Power	P_INST[W]_1 to P_INST[W]_4	Active power, Circuit 1-4	W
	Q_INST[var]_1 to Q_INST[var]_4	Reactive power, Circuit 1-4	var
	S_INST[VA]_1 to S_INST[VA]_4	Apparent power, Circuit 1-4	VA
Power Factor	PF_INST_1 to PF_INST_4	Power factor, Circuit 1-4	
Frequency	F_INST[Hz]	Frequency	Hz
Value of each CH	P1_INST[W]_1 to P1_INST[W]_2	Active power, CH1, Circuit 1-2	W
	P2_INST[W]_1 to P2_INST[W]_2	Active power, CH2, Circuit 1-2	W
	P3_INST[W]_1	Active power, CH3	W
	Q1_INST[var]_1 to Q1_INST[var]_2	Reactive power, CH1, Circuit 1-2	var
	Q2_INST[var]_1 to Q2_INST[var]_2	Reactive power, CH2, Circuit 1-2	var
	Q3_INST[var]_1	Reactive power, CH3	var
	S1_INST[VA]_1 to S1_INST[VA]_2	Apparent power, CH1, Circuit 1-2	VA
	S2_INST[VA]_1 to S2_INST[VA]_2	Apparent power, CH2, Circuit 1-2	VA
	S3_INST[VA]_1	Apparent power, CH3	VA
	PF1_INST_1 to PF1_INST_2	Power factor, CH1, Circuit 1 to 2	
	PF2_INST_1 to PF2_INST_2	Power factor, CH2, Circuit 1-2	
PF3_INST_1	Power factor, CH3		

Classification	Data Header	Contents	Unit
Integrated power	Total integrated power from the start of time-series measurement		
	WP+_INTEG[Wh]_1 to WP+_INTEG[Wh]_4	Integrated active power (consumption), Circuit 1-4	Wh
	WP-_INTEG[Wh]_1 to WP-_INTEG[Wh]_4	Integrated active power (regeneration), Circuit 1-4	Wh
	WQ+_INTEG[varh]_1 to WQ+_INTEG[varh]_4	Integrated reactive power (lag), Circuit 1-4	varh
	WQ-_INTEG[varh]_1 to WQ-_INTEG[varh]_4	Integrated reactive power (lead), Circuit 1-4	varh
Demand	Integrated power within interval		
	WP+_INTVL[Wh]_1 to WP+_INTVL[Wh]_4	Integrated active power (consumption), Circuit 1-4	Wh
	WP-_INTVL[Wh]_1 to WP-_INTVL[Wh]_4	Integrated active power (regeneration), Circuit 1-4	Wh
	WQ+_INTVL[varh]_1 to WQ+_INTVL[varh]_4	Integrated reactive power (lag), Circuit 1-4	varh
	WQ-_INTVL[varh]_1 to WQ-_INTVL[varh]_4	Integrated reactive power (lead), Circuit 1-4	varh
	Average value within interval (demand value)		
	P_DEM[W]_1 to P_DEM[W]_4	Average value within time Active power (Consumption), Circuit 1-4	W
	Q_DEM[var]_1 to Q_DEM[var]_4	Average value within time Reactive power (LAG), Circuit 1-4	var
	PF_DEM_1 to PF_DEM_4	Average value within time Power factor, Circuit 1-4 $\frac{P_DEM}{\sqrt{P_DEM^2+Q_DEM^2}} \quad *1$	
	Maximum demand value during time-series measurement		
	P_DEM_MAX[W]_1 to P_DEM_MAX[W]_4	Maximum demand value, Active power, Circuit 1-4	W
P_DEM_MAX DATE_1 to P_DEM_MAX DATE_4	Date of occurrence of maximum demand yyyy/m/d, Circuit 1-4		
P_DEM_MAX TIME_1 to P_DEM_MAX TIME_4	Time of occurrence of maximum demand h:mm:ss, Circuit 1-4		

*1: If the regeneration power has only occurred during the interval, P_DEM = 0 and PF_DEM = 1.

NOTE

- "INST" in the header will be replaced by "AVE" for the average-value data.
- "INST" in the header will be replaced by "MAX" for the maximum-value data.
- "INST" in the header will be replaced by "MIN" for the minimum-value data.

Instantaneous-Value Data (Harmonic Measurement)

Classification	Data Header	Contents	Unit
Harmonic Level	U1(n)_INST[V]	nth harmonic voltage (U1) RMS	V
	U2(n)_INST[V]	nth harmonic voltage (U2) RMS	V
	U3(n)_INST[V]	nth harmonic voltage (U3) RMS	V
	I1(n)_INST[A]_1 to I1(n)_INST[A]_4	nth harmonic current (I1) RMS Circuit 1-4	A
	I2(n)_INST[A]_1 to I2(n)_INST[A]_2	nth harmonic current (I2) RMS Circuits 1 to 2	A
	I3(n)_INST[A]_1 to I3(n)_INST[A]_2	nth harmonic current (I3) RMS Circuits 1 to 2	A
	I4(n)_INST[A]_1	nth harmonic current (I4) RMS	A
	P(n)_INST[W]_1 to P(n)_INST[W]_4	nth harmonic power Circuits 1 to 4	W
Harmonic Percentage Content	U1(n)_INST[%]	nth harmonic voltage (U1) Content	%
	U2(n)_INST[%]	nth harmonic voltage (U2) Content	%
	U3(n)_INST[%]	nth harmonic voltage (U3) Content	%
	I1(n)_INST[%]_1 to I1(n)_INST[%]_4	nth harmonic current (I1) Content, Circuits 1 to 4	%
	I2(n)_INST[%]_1 to I2(n)_INST[%]_2	nth harmonic current (I2) Content, Circuit 1-2	%
	I3(n)_INST[%]_1 to I3(n)_INST[%]_2	nth harmonic current (I3) Content Circuit 1-2	%
	I4(n)_INST[%]_1	nth harmonic current (I4) Content	%
	P(n)_INST[%]_1 to P(n)_INST[%]_4	nth harmonic power Content Circuits 1 to 4	%
Harmonic Phase Angles	U1deg(n)_INST[deg]	nth harmonic voltage (U1) Phase angle	deg
	U2deg(n)_INST[deg]	nth harmonic voltage (U2) Phase angle	deg
	U3deg(n)_INST[deg]	nth harmonic voltage (U3) Phase angle	deg
	I1deg(n)_INST[deg]_1 to I1deg(n)_INST[deg]_4	nth harmonic current (I1) Phase angle, Circuits 1 to 4	deg
	I2deg(n)_INST[deg]_1 to I2deg(n)_INST[deg]_2	nth harmonic current (I2) Phase angle, Circuit 1-2	deg
	I3deg(n)_INST[deg]_1 to I3deg(n)_INST[deg]_2	nth harmonic current (I3) Phase angle, Circuit 1-2	deg
	I4deg(n)_INST[deg]_1	nth harmonic current (I4) Phase angle	deg
	Pdeg(n)_INST[deg]_1 to Pdeg(n)_INST[deg]_4	nth harmonic power Phase angle, Circuits 1 to 4	deg

Classification	Data Header	Contents	Unit
Total Value	TOTAL_U1_INST[V]	Total voltage (U1) (1st to 40th)	V
	TOTAL_U2_INST[V]	Total voltage (U2) (1st to 40th)	V
	TOTAL_U3_INST[V]	Total voltage (U3) (1st to 40th)	V
	TOTAL_I1_INST[A]_1 to TOTAL_I1_INST[A]_4	Total current (I1) (1st to 40th), Circuits 1 to 4	A
	TOTAL_I2_INST[A]_1 to TOTAL_I2_INST[A]_2	Total current (I2) (1st to 40th), Circuit 1-2	A
	TOTAL_I3_INST[A]_1 to TOTAL_I3_INST[A]_2	Total current (I3) (1st to 40th), Circuit 1-2	A
	TOTAL_I4_INST[A]_1	Total current (I4) (1st to 40th)	A
	TOTAL_P_INST[W]_1 to TOTAL_P_INST[W]_4	Total power (1st to 40th) Circuits 1 to 4	W
THD-F (Selected)	THDF_U1_INST[%]	Voltage (U1) Total harmonic distortion (THD-F)	%
	THDF_U2_INST[%]	Voltage (U2) Total harmonic distortion (THD-F)	%
	THDF_U3_INST[%]	Voltage (U3) Total harmonic distortion (THD-F)	%
	THDF_I1_INST[%]_1 to THDF_I1_INST[%]_4	Current (I1) Total harmonic distortion (THD-F) Circuits 1 to 4	%
	THDF_I2_INST[%]_1 to THDF_I2_INST[%]_2	Current (I2) Total harmonic distortion (THD-F), Circuit 1-2	%
	THDF_I3_INST[%]_1 to THDF_I3_INST[%]_2	Current (I3) Total harmonic distortion (THD-F), Circuit 1-2	%
	THDF_I4_INST[%]_1	Current (I4) Total harmonic distortion (THD-F)	%
THD-R (Selected)	THDR_U1_INST[%]	Voltage (U1) Total harmonic distortion (THD-R)	%
	THDR_U2_INST[%]	Voltage (U2) Total harmonic distortion (THD-R)	%
	THDR_U3_INST[%]	Voltage (U3) Total harmonic distortion (THD-R)	%
	THDR_I1_INST[%]_1 to THDR_I1_INST[%]_4	Current (I1) Total harmonic distortion (THD-R) Circuits 1 to 4	%
	THDR_I2_INST[%]_1 to THDR_I2_INST[%]_2	Current (I2) Total harmonic distortion (THD-R), Circuit 1-2	%
	THDR_I3_INST[%]_1 to THDR_I3_INST[%]_2	Current (I3) Total harmonic distortion (THD-R), Circuit 1-2	%
	THDR_I4_INST[%]_1	Current (I4) Total harmonic distortion (THD-R)	%

NOTE


- "n" represents the harmonic orders (01 to 40).
- Harmonic measurement data is added after normal measurement data.
- "INST" in the header will be replaced by "AVE" for the average-value data.
- "INST" in the header will be replaced by "MAX" for the maximum-value data.
- "INST" in the header will be replaced by "MIN" for the minimum-value data.

Harmonic Phase Angles

The harmonic voltage phase angle and harmonic current phase angle are the standard for the PLL source phase (for input based on PLL when U1 is selected on this device) fundamental wave component.

The differences in phase of each harmonic order component and the phase of the fundamental wave component is expressed as an angle ($^{\circ}$) and - indicates a LAG, whereas + indicates a LEAD.

The phase angle of harmonic power is expressed by the power factor of each order of harmonic converted into an angle ($^{\circ}$). When the harmonic-power phase angle is between -90° and $+90^{\circ}$, the order of harmonic is flowing in toward the load (inflow). When the phase angle is between $+90^{\circ}$ and $+180^{\circ}$ or between -180° and -90° , that order of harmonic is flowing out from the load (outflow).

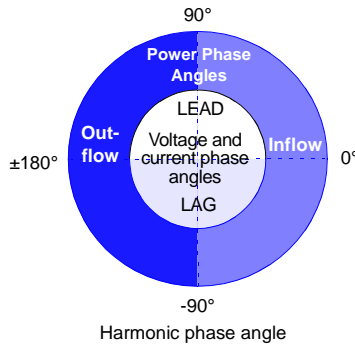

The arithmetic expressions for the harmonic-power phase angle vary depending on whether the reactive-power-meter method is ON or OFF.

Reactive-Power-Meter Method ON

Harmonic-power phase angle

$$\phi = \tan^{-1} \frac{Q}{P} [^\circ]$$

Both active power and reactive power have polarities, and the results are expressed by "0° to ±180°". This enables identification of inflow and outflow and lag (-) and lead (+).

Reactive-Power-Meter Method OFF

Harmonic-power phase angle

$$\phi = \cos^{-1} \frac{P}{S} [^\circ]$$

Active power has polarities, but apparent power does not. The results are expressed by "0° to +180°". Identification of inflow and outflow is possible, but that of lag (-) and lead (+) is not. Due to the difference in arithmetic expression, the harmonic-power phase angle may differ if the three-phase load is unbalanced.

Output Data

How to calculate the average value. (AVE)

The average values of voltage, current, active power, reactive power, apparent power, power factor, and frequency are calculated by the following formulas.

Voltage

$$U_AVE = \frac{1}{N} \sum_{n=0}^{N-1} U_n$$

The voltage RMS values for every one cycle are averaged within the interval period.

Current

$$I_AVE = \frac{1}{N} \sum_{n=0}^{N-1} I_n$$

The current RMS values for every one cycle are averaged within the interval period.

Active Power

$$P_AVE = \frac{1}{N} \sum_{n=0}^{N-1} P_n$$

The active power values for every one cycle are averaged within the interval period. (including the polarity sign)

Reactive Power

$$Q_AVE = si \frac{1}{N} \sum_{n=0}^{N-1} |Q_n|$$

The absolute values of reactive power for every one cycle are averaged within the interval period.

NOTE

When the reactive-power-meter method is OFF(not to be used), there is no polarity sign to reactive power value.

Apparent Power

$$S_AVE = \frac{1}{N} \sum_{n=0}^{N-1} S_n$$

The apparent power values for every one cycle are averaged within the interval period.

Power Factor

$$PF_AVE = si \frac{1}{N} \sum_{n=0}^{N-1} |PF_n|$$

The absolute values of power factor for every one cycle are averaged within the interval period.

Frequency

$$F_AVE = \frac{1}{N} \sum_{n=0}^{N-1} F_n$$

The frequency values for every one cycle are averaged within the interval period.

N : The number of the data in the interval period

U_n : The voltage RMS value of every one cycle

I_n : The current RMS value of every one cycle

P_n : The active power value of every one cycle

Q_n : The reactive power value of every one cycle

S_n : The apparent power value of every one cycle

PF_n : The power factor value of every one cycle

F_n : The frequency value of every one cycle


si : Polarity of lead or lag (lag: no indication, lead: -)

By assuming when $Q_n \geq 0$, Q ; or when $Q_n < 0$, Q' ;


No indication for si when $\Sigma Q \geq \Sigma |Q'|$ in the interval period.

“-“ is indicated for si when $\Sigma Q < \Sigma |Q'|$.


Data output timing of the instantaneous, average, maximum, and minimum values

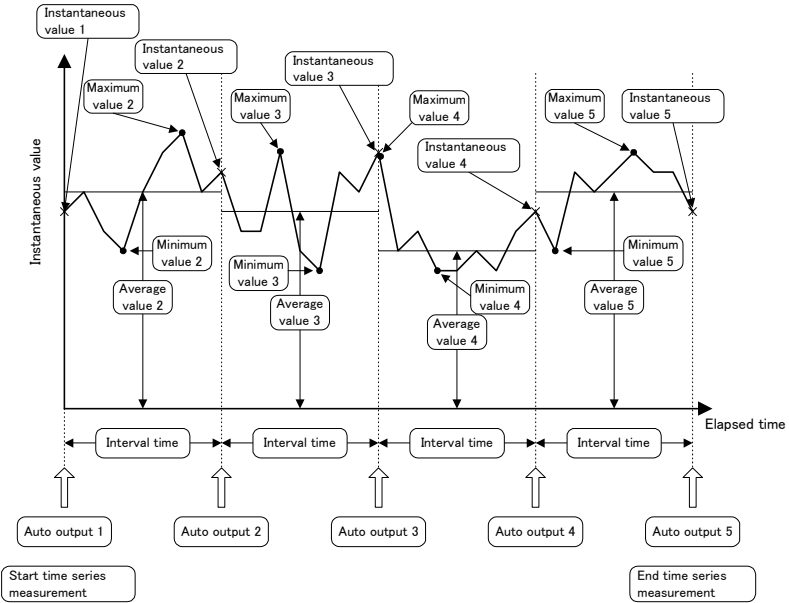

The maximum and minimum values of active power and reactive power

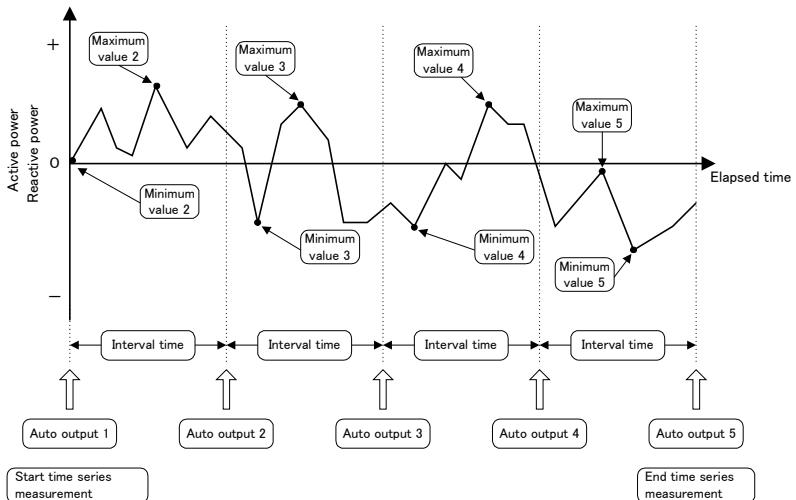

The maximum and minimum values of power factor

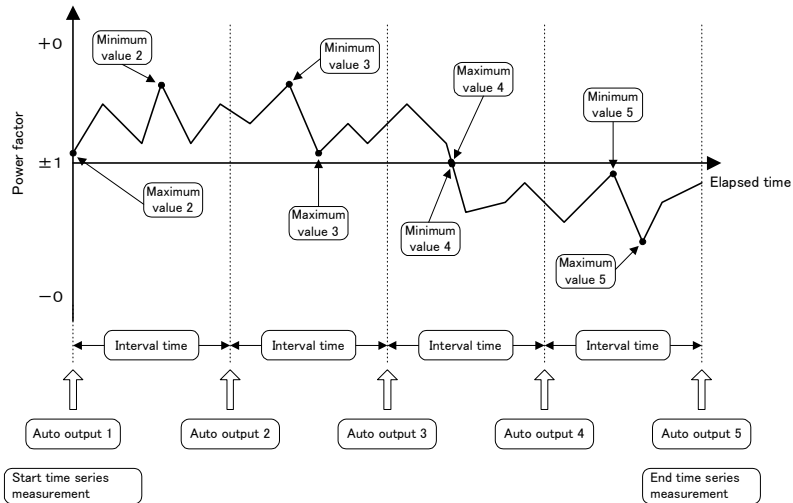

NOTE

The display shows the average, maximum, and minimum values of the measurements taken up to the current time from the start of time-series measurement.

Error Messages

Message	Remedy
During the time-series measurement or waiting mode, this setting cannot be changed.	Change the settings after finishing the time-series measurement.
During the time-series measurement or waiting mode, this function cannot be used.	Change the settings after finishing the time-series measurement.
During the time-series measurement or waiting mode, this operation cannot be performed.	Perform the operation after finishing the time-series measurement.
START TIME has already passed. Start JUST TIME.	Set the start time after the current time.
During HOLD, this setting cannot be changed.	Release HOLD to change settings.

These messages disappear after a few seconds.

Message	Remedy
This key cannot be selected during HOLD.	Release HOLD.
If the interval time setting is less than 1 minute, harmonic data output and printer output are not possible.	Set the interval time to 1 minute or longer for harmonic data output and printer output.
Harmonic data output and printer output are not possible.	Set the interval time to 1 minute or longer for harmonic data output and printer output.
Before starting measurement, format the PC CARD.	Format the PC CARD.
The instant value of normal measurement is saved in binary format. Other data is not output.	When a short-term interval is used, the instantaneous values of normal measurement are saved in the binary format.
No PC CARD.	Insert the PC CARD.
PC CARD is not compatible.	Use optional PC CARD of HIOKI.
Write Protected.	Release the write protection of this media.
Max. number of files exceeded.	The number of files exceeds the maximum writable file number. Delete the files, or format the media.
Disk full.	Delete the files, or format the media.
PC CARD is not formatted.	Format the PC CARD.
Same name file is already exists.	Rename the file.
Copy failed.	Format the PC CARD or exchange the PC CARD.
Delete failed.	Execute again.
Initializing of internal memory has failed.	Execute again.
Selected file is not a setting file.	Select a setting file.

These messages can be cleared by pressing any key.

Message	Remedy
PC card format failed.	Confirm the PC CARD is properly inserted.
Output to internal memory.	The data is saved in the internal memory, if the PC CARD is selected as a storage media but a PC CARD is not properly inserted, or if the PC CARD is full. Insert the PC CARD properly or exchange the PC CARD.
Data could not be saved to internal memory.	Format the internal memory.
File error.	Format the PC CARD and internal memory, or use the new PC CARD.
Access failed	Format the PC CARD and internal memory, or use the new PC CARD. When formatting the PC CARD on a PC, use the FAT-16 format.
Select a file.	No file is selected. Select a file.
Some files have not been deleted.	The files are broken. Format the PC CARD.
Back up failed.	Format the internal memory.
Scaling error.	Change the VT(PT) or CT ratio setting.

These messages can be cleared by pressing any key.

Index

Numerics

2-power-meter method 196

A

Accuracy by Clamp-On Sensor
..... 184, 185, 186, 187
Automatic Output 142
Automatic Storage 129
Average 100
average 80, 82

B

Backlight 89
Backup data file 115
BAUD RATE 88
Beep Sound 90

C

Clamp-On Sensor 29, 67
Clock 92
Computer 145
Connection 35
Contrast Control 20
Copying 128
Copying a Screen 144
Copying Screen 135
CT 66
Current flow direction arrow 48
Current Input terminals 20
Current Range 51, 54, 65

D

D/A Output 157, 159

D/A Output Terminal 21, 157
Data Output Setting Screen 68
Deleting a File 126
Demand 81, 104
Display 113, 114
Display Average Times 62
Dynamic range overflow warning 54

E

External Input/Output Terminal 21, 151

F

File 119
File Name 76
file screen 22
Files 115
FLOW CONTROL 88
Formatting 120, 121
Formulae 180
Functions of the External Input/Output
Terminal 152

H

Harmonic 82, 105
Harmonic content 106, 109
Harmonic Graph 108
Harmonic level 106, 109
Harmonic List 105
Harmonic Phase Angles 201
Harmonic-power phase angle 106, 109
Harmonic-voltage (current) phase angle
..... 106, 109
Headers 197
Holding 114

I	
ID No.	91
Indicators	24
input cord label	31
Instantaneous Values	95
Instantaneous values	97
instantaneous values	80, 82
Integrated power	81, 103
Integrated Power Output Rate	161
Internal Memory	120
Interval	74, 131
K	
KEY LOCK	20
L	
Language	93
LCD	89
Loading a Setting File	124
M	
Maximum	100
maximum	80, 82
Measurement	69
Measurement data file	115
Measurement Range	53
measurement screen	22
Measurement Setting Screen	56
measurement start	69
measurement stop	71
Minimum Values	100
minimum values	80, 82
multiple circuits	38
Multiple-Circuit	45
N	
Neutral Current	44
number of output data	79
O	
Order	84, 87
Output Waveform	164
Over range	54
P	
PC Card	21, 117, 121
PC card	116
PLL	59
Power	97
Power Cord	26
Power Outage	169
Power Range Configuration ..	184, 185, 186,
POWER switch	20, 33
Printer	137
PT	64
R	
Reactive-power-meter method	61
Response	162
RS-232C	21, 77, 88, 140, 146
S	
Save/Print Items Setting Screen	79
Saving	115
Saving a Setting File	122
Saving Data	75
Saving Measurement Data Manually ...	133
Screen copy file	115
Screen is to be Copied	78
Sensor	48
Setting file	115
Setting Screen	55
setting screen	22
start time	70
Status	116
Stop Time	72
Storable Time	79, 131

System Reset	191
System Setting Screen	85

T

TERMINATOR	88
THD	86
THD-F	86
THD-R	86
TIMER	71
Total Harmonic Distortion	86

V

Version	94
Voltage Cords	27, 48
Voltage cords	28
Voltage Input terminals	20
Voltage Range	50, 53, 63
VT	64

W

Waveform	98
Waveform data file	115
WIRING CHECK	49
Wiring Diagram	36
Wiring Method	57

Z

Zoom Screen	113
-------------------	-----



DECLARATION OF CONFORMITY

Manufacturer's Name: HIOKI E.E. CORPORATION
Manufacturer's Address: 81 Koizumi, Ueda, Nagano 386-1192, Japan
Product Name: CLAMP ON POWER HiTESTER
Model Number: 3169-20, 3169-21
Accessory: 9438-03 VOLTAGE CORD
9441 CONNECTION CABLE (for 3169-21)
Option: 9440 CONNECTION CABLE
9721 RS-232C CABLE
9612 RS-232C CABLE

The above mentioned products conform to the following product specifications:


Safety: EN61010-1:2001
EN61010-031:2002
EMC: EN61326:1997+A1:1998+A2:2001+A3:2003
Class A equipment
Equipment intended for use in industrial location
EN61000-3-2:2000
EN61000-3-3:1995+A1:2001

Supplementary Information:

The products herewith comply with the requirements of the Low Voltage Directive 73/23/EEC and the EMC Directive 89/336/EEC.

HIOKI E.E. CORPORATION

5 September 2006


Tatsuyoshi Yoshiike
President

3169A999-03

HIOKI 3169-20/21 CLAMP ON POWER HITESTER

Instruction Manual

Publication date: September 2006 Revised edition 3

Edited and published by HIOKI E.E. CORPORATION

Technical Support Section

All inquiries to International Sales and Marketing Department

81 Koizumi, Ueda, Nagano, 386-1192, Japan

TEL: +81-268-28-0562 / FAX: +81-268-28-0568

E-mail: os-com@hioki.co.jp

URL <http://www.hioki.co.jp/>

Printed in Japan 3169A981-03

-
-
- All reasonable care has been taken in the production of this manual, but if you find any points which are unclear or in error, please contact your supplier or the International Sales and Marketing Department at HIOKI headquarters.
 - In the interests of product development, the contents of this manual are subject to revision without prior notice.
 - Unauthorized reproduction or copying of this manual is prohibited.
-
-

Tequipment
_____.NET



205 Westwood Ave
Long Branch, NJ 07740
1-877-742-TEST (8378)
Fax: (732) 222-7088
salesteam@Tequipment.NET

HIOKI

HIOKI E. E. CORPORATION

HEAD OFFICE

81 Koizumi, Ueda, Nagano 386-1192, Japan
TEL +81-268-28-0562 / FAX +81-268-28-0568
E-mail: os-com@hioki.co.jp / URL <http://www.hioki.co.jp/>

HIOKI USA CORPORATION

6 Corporate Drive, Cranbury, NJ 08512, USA
TEL +1-609-409-9109 / FAX +1-609-409-9108

3169A981-03 06-09H



Printed on recycled paper
