


## MJ-3 Balancer Operation Instructions

Rev 2.2 (4/13/17)

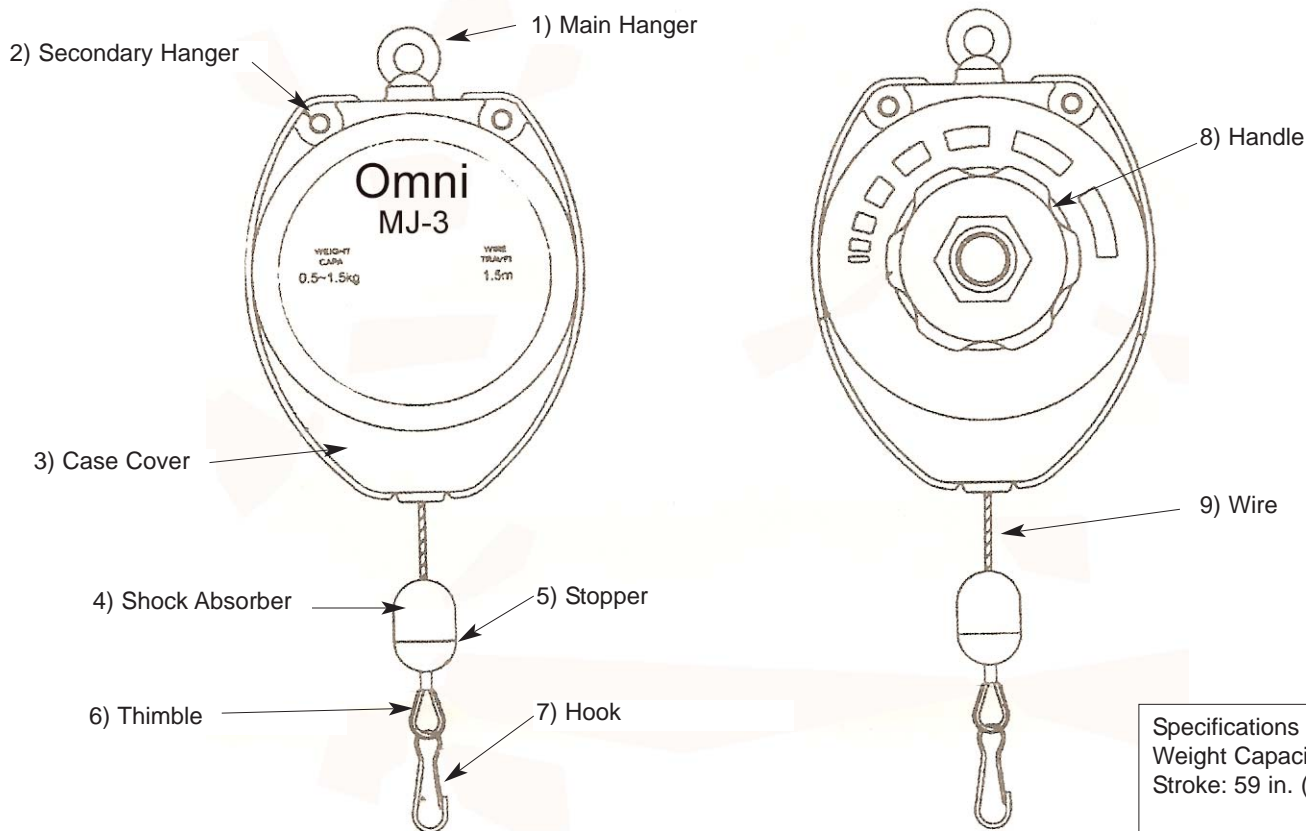

<p>Specifications  Weight Capacity: 1.1 - 3.3 lbs.  Stroke: 59 in. (1.5m)</p>
---

### Mounting

- Both the (1) Main Hanger and the (2) Secondary Hanger should be used together to hold the balancer securely. The Main Hanger should be attached to a hanging device. Then a security chain, wire, etc. should be connected to the Secondary Hanger.
- Check if the weight of the tool being loaded is appropriate before connecting it to the (7) Hook.

### Stroke Adjustment

The vertical travel length of the (9) Wire can be adjusted to a suitable level for the working environment.

- Squeeze the (4) Shock Absorber & (5) Stopper and slide these two items to a suitable position on the (9) Wire.

### Spring Tension Adjustment

- When adjusting the spring tension, remove the tool from the (7) Hook before operating the (8) Handle.
- Pull the (8) Handle outward and turn the handle clockwise or counter clockwise to adjust spring tension. Make sure the tension is appropriate for the loaded weight.

- To increase the tension: Turn the (8) Handle clockwise.
- To decrease the tension: Turn the (8) Handle counter clockwise while pulling the handle.

#### Contact

**Mountz Inc.**

**Phone: 408.292.2214**

**Fax: 408.292.2733**

**sales@mountztorque.com**

**www.mountztorque.com**



**Twitter: @mountztorque**

Looking for fasteners?  
[www.mrmetric.com](http://www.mrmetric.com)

**mr.  
metric®**