






# Triarchy®VSG6G1C/VSG2G5C USB Vector RF Signal Generator Operating Manual

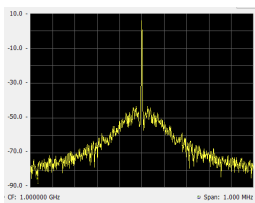


CW signal

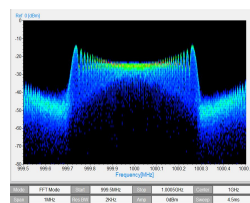


Analog modulation

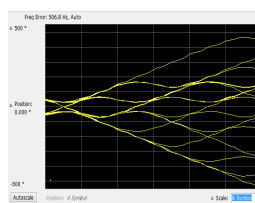


GMSK modulation

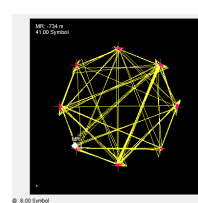


8PSK

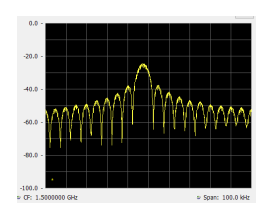


Pulse modulation

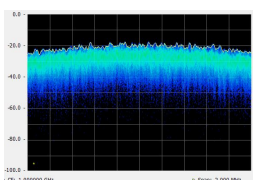

NB RF noise generator

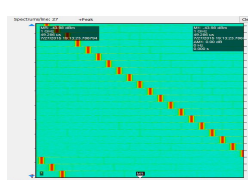


Frequency sweeping

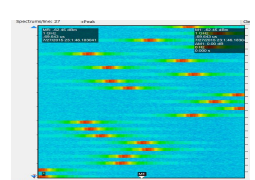

Hopping with data Mod



GSM signal

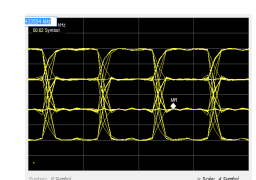

4FSK



## USB Vector RF Spectrum Analyzer Operating Manual

### Copyright Notice

Copyright © 2018 Triarchy Technologies, Corp. All rights reserved.

Initial Version December 2018

Documentation version 1.5

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Triarchy Technologies, Corp.

### Technical Support

For technical support, please call 1-604-637-2167, send email to [info@triarchytech.com](mailto:info@triarchytech.com), or visit our website at <http://www.triarchytech.com>



## Contents

<b>1 Introduction</b>	<b>4</b>
1.1 VSG6G1C/VSG2G5C Product Package Overview	4
1.2 USB Device Overview	4
1.3 TSG PC Application Overview	5
1.4 Electrical Requirements	6
1.5 Product internal Option unit	8
<b>2 Getting Started</b>	<b>9</b>
2.1 Install PC Application	9
2.2 Uninstall PC Application	10
2.3 First Working Example	10
2.4 TSG Utility keys setting	10
<b>3 Operations</b>	<b>12</b>
3.1 Single frequency without Pulse modulation	12
3.2 Single frequency with Pulse modulation	13
3.3 Frequency Sweeping without Pulse Modulation	14
3.4 Frequency Sweeping with Pulse Modulation	14
3.5 Frequency hopping with/without Pulse Modulation	15
3.6 Analog Modulation	15
3.7 Digital Modulation with I&Q Engine	16
3.8 Phase Modulation with I&Q Engine	17
3.9 Example for GSM signal output	18
3.10 Low Band	19
3.11 Pulse modulation signal output	21
3.12 Clock selection	21
3.13 I&Q sel	21
3.14 Hardcopy Operation	21
3.15 Off Line Operation	21
3.16 Flash OFF/ON Operation	22
<b>4 I&amp;Q Engine</b>	<b>22</b>
4.1 I&Q Engine principle	22
4.2 I&Q file configuration	23




# 1 Introduction

VSG6G1C/VSG2G5C is USB RF signal generator, it plug on PC and working with PC application, then VSG6G1C/VSG2G5C will be really RF signal generator, the RF frequency range from 100Hz to 6.1GHz for VSG6G1C model, Amplitude output range will be -100dBm~10dBm. VSG6G1C/VSG2G5C are will very easy to use, PC application window just like front panel of normal desktop signal generator. If PC support touch screen, operating VSG6G1C/VSG2G5C are very similar to operate desk top signal generator. VSG6G1C/VSG2G5C have more functions. It also can generate a lot of modulation signal with I&Q engine and Pulse modulation. So that it can simulate a lot of wireless system.

## 1.1 VSG6G1C/VSG2G5C Product Package Overview


VSG6G1C/VSG2G5C product package will be:

- |  |  |
|--|--|
| 1: USB signal generator device (25x25x100mm)   | one piece                                    |
| 2: USB Type C cable                            | one piece                                    |
| 3: SMA to MMCX cable                           | one piece                                    |
| 4: N to SMA adapter                            | one piece                                    |
| 5: CD with PC application program and document | one piece (CD data will be post on web soon) |
| 6: 160x110x40mm product case                   | one piece                                    |

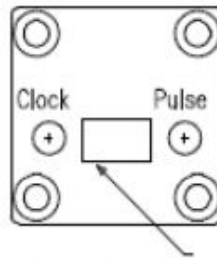

USB C Connector


## 1.2 USB Device Overview

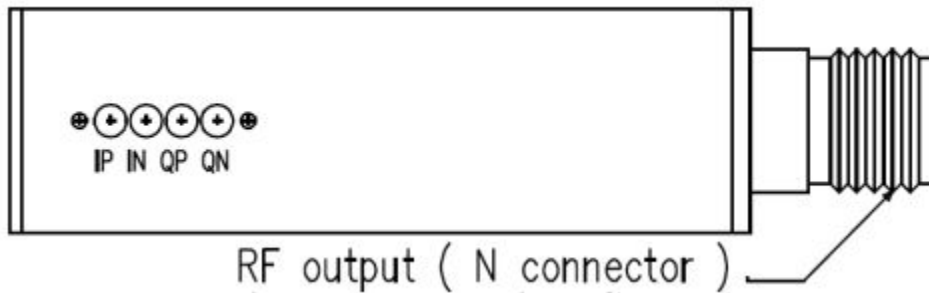

- |                  |                      |                              |
|------------------|----------------------|------------------------------|
| 1: RF output     | N connector (female) | RF signal output             |
| 2: USB connector | USB Type C connector | interface with PC            |
| 3: IP            | MMCX connector       | I port positive Output/Input |
| 4: IN            | MMCX connector       | I port negative Output/Input |
| 5: QP            | MMCX connector       | Q port positive Output/Input |
| 6: QN            | MMCX connector       | Q port negative Output/Input |
| 7: Clock         | MMCX connector       | Clock Output/Input           |
| 8: Pulse         | MMCX connector       | Pulse signal Output          |



# 1.3 TSG PC Application Overview

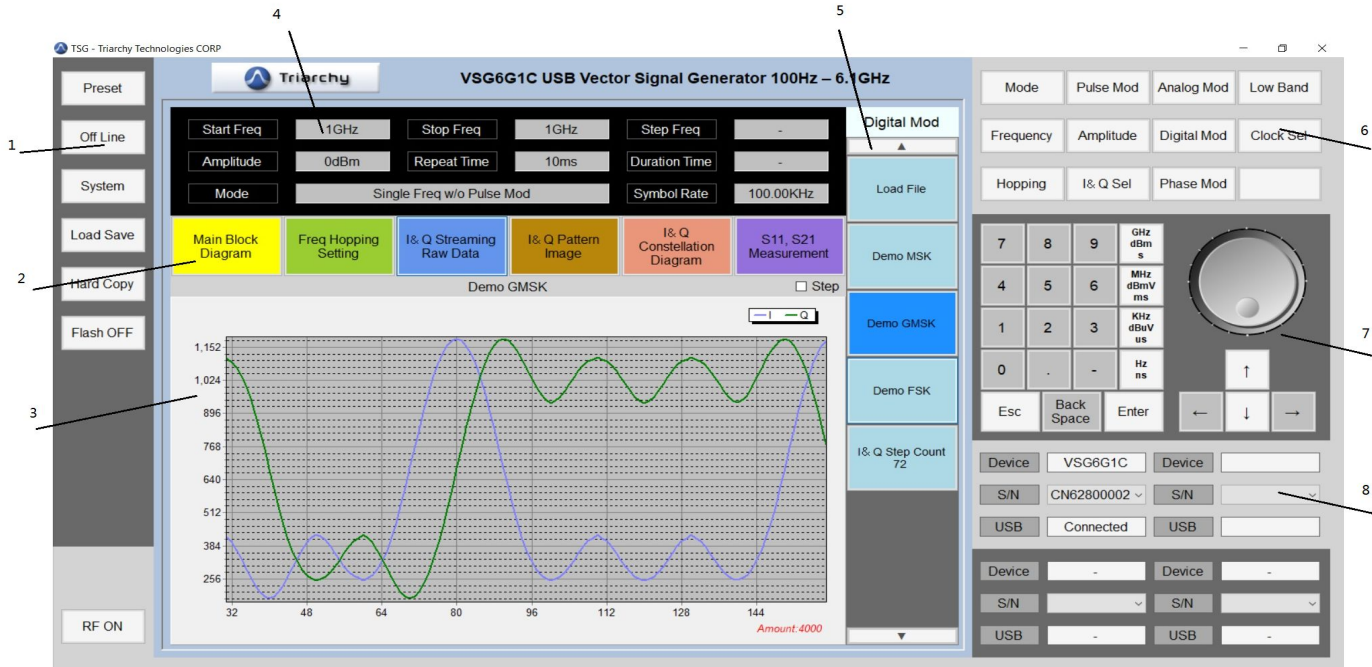

### 1: utility keys

Allows user to access the system level function, Function detail will be shown on second function keys

### 2: Message selection keys

Click the Message selection key, the Message display area will be followed to be changed.

### 3: Message display area

Message display area will be shown the detail information of output signal.

**Main Block Diagram** is shown the how the RF vector signal generator working, how the signal output.

**Freq Hopping setting** will be table of hopping frequency points.

**I&Q Streaming Raw Data** is waveform of I&Q raw data, it will be same as real waveform signal from I&Q port.

**I&Q pattern image** is shown I&Q pattern if I&Q raw data is generated based on the I&Q pattern.

**I&Q constellation diagram** is shown, it will be selected to depended on Raw data or I&Q pattern.

### 4: Status block

**Status block** will be shown the main parameter of output signal, such as frequency, amplitude, duty cycle, symbol rate and working mode. Detail the information of output signal is also shown on Message display area. (Please note: parameter can not set up from Status block, it is only display window)

### 5: Second functions keys

**Second function keys** will be extend key, it will be followed the function keys and utility key to extend function setting to more detail. It is similar to soft key in most of equipment which is location on side of screen. Most of parameter will be input from second function keys.

### 6: Function keys



Most of major the equipment setting will be done by **Function keys**. General setting for signal generator will be:

Select mode, such as frequency selection for single, sweeping and hopping and pulse modulation selection.

Input frequency, such as setting for signal frequency, frequency sweeping and frequency hopping

Input amplitude, such as level setting.

Input timing for pulse modulation.

Adding I&Q modulation, to setup a lot of different kind of modulation to meet each application requirements.


**7: Digital input keys**

Digital input keys will input digital and units for frequency, amplitude and timing. When units key is clicked, the commend is sending to USB dongle. This standalone input key is similar to desktop equipment. It will be better to be used in touch screen PC without keypad.



**8: USB connection area**

When USB device plug in the PC, USB connection area will be shown the product model name, S/N and connection status. When connected is shown, the device is really connected to TSG application, TSG will fully control the USB device.

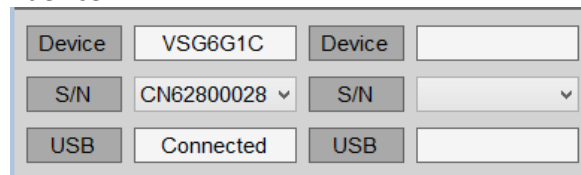

## 1.4 Electrical Requirements

### 1.4.1 Specification for Frequency

Frequency range for VSG6G1C:

Band 1 : 1MHz ~4000MHz

Band 2: 4000MHz ~6100MHz

Low Band : 100Hz ~1MHz

Frequency range for VSG2G5C:

Band 1 : 100MHz ~2500MHz

Low Band : 100Hz ~1MHz

Frequency resolution:

1 Hz

Frequency stability:

+/-0.5PPM over temperature -20~+60 degree

Frequency aging per year:

+/-1PPM



Frequency reference output: 10MHz  
Frequency reference input: 20MHz

### 1.4.2 Specification for power

Output level range for VSG6G1C :  
Band 1: -100dBm~10dBm (Calibrated )  
Band 2: -100dBm~0dBm (Calibrated)  
Low band : -50dBm~0dBm (No calibrated)

Output level range for VSG2G5C :  
Band 1: -70dBm~15dBm (Calibrated )  
Low band : -50dBm~0dBm (No calibrated)

Output level resolution: 0.25dB  
Output level error: <1dB (@ 1GHz at 25C)

### 1.4.3 Specification for Pulse modulation

Pulse repeat time with single frequency: 40uS to 20s for VSG6G1C, 100uS to 20s for VSG2G5C  
Pulse repeat time with Sweeping and hopping: 400uS to 20s  
Pulse duration time: 0.25us to 5S for VSG6G1C, 50us~5us for VSG2G5C  
Multiple pulse number: 2~250  
Multiple pulse delay: 0.71us~5s for VSG6G1C, 60us~5s for VSG2G5C  
(last pulse cannot be overlay with first pulse)  
On/off ratio: >90dB

### 1.4.4 Specification for Frequency sweeping with/ without pulse modulation

Span range: 50 Hz to full span  
Scan points range: 2 to 50000  
Frequency step range: 1 Hz to 1GHz  
Step time: Controlled by pulse repeat time 400uS to 20s  
Pulse width in Pulse mode: Controlled by pulse duration time 0.25us to 10s for VSG6G1C  
Controlled by pulse duration time 50us to 10s for VSG2G5C

\* If it is in "Freq sweeping w/o Pulse mod", this parameter is no function

### 1.4.5 Specification for Frequency hopping with/ without pulse modulation

Frequency hopping range: 1MHz to 6.1GHz for VSG6G1C, 100MHz to 2.5GHz for VSG2G5C,  
Frequency hopping number: 2~4000  
Frequency hopping times: 2500 hop/s to 0.05 hop/s  
Pulse width in hopping mode: Controlled by pulse width time 0.25us to 5s

\* If it is in "Freq hopping w/o pulse mod", this parameter is no function

### 1.4.6 Specification for I&Q unit for analog modulation

FM modulation in Demo key: Modulation frequency range: 10Hz to 2KHz;  
Modulation index 20  
AM modulation in Demo key: Modulation frequency range: 10Hz to 2KHz;  
Modulation index 80%  
PM modulation in Demo key: Modulation frequency range: 10Hz to 2 KHz;  
Modulation index 280 degrees

\*Define the I&Q RAW data file, any kind of analog modulation can be achieved. Such as RF narrow band noise signal.

### 1.4.7 Specification for I&Q unit for Digital modulation





MSK modulation in Demo key: Data rate range: 20b/s to 200Kb/s;  
 GMSK modulation in Demo key: Data rate range: 20b/s to 200Kb/s; BT=0.7  
 FSK modulation in Demo key: Data rate range: 10b/s to 10Kb/s;

\* Define the I&Q data file, study different I&Q pattern, internal I&Q engine will generate the most of digital modulation; Such as SFSK.

### 1.4.8 Specification for I&Q unit for phase modulation

QPSK modulation in Demo key: Data rate range: 200b/s to 2Mb/s;  
 8PSK modulation in Demo key: Data rate range: 400b/s to 4Mb/s;  
 16QAM modulation in Demo key: Data rate range: 800b/s to 8Mb/s;

\* Define the I&Q data file, study different I&Q pattern, internal I&Q engine will generate the most of digital modulation.

### 1.4.9 Specification for I&Q internal modulation

I&Q sample rate: 2KHz~2.4MHz (I&Q step count from 36000~30)  
 note: timer clock is 72MHz, sample rate=timer clock/step count  
 I&Q data buffer size: 100KB

### 1.4.10 Specification for I&Q external modulation

Baseband signal bandwidth: 500MHz  
 I&Q signal level: 0.9Vpp  
 I&Q reference points: 0.5V

\*internal I&Q modulation IC is ADRF6755, please check ADRF6755 data sheet for detail interface.

### 1.4.11 Specification for Low band mode

SIN Waveform: 100Hz~1MHz  
 This is SW DDS, output from N connector. DDS clock is 2MHz, so that more distortion of SIN waveform will be occurred from 300KHz ~1MHz.

Load Mod File: I&Q file will be working with Low band SIN waveform to generate any kind of modulation  
 the I\*Q file can be generated from I&Q engine, but keep two rule:  
 1: I&Q clock keep at 2MHz ( step count is 36)  
 2: symbol rate must be low than frequency of low band SIN waveform.

Load Raw file: Generate waveform based on the I&Q buffer file. It is Arbitrary waveform generator with clock 2MHz.  
 More useful can be generated in this mode such as, DTMF, stereo FM signal format.

AM FM PM Mod: To modulated Low band signal (from SIN waveform, modulated or Arbitrary waveform) to RF band, to generated AM, FM and PM of RF signal

AM index: 0~100%  
 FM index: 1Hz~500KHz  
 PM index: -18000degree~+18000 degree

note: Low band output from N connector after SIN waveform, Load Mod file, Load Raw file setting.  
 RF signal signal will be output from N connector after AM FM PM mod setting.

### 1.4.12 Specification for Pulse signal output

Pulse output level: 3.3V  
 Pulse repeat time: 40uS to 20s for VSG6G1C, 100uS to 20s for VSG2G5C,  
 Pulse duration time: 0.25us to 5S for TSG6G1C, 50us to 5S for TSG2G5C  
 Multiple pulse number: 2~250





Multiple pulse delay: 0.71us~5s for VSG6G1C, 60us~5s for VSG2G5C  
(last pulse cannot be overlay with first pulse)  
the output will be from "pulse" MMCX connector at rear panel.

## 1.5 Product with Option unit

The product option will be:


A: High speed I&Q data generator:

it can generate up to 100MB data rate I&Q signal, so that it can simulate high speed wireless system, such as wifi, LTE, microwave relay system.





# 2 Getting Started

## 2.1 Install PC Application

Open the CD (CD file can be got from web soon), go into the SW file folder, you can find setup.exe and Document folder, please double click to setup.exe to start the installation.

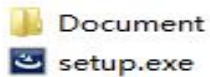

When you finished the installation, the TSG ICON will be shown on the desk. Double click the TSA ICON.

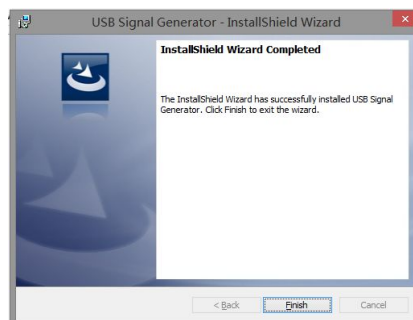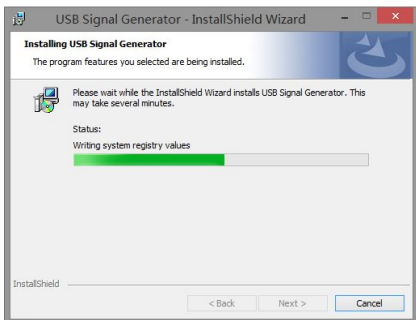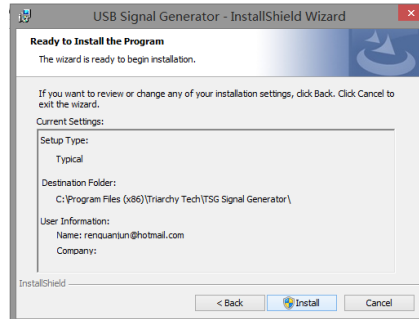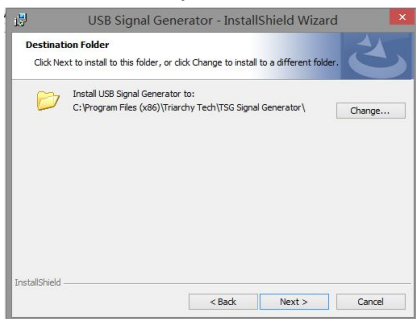

After installation, the program file will be installed at program file folder.  
C:\Program Files (x86)\Triarchy Tech\TSG Signal Generator



The application data will be generated at Document folder:

C:\Users\Username\Documents\Triarchy Tech\Signal Generator

Customer need to check the application data at document folder.

Hardcopy folder will be stored the image file which generated by hardcopy key.

Hopping folder will be stored the hopping files.

IQ Modulation folder will be stored the all the modulation file.

Setting folder will be stored the saving file, preset, and special setting can be stored in it, then using load key to resumed the special setting.

Calibration	8/8/2015 12:22 ...
Hardcopy	8/9/2015 10:53 ...
Hopping	8/9/2015 10:53 ...
IQ Modulation	7/31/2015 2:39 ...
Setting	8/9/2015 10:53 ...

The customer can add more files into document folder, so that more modulation signal can be generated.

## 2.2 Uninstall PC Application

Try to find Uninstall TSG ICON, then click it to uninstall.



You also can use control panel to uninstall the TSG program.


## 2.3 First Working Example

When you first time to use the VSG6G1C product, you shall turn off the TSG PC application. Connecting VSG6G1C to PC via USB cable, PC will install the USB hardware configuration with a little long time, please wait for all the configuration is installed.

Then open the TSG PC application, the USB connection area will be shown the device model, S/N and connection status.



Connect device output to Spectrum analyzer. Then click RF off, RF output will be on. Spectrum analyzer will be shown the signal waveform:

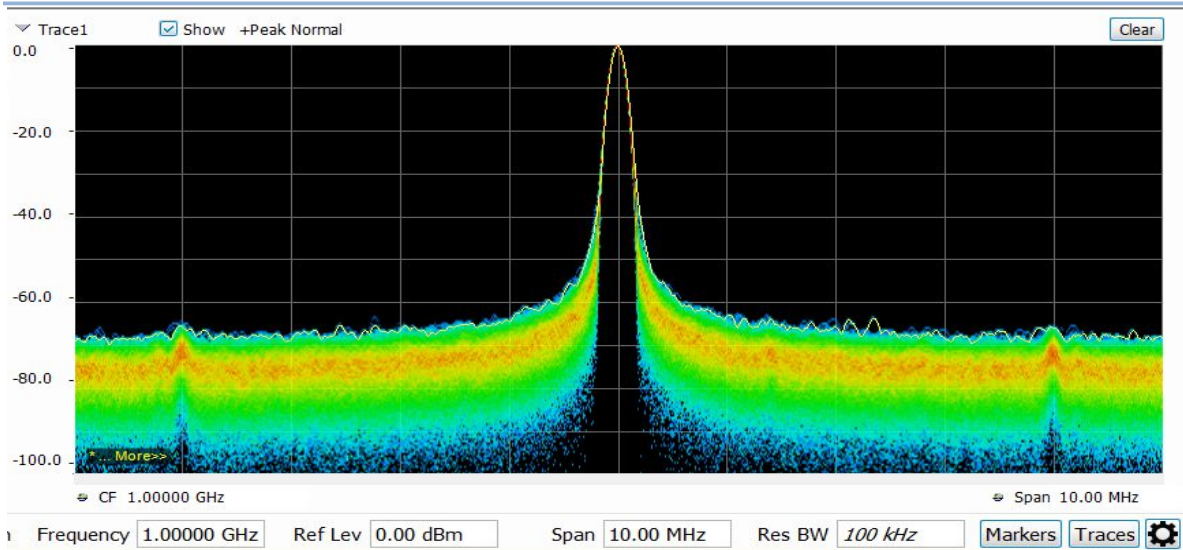

CW Signal output at 1GHz and 0dBm level

## 2.4 TSG Utility keys setting

### Preset

When clicking the Preset key, the second function key will be shown:

Last\_setting key select to ON, when TSG program turn on or USB device plug off and on, all system setting will go to last setting.

Last\_setting key select to OFF, when TSG program turn on or USB device plug off and on, all system setting will go to preset 1 status.

Preset x (x=1~6) can be clicked, then system setting will go into the preset x status.

Preset x can be setup at **Load Save** key

Preset 1 is stored the default setting

### Off Line

offline Off, offline function is not working

offline ON, USB device will be working at any 5V power source based on the offline setting to work.

Save Files, setup specific signal by setting function key. Then save this setting into file. More signal setting can be saved by repeating save setting.

Load Files, load file to set the offline function.

Interval On, Interval Off and Loop will be used to setup duration and period of offline signal.

### System

When clicking the System key, the second function key will shown :

#### Manual AMP Cal:

The value can be input, when input terminal attached the attenuator or cable will be caused path loss.

Manual AMP cal range is -10dB~+10dB

#### Manual Freq Cal:

This function is used for compensate of I&Q error in RF path to improve the EVM performance.

Application note will discuss this item more detail. Manual Freq Cal range is +/- 50KHz

#### Send Cal File to Dongle:

This function is reserved for manufacture using.

#### Change the dongle series number:



It need passwords to change the series number. This function is reserved for manufacture using.

**Version:**

Show the current TSG version number

**Load Save:**

When clicking the System key, the second function key will shown :

**Save Setting:**

To save the current setting status into file, it can be resume setting by **Load setting**.

If save the file into preset folder, and name as Presetx, the preset set can be updated by **save setting** key.

**Load Setting:**

To recall the setting file by **Load setting**, the old setting status will be represent into current setting.

**Hardcopy**

Click hard copy, the image of setting will be save at document folder.

**Flash ON/OFF**

when Off Line is OFF, Flash On is working as last setting offline function, set Flash ON and RF ON, (Off Line is off), the signal status will stored in USB device, last signal status will be working at any 5V source power.

**RF ON/OFF**


This is selection key, the Preset 1 will set this key to RF OFF, after you connect RF output terminal with UUT, then you can set this key to RF ON.

# 3 Operations


## 3.1 Single frequency without Pulse modulation

Select Mode to "Single Freq without Pulse Mod". Click RF OFF to turn on the RF output, input frequency and amplitude value from Frequency and amplitude function key.

Set VSG6G1C amplitude level to 0dBm at 1GHz. set RSA306 Span to 1MHz and 5MHz, RBW to 1KHz, to get spectrum waveform.

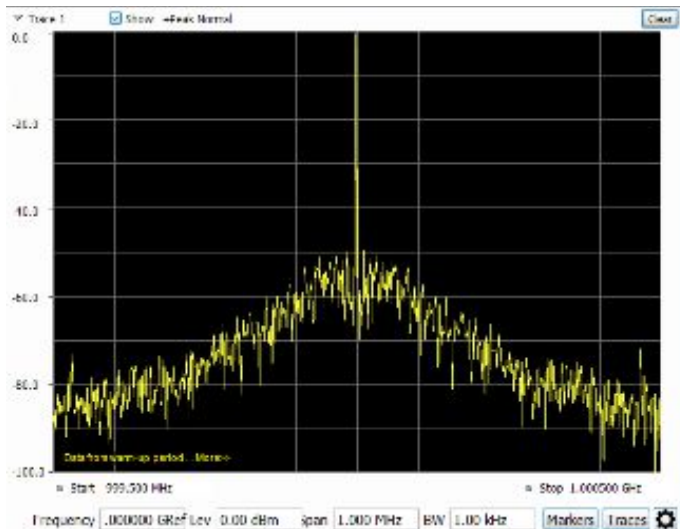

**CW Signal output at 1GHz and 0dBm level**

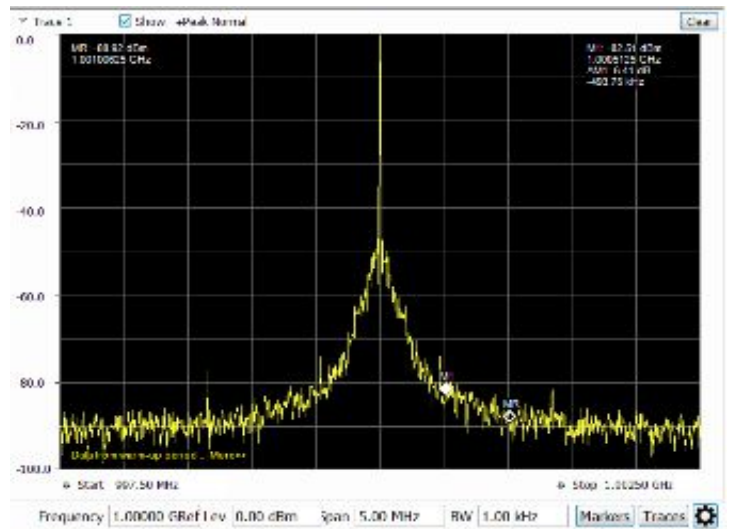


**CW Signal output at 1GHz and 0dBm level**


VSG6G1C amplitude level can be set to -100dBm, and amplitude setting resolution is 0.25dB So that VSG6G1 can be used to measure receiver sensitivity level.



VSG6G1C RF frequency range from 1MHz to 6100MHz, and frequency setting resolution is 1Hz, the following image are shown -100dBm level and 6Ghz frequency output.

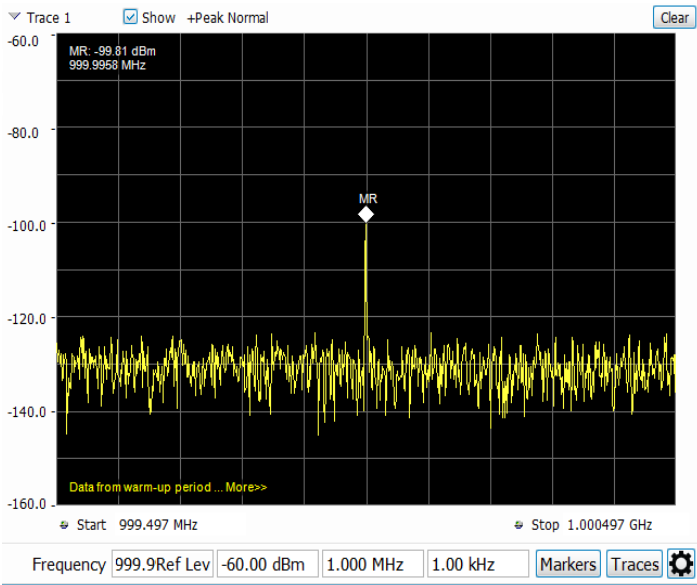


**CW Signal output at 1GHz and -100dBm level**

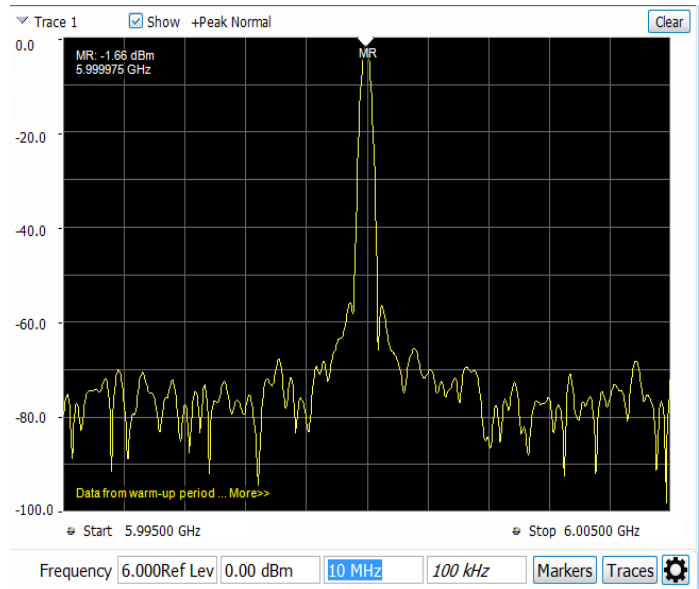


**CW Signal output at 6GHz and 0dBm level**

## 3.2 Single frequency with Pulse modulation

Select Mode to "Single Freq with Pulse Modulation". Pulse modulation in signal frequency can be achieved narrow pulse modulation, the minimum pulse width will be 0.25us, it can be used to simulate the radar signal and some detection device signal. The following image are shown pulse modulation signal with 0.25us pulse width, and 40us period.

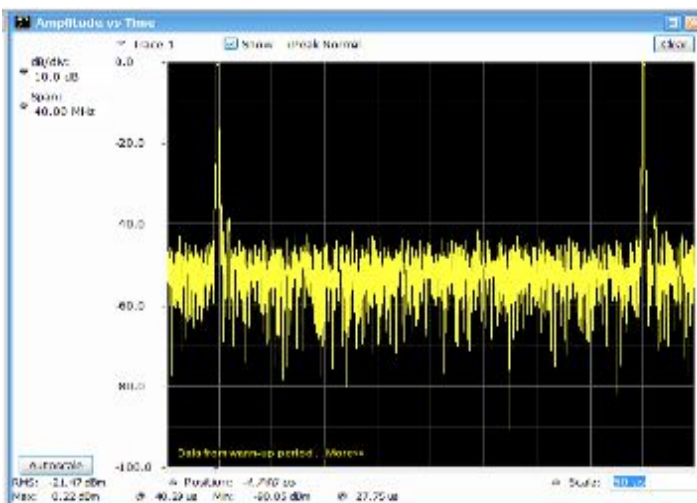


**Pulse modulation output at 1GHz with 0.25us on 39.75us off**

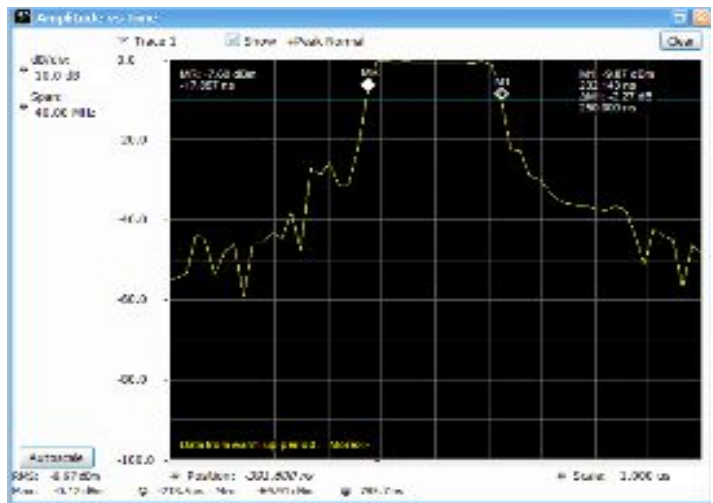


**Pulse modulation output at 0.25us width wide**

The pulse modulation have multiple pulse function, the multiple pulse number can be from 2~250, some transponder have multiple pulse signal format, and multiple pulse working as data information. The following image is shown the multiple pulse modulation with 1us pulse width and 6 pulse group.



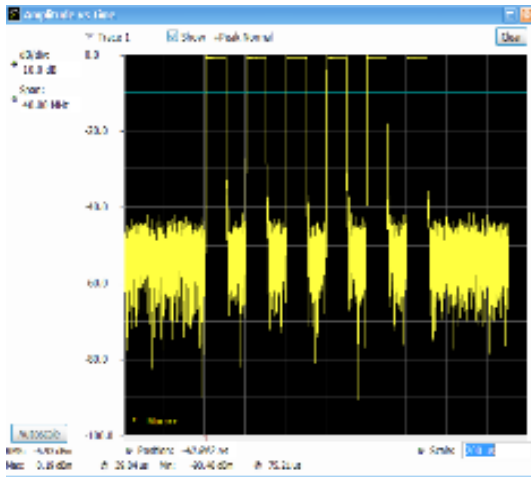

Spectrum from RSA306

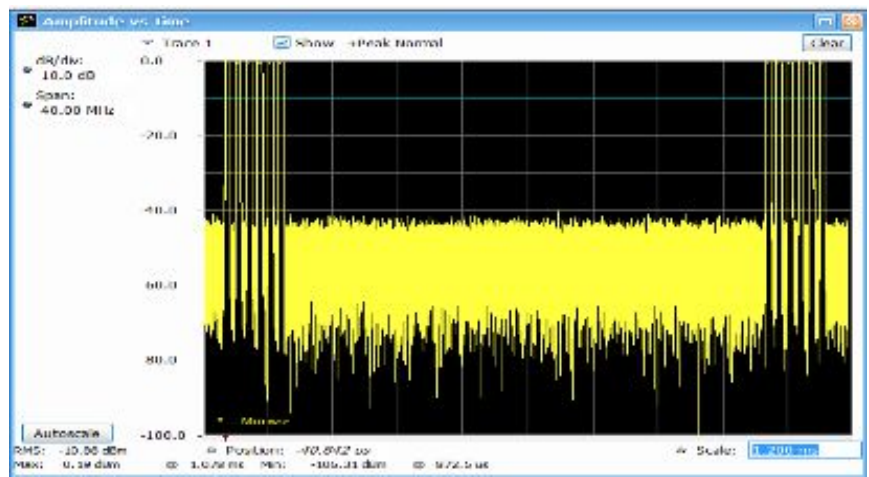

RF time waveform from RSA306


When VSG6G1C is working at pulse modulation mode, it can open the I&Q modulation to add data into pulse signal, it can simulation physical layer data frame of communication set, such as GSM, wireless key.

### 3.3 Frequency Sweeping without Pulse Modulation


Select Mode to "Freq Sweeping without Pulse Modulation". click frequency then setup frequency at second function area. Input Start frequency, stop frequency and step frequency for frequency sweeping setting, then click the Send to dongle. The USB dongle will be followed to setting to work.

The step frequency is from 1Hz to 1GHz, so that the span of sweeping can be small step or large step.

The sweeping timing will be follow Pulse Mod function. The pulse period will be one step frequency. The minimum pulse period time is 400us, but RF signal will be mute by 300us for frequency setup time.

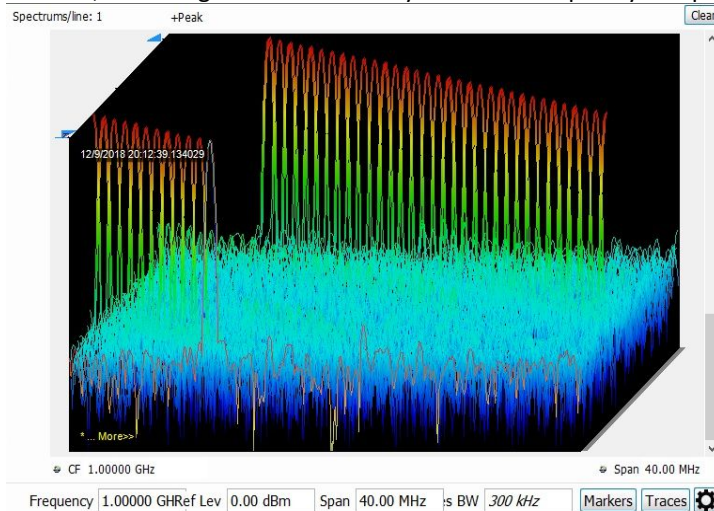

Frequency Sweeping 3D display

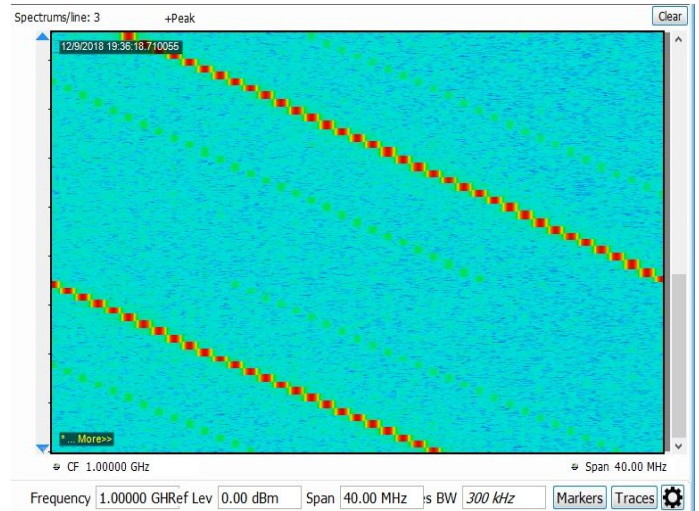


Frequency Sweeping 2D display


### 3.4 Frequency Sweeping with Pulse Modulation



Select Mode to "Freq Sweeping with Pulse Modulation". It need to setup pulse modulation parameter at "Pulse Mod" function key. It still can add I&Q modulation into the frequency sweeping mode ( both with/without modulation), just set I&Q Sel into internal, then select I&Q file at Analog/Digital/Phase mod functional key. The following image is shown that frequency sweeping with/without I&Q modulation at waterfall display.

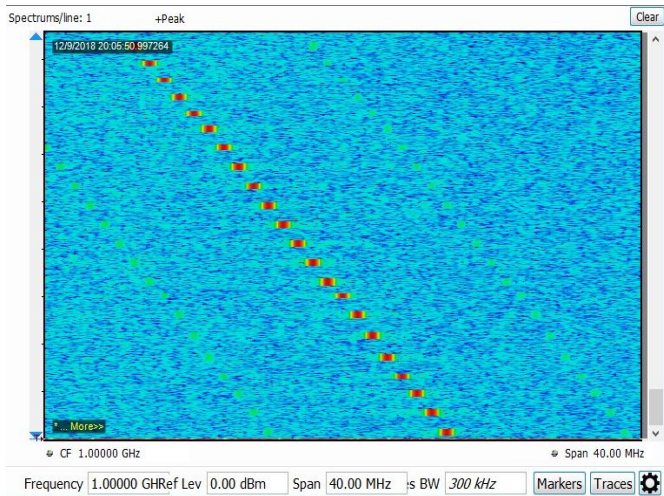


Frequency Sweeping with pulse modulation

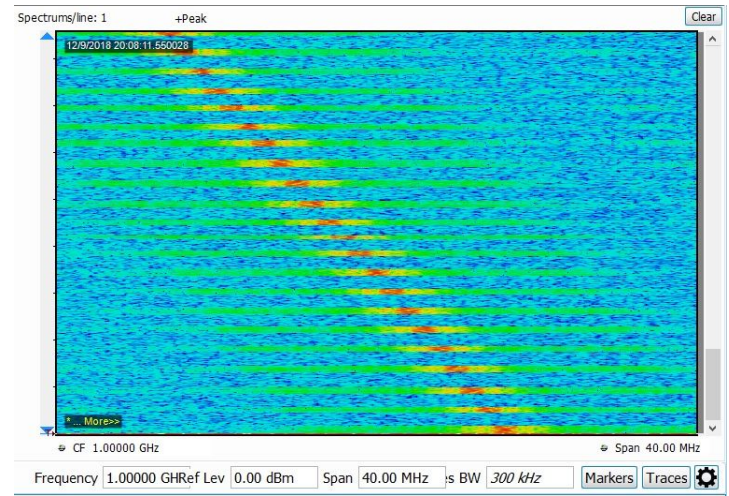


Frequency Sweeping with pulse and I&Q modulation

### 3.5 Frequency hopping with/without Pulse Modulation

Select Mode to "Freq Hopping with/without Pulse Modulation", then click Hopping function key, it need to load file or select Demo key. Demo1 is 300 points hopping and frequency range from 980MHz~1200MHz. It also need to setup "Pulse Mod" key to setup hopping timing parameter. The fast hopping rate is 2500 hopping/s.

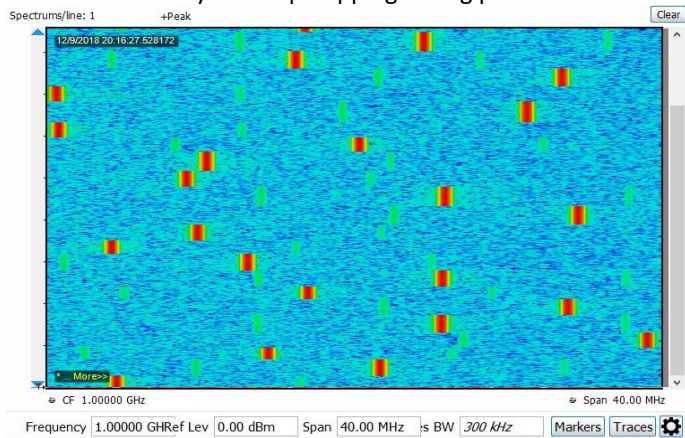

Frequency hopping without pulse modulation

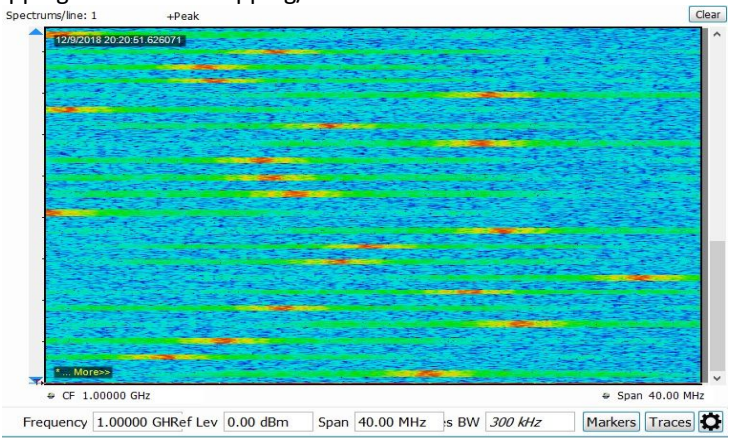

Frequency hopping with pulse and I&Q modulation






Seq.	Value	Unit	Seq.	Value	Unit	Seq.	Value	Unit
1	980.04024	MHz	2	1.00241389	GHz	3	995.42406	MHz
4	1.00361465	GHz	5	1.00359705	GHz	6	1.01288419	GHz
7	1.01725103	GHz	8	1.00629555	GHz	9	981.09158	MHz
10	997.08948	MHz	11	1.01338382	GHz	12	1.01561083	GHz
13	1.01666755	GHz	14	1.01651821	GHz	15	1.00780819	GHz
16	1.0196523	GHz	17	999.30686	MHz	18	984.77436	MHz
19	1.01297846	GHz	20	997.08754	MHz	21	1.00551275	GHz
22	993.8529	MHz	23	999.53563	MHz	24	982.53485	MHz
25	993.03726	MHz	26	989.48419	MHz	27	1.01405061	GHz
28	1.00580039	GHz	29	980.12647	MHz	30	1.00114536	GHz
31	996.99247	MHz	32	1.00071159	GHz	33	986.59005	MHz
34	1.00010725	GHz	35	990.72528	MHz	36	1.01757388	GHz
37	1.01040576	GHz	38	984.2772	MHz	39	985.99083	MHz
40	1.01101083	GHz	41	980.76053	MHz	42	994.05319	MHz
43	989.67876	MHz	44	990.30063	MHz	45	1.00708734	GHz
46	981.23568	MHz	47	997.34149	MHz	48	1.00658076	GHz

Hopping number:300

Frequency table of hopping

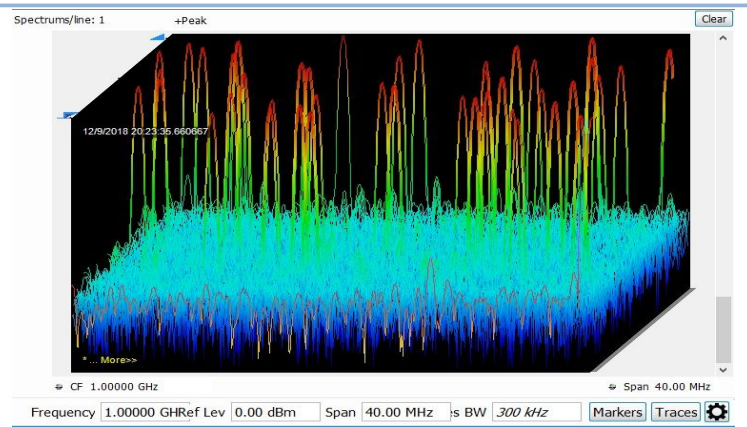

Frequency hopping 3D display


### 3.6 Analog Modulation

First, "I&Q Sel" key shall be at Internal, then I&Q modulation can be working. Select "Analog Mod" go into Analog modulation.


Analog modulation is using I&Q raw data file. AM/FM/PM modulation index can be changed by using these raw data files, signal repeat frequency can be changed by setting the I&Q step count and I&Q data amount. It also can generate a lot of modulation signal by working on the different raw data file.

Following example is narrow band RF noise signal. I&Q will be random noise data, I&Q clock will be 2MHz, so that 2MHz bandwidth noise will at 1GHz.


When signal level set to -90~-100dBm, this device can be simulated noise generator.

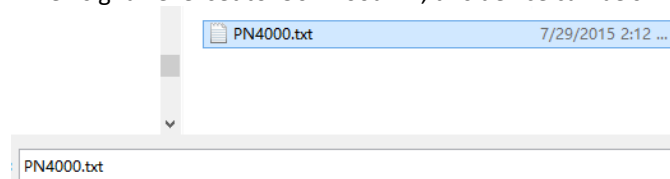


RF narrow band noise is generated at 1GHz.

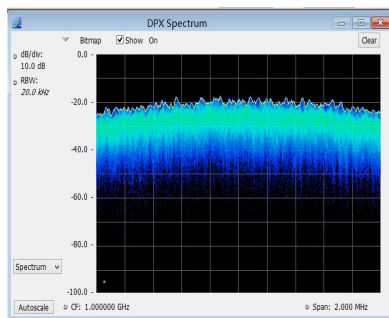

Spectrum from RSA306

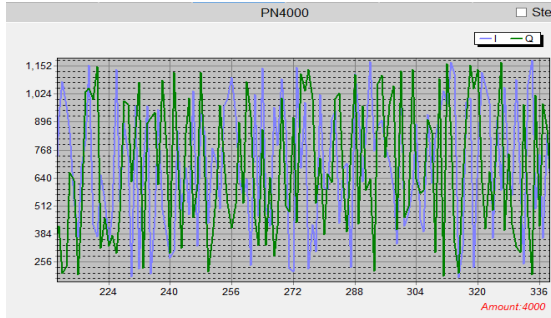

I&Q Raw data from TSG

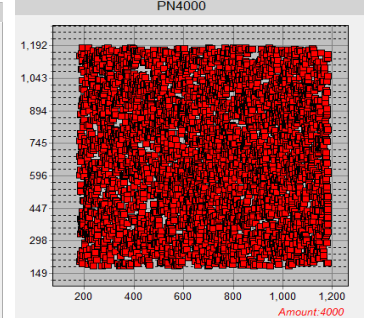

I&Q constellation from TSG

There are demo AM, FM and FM key in the second function of Analog Mod , just click it, then AM/FM/PM signal will be generated from N connector.

Demo AM index is 80%

Demo FM index is 20, if modulation frequency is 2K, deviation will be 40K

Demo PM index is 280 degree

### 3.7 Digital Modulation with I&Q Engine




First, "I&Q Sel" key shall be at Internal, then I&Q modulation can be working. Select "Digital Mod" go into digital modulation. There three demo in the Digital Mod second function area, they are MSK, GMSK and FSK. The data rate can be changed by setting I&Q step count.


More modulation signal can be archived by loading file.

GMSK signal can be generated by clicking Dome GMSK.


GMSK data rate will be 100KHz/b when step count is 72, changing I&Q step count will change GMSK data rate.

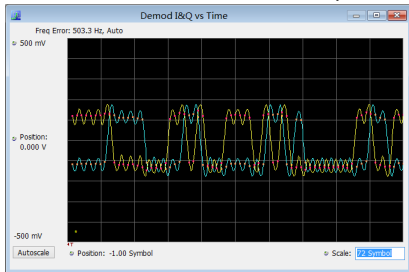

Demod I&Q vs Time from RSA306

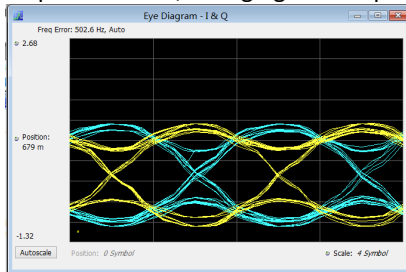


Eye Diagram from RSA306

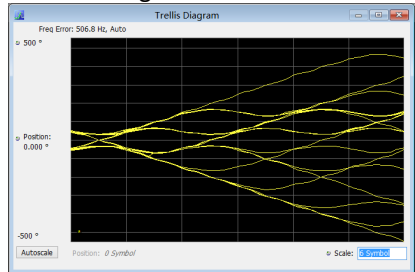


Trellis Diagram from RSA306

FSK signal can be generated by clicking Dome FSK.


FSK data rate will be 40KHz/b when step count is 50, changing I&Q step count will change FSK data rate.

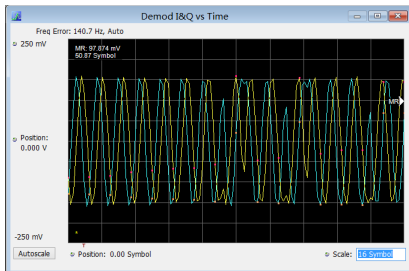

Demod I&Q vs Time from RSA306

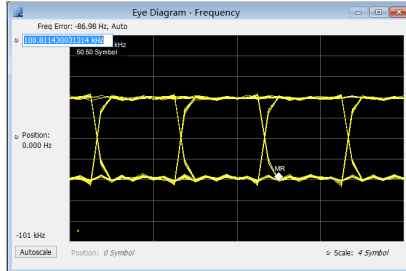


Eye Diagram from RSA306

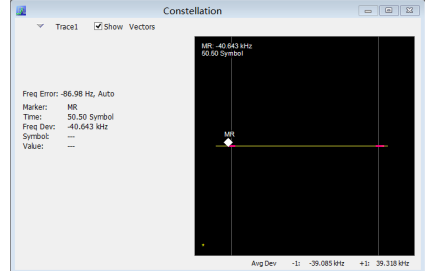


Constellation Diagram from RSA306


Working on I&Q file, most of all digital modulation can be generated, save the I&Q file into Digital modulation sub folder, The 4FSK file can be found at 4FSK folder. Load IQ 4FSK\_1.txt file, 4FSK signal can be generated

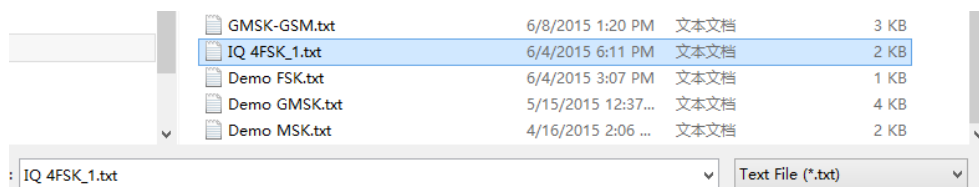


4FSK data rate will be 40KHz/b, changing I&Q step count will change 4FSK data rate.

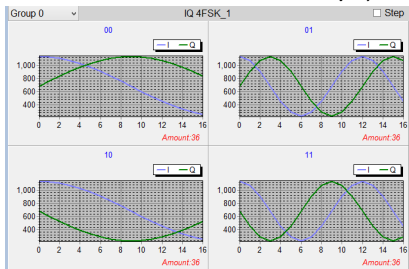

I&Q pattern from TSG

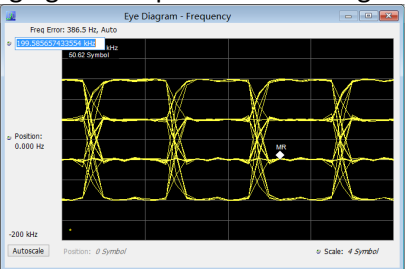

Eye Diagram from RSA306

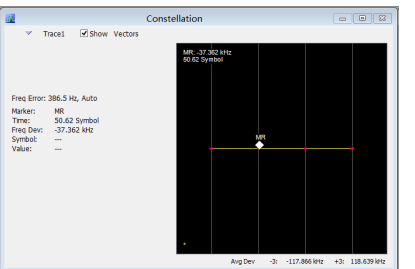

Constellation Diagram from RSA306




### 3.8 Phase Modulation with I&Q Engine

First, "I&Q Sel" key shall be at Internal, then I&Q modulation can be working. Select "Phase Mod" go into phase modulation. There three demo in the Digital Mod second function area, they are QPSK, 8PSK and 16QAM. The data rate can be changed by setting I&Q step count.


More modulation signal can be archived by loading file.

QPSK signal can be generated by clicking Dome QPSK.


QPSK data rate will be 4MHz/b, changing I&Q step count will change QPSK data rate.

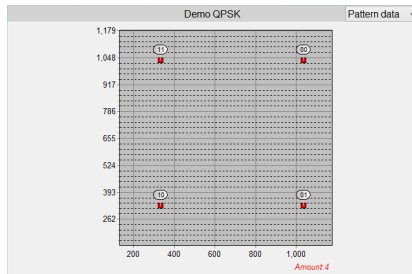

Constellation Diagram from TSG

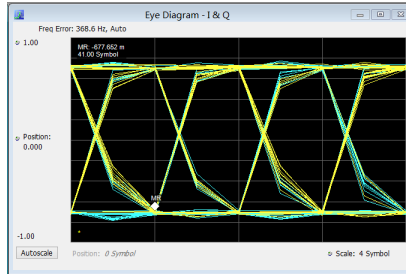


Eye Diagram from RSA306

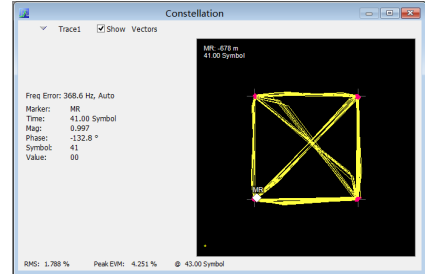


Constellation Diagram from RSA306

8PSK signal can be generated by clicking Dome 8PSK.


8PSK data rate will be 8MHz/b, changing I&Q step count will change QPSK data rate.

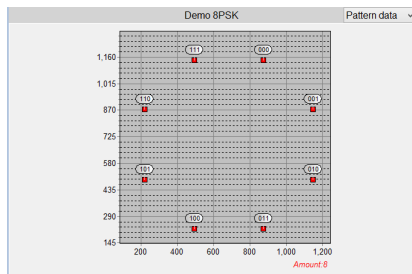

Constellation Diagram from TSG

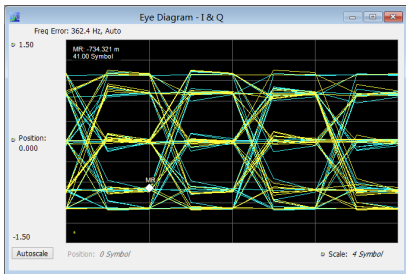


Eye Diagram from RSA306

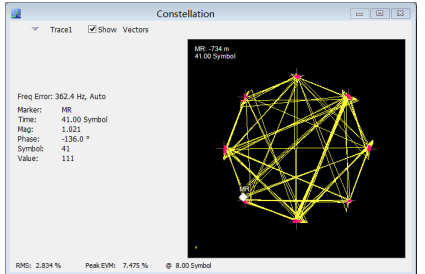


Constellation Diagram from RSA306

16QAM signal can be generated by clicking Dome 16QAM.


16QAM data rate will be 16MHz/b, changing I&Q step count will change QPSK data rate.

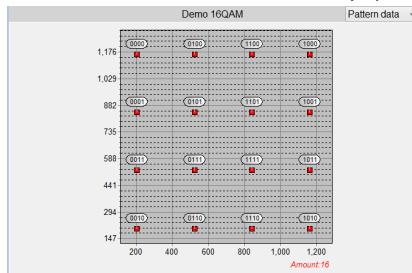

Constellation Diagram from TSG

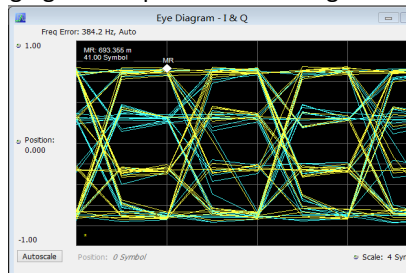


Eye Diagram from RSA306

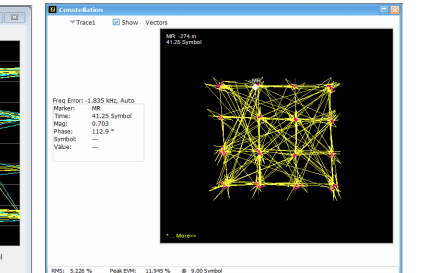

Constellation Diagram from RSA306

### 3.9 Example for GSM signal output

load I&Q file from Load Save key. More complex signal can be setting by using different function keys. After signal is generated, Using Save key to save the setting status, the Load function can resume the signal which setup before.

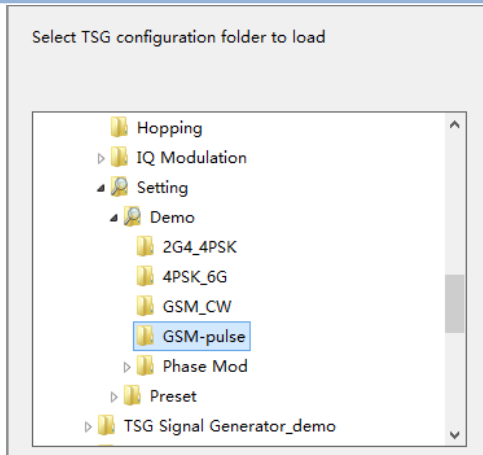


Select GSM pulse signal from Setting /Demo folder


Status block will be:

Start Freq	900MHz	Stop Freq	900MHz	Step Freq	-
Amplitude	0dBm	Repeat Time	4.615ms	Duration Time	577us
Mode	Single Freq with Pulse Mod			Symbol Rate	271.70KHz


GSM data rate will be 271Kb with GMSK modulation, repeat time will be 4.6ms, duration time will be 577us.

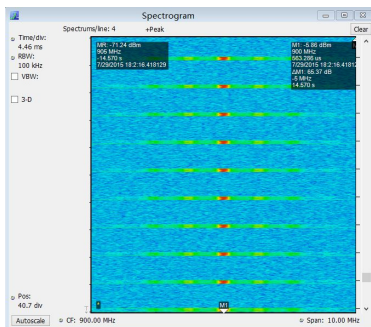

GSM signal with I@Q Mod

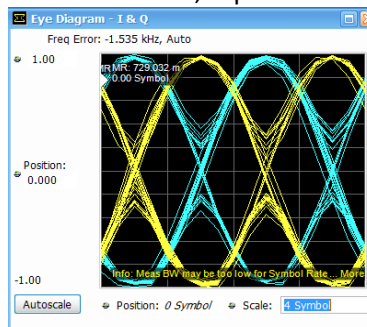

271K GMSK signal

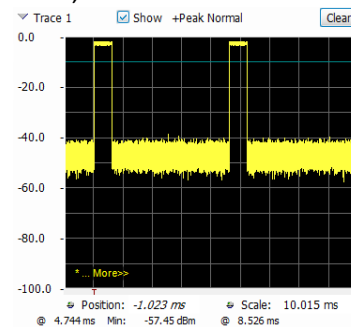

two pulse of GSM signal


### 3.10 Low Band

when Low band select to ON, N connector channel switch from RF channel to I&Q DAC channel. DAC channel will be directly output to N connector, it can generate 100Hz to 1MHz signal.


The Low band output is really SW DDS, it means that I&Q file will be calculated by SW based on the input value, then DAC will be converted I&Q file into real signal. The DDS clock is 2MHz, so that it can only generate maximum 1MHz signal, but when frequency larger than 300KHz, SIN waveform distortion will be larger.

When select Wave\_Sin, just input frequency value, after I&Q data is generated, the low frequency will be generated at N connector. The amplitude level will be from -50dBm~0dBm, it is not calibrated. It can be setup at "Amplitude" Key.



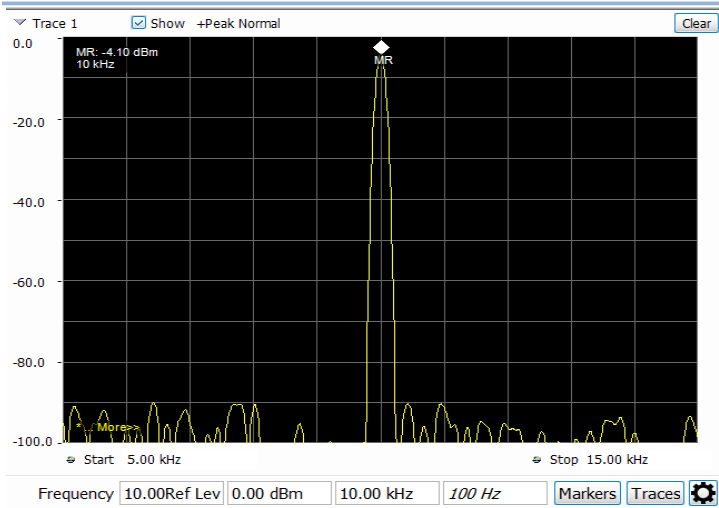


Spectrum waveform of Low Band 10KHz signal output

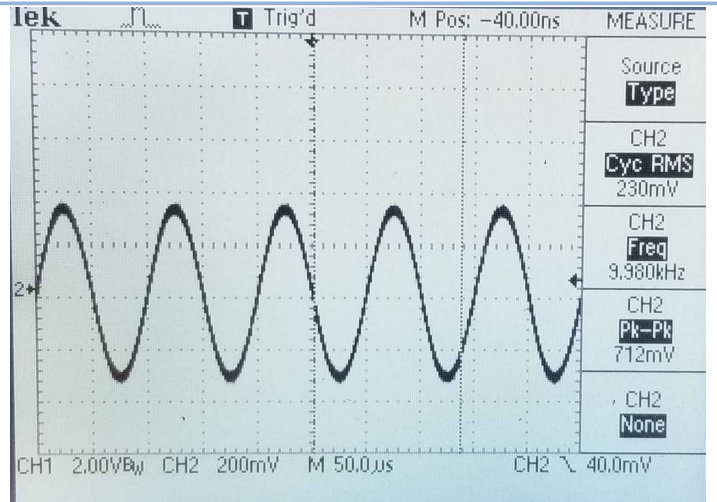

Time domain waveform of Low Band 10KHz signal output

when Click “Load Mod File” key in low band, it will load I&Q file to generate modulation signal based on low band frequency which generated at “Wave\_Sin”. So example, if 10KHz Sin waveform is generated by “Wave\_Sin” key, load 4.8K/b FSK I&Q file at “Load Mod File” key. The output signal will be 10KHz signal with 4.8K/b FSK modulation, two FSK frequency will be 5.8KHz and 14.8KHz.

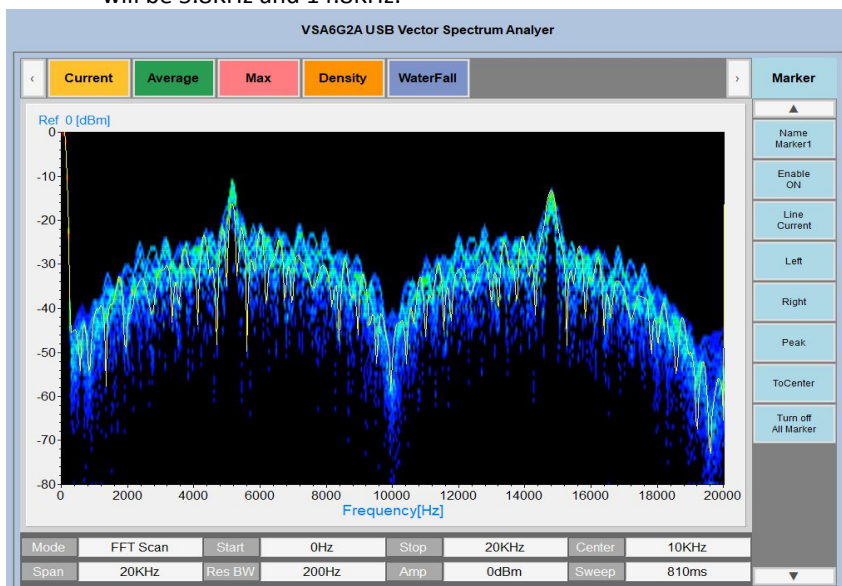

4.8K/b FSK signal base on 10KHz carrier


Changing the I&Q file, the more modulation signal can be get, such as MSK, BPSK, 4PSK .....

When click the “Load Raw File” key in low band, arbitrary signal waveform be archived based the data in the file. Several waveform can be combined together, the Combined action could be (+),(-),(\*),(/), or some kind of modulation.

There DTMF signal file can be found at Low band/Raw File folder. It is dual tune signal which used for telephone keypad. Another waveform in the Load band/Raw File folder is FM Stereo base band signal, Stereo signal need to combine L and R signal onto one FM modulation signal. It has one pilot signal fp, fp is 19KHz, so that (L-R) will be modulated to 38KHz. The FM stereo signal formula will be:

$$(0.9*((L+R)/2+\sin(4*\pi()*fp*T)*(L-R)/2)+0.1*\sin(2*\pi()*fp*t))*75\text{KHz(FM)}$$


the Raw data file can combine with 1) L+R signal, 2) (L-R) section modulated to 38KHz, 3)19KHz pilot signal.

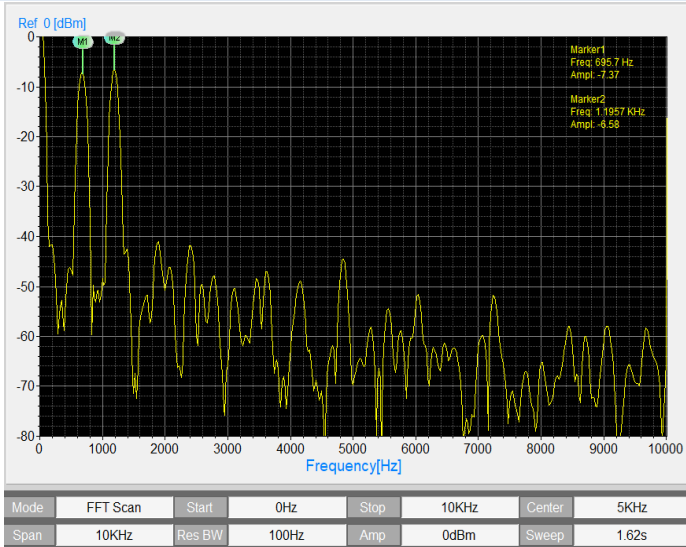


**DMFM dual tone signal, 697Hz and 1209Hz**

When click the “AM FM PM Mod” key in low band, Input index of AM/FM/PM, then click Set AM/FM/PM. The low band signal will be modulated into RF signal, N connector output will be switch back to RF channel. RF frequency and amplitude level are setting by “Frequency” key and “Amplitude” key. it will be easy to generate AM/FM/PM with single modulated frequency and not need to handle I&Q file, just need to input low band frequency and index.


If modulated low band signal is from “Load Raw File” , the more complex low band signal can be generated, then modulated it into RF signal. Stereo FM signal is one example, after load FM stereo base band signal, and set RF frequency to FM radio channel, such as 88.9MHz, the FM radio can be received this RF signal, and play dual tone to each speaker.

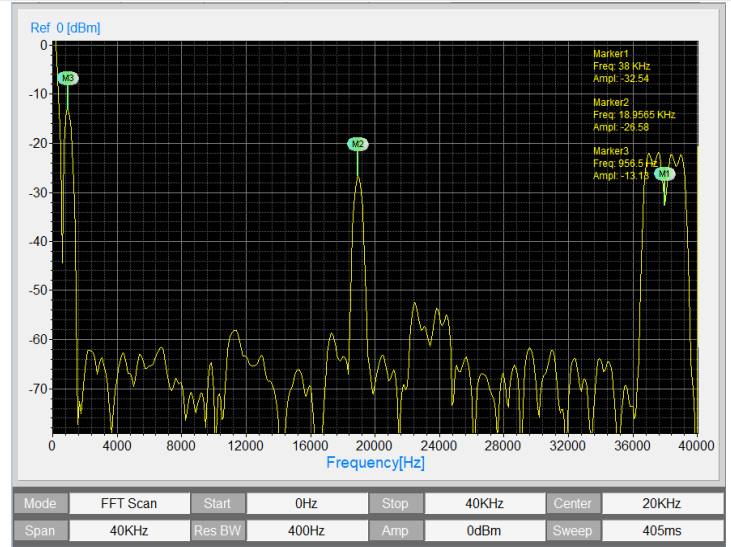

**FM stereo base band signal, (L+R), pilot and modulated (L-R)**

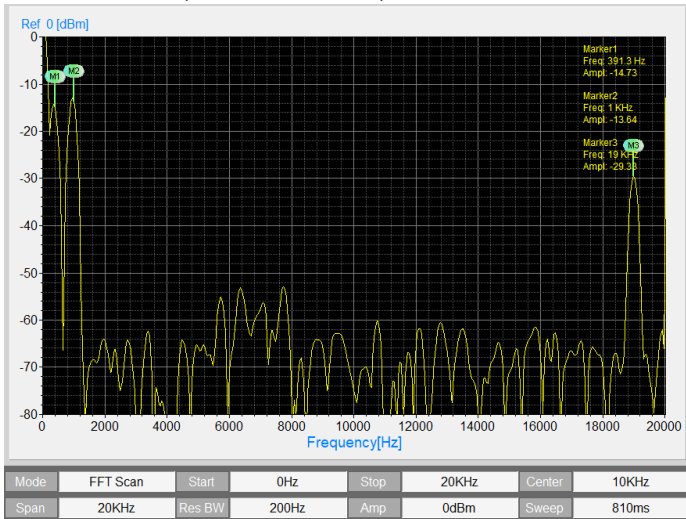


**FM stereo base band signal, L+R and pilot**

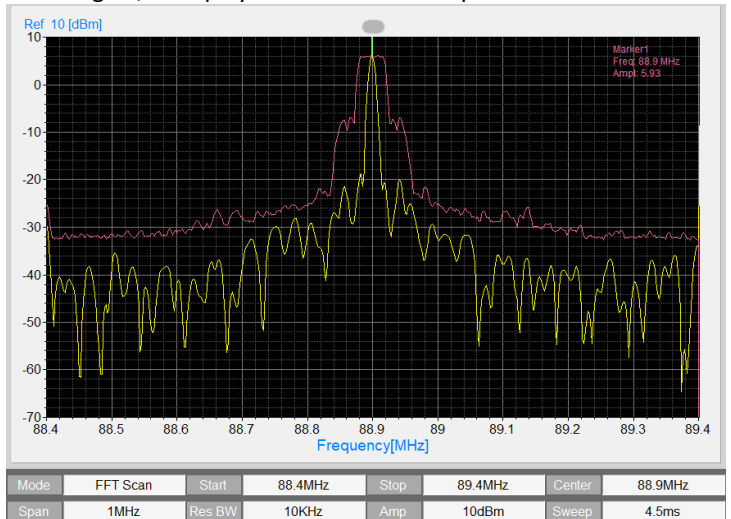

**FM stereo RF signal, frequency=88.9MHz**

### 3.11 Pulse modulation signal output

The Pulse port (MMCX) at rear panel can generate pulse signal, when mode setup to “Single Freq with Pulse Mod”. The parameter of pulse can be setup at pulse mod, following IMAGE IS pulse signal output measured by scope.

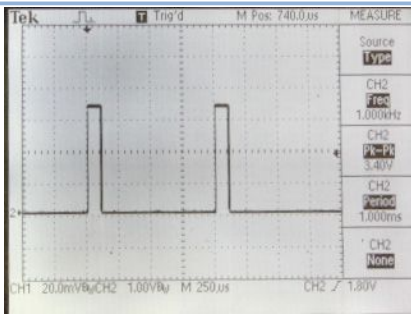

### 3.12 Clock selection

Internal clock reference will be 20MHz, and Main processor will be work at 72MHz, maximum the I&Q symbol rate will be 2.4MHz ( when I\*Q step count set at 30).

When clock select at internal without output, it is also default setting, clock port will be nothing.

When clock select at internal output, clock port will be output 10MHz reference clock.

When clock select at external, it need to input 20MHz reference clock at clock port.

### 3.13 I&Q sel

I&Q port selection will have three choice:


1: None: it will turn off any I&Q modulation, only CW signal will be output.

2: Internal: internal I&Q waveform will connect to modulation IC. TSG can setup to generate a lot of modulation.

3: External/Fast: External setup will need I&Q signal input from I&Q port, it can generate very fast modulation, the signal bandwidth can be setup to 500MHz. Fast setup will be reserved for high speed I&Q data generator option, it is option board for VSG6G1C, it can generate up to 100MHz data rate modulation signal.

### 3.14 Hardcopy Operation

Click the hardcopy, the image of setup can be store within jpg file. File can be found at document folder.

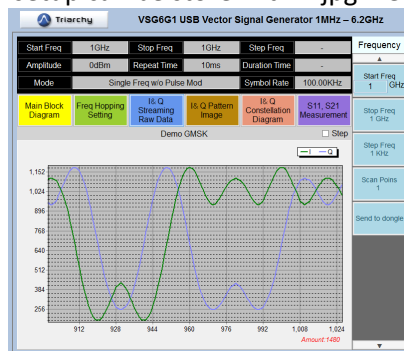

### 3.15 Off Line Operation

Off line function is that USB device only working at 5V not at PC TSG program, the output signal format can be stored at USB dongle. Total 10 kind of signal can be stored, and signals will be generated with repeating and interval, The Save key is used the setup the signal format into file, and Load key is used to load file and stored signal format into USB dongle.

Application note will be detail to show how it working.

### 3.16 Flash OFF/ON Operation





Flash ON is still off line working function, but it is only working with one signal format which last setting. When Off Line is off, Flash On can be working. It is just plug USB dongle with 5V power, the signal of last setting will be generated.


# 4 I&Q Engine

## 4.1 I&Q Engine principle

What is I&Q engine?

I&Q engine is to generated I&Q raw data based on input data stream and modulation format. I&Q raw data will send to DAC to generate I&Q waveform which will be needed for I&Q modulator.

The block diagram of I&Q engine will be follow:

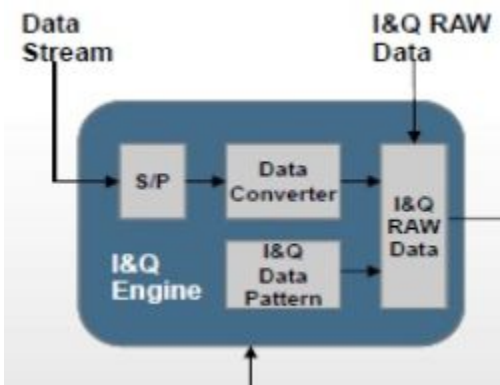


First, data stream will be go into S/P block, which is series to parallel section, most of modulation need this S/P section to setup I&Q mapping.

After S/P section, the parallel data may be need to do some kind of process, such as Gray code conversion, this section will be Data converter.

The parallel data will be mapping with I&Q data pattern to generate I&Q raw data. The mapping pattern is depend on the modulation, a lot of text book will discuss with I&Q data pattern. Study the data pattern can be generated a lot of different kind of modulation.


For example, 4FSK generator:

- 1: convert series data into 2 bits parallel data,
- 2: generate 4 I&Q pattern with 36 samples, which related to F1, F2, F3, F4.

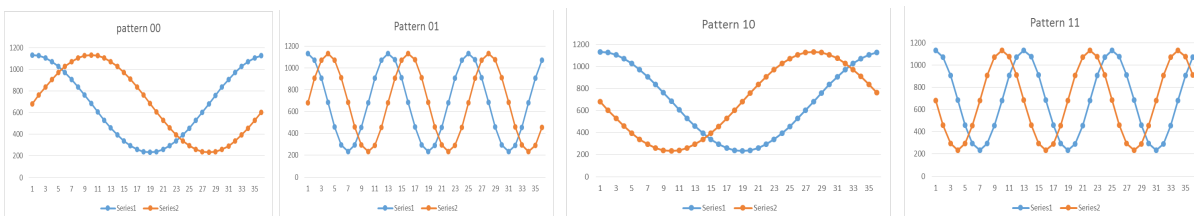



3: mapping the I&Q pattern based on the input data stream, then generate the raw I&Q data.

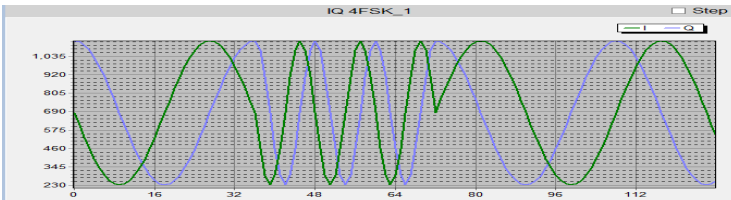

## 4.2 I&Q file configuration

There are two kind of I&Q file which can be used by TSG program:

1: I&Q raw data file, which is only two row of I&Q raw data, I&Q raw data will send to DAC to generate I&Q waveform.

2: Data stream file, which will input to I&Q engine to generate I&Q raw data file.

### 4.2.1 I&Q raw data file

I&Q raw data file format is very simple, only two row of data with comma in txt file, first data is I data, second data is Q data.

I&Q data will be DAC input, the DAC will be 12 bit with 3.3V range, and DAC setup range will be 0.1~0.9V, reference level will be 0.5V.


So that DAC input range will be 125~1125 (4095/3), the reference level of DAC will be 625.

Following data shown the PM file and data waveform:

684,233  
494,275  
343,388  
255,543  
233,702  
260,838  
312,938  
365,1002  
404,1036  
417,1046  
404,1036  
366,1002  
313,939  
261,839  
233,703  
255,544  
342,390  
492,276  
682,233  
872,275  
1023,388  
1111,543  
1133,702  
1105,838



1053,938  
1000,1002  
961,1037  
947,1047  
961,1037  
999,1004  
1052,941

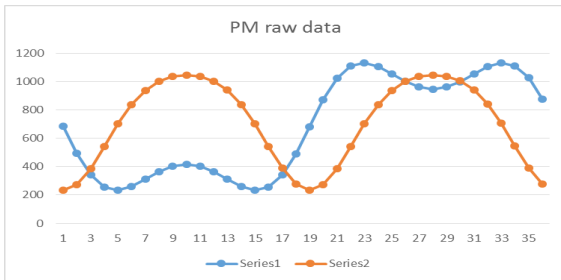

The modulation frequency will be  $72\text{MHz}/(\text{step count} \times \text{I\&Q sample amount})$   
If step count=200, and I&Q sample amount=36, modulation frequency will be 10KHz.

Any analog modulation and low frequency signal can be generated by I&Q raw data file, just define the I&Q raw data by math formula, you can generate any kind of waveform, the working method of I&Q raw data file is same as Arbitrary Signal Generator, but it have two channels to generate signal.

### 4.22 Data stream file

Data stream file will be include input data, I&Q pattern and some setting.

When you open the data stream file, you will find four section:

- 1: Data input
- 2: S/P setting
- 3: converter setting
- 4: I&Q pattern data

the file format will be shown at following:

```
Binary_IN, 1, 1011000010110000101000101101101000000001001000111001110110000
S/P_mode, 1, 2
Code_converter, 1
PatternI_00, 1036
PatternQ_00, 1036
PatternI_01, 1036
PatternQ_01, 330
PatternI_10, 330
PatternQ_10, 330
PatternI_11, 330
PatternQ_11, 1036
```

#### Data input:

Input binary data must be followed by Binary\_IN,M,

M is special parameter of MSK and GMSK, M=1, 1 bit will be related to 90 degree, M=2, 1 bit will be 180 degree.

M=n, the FSK and GFSK phase changing for 1 bit will be  $90 \times n$  degree.



Total I&Q buffer date will be 100Kb, so that binary data pattern shall be less than 100Kb

**S/P setting:**

Two parameter (X,Y) will be setup in following format:

S/P\_mode,X,Y

Y will be length of parallel data in bit.

X will be setup S/P mode.

X=1, Bypass mode, for all kind of binary modulation such as FSK, PSK and ASK.

X=2, Group mode, series to parallel conversion with group mode.

If input data is : 1100101011101000,

Y=4, date in parallel will be 1100 1010 1110 1000

I,Q data in parallel will be:	1100
	1010
	1110
	1000

X=3, interleave mode, series to parallel conversion with interleave mode.

If input data is : 1100101011101000,

Y=4, date in parallel will be 1(11) 1(21) 0(31) 0(41) 1(12) 0 (22) 1(32) 0(42) 1(13) 1(23) 1(33) 0(43)

1(14) 0(24)0(34) 0(44)

I,Q data in parallel will be:	1111
	1010
	0110
	0000

X=4, MSK mode. It is special setup for MSK, GMSK OQPSK, SFSK..

**Converter setting:**

One parameter (Z) will be setup in following format:

Code convertor, Z

Z will be setup converter mode.



Z=1, Bypass mode, it means converter will do nothing, just pass through.

Z=2, Gray code mode, do gray code calculation:  $G(N) = (B(n)/2) \text{ XOR } B(n)$

Z=3, GMSK filter, if you want to generate GMSK modulation, select it.

## I&Q pattern data:

The I&Q pattern data format will be:

PatternI\_number,data1, data2, data3, data4, data5, data6, data7, data8, data9, data10

PatternQ\_number,dataQ1, dataQ2, dataQ3, dataQ4, dataQ5, dataQ6, dataQ7, dataQ8, dataQ9, dataQ10

Number length will be parameter Y, parallel data length. If Y=3, total I&Q pattern will be 8 set.

DataIn and DataQn, will be pattern data, n will be pattern amount in length.

I&Q pattern will be defined by modulation, analyze the modulation, then you can get I&Q pattern.

The following will be example of 8 set of MSK I&Q pattern:

PatternI\_000,683,762,838,910,977,1037,1088,1129,1159,1177

PatternQ\_000,1183,1177,1158,1128,1087,1036,977,910,837,761

PatternI\_001,183,189,208,238,279,330,390,456,529,605

PatternQ\_001,684,762,838,911,977,1037,1088,1129,1159,1177

PatternI\_010,682,604,527,455,388,329,278,237,207,189

PatternQ\_010,183,189,208,238,279,330,390,457,529,606

PatternI\_011,1183,1177,1158,1128,1087,1036,976,909,836,760

PatternQ\_011,681,603,527,455,388,328,278,237,207,189

PatternI\_100,682,760,836,909,976,1036,1087,1128,1158,1177

PatternQ\_100,183,189,207,237,278,328,388,455,527,603

PatternI\_101,1183,1177,1159,1129,1088,1037,977,910,838,762

PatternQ\_101,683,761,837,910,977,1036,1087,1128,1158,1177

PatternI\_110,683,605,529,456,390,330,279,238,208,189

PatternQ\_110,1183,1177,1159,1129,1088,1037,977,911,838,762

PatternI\_111,183,189,207,237,278,329,388,455,527,604



PatternQ\_111,684,606,529,457,390,330,279,238,208,189

