

nutribullet®

COLD PRESS BATCH JUICER



User guide



WARNING! Reduce the risk of serious injury by reading the User Guides to your nutribullet® Cold Press Batch Juicer before operating. Save these instructions. Ensure anyone who uses the nutribullet® knows how to do so safely.

IMPORTANT SAFEGUARDS

When operating your nutribullet® Cold Press Batch Juicer, remember: SAFETY COMES FIRST.

 **WARNING!** To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet® Cold Press Batch Juicer. When using any electrical appliance, basic safety precautions should always be observed, including the following important information. **READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.**

If you let anyone else use your nutribullet® Cold Press Batch Juicer, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should read the User Guide completely and become familiar with the safe operation of the unit.

! SAVE THESE INSTRUCTIONS! • FOR HOUSEHOLD USE ONLY

GENERAL SAFETY INFORMATION

- Do not operate the appliance without the Hopper, Lid, Juice Cup and Pulp Cup correctly installed.
- Do not insert fingers, utensils or any foreign objects into the feed chute. Always use the food pusher provided.
- Always switch off and unplug the appliance before assembling, disassembling, cleaning or clearing a blockage.
- Do not use the appliance if the rotating sieve, strainer, Auger, Hopper or any removable part is damaged.
- Do not immerse the Motor Base, power cord or plug in water or any other liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This juicer system has moving parts, and is **NOT** intended for use by children or persons with reduced physical, sensory, or mental capabilities, or who lack experience and knowledge of its safe operation. Such persons require close supervision and thorough instruction on its proper use and safe operation. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- To protect against fire, electrical shock and injury to persons, do not immerse the juicer, Motor Base, cord or plug in water or any other liquid.

- Turn the juicer **OFF**, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning or moving the appliance. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **AVOID CONTACT WITH MOVING PARTS. DO NOT ATTEMPT TO DEFEAT ANY SAFETY INTERLOCK MECHANISMS.**
- Regularly inspect the power cord, plug and the actual juicer for any damage.
- Do not operate this or any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact nutribullet® Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633.**
- The use of attachments not recommended or sold by nutribullet® may cause fire, electric shock or injury.
- This juicer is for household use only. Do not use this juicer for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Do not let the power cord hang over the edge of a table or counter-top.
- Do not let the power cord touch hot surfaces, such as a stove or let it become tangled or knotted.

 **WARNING! ALWAYS ENSURE THE JUICER IS TURNED OFF AFTER EACH USE. BEFORE DISASSEMBLING, MAKE SURE THE AUGER HAS STOPPED ROTATING AND THE MOTOR HAS COMPLETELY STOPPED.**

- Do not push food into the Hopper with your fingers or utensils. Always use the Food Pusher provided. Do not place your hand or fingers into the Hopper when it is attached to the juicer. If food becomes lodged in the Hopper, use the Food Pusher provided or another piece of fruit or vegetable to push it down. Turn the motor off and ensure that all moving parts have stopped before disassembling the juicer to remove the remaining pulp.
- Do not use the juicer if the rotating sieve is damaged.
- Please see assembly instructions for proper placement.
- Do not modify the plug in any way. This juicer has a polarised plug. To reduce the risk of electric shock, this plug will fit in a polarised outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

ADDITIONAL SAFEGUARDS

! WARNING! THIS APPLIANCE IS WIRED FOR DOMESTIC USE ONLY. TO AVOID AN ELECTRICAL HAZARD, THIS APPLIANCE MUST NOT BE POWERED OR SUPPLIED THROUGH AN EXTERNAL SWITCHING DEVICE, SUCH AS A TIMER OR VOLTAGE CONVERTER.

! WARNING! REMOVE AND SAFELY DISCARD ANY PACKAGING MATERIAL OR PROMOTIONAL LABELS BEFORE USING THE JUICER FOR THE FIRST TIME. TO ELIMINATE A CHOKING HAZARD FOR YOUNG CHILDREN, REMOVE AND SAFELY DISCARD THE PROTECTIVE COVER FITTED TO THE POWER PLUG OF THIS JUICER. KEEP FINGERS AWAY FROM THE SHARP BLADE IN THE FEED CHUTE. ALWAYS MAKE SURE THE JUICER IS PROPERLY AND COMPLETELY ASSEMBLED BEFORE CONNECTING TO THE POWER OUTLET AND OPERATING. ENSURE THAT THE SURFACE WHERE THE APPLIANCE OPERATES IS STABLE, LEVEL, CLEAN AND DRY.

- Vibration can occur during normal operation. If extreme vibration occurs, discontinue use and call Customer Service.
- If the juicer leaks or there is a spill under or around the juicer, or onto the juicer

itself, clean and dry before continuing use.

- When using this juicer, make sure there is adequate air space around and under it for proper air circulation.

! WARNING! THIS JUICER IS ONLY DESIGNED TO JUICE FRUITS AND VEGETABLES. REMOVE RIND FROM ALL CITRUS FRUITS BEFORE JUICING.

! WARNING! DO NOT JUICE STONE FRUIT UNLESS PITS HAVE BEEN REMOVED.

- Do not leave the appliance unattended when in use.
- Keep hands, fingers, hair, clothing as well as spatulas and other utensils away from the appliance during operation.
- Keep the juicer clean. Refer to care and cleaning section for further information.
- Any maintenance other than cleaning should be performed by an authorised electrician. Do not attempt to repair or service the juicer, contact Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633.**
- If any of the instructions or warnings are not understood please contact Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633.**
- Do not place any of the **nutribullet® Cold Press Batch Juicer** parts in a microwave

or immerse them in or hold them over boiling water, as this may result in damage to the part that can cause bodily injury during use.

! WARNING! PERIODICALLY INSPECT YOUR NUTRIBULLET® COLD PRESS BATCH JUICER COMPONENTS FOR DAMAGE OR WEAR THAT MAY IMPAIR PROPER FUNCTION OR PRESENT A DANGER OR SAFETY HAZARD. DISCONTINUE USE IF YOU DETECT CRACKING OR DAMAGE TO ITS PARTS. ALWAYS INSPECT THE AUGER BEFORE EACH USE. NEVER USE A CRACKED, BENT, OR DAMAGED AUGER. USING A DAMAGED AUGER MAY RESULT IN PERSONAL INJURY. FOLLOW THE MAINTENANCE INSTRUCTIONS IN THIS USER GUIDE. NEVER OPERATE YOUR NUTRIBULLET® COLD PRESS BATCH JUICER WITH DAMAGED PARTS OR COMPONENTS. IF YOUR NUTRIBULLET® COLD PRESS BATCH JUICER MALFUNCTIONS OR IS DAMAGED OR COMPROMISED IN ANY WAY, IMMEDIATELY DISCONTINUE USE AND CONTACT CUSTOMER SERVICE AT AU: 1300 285 538 / NZ: 0800 232 633 WITH ANY COMMENTS, QUESTIONS, OR CONCERNS.

- Always use genuine **nutribullet®** parts and accessories ordered from

bulletbrands.com.au / bulletbrands.co.nz or Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633.** Use of incompatible or aftermarket parts may result in damage to your **nutribullet® Cold Press Batch Juicer** or create safety hazards that may cause personal injury.

- The vitamin/nutrition tips included in this product's user guide and in recipes found on our **nutribullet®** website are not meant to replace the advice of your physician. If you are taking medication, especially medication for cholesterol blood thinners, blood pressure, tranquillisers, or antidepressants, please check with your physician regarding health and nutrition concerns before trying any of our recipes.

! SAVE THESE INSTRUCTIONS!

- To view these and additional instructions or product information online or in other languages, visit **bulletbrands.com.au / bulletbrands.co.nz.**

Contents



- 02 Important safeguards**
- 08 What's included**
- 09 Assembly guide**
- 10 Assembly & use**
 - 12 Usage instructions
 - 14 Control dial
- 16 Juicing tips**
- 20 Disassembly**
- 21 Care instructions**
 - 22 Replacement parts
 - 23 How to store
- 23 nutribullet® Cold Press Batch Juicer
one-year limited warranty**

Thank you for purchasing the **nutribullet® Cold Press Batch Juicer**.

What's included



250 watt
motor base



1.4L hopper



auger



880ML pulp cup



1L juice cup



juice basin




2-in-1 pusher and
scraper tool



cleaning brush

Product configurations may vary. To see our full list of nutribullet® accessories, please visit bulletbrands.com.au / bulletbrands.co.nz.

Assembly guide

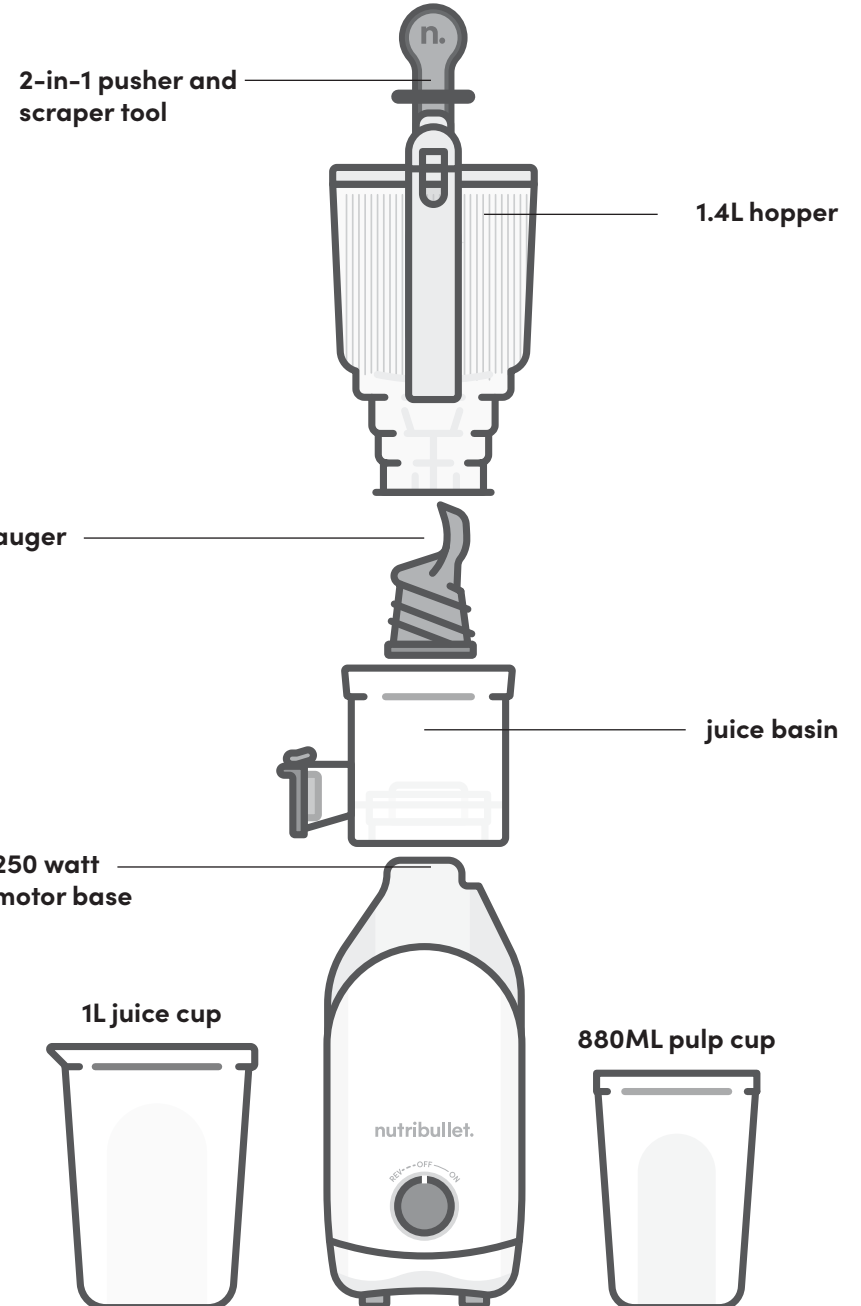

Assembly




- 1 Place the **Motor Base** on a dry, level countertop. Ensure the **Dial** is in the "OFF" position, and the unit is unplugged.



- 2 Place the **Juicing Bowl** on top of the **Motor Base**. Align the spouts on the bowl with the notches on the **Motor Base**. Press down firmly until securely in place.




- 3 Insert the **Auger** firmly into the center of the **Juicing Bowl**. Press down until it touches the bottom and locks into place. If the **Auger** is not placed properly, the **Hopper** will not close.

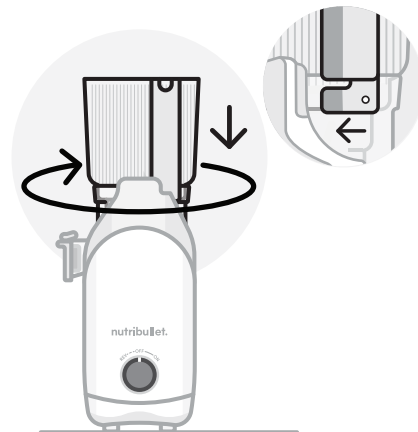

- 4 Place the **Hopper** over the **Juicing Bowl**. Twist the **Hopper** clockwise until the orange dot is no longer visible.

NOTE: The **Lid** must be open to install the **Hopper**.

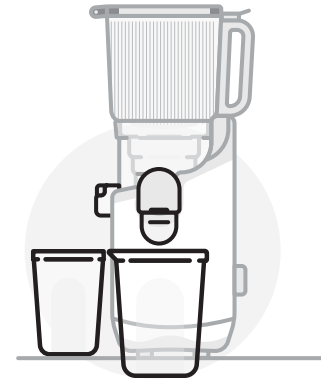


- 5 Place the **Juice Cup** under the **Juice Spout** and the **Pulp Cup** under the **Pulp Spout**.

NOTE: The juicer will not power on if the **Auger** is not in place, and if the **Lid** is not closed.


Usage instructions



- 1 Gather all of your desired ingredients and wash them. Prepare the ingredients to be juiced by cutting, skinning, or removing the rind, stems, or stone seeds.

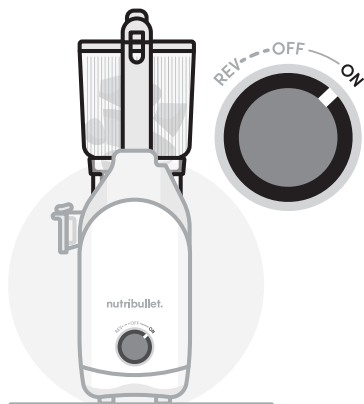

- 3 Close the **Lid** and turn the **Dial** to the **ON** position to begin juicing.

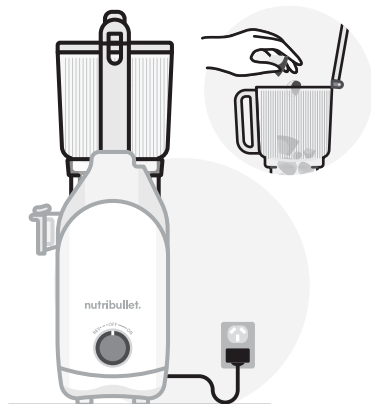

- 2 Plug the power cord into an outlet. Add ingredients to the **Hopper**.




- 4 Use the **2-in-1 Pusher & Scraper Tool** to push the food down into the **Juicing Bowl** and to scrape the sides if needed.

Note: You can continuously add food through the opening of the **Hopper**.

WARNING! Never use hands/fingers or other tools to push food down from the **Hopper** into the **Juicing Bowl**.



- 5 Juice will flow from the **Juicing Bowl** to the **Juice Spout**. Open the **Juice Spout Cover** to release the Juice into the **Juice Cup**. The pulp is separated and released into the **Pulp Cup**.

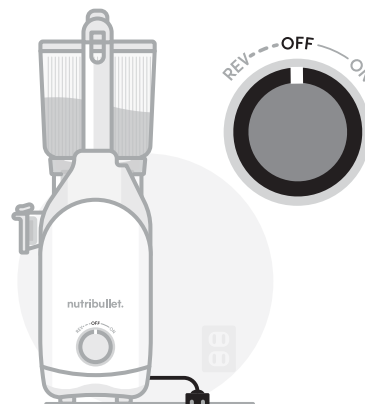


- 7 Turn the juicer off by turning the **Dial** to the **OFF** Position. Unplug the unit. Wait until the **Auger** comes to a complete stop spinning before proceeding to open the **Hopper**.



- 6 If the **Juice Bowl** becomes too full during juicing, open the **Juice Spout Cover** and continue juicing. Close the **Spout Cover** when you are done juicing.

Control dial


DUAL-SPEED CONTROL DIAL & JUICING SETTINGS

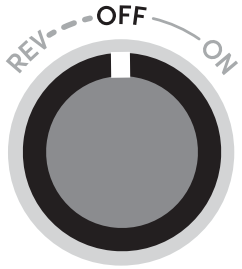

OFF:
OFF is the default position in the **Dial** for your juicer.



ON:
Turn the **Dial** to the right, and the machine will start juicing fruits and vegetables.

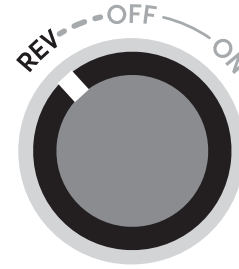

REVERSE:
Turn the **Dial** to the left, **REVERSE** briefly spins the **Auger** in the opposite direction to release stuck ingredients and keep the juicing process flowing smoothly.

Juicing tips

JUICING SELECTION GUIDE

INGREDIENTS

SEASONS

Apple	All Year
Beets	Summer / Autumn / Winter
Blueberry	Summer
Broccoli	Autumn / Spring
Brussels Sprouts	Autumn / Winter
Cabbage	Autumn / Winter / Spring
Carrots	All Year
Cauliflower	Autumn
Celery	All Year
Cucumber	Summer
Fennel	All Year
Ginger	Autumn
Grapes	Autumn
Grapefruit	Winter
Kale	Autumn / Winter / Spring
Kiwi	Autumn / Winter / Spring
Lemon	All Year
Lime	All Year
Melons (all)	Summer
Orange	Winter
Peaches	Summer
Pears	Autumn / Winter
Pineapple	Autumn / Winter / Spring
Plums	Summer
Raspberries	Summer / Autumn
Spinach	Autumn / Spring
Sweet Potato (raw)	Autumn / Winter
Tomatoes	Summer

VITAMINS / NUTRIENTS

source of quercetin
excellent source of folate
good source of vitamin C
high in vitamin C, high in folate, good source of potassium
high in vitamin C, good source of folate
high in vitamin C
excellent source of vitamin A, good source of vitamin C
high in vitamin C, good source of folate
good source of vitamin C, good source of vitamin A
good source of vitamin C
good source of vitamin C and potassium
contains vitamin C, magnesium, and potassium
good source of vitamin K
high in vitamin A, high in vitamin C
excellent source of vitamin A and vitamin C, good source of calcium and potassium
high in vitamin C, good source of potassium and vitamin E
high in vitamin C
high in vitamin C
high in vitamin A, high in vitamin C
high in vitamin C
good source of vitamin C
good source of vitamin C
high in vitamin C
good source of vitamin C
high in vitamin C
high in vitamin A, vitamin C, iron, and folate, good source of magnesium
good source of potassium, high in vitamin A and vitamin C
high in vitamin A, high in vitamin C, good source of potassium

- 

WARNING! DO NOT attempt to juice ingredients with very little water content, such as avocados, coconut, rhubarb, and bananas. These are generally not suitable for juicing because they lack the necessary liquid for the juicer to function properly, and may cause the unit to clog.
- 

WARNING! Apples can be juiced, but you should remove the seeds first. Apple seeds contain amygdalin, which can be poisonous when metabolised.

PROPER PRODUCE PREP

Prepare fruit and veggies before inserting them into the juicer:

- Properly clean produce (rinse with lukewarm water, produce wash, or water and apple cider vinegar).
- Peel or remove skin as needed, and chop food items down to the right size – just small enough to fit easily into the Hopper, without having to force the pieces down with the Food Pusher.
- Remove rind from all citrus fruits before juicing.
- Remove large pits and seeds from stone fruits before juicing.

HOPPER

- Never place your hand or fingers into the Hopper when it is attached to the appliance.
- Do not overload the Hopper.
- Use only the provided 2-in-1 Pusher and Scraper Tool to push food into the Auger and Juicing Bowl. Never use fingers, utensils, or any other apparatus.
- Never use excessive force to push items into the Hopper.
- If any food gets stuck in the Hopper, use the 2-in-1 Pusher and Scraper Tool to move it down the Auger and the Juicing Bowl.
- **IMPORTANT TIP:** Do not use excessive force when pushing ingredients through the Hopper as it may strain the motor and cause it to overheat.

CONSUMING JUICE & PULP

Instead of composting or throwing away the pulp left over after juicing, you can choose to consume it. Check out our recipe section on bulletbrands.com.au / bulletbrands.co.nz for some fun tips on what to do with leftover pulp. By using these creative ideas, you can enjoy pulp in a variety of delicious (and healthy) ways.

- Whether you prefer sweet or savory, you can use pulp to create some tasty treats!
- For best taste, consume fresh juice and pulp within 48 hours of juicing.

NO-GO FOODS


Foods that should NEVER be used in this juicer:

- Foods that do not contain juice to extract (for example, bananas or avocados).
- Frozen fruits or vegetables.
- Stone fruits that have large pits or seeds that have not been removed. Stone fruits may be used only if the seed or pit has been removed.


OVERHEATING

- If the motor overheats, the juicer will turn off.
- If the juicer stops working, unplug it and allow it to cool down for at least fifteen minutes before attempting to use again.

Disassembly

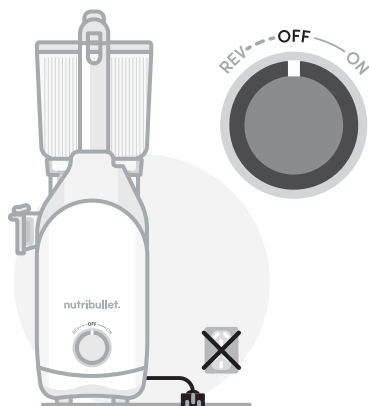


- 1 Power Off & Unplug:**
Turn the **Dial** to the “OFF” position and unplug the unit from the outlet.

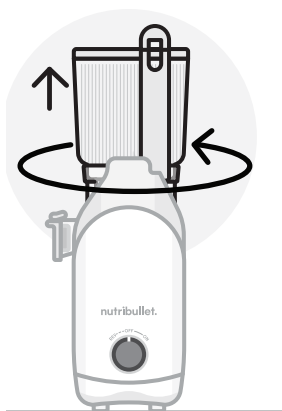

- 2 Remove the Hopper:**
With the **Lid** open, grab the handle and turn the **Hopper** counterclockwise until the arrows are no longer aligned. Lift the **Hopper** off the **Motor Base**.



- 3 Remove the Auger:**
Pull the **Auger** straight up from the **Juicing Bowl** to remove it.

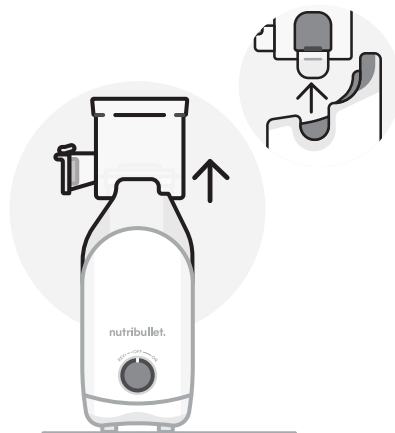

- 4 Remove the Juicing Bowl:**
Lift the **Juicing Bowl** up and off the **Motor Base**.

Care instructions

- 1** Always ensure the **Motor Base** is unplugged before you begin assembly, disassembly, cleaning or storage of the unit.

- 2** Once the **Hopper** and the **Juicing Bowl** are emptied, rinse all parts under running water.

- 3** Use the **Cleaning Brush** to scrub the **Auger** under running water. Be sure to properly clean **Auger**, **Hopper**, and **Juicing Bowl** every time you juice. Residue from fruits and vegetables can cause build up, preventing proper function.

- 4** Clean the area under the **Juicing Bowl**, including the **Silicon Cover**, **Spouts** and **Spout Cover**.

- 5** After cleaning push the **Silicone Cover** firmly back into place. Make sure it is fully pushed and flushed.

- 6** All of the components except the **Motor Base**, are dishwasher safe. You may also hand-wash all pieces with warm soapy water. Do not use metal sponges or abrasive pads as they may damage the surfaces.

TIP: Do not use the sterilise cycle on your dishwasher to clean your juicer, as high temperatures deform parts.

- 7** Wipe down the **Motor Base** with a clean, damp cloth.

WARNING! Never submerge **Motor Base** into water or other liquids.

Replacement parts

Periodically inspect your nutribullet® Cold Press Batch Juicer for damage or wear that may impair proper function or present a danger or safety hazard. Discontinue use if you detect cracking or damage. Never operate your nutribullet® Cold Press Batch Juicer with damaged parts or components.

Always use genuine nutribullet® parts and accessories. Use of incompatible or aftermarket parts may result in damage to your nutribullet® Cold Press Batch Juicer or create safety hazards that may cause personal injury or damage.

To order additional parts and accessories, please visit our website at **bulletbrands.com.au** / **bulletbrands.co.nz** or feel free to contact Customer Service:
AU: 1300 285 538 /
NZ: 0800 232 633.

How to store

Do not place anything on top of the Pitcher Lid. Store remaining pieces in a safe place where they will not be damaged and won't cause harm, as some of the pieces are sharp.

CDB GOLDAIR one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:**
We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:**
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY

DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.



NEW ZEALAND

PO Box 100-707
NSMC
Auckland 0745
0800 232 633
bulletbrands.co.nz

AUSTRALIA

PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

nutribullet® is a registered trademark of CapBran Holdings, LLC.
Copyright © 2026 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90024, USA. Made in China.

Model: NBJ-500

220-240V AC 50-60Hz 250W

Capital Brands Distribution, LLC | bulletbrands.com.au / bulletbrands.co.nz
All rights reserved.

nutribullet® is the registered trademark of Capbran Holdings, LLC
Copyright © 2026 Capbran Holdings, LLC. Distributed By Capital Brands Distribution, LLC. Los Angeles, CA 90024 USA. All Rights Reserved. Made In China.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

260812_NBJ07500AK