

# beurer

## UB 30 / UB 33



UB 30



UB 33

<b>EN</b>	Heated underblanket	
	Instruction for Use.....	2
<b>IN</b>	हीटेड अंडरब्लेकेट	
	इस्तेमाल के लिए निर्देश .....	9



**Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.**













## Table of contents

1. Items included in the package .....	3	4.4 Setting the temperature .....	6
1.1 Description .....	3	4.5 Switching off .....	7
2. Important instructions		5. Cleaning and maintenance .....	7
Retain for future use .....	4	6. Storage .....	8
3. Intended use .....	5	7. Disposal .....	8
4. Operation .....	6	8. What if there are problems? .....	8
4.1 Safety .....	6	9. Technical data .....	8
4.2 Initial use .....	6	10. Guarantee / service .....	8
4.3 Switching on .....	6		

## Explanation of symbols

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	<b>WARNING:</b> Warning of risks of injury or health hazards		
	<b>CAUTION:</b> Safety information about possible damage to appliance/accessories		
	<b>NOTE:</b> Important information		
	Read the instructions		Do not insert pins
	Do not use folded or rucked		Not to be used by very young children (0 - 3 years)
	Manufacturer		
	The device has double protective insulation and therefore complies with protection class 2.		
	Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).		
	Separate the packaging elements and dispose of them in accordance with local regulations.		
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard		

	Separate the product and packaging elements and dispose of them in accordance with local regulations.		
	This product satisfies the requirements of the applicable European and national directives.		
	United Kingdom Conformity Assessed Mark		
	The KEMA-KEUR symbol documents the safety and compliance with standards of an electrical product.		
	The products demonstrably meet the requirements of the technical Regulations of the EAEU.		
	Manufacturer code for production data		
	The textiles used for this device meet the stringent human ecological requirements of Oeko Tex Standard 100, as verified by Hohenstein Research Institute.		
	Wash at a maximum temperature of 30 °C, Very gentle wash		Do not iron
			Do not bleach
	Do not dry-clean		Do not dry in a tumble dryer


## 1. Items included in the package

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 Heated underblanket
- 1 Control
- 1 Operating instructions

### 1.1 Description

- 1. Supply plug
- 2. Supply cord
- 3. Control
- 4. Illuminated temperature settings
- 5. Slider for ON/OFF and temperature settings
- 6. Plug-in coupling

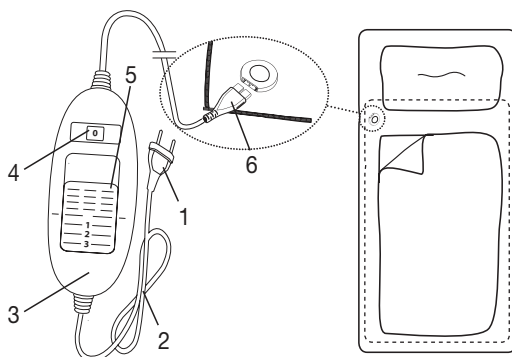

## 2. Important instructions

### Retain for future use



#### **WARNING**

- Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product. For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This heated underblanket must not be used by persons who are not sensitive to heat or by other vulnerable persons who may not be able to react to overheating (e.g. diabetics, people with skin alterations due to illness or scarred tissue in the application area, after taking pain relief medication or alcohol).
- This heated underblanket must not be used by very young children (0-3 years old) as they are unable to respond to overheating.
- This heated underblanket can be used by children older than 3 and younger than 8 years of age provided they are supervised. For this, the control must always be set to the minimum temperature.
- This heated underblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised and have been instructed on how to use the heated underblanket safely, and are fully aware of the consequent risks of use.
- Children must not play with the heated underblanket.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This heated underblanket is not designed for use in hospitals.
- This heated underblanket is only intended for domestic/private use, not for commercial use.
- Do not insert pins.
- Do not use folded or rucked.
- Do not use if wet.
- Before using it on an adjustable bed, check that the heated underblanket and the cables are not, for example, trapped in a hinge or bunched up.
- This heated underblanket may only be used in conjunction with the control specified on the label.
- This heated underblanket must only be connected to the mains voltage that is specified on the label.

- The electrical and magnetic fields emitted by this heated underblanket may interfere with the function of a pacemaker. However, they are still well below the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please therefore consult your doctor and the manufacturer of your pacemaker before using this heated underblanket.
- Do not pull, twist or make sharp bends in the cables.
- If the cable and control of the heat pad are not positioned properly, there may be a risk of becoming entangled in, being strangled by, tripping over, or stepping on the cable and control. The user must ensure that excess lengths of cable, and cables in general, are safely routed.
- Please check this heated underblanket frequently for signs of wear and tear or damage. If any such signs are evident, if the heated underblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- Under no circumstances should you open or repair the heated underblanket (including the accessories) yourself because faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the guarantee.
- If the mains connection cable of this heated underblanket is damaged, it must be disposed of. If it cannot be removed, the heated underblanket must be disposed of.
- Do not expose control and cables to direct sunlight.
- When this heated underblanket is switched on:
  - Do not place any sharp objects on it
  - Do not place any heat sources, such as hot water bottles, heat pads or similar, on it
- The electronic components in the control warm up when the heated underblanket is in use. For this reason, the control must never be covered or placed on the heated underblanket when it is in use.
- It is essential to observe the information relating to the following chapters: Operation, Cleaning and maintenance, Storage.
- If you should have any questions about using our devices, please contact our Customer Services department.

### 3. Intended use



#### **CAUTION**

This heated underblanket is designed for warming beds, only.

## 4. Operation

### 4.1 Safety




#### CAUTION

- This heated underblanket is equipped with a SAFETY SYSTEM. This sensor technology prevents the entire surface of the heated underblanket from overheating by automatically switching off the heated underblanket in the event of a fault. If the safety system has switched off the heated underblanket, the temperature setting is not illuminated any more even when the heated underblanket is switched on.
- Please note that the heated underblanket is not operable any more due to safety reasons in this case and has to be sent to the service address indicated.
- Do not connect the defective heated underblanket with another control of the same type. This would trigger a permanent switch-off via the control safety system.

### 4.2 Initial use

- Spread out the heated underblanket flat onto your mattress starting at the foot end.
- To operate the heated underblanket connect the control to the heated underblanket by plugging in the connector.
- Then plug in the supply plug into the mains outlet.
- Then put on your bedsheet in the usual manner so that the heated underblanket is between your mattress and the bedsheet

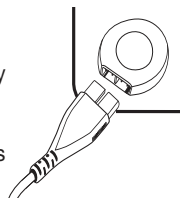

#### CAUTION


Make sure that the heated underblanket is spread out entirely flat and that it will not rumple up or crease when in use.



#### NOTE:

##### Lie in comfort

If the plug-in connector at shoulder level bothers you, you can rotate the electric underblanket by 180° so that the plug-in connector lies at the foot of the bed (see illustration). So that the switch is within comfortable reach of your hand, Beurer offers a switch with a longer connection cable (Item no. 108.584). This is available directly from Beurer Customer Services.

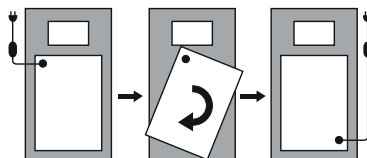

### 4.3 Switching on

To switch on the electric underblanket, set the slider for ON/OFF and temperature settings to setting 1, 2 or 3. The temperature settings are illuminated when switched on.

### 4.4 Setting the temperature

Setting 0: OFF

Setting 1: minimum heat

Setting 2: medium heat

Setting 3: maximum heat



#### NOTE:

- The quickest way to heat up the heated underblanket is to select the highest temperature setting of the control, first.
- We strongly recommend switching on the heated underblanket approx. 30 minutes before going to bed and covering it with the quilt to prevent the warmth from escaping.



## **WARNING**

If the heated underblanket is being used over several hours, we recommend that you set the lowest temperature setting on the control to avoid the body overheating and thereby any potential burns to the skin or heat stroke.

### **4.5 Switching off**

To switch off the electric underblanket, set the slider for ON/OFF and temperature settings to the OFF (0) position. The temperature settings are then no longer illuminated.



#### **NOTE:**

If the electric underblanket is not used for several days, set the slider for ON/OFF and temperature settings to the OFF (0) position and remove the mains plug from the socket.

## **5. Cleaning and maintenance**



### **WARNING**

Always remove the supply plug from the mains outlet and remove the control from the heated underblanket by disconnecting it at the connector. Otherwise there is a risk of an electric shock.



### **CAUTION**

The control must never come into contact with water or other liquids, as this may cause damage.

- To clean the control, use a dry, lint-free cloth. Do not use cleaning agents containing solvent or scouring agents.
- To remove stains from the heated underblanket use a damp cloth and, if necessary, a mild cleaning agent.



### **CAUTION**

Note that the heated underblanket must not be dry-cleaned, wrung out, machine dried or ironed. Otherwise the heated underblanket may be damaged.

- The heated underblanket is machine washable.
- Set the washing machine to a particularly gentle, 30 °C cycle (woolens programme). Use a mild detergent with dosage according to the manufacturer's instructions.



### **CAUTION**

Note that the heated underblanket will suffer from too frequent washing.

For its entire life, therefore, the heated underblanket should be washed not more than 5 times in a washing machine.

- While the heated underblanket is still damp after washing, shape it to its original form and size and place it flat over a clothes drying rack to dry.



### **CAUTION**

- Do not attach the heated underblanket to washing lines with washing pegs or the like. Otherwise the heated underblanket may be damaged.
- Only reconnect the control to the heated underblanket after the connector and the heated underblanket are completely dry. Otherwise the heated underblanket may be damaged.



## **WARNING**

Under no circumstances switch on the heated underblanket to dry it. Otherwise there is a risk of an electric shock.

## **6. Storage**

When not in use we recommend to store the heated underblanket in its original packaging. For this purpose, disconnect the control from the electric underblanket by unplugging the plug-in coupling.



## **CAUTION**

- Allow the heated underblanket to cool down before folding. Otherwise the heated underblanket may be damaged.
- Do not crease the heated underblanket by placing items on top of it during storage.

## **7. Disposal**

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



## **8. What if there are problems?**

Problem	Cause	Remedy
The temperature settings are not illuminated while - the switch is fully connected to the heated underblanket - the supply plug is connected to the mains outlet with correct function - the setting is 1, 2 or 3	The Safety System switched off the heated underblanket irreversible	Send the heated underblanket together with the switch to the service.

## **9. Technical data**

For technical data, see the rating plate label on the electric underblanket.

## **10. Guarantee / service**

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.





इस्तेमाल के लिए ये निर्देश ध्यान से पढ़ें। चेतावनियों और सुरक्षा टिप्पणियों का पालन करें। इन निर्देशों को भविष्य में इस्तेमाल के लिए संभालकर रखें। इस्तेमाल के इन निर्देशों को अन्य प्रयोक्ताओं के लिए सुलभ बनाएं। अगर उपकरण किसी और को दिया जाता है, तो अगले प्रयोक्ता को इस्तेमाल के ये निर्देश भी दें।

## विषय-सूची

1. पैकेज में शामिल वस्तुएं.....	10	4.4 तापमान सेट करना.....	13
1.1 ववरण.....	10	4.5 बंद करना.....	14
2. महत्वपूर्ण निर्देश		5. सफाई एवं रखरखाव.....	14
भविष्य के इस्तेमाल हेतु संभालकर रखें .....	11	6. भंडारण.....	15
3. इस्तेमाल का उद्देश्य .....	13	7. निपटान.....	15
4. प्रचालन.....	13	8. अगर कोई समस्या हो तो? .....	15
4.1 सुरक्षा.....	13	9. तकनीकी डेटा.....	15
4.2 शुरुआती इस्तेमाल.....	13	10. गारंटी / सर्विस.....	15
4.3 चालू करना.....	13		

## चिह्नों की व्याख्या

पैकेजिंग पर और उपकरण के लिए टाइप प्लेट पर इन निर्देशों में इस्तेमाल के लिए निम्नलिखित चिह्न इस्तेमाल किए जाते हैं:

	<b>चेतावनी:</b> चोट लगने या स्वास्थ्य खतरों के जोखिम की चेतावनी		
	<b>सावधानी:</b> उपकरण/एक्सेसरीज़ को हो सकने वाली क्षति के बारे में सुरक्षा जानकारी		
	<b>टिप्पणी:</b> महत्वपूर्ण जानकारी		
	निर्देश पढ़ें		इसमें पिने न डालें
	मुड़ा हुआ या उखड़ा हुआ इस्तेमाल न करें		बहुत छोटे बच्चों द्वारा इस्तेमाल नहीं करना चाहिए (0 - 3 वर्ष)
	उत्पादक		
	इस उपकरण में दोहरा सुरक्षा आवरण है और इसलिए यह सुरक्षा वर्ग 2 के अनुपालन में है।		
	कृपया उपकरण का निपटान EC निर्देश - WEEE (अपशिष्ट विद्युत और इलेक्ट्रॉनिक उपकरण) के अनुसार करें।		
	पैकेजिंग की चीजें अलग करें और स्थानीय नियमों के अनुसार उनका निपटान करें।		
	पैकेजिंग सामग्री की पहचान करने के निशान लगाना। A = सामग्री कोड, B = सामग्री संख्या: 1-7 = प्लास्टिक, 20-22 = कागज और कार्डबोर्ड		

	उत्पाद और पैकेजिंग की चीजें अलग-थलग करें और स्थानीय नियमों के अनुसार उनका निपटान करें।		
	यह उत्पाद लागू यूरोपीय और राष्ट्रीय निर्देशों की अपेक्षाएं पूरी करता है।		
	यूनाइटेड किंगडम अनुरूपता मूल्यांकित चिह्न		
	KEMA-KEUR चिह्न किसी विद्युत उत्पाद के मानकों के साथ सुरक्षा और अनुपालन प्रलेखित करता है।		
	ये उत्पाद प्रदर्शन के अनुसार EAEU के तकनीकी विनियमों की अपेक्षाएं पूरी करते हैं।		
	उत्पादन डेटा के लिए विनिर्माता का कोड		
	इस उपकरण के लिए इस्तेमाल किया जाने वाला कपड़ा ओएको टेक्स स्टैंडर्ड 100 की कड़ी मानव पारिस्थितिक अपेक्षाएं पूरी करता है, जो होहेनस्टीन रिसर्च इंस्टीट्यूट द्वारा सत्यापित है।		
	30 °C के अधिकतम तापमान पर, बहुत हल्के से धोएं		इस्त्री न करें
			ब्लीच न करें
	ड्राइ-क्लीन न करें		किसी घुमावदार ड्रायर में न सुखाएं


## 1. पैकेज में शामिल वस्तुएं

इस बात की जांच करें कि कार्डबोर्ड डिलिवरी पैकेजिंग बाहर से दुरुस्त है और यह तय कर लें कि सभी सामान मौजूद हैं। इस्तेमाल से पहले, यह सुनिश्चित करें कि उपकरण या एक्सेसरीज़ में कोई क्षति नहीं दिख रही और सभी पैकेजिंग सामग्री हटा दी गयी है। अगर आपको कोई संदेह हो, तो उपकरण इस्तेमाल न करें और अपने खुदरा विक्रेता से या निर्दिष्ट ग्राहक सेवा पते पर संपर्क करें।

- 1 हीटिंग अंडरब्लेकेट
- 1 नियंत्रण
- 1 प्रचालन के निर्देश

### 1.1 विवरण

- 1. सप्लाय प्लग
- 2. सप्लाय कॉर्ड
- 3. नियंत्रण
- 4. रोशनाई वाली तापमान सेटिंग्स
- 5. चालू/बंद और तापमान सेटिंग्स के लिए स्लाइडर
- 6. प्लग-इन कपलिंग

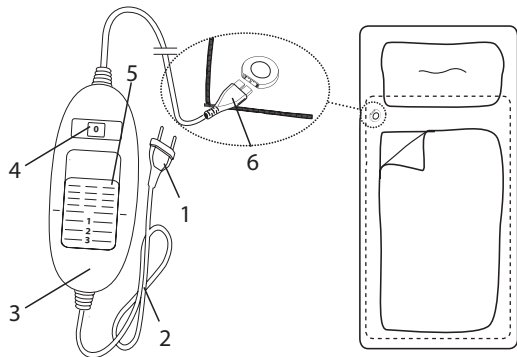

## 2. महत्वपूर्ण निर्देश भविष्य के इस्तेमाल हेतु संभालकर रखें

### ⚠ चेतावनी

- निम्नलिखित टिप्पणियों का पालन न करने से व्यक्तिगत चोट या शारीरिक नुकसान (बिजली का झटका, त्वचा में जलन, आग) हो सकता है। निम्नलिखित सुरक्षा और खतरे की जानकारी का उद्देश्य न केवल आपके स्वास्थ्य और दूसरों के स्वास्थ्य की रक्षा करना है, बल्कि इससे उत्पाद की सुरक्षा भी होनी चाहिए। इसलिए, इन सुरक्षा टिप्पणियों पर ध्यान दें और उत्पाद दूसरों को सौंपते समय ये निर्देश भी साथ में दें।
- इस हीटेड अंडरब्लैकेट का इस्तेमाल उन लोगों द्वारा नहीं करना चाहिए जिन पर गर्मी कुछअसर नहीं होता या अन्य कमजोर व्यक्तियों द्वारा इस्तेमाल नहीं करना चाहिए जो अधिक गर्मी सहन नहीं कर सकते (उदाहरण के लिए डायबिटीज़ रोगी, बीमारी के कारण त्वचा में बदलाव या पहनने की जगह पर घावयुक्त टिश्यू वाले लोग, दर्दनाशक दवा या शराब लेने के बाद)।
- इस हीटेड अंडरब्लैकेट का इस्तेमाल बहुत छोटे बच्चों (0-3 वर्ष के) को नहीं करना चाहिए क्योंकि वे अधिक गर्मी सहन नहीं कर सकते।
- इस हीटेड अंडरब्लैकेट का इस्तेमाल 3 साल से बड़े और 8 साल से कम उम्र के बच्चे कर सकते हैं, बशर्ते उनकी देखरेख की जाए। इसके लिए नियंत्रण को हमेशा न्यूनतम तापमान पर सेट करना चाहिए।
- इस उपकरण का इस्तेमाल 8 वर्ष से अधिक उम्र के बच्चे और कम शारीरिक, संवेदी या मानसिक कौशल या अनुभव या ज्ञान की कमी वाले लोग कर सकते हैं, बशर्ते उनकी देखरेख की जाए या उन्हें हीटेड अंडरब्लैकेट को सुरक्षित ढंग से इस्तेमाल करने के निर्देश दिए जाएं और उन्हें इस्तेमाल के परिणामकारी जोखिम पता हों।
- बच्चों को इस हीटेड अंडरब्लैकेट के साथ नहीं खेलना चाहिए।
- सफाई और प्रयोक्ता रखरखाव बच्चों द्वारा तब तक नहीं करना चाहिए जब तक कि उनकी देखरेख न की जाए।
- यह हीटेड अंडरब्लैकेट अस्पतालों में इस्तेमाल के लिए नहीं बनाया गया है।
- यह हीटेड अंडरब्लैकेट केवल घरेलू/निजी इस्तेमाल के लिए है, व्यावसायिक इस्तेमाल के लिए नहीं।
- इसमें पिनें न डालें।
- मुड़ा हुआ या उखड़ा हुआ इस्तेमाल न करें।
- गीला होने पर इस्तेमाल न करें।
- एडजस्टेबल बेड पर इसका इस्तेमाल करने से पहले, जांच लें कि हीटेड अंडरब्लैकेट और केबल, उदाहरण के लिए, किसी काज में फंसे या उलझे हुए न हों।
- इस हीटेड अंडरब्लैकेट का इस्तेमाल केवल लेबल पर बताए गए नियंत्रण के साथ ही करें।

- यह हीटेड अंडरब्लैकैट केवल उसी मेन्स वोल्टेज से जुड़ा होना चाहिए जो कि लेबल पर दिया गया हो।
- इस हीटेड अंडरब्लैकैट से निकले विद्युत और चुंबकीय प्रभाव पेसमेकर के काम में दखल दे सकते हैं। वैसे, वे अब भी सीमा से काफी नीचे हैं: विद्युत प्रभाव की दृढ़ता: अधिकतम 5000 V/m, चुंबकीय प्रभाव की दृढ़ता: अधिकतम 80 A/m, चुंबकीय प्रवाह घनत्व: अधिकतम 0.1 मिलीटेसला। इसलिए इस हीटेड अंडरब्लैकैट का इस्तेमाल करने से पहले कृपया अपने डॉक्टर और अपने पेसमेकर के विनिर्माता से परामर्श लें।
- केबल्स को न खींचें, न तो मरोड़ें और न ही दबाकर मोड़ें।
- अगर केबल और हीट पैड का नियंत्रण ठीक से नहीं रखा गया है, तो इसमें उलझने, गला घुटने, ठोकर खाने या केबल और नियंत्रण पर पैर रखने का जोखिम हो सकता है। प्रयोक्ता को यह सुनिश्चित करना चाहिए कि केबल की अतिरिक्त लंबाई, और सामान्य रूप से केबल भी सुरक्षित रूप से रूट किए गए हों।
- कृपया इस हीटेड अंडरब्लैकैट को बीच-बीच में देखते रहें कि यह कहीं कट-फट या क्षतिग्रस्त तो नहीं है। अगर ऐसे कोई संकेत दिखते हैं, अगर हीटेड अंडरब्लैकैट का गलत तरीके से इस्तेमाल किया गया है या अगर यह अब गर्म नहीं होता है, तो इसे फिर से चालू करने से पहले निर्माता द्वारा जांचना चाहिए।
- किसी भी परिस्थिति में आपको हीटेड अंडरब्लैकैट (एक्सेसरीज़ सहित) को खुद नहीं खोलना चाहिए या न ही मरम्मत करनी चाहिए क्योंकि इसके बाद दोषरहित कार्यक्षमता की गारंटी नहीं रह जाएगी। इसका पालन न करने पर गारंटी अवैध हो जाएगी।
- अगर इस उपकरण का मुख्य कनेक्शन केबल क्षतिग्रस्त है, तो इसे हटा देना चाहिए। अगर इसे हटाया नहीं जा सकता, तो हीटेड अंडरब्लैकैट का ही निपटान कर देना चाहिए।
- नियंत्रण और केबल को सीधी धूप में न रखें।
- हीटेड अंडरब्लैकैट चालू करने के बाद:
  - इस पर कोई नुकीली चीज न रखें
  - कोई भी गर्मी का स्रोत न रखें, जैसे गर्म पानी की बोतलें, हीट पैड या इसी तरह की कोई वस्तु
- नियंत्रण के इलेक्ट्रॉनिक पुर्जों हीटेड अंडरब्लैकैट इस्तेमाल करने से गर्म हो जाते हैं। इसलिए, नियंत्रण को कभी भी ढंकना नहीं चाहिए या इस्तेमाल में होने पर उसे हीटेड अंडरब्लैकैट पर नहीं रखा जाना चाहिए।
- निम्नलिखित अध्यायों से संबंधित जानकारी देखना ज़रूरी है: प्रचालन, सफाई और रखरखाव, भंडारण।
- अगर हमारे उपकरणों के इस्तेमाल के बारे में आपके कोई प्रश्न हों, तो कृपया हमारे ग्राहक सेवा विभाग से संपर्क करें।

### 3. इस्तेमाल का उद्देश्य



#### सावधानी

- यह हीटेड अंडरब्लैकैट केवल बेड्स को गर्म करने के लिए बनाया गया है।

### 4. प्रचालन

#### 4.1 सुरक्षा




#### सावधानी

- यह हीटेड अंडरब्लैकैट एक सुरक्षा प्रणाली से सुसज्जित है। यह सेंसर टेक्नोलॉजी, खराबी की स्थिति में हीटेड अंडरब्लैकैट को अपने आप बंद उसकी पूरी सतह को ओवरहीटिंग से बचाती है। अगर सुरक्षा प्रणाली ने हीटेड अंडरब्लैकैट को बंद कर दिया है, तो हीटेड अंडरब्लैकैट को चालू करने पर भी तापमान सेटिंग चमकती नहीं है।
- कृपया ध्यान दें कि इस मामले में सुरक्षा कारणों से हीटेड अंडरब्लैकैट अब काम नहीं कर पा रहा है और इसे बताए गए सेवा पते पर भेजना होता है।
- दोषपूर्ण हीटेड अंडरब्लैकैट को उसी प्रकार के किसी अन्य नियंत्रण से न जोड़ें। यह नियंत्रण सुरक्षा प्रणाली के माध्यम से स्थायी रूप से बंद होने की स्थिति में चला जाएगा।

#### 4.2 शुरुआती इस्तेमाल

- हीटेड अंडरब्लैकैट फ्लैट को अपने गद्दे पर फुट एंड से शुरू करके फैलाएं।
- हीटेड अंडरब्लैकैट प्रचालित करने के लिए कनेक्टर में प्लग डालकर नियंत्रण को हीटेड अंडरब्लैकैट से जोड़ दें।
- फिर आपूर्ति प्लग को मेन्स आउटलेट में डाल दें।
- फिर अपनी चादर को सामान्य तरीके से लगाएं ताकि हीटेड अंडरब्लैकैट आपके गद्दे और चादर के बीच रहे

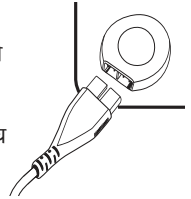

#### सावधानी


यह सुनिश्चित करें कि हीटेड अंडरब्लैकैट पूरी तरह से सपाट फैला हो और इस्तेमाल में होने पर यह ऊपर नहीं उठेगा या क्रीज नहीं करेगा।



#### टिप्पणी:

##### आराम से लें

अगर कंधे के स्तर पर प्लग-इन कनेक्टर आपको परेशान करता है, तो आप इलेक्ट्रिक अंडरब्लैकैट को 180° तक घुमा सकते हैं ताकि प्लग-इन कनेक्टर बेड के तल पर रहे (चित्रण देखें)। ताकि स्विच आपके हाथ की आरामदायक पहुंच में रहे, Beurer एक लंबे कनेक्शन केबल के साथ एक स्विच प्रदान करता है (वस्तु संख्या 108.584)। यह सीधे Beurer ग्राहक सेवा से उपलब्ध है।

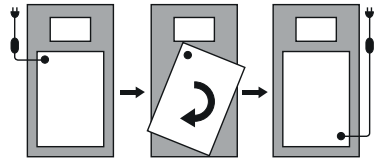

#### 4.3 चालू करना

इलेक्ट्रिक अंडरब्लैकैट को चालू करने के लिए, स्लाइडर को चालू/बंद पर सेट करें और तापमान सेटिंग 1, 2 या 3 पर सेट करें। चालू करने पर तापमान सेटिंग्स चमकती हैं।

#### 4.4 तापमान सेट करना

सेटिंग 0: ऑफ

सेटिंग 1: न्यूनतम हीट

सेटिंग 2: मध्यम हीट

सेटिंग 3: अधिकतम हीट



#### टिप्पणी:

- हीटेड अंडरब्लैकैट को गर्म करने का सबसे तेज़ तरीका यह है कि पहले नियंत्रण की उच्चतम तापमान सेटिंग चुनी जाए।

- हम हड़ता से यह सुझाव देते हैं कि सोने से लगभग 30 मिनट पहले हीटेड अंडरब्लैकैट को चालू करें और गर्मी को रोके रखने के लिए इसे रखाई से ढंक दें।

## चेतावनी

- अगर हीटेड अंडरब्लैकैट का इस्तेमाल कई घंटों से किया जा रहा है, तो हमारा यह सुझाव है कि आप शरीर को अधिक गरम होने से बचाने के लिए नियंत्रण पर सबसे कम तापमान सेटिंग सेट करें ताकि त्वचा की संभावित जलन या हीट स्ट्रोक से बचा जा सके।

### 4.5 बंद करना

इलेक्ट्रिक अंडरब्लैकैट को बंद करने के लिए, स्लाइडर को चालू/बंद और तापमान सेटिंग्स को बंद (0) स्थिति पर सेट करें। तब तापमान सेटिंग्स नहीं चमकती हैं।

### टिप्पणी:

अगर कई दिनों तक इलेक्ट्रिक अंडरब्लैकैट का इस्तेमाल नहीं किया जाता है, तो स्लाइडर को चालू/बंद और तापमान सेटिंग्स को बंद (0) स्थिति पर सेट करें और सर्किट से मेन प्लग निकाल दें।

## 5. सफाई एवं रखरखाव

### चेतावनी

हमेशा मेन्स आउटलेट से आपूर्ति प्लग निकाल दें और कनेक्टर से अलग करके हीटेड अंडरब्लैकैट से नियंत्रण हटा दें। नहीं तो बिजली का झटका लगने का खतरा रहता है।

### सावधानी

नियंत्रण कभी भी पानी या अन्य द्रव्यों के संपर्क में न आए, क्योंकि इससे नुकसान हो सकता है।

- नियंत्रण साफ करने के लिए सूखे, साबूत कपड़े का इस्तेमाल करें। सॉल्वेंट या घिसाई तत्वों वाले सफाई एजेंट इस्तेमाल न करें।
- हीटेड अंडरब्लैकैट से दाग हटाने के लिए किसी गीले कपड़े और, अगर जरूरी हो, तो किसी हल्के सफाई एजेंट का इस्तेमाल करें।

### सावधानी

ध्यान दें कि हीटेड अंडरब्लैकैट को ड्राई-क्लीन, निचोड़ना, मशीन में सुखाना या इस्त्री नहीं करना चाहिए। नहीं तो हीटेड अंडरब्लैकैट क्षतिग्रस्त हो सकता है।

- हीटेड अंडरब्लैकैट मशीन से धोने योग्य है।
- वाशिंग मशीन को विशेष रूप से हल्के, 30 °C चक्र (ऊन प्रोग्राम) पर सेट करें। निर्माता के निर्देशों के अनुसार खुराक के साथ कोई हल्का डिटरजेंट इस्तेमाल करें।

### सावधानी

ध्यान रहे कि हीटेड अंडरब्लैकैट को बार-बार धोने से नुकसान होगा।

इसलिए, इसके पूरे उपयोगी काल के लिए, हीटेड अंडरब्लैकैट को वाशिंग मशीन में 5 बार से अधिक नहीं धोना चाहिए।

- वैसे तो हीटेड अंडरब्लैकैट धोने के बाद गीला ही रहता है, तो भी इसे उसका मूल रूप और आकार दें और इसे सुखाने के लिए कपड़े सुखाने वाली रैक के ऊपर सपाट रखें।

### सावधानी

• हीटेड अंडरब्लैकैट को वाशिंग लाइन के साथ वाशिंग पेग्स या इसी तरह के अन्य सामान से न जोड़ें। नहीं तो हीटेड अंडरब्लैकैट क्षतिग्रस्त हो सकता है।

• कनेक्टर और हीटेड अंडरब्लैकैट पूरी तरह सूख जाने के बाद ही नियंत्रण को हीटेड अंडरब्लैकैट से दोबारा जोड़ें। नहीं तो हीटेड अंडरब्लैकैट क्षतिग्रस्त हो सकता है।



### चेतावनी

किसी भी परिस्थिति में सुखाने के लिए हीटेड अंडरब्लैकेट को चालू न करें। नहीं तो बिजली का झटका लगने का खतरा रहता है।

## 6. भंडारण

जब इस्तेमाल में न हो तो हमारा यह सुझाव है कि हीटेड अंडरब्लैकेट को उसकी मूल पैकेजिंग में ही भंडारित करें। इस उद्देश्य से, प्लग-इन कपलिंग निकालकर इलेक्ट्रिक अंडरब्लैकेट से नियंत्रण को अलग कर दें।



### सावधानी

- हीटेड अंडरब्लैकेट को लपेटने से पहले ठंडा होने दें। नहीं तो हीटेड अंडरब्लैकेट क्षतिग्रस्त हो सकता है।
- भंडारण के दौरान हीटेड अंडरब्लैकेट के ऊपर आइटम रखकर क्रीज़ न करें।

## 7. निपटान

पर्यावरण संबंधी कारणों से, उपकरण की उम्र खत्म होने पर उसे घरेलू कचरे में ठिकाने न लगाएं। उपकरण को किसी उपयुक्त स्थानीय संग्रह या पुनश्चक्रण केंद्र को सौंप दें। उपकरण को EC के निर्देश WEEE (विद्युत और इलेक्ट्रॉनिक के अपशिष्ट उपकरण) के अनुसार निपटान करें। अगर आपके कोई प्रश्न हों, तो कृपया अपशिष्ट निपटान के लिए जिम्मेदार स्थानीय अधिकारियों से संपर्क करें।



## 8. अगर कोई समस्या हो तो?

समस्या	कारण	उपाय
तापमान सेटिंग्स तब नहीं चमकती हैं जब - स्विच पूरी तरह से हीटेड अंडरब्लैकेट से जुड़ा हो - स्प्लाइ प्लग सही फंक्शन के साथ मेन्स आउटलेट से जुड़ा हो - सेटिंग 1, 2 या 3 हो	सुरक्षा प्रणाली ने हीटेड अंडरब्लैकेट को फिर शुरू न होने के तौर पर बंद कर दिया	स्विच के साथ हीटेड अंडरब्लैकेट को सर्विस के लिए भेजें।

## 9. तकनीकी डेटा

तकनीकी डेटा के लिए, इलेक्ट्रिक अंडरब्लैकेट पर रेटिंग प्लेट लेबल देखें।

## 10. गारंटी / सर्विस

गारंटी और गारंटी के शर्तों के बारे में अधिक जानकारी के लिए, कृपया प्रदान किए गए वारंटी पत्रक को देखें।

