

GUIDE D'UTILISATION


11004388

MOUSSEUR À LAIT

INSTALLATION DES PILES

Deux (2) piles AA sont requises (non incluses).

- Étirez le ruban au bas du compartiment à piles, puis insérez la première pile sur le ruban en respectant les indications de polarité.
- Enroulez le ruban autour de la première pile, puis insérez la deuxième pile dans le sens opposé à la première par-dessus le ruban, puis fermez le couvercle.

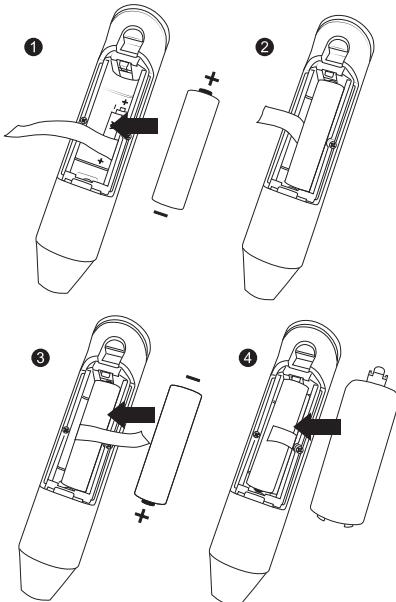

MISES EN GARDE


- Tenez les doigts loin du fouet pendant que le mousseur fonctionne.
- Gardez ce produit hors de la portée des enfants.
- Si du liquide se trouve sur le fouet, ne placez pas le mousseur à l'envers pour éviter que le liquide ne s'infiltre dans la poignée.
- Ne submergez jamais la poignée dans l'eau ou tout autre liquide pour éviter de vous blesser et d'endommager le produit.

UTILISATION

Appuyez sur le bouton pour commencer à fouetter puis relâchez-le pour arrêter.

Remarques :

- Le fouet est non amovible. N'essayez pas de le retirer.
- Il est recommandé de faire fonctionner le fouet en continu pendant un maximum de 3 minutes.

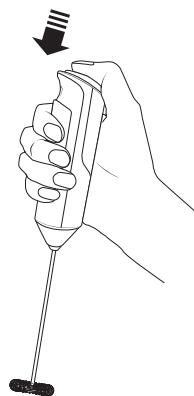

NETTOYAGE

Lavez à la main seulement. Évitez toujours de mouiller la poignée. Ne va pas au lave-vaisselle.

MILK FROTHER


WARNINGS

- Keep fingers away from the whisk when it is working.
- Keep out of reach of children.
- If there is water or another liquid on the whisk, do not place this product upside down to avoid water flowing into the handle.
- Do not immerse the handle in water or any other liquid to avoid injuries and damages.

BATTERY INSTALLATION

Two (2) AA batteries are required (not included).

- Stretch the ribbon at the bottom of the battery compartment and install the first battery over the ribbon according to positive and negative indications.
- Wrap the ribbon around the first battery, then install the second battery in the opposite direction to the first battery over the ribbon, then close the battery cover.

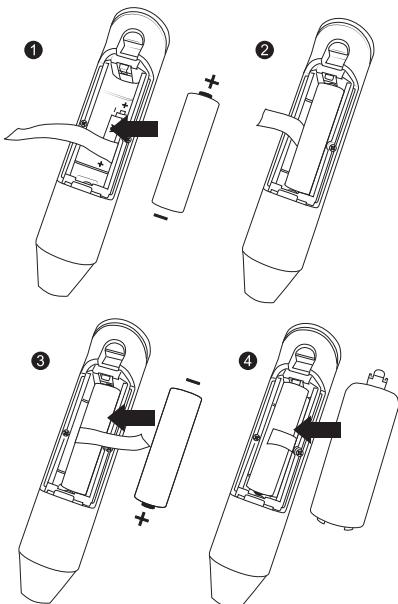


USE

Press the button to start whisking and release the button to stop.

Note:

- The whisk is non-detachable. Do not try to detach the whisk.
- It is recommended that the continuous working time of the frother should not exceed 3 minutes.

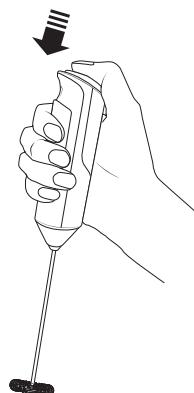

CLEANING

Wash by hand only. Always avoid liquids on the handle. Do not place into the dishwasher.