


TÊTE DE RECHANGE POUR BROSE DE NETTOYAGE

77009651

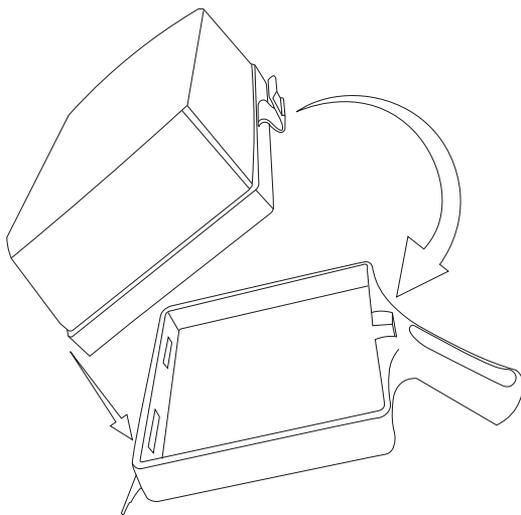

INSTALLATION

1. Retirez la tête en place en appuyant sur l'encoche.
2. Insérez la tête de rechange en l'alignant correctement. Appuyez fermement jusqu'à ce que vous entendiez un clic.

UTILISATION :

1. Chauffez le BBQ à 300 °F (150 °C).
2. Grattez.
3. Trempez dans l'eau.
4. Brossez.

ATTENTION


PORTEZ TOUJOURS DES MITAINES OU GANTS DE FOUR POUR MANIPULER CETTE BROSE SUR UN BBQ CHAUD POUR ÉVITER LES BRÛLURES. N'UTILISEZ PAS CETTE BROSE À UNE TEMPÉRATURE PLUS ÉLEVÉE QUE 400 °F (204 °C).

MISES EN GARDE :

BORDS TRANCHANTS - MANIPULEZ AVEC SOIN. GARDEZ HORS DE LA PORTÉE DES ENFANTS.

SPARE BRUSH HEAD FOR CLEANING BRUSH

77009651

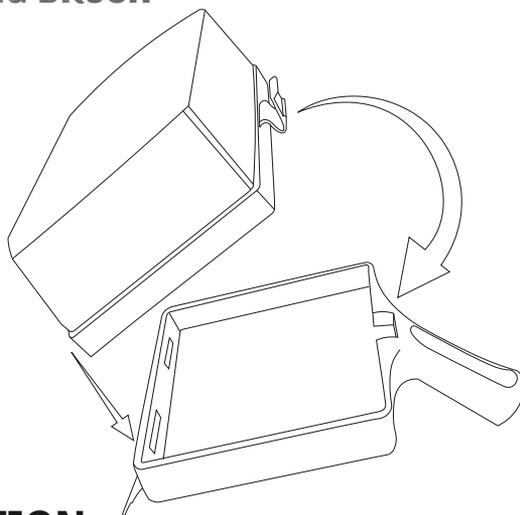

INSTALLATION

1. Press the snap to remove the brush head in place.
2. Insert the spare brush head by aligning it correctly. Press firmly until it clic into place.

USE:

1. Heat BBQ to 300°F (150°C).
2. Scrape.
3. Soak in water.
4. Scrub.

CAUTION

ALWAYS WEAR OVEN MITS OR GLOVES TO HANDLE THIS BRUSH ON A HOT BBQ TO AVOID BURNS. DO NOT USE THIS BRUSH AT A TEMPERATURE HIGHER THAN 400°F (204°C).

WARNINGS:

SHARP EDGES - HANDLE WITH CARE. KEEP OUT OF REACH OF CHILDREN.