
CG-10

GUITAR AMPLIFIER

Thank you for purchasing CG-10 Guitar Amplifier!
To get the best performance from your new amplifier, please read this instruction sheet first

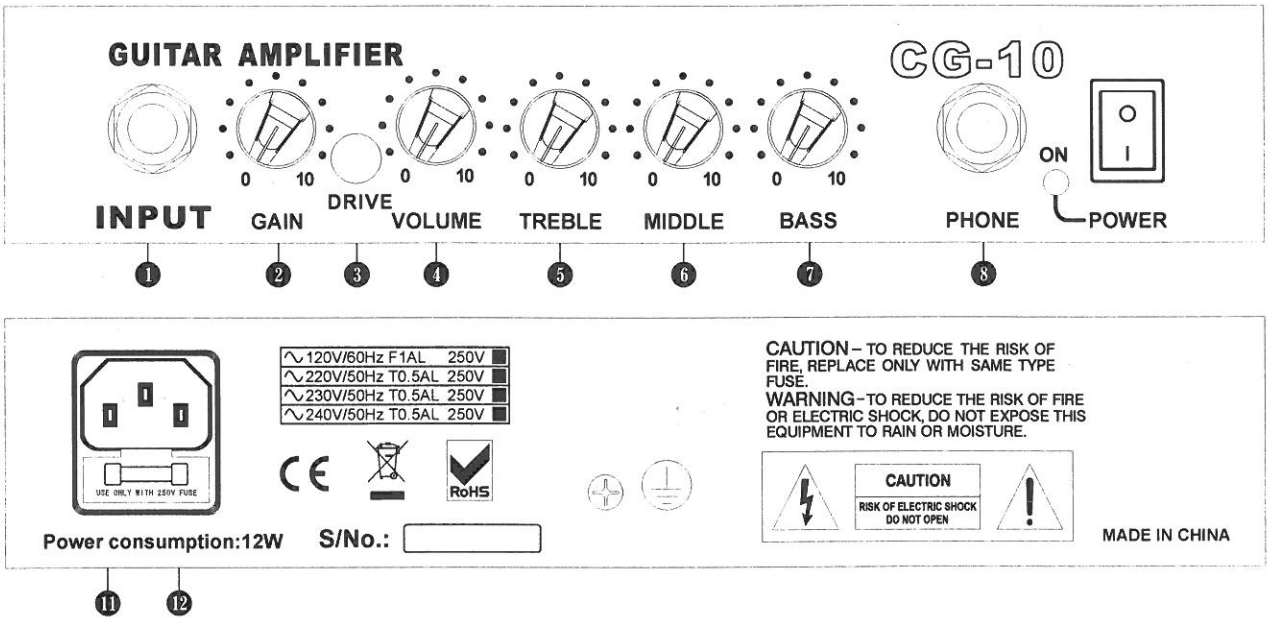

❶	INPUT	---	6.3mm Jack Socket for Guitar
❷	GAIN	---	Adjusts the amount of Gain for the Drive Circuit
❸	DRIVE	---	Switches the Drive Circuit in/out
❹	VOLUME	---	Adjusts the Master Volume output
❺	TREBLE	---	High Frequency tone control
❻	MIDDLE	---	Mid Frequency tone control
❼	BASS	---	Low Frequency tone control
❽	PHONE	---	Headphone output jack
❾	POWER INDICATOR	---	Illuminates to show power is on
❿	POWER	---	Mains on/off switch
⓫	FUSE	---	See rear panel for correct value
⓬	AC INPUT	---	IEC mains input - check for correct voltage

<IMPORTANT!!>

To avoid risk of electrical shock, do not expose to water or damp.
Always connect your instrument cord to your guitar before connecting to your amplifier.Connecting to your amplifier first may cause damage to speaker.
Do not leave your guitar unattended with the volume turned up.
Neon or fluorescent lighting near the amplifier may cay cause slight hum.
This can frequently be eliminated by changing the position of your instrument or the amplifier.
To avoid injuring your ears or damaging your headphones, reduce amplifier volume before plugging in your headphones.
Plugging in a pair of headphones will turn off your amplifier speaker.

"CAUTION"
Unplug from mains before replacing fuse