



Waffeleisen

10021383 10021384 10021385

KLARSTEIN

Warnung

Gerät:

Zur Reduzierung der Gefahr von Brand, elektrischem Schlag und Beschädigung:

- Setzen Sie dieses Gerät nicht dem Regen aus.
- Stellen Sie keine mit Flüssigkeiten gefüllten Gefäße, wie Vasen, auf dieses Gerät.
- Ausschließlich das empfohlene Zubehör verwenden.
- Reparieren Sie dieses Gerät nicht selbst.
Wenden Sie sich zur Wartung an qualifiziertes Kundendienstpersonal.
- Lassen Sie keine Gegenstände aus Metall in dieses Gerät fallen.
- Stellen Sie keine schweren Gegenstände auf dieses Gerät.

Netzkabel/Netzteil

Zur Reduzierung der Gefahr von Brand, elektrischem Schlag und Beschädigung:

- Gewährleisten Sie, dass die Spannung der Stromversorgung dem auf diesem Gerät angegebenen Wert entspricht.
- Stecken Sie den Netzstecker vollständig in die Steckdose ein.
- Ziehen Sie nicht am Kabel, knicken Sie es nicht und stellen Sie keine schweren Gegenstände darauf.
- Fassen Sie den Stecker nicht mit nassen Händen an.
- Fassen Sie den Stecker beim Herausziehen an seinem Korpus an.
- Verwenden Sie keinen beschädigten Netzstecker oder eine beschädigte Steckdose.
- Installieren Sie dieses Gerät so, dass das Netzkabel sofort aus der Steckdose gezogen werden kann, wenn Störungen auftreten.

Kleine Objekte/Verpackungsteile

(Plastikbeutel, Karton, etc.)

- Bewahren Sie die kleine Objekte (z.B. Schrauben und anderes Montagematerial, Speicherkarten) und Verpackungsteile außerhalb der Reichweite von Kindern auf, damit sie nicht von diesen verschluckt werden kann. Lassen Sie kleine Kinder nicht mit Folie spielen.
Es besteht Erstickungsgefahr!

Achtung:

- **Gerät**
Stellen Sie keine Quellen offener Flammen, z.B. brennende Kerzen, auf das Gerät.

Aufstellung

- Stellen Sie das Gerät auf eine trockene, ebene, wasserfeste und hitzebeständige Oberfläche.
- Suchen Sie einen Aufstellort, an dem Kinder nicht an die heißen Oberflächen des Gerätes gelangen können.
- Die Steckdose muss leicht zugänglich sein, um im Notfall das Gerät schnell vom Stromkreis trennen zu können.
- Installieren oder positionieren Sie dieses Gerät nicht in einem Bücherregal, Einbauschränk oder einem sonstigen engen Raum. Stellen Sie eine gute Belüftung des Gerätes sicher.
- Stellen Sie das Gerät nicht auf Verstärker oder andere Geräte, die heiß werden können. Diese Hitze könnte das Gerät beschädigen.
- Setzen Sie dieses Gerät keinem direkten Sonnenlicht, hohen Temperaturen, starker Feuchtigkeit und übermäßigen Erschütterungen aus.

Netzadapter

- Der Netzadapter kann mit Wechselstrom von 220 - 240 V betrieben werden.
- Verwenden Sie aber einen geeigneten Steckeradapter, wenn der Stecker nicht in die Netzsteckdose passt.

Bestimmungsgemäßer Gebrauch

Dieses Gerät dient dem

- **Zubereiten von Waffeln**

Es ist ausschließlich für diesen Zweck bestimmt und darf nur zu diesem Zweck verwendet werden. Es darf nur in der Art und Weise benutzt werden, wie es in dieser Gebrauchsanleitung beschrieben ist.

Dieses Gerät ist nicht dafür bestimmt, durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangels Erfahrung und/oder mangels Wissen benutzt zu werden, es sei denn, sie werden durch eine für ihre Sicherheit zuständige Person beaufsichtigt oder erhalten von ihr Anweisungen, wie das Gerät zu benutzen ist. Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.

Transport des Gerätes

Bitte bewahren Sie die Originalverpackung auf. Um einen ausreichenden Schutz beim Transport des Gerätes zu erreichen, verpacken Sie das Gerät in der Originalverpackung.


Reinigung der äußeren Oberfläche

Verwenden Sie keine flüchtigen Flüssigkeiten, wie Insektensprays. Durch zu starken Druck beim Abwischen können die Oberflächen beschädigt werden. Gummi- oder Plastikteile sollten nicht über einen längeren Zeitraum mit dem Gerät in Kontakt sein.

Bedienelemente

Übersicht

- a) Betriebsindikatorleuchte
- b) Bereitschaftsindikatorleuchte
- c) Griff
- d) Röstplatten
- e) Klappensicherung

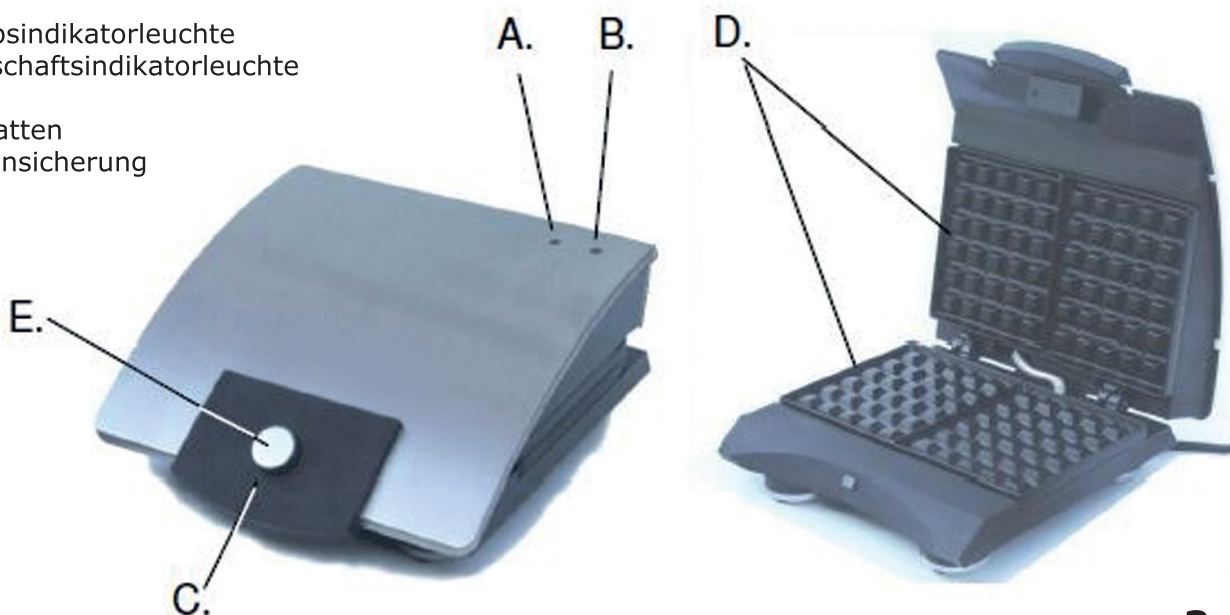

Reparaturen

- Reparaturen am Gerät sollten nur von einer autorisierten Fachwerkstatt durchgeführt werden.
- Ein Umbauen oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
- Öffnen Sie das Produkt niemals eigenmächtig und führen Sie Reparaturen nie selber aus!
- Falscher Zusammenbau führt möglicherweise zu Fehlfunktionen oder dem Totalausfall.
- Öffnen Sie in keinem Fall das Gerät.

Achtung:

Es wird keine Haftung für Folgeschäden übernommen. Technische Änderungen und Irrtümer vorbehalten!

Beachten Sie:

Die Gewährleistung verfällt bei Fremdeingriffen in das Gerät.

Gerätenutzung

Vor der ersten Verwendung

- Reinigen Sie vor der ersten Verwendung das Gehäuse des Gerätes und die Röstplatten mit einem leicht angefeuchteten Tuch.
- Um die Antihaft-Beschichtung zu unterstützen, bestreichen Sie die Röstplatten mit etwas Speiseöl, Butter oder zum Braten geeignete Margarine.
- Schalten Sie das Gerät ein.
- Bei der ersten Verwendung kann eine geringe Menge Rauch entstehen. Das ist völlig normal.
- Es gibt zwei Indikator-Leuchten am Gerät. Das rote Licht zeigt an, dass das Gerät eingeschaltet ist. Das grüne Licht zeigt an, dass das Gerät heizt. Das grüne Licht erlischt sobald die Betriebstemperatur erreicht wurde. Es schaltet sich regelmäßig an und ab, um die Temperatur auf einem gleichmäßigen Niveau zu halten.
- Um bestmögliche Ergebnisse zu erzielen, warten Sie bis die Betriebstemperatur erreicht wurde, bevor Sie die Sandwiches in das Gerät legen.

Wie Sie das Gerät verwenden

- Verbinden Sie das Gerät mit dem Stromnetz. So kann das Gerät aufheizen, während Sie den Teig zubereiten.
- Geben Sie den Teig auf die Platte sobald die Betriebstemperatur erreicht wurde. Achten Sie darauf, nicht zu viel Teig in das Gerät zu geben, da dieser bei Überfüllung seitlich der Röstplatten austritt.
- Schließen Sie die Klappe halten Sie sie aber nicht fest, damit austretender Dampf entweichen kann.
- Öffnen Sie die Klappen nicht innerhalb der ersten Minute.
- Rösten Sie die Waffeln goldbraun. In der Regel dauert dies 5-6 Minuten.
- Entfernen Sie die Waffel am besten mit einem Holzspatel um das Gerät nicht zu beschädigen. Verwenden Sie niemals harte bzw. metallische Objekte.
- Warten Sie vor der Zubereitung von weiteren Waffeln, bis das grüne Licht erloschen ist.
- Trennen Sie nach der Benutzung die Verbindung zum Stromnetz und lassen Sie die Klappe zum auskühlen offen.

Hinweise zur Entsorgung



Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Konformitätserklärung

Hersteller: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland.



Dieses Produkt entspricht den folgenden Europäischen Richtlinien:
2014/30/EU (EMV)
2014/35/EU (LVD)
2011/65/EU (RoHS)

IMPORTANT SAFEGUARDS

Please read this leaflet carefully before you start to use your ST15BW Waffle Maker. It will enable you to get the most out of your new product and to safely enjoy its many benefits.

- Check that the voltage marked on the product corresponds with your supply voltage.
- Never leave the appliance unsupervised when in use. Keep out of reach of children or incompetent persons.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- In common with other electrical appliances, the product must not be taken into or used in the bathroom or near sources of water.
- Do not immerse the product in water (refer to section on "Cleaning").
- Never use the appliance outside and always place it in a dry environment.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Never touch the plug or use the unit with wet hands.
- Never cover the appliance with any kind of material.
- Provide proper ventilation when using the appliance.
- Always unplug the unit before cleaning, moving or when not in use.
- Examine the product for wear and tear. Do not use the unit if you see any signs of damage. Return it to the place where you bought it for repairs.
- Keep out of the reach of children.
- The unit will get hot whilst in use – Be careful not to touch it.
- Use the product on a flat, dry level work surface. Ensure there is plenty space around the product as it will produce steam and surfaces will get hot during use.
- Always use the black plastic hand grip when opening the waffle maker.
- Do not overfill the waffle maker – as this may damage the product.
- Do not use on or near a gas appliance.
- Position the unit in a suitable place as steam may be emitted from the ingredients when in use. Show care on opening and closing the unit.

WARNING: WHEN THE APPLIANCE IS IN USE, THE BAKING PLATES AS WELL AS THE METAL PARTS OF THE TOP COVER WARM UP AND CAN REACH A HIGH TEMPERATURE. DO NOT TOUCH THEM!

- A competent qualified electrician must replace a damaged cord (*).


!! TO AVOID BURNS, WAIT UNTIL THE APPLIANCE HAS TOTALLY COOLED DOWN BEFORE MOVING THE PRODUCT.

(*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger.

SAVE THESE INSTRUCTIONS!

FEATURES

- A. Power on light RED
- B. Ready Light GREEN
- C. Handle for opening
- D. Baking plates
- E. Release button

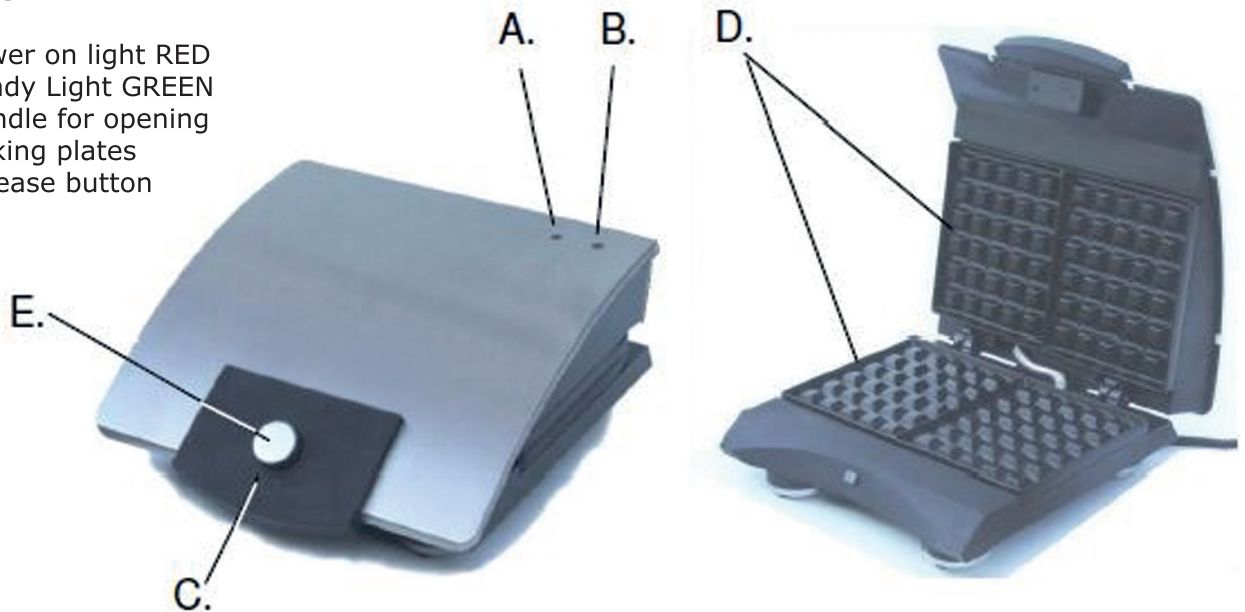

BEFORE USING THE PRODUCT

- Before using the waffle maker for the first time, wipe both the interior and exterior with a slightly damp cloth or kitchen paper.
- Then to enhance the non-stick performance of the waffle maker plates, always rub the plates with a little butter or margarine (suitable for frying)
- When using for the first time, the waffle maker may emit a little smoke – this is normal. This is due to the plates “curing” and will stop after a short time.
- There are two lights on the waffle maker. The red light indicates that the power is on and the green light indicates that the unit is heating.
When the waffle maker has reached cooking temperature, the green “ready” light will go out. This light will cycle on and off whilst in use – to keep a constant cooking temperature.
- For best results, wait until the unit is up to temperature (just as the green light goes out) before adding the waffle mixture to the product.
This will give crispier results.
- Ensure the food is thoroughly cooked inside and out before eating.

HOW TO USE YOUR WAFFLE MAKER

Plug in the waffle maker so that the unit is heating whilst you prepare your waffle mixture.

- When the ready light goes out, open the appliance and pour the batter evenly onto the bottom plate. Make sure not to overfill, otherwise the dough might flow over the edges of the plates.
- Close the lid. Do not hold it during baking, as escaping steam might burn.
- Do not open the cover for the first minute.
- Bake until golden brown, usually about 5 to 6 minutes.
- Remove the waffles with a plastic or wood spatula. Never use any sharp metallic objects, as this might damage the non-stick coating.
- Before making more waffles wait for the green light on the waffle maker to go out indicating it has reached maximum operating temperature.
- When you have finished using the waffle maker unplug the cord from the outlet and leave the appliance open to cool.

RECIPE IDEAS:

Here are a few recipe ideas to try with your waffle maker:

TRADITIONAL WAFFLES

- 3 free range eggs
- 170ml semi-skimmed milk
- 230g Self raising flour
- 30g Sugar
- 100g Butter.

Switch on the ST15 Waffle Maker and allow to heat up while you make the waffle mix. The red and green lights will be illuminated.

Melt the butter and allow to cool slightly.

Whisk 3 eggs in a mixing bowl.

Add the melted butter, sugar and milk

Mix thoroughly and stir, carefully fold in the flour.

When the green light goes out, it is time to start cooking your waffles.

Put approx 1 tablespoon of waffle mix onto each plate and close the lid.

Leave for around 4 minutes. Then open the lid and remove your waffles using a wooden spatula.

The waffles should be crispy brown and cooked through, ready to eat.

You may cook the waffles for longer if required.

SHORTBREAD WAFFLES

- 200 g butter
- 200 g sugar
- 4 free range eggs
- Grated rind of 1/2 lemon
- 200 g plain flour

Switch on the ST15 Waffle Maker and allow to heat up while you make the waffle mix. The red and green lights will be illuminated.

Cream the butter and sugar.

Beat in the eggs and lemon rind. Stir in the plain flour.

When the green light goes out, it is time to start cooking your waffles.

Carefully fill each of the bottom baking plates with the waffle mix and close the lid.

Leave for around 4 minutes. Then open the lid and remove your waffles using a wooden spatula.

The waffles should be crispy brown and cooked through, ready to eat.

You may cook the waffles for longer if required.

CRISP WAFFLES

- 200 g butter
- 150 g sugar
- 4 eggs
- 350 g plain flour
- 1 dsp rum
- few drops vanilla essence
- 150-200 ml water (not milk)

Switch on the ST15 Waffle Maker and allow to heat up while you make the waffle mix. The red and green lights will be illuminated.

Melt the butter and allow to cool slightly.

Whisk 4 eggs in a mixing bowl.

Add the melted butter, sugar, water, vanilla essence and rum.

Mix thoroughly and stir in the flour.

When the green light goes out, it is time to start cooking your waffles.

Carefully fill each of the bottom baking plates with the waffle mix and close the lid.

Leave for around 4 to 5 minutes. Then open the lid and remove your waffles using a wooden spatula.

The waffles should be crispy brown and cooked through, ready to eat.

You may cook the waffles for longer if required.

APPLE WAFFLES

150 g butter

200 g sugar

4 eggs

250 g self raising flour

pinch of salt

small pinch of ground cloves

1 tsp cinnamon

2 apples peeled and diced

Switch on the ST15 Waffle Maker and allow to heat up while you make the waffle mix. The red and green lights will be illuminated.

Melt the butter and allow to cool slightly.

Whisk 4 eggs in a mixing bowl.

Add the melted butter, sugar, salt, cloves, cinnamon and diced apple.

Mix thoroughly and stir, carefully fold in the flour.

When the green light goes out, it is time to start cooking your waffles.

Put approx 1 tablespoon of waffle mix onto each plate and close the lid.

Leave for around 4 minutes. Then open the lid and remove your waffles using a wooden spatula.

The waffles should be crispy brown and cooked through, ready to eat.

You may cook the waffles for longer if required.

CARE AND CLEANING OF YOUR PRODUCT

- Do not immerse the appliance in water or any other liquid.
- Before cleaning, unplug the waffle maker from the power supply and allow it to cool down completely.
- Wipe the exterior of the waffle maker with a slightly damp cloth or kitchen paper to keep it clean, ensuring that no excess moisture enters the main body of the unit.
- The interior of the waffle maker has a non-stick surface. Only clean with a slightly damp cloth or kitchen paper (ensuring no excess moisture enters the main body).
- Never use cleaning agents, abrasive materials or sharp implements to clean the plates inside the waffle maker, as this will damage both the finish and performance of the unit.

STORING THE PRODUCT

- Wait until the waffle maker is completely cool before storing.
- Avoid wrapping the cord around the appliance.

UK PLUG WIRING INSTRUCTIONS - MAINS PLUG


This product must only be used from a 13 amp power socket. If a BS1363 approved 10 amp plug is used, it should be fitted with a 10 amp fuse. The wires on the power cord are colour coded:

blue = neutral,
brown = live,
green or green & yellow = earth.

The blue wire must be connected to the terminal marked N or coloured in black.

The brown wire must be connected to the terminal marked L or coloured in red.

The green (& yellow) wire must be connected to the terminal marked E or coloured in green (& yellow).

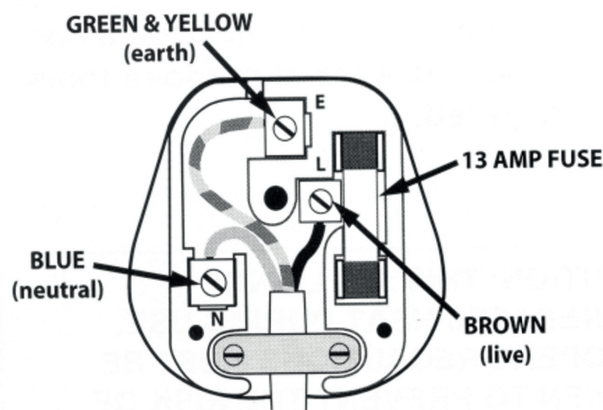

The power supply cord is not a serviceable item.

We reserve the right to amend specification as part of our policy of continual product improvements. All sizes, weights, dimensions, temperatures, times, consumption figures are approximate only.

Hints on Disposal



According to the European waste regulation 2012/19/EU this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Declaration of Conformity

Producer: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Germany.



This product is conform to the following European Directives:
2014/30/EU (EMC)
2014/35/EU (LVD)
2011/65/EU (RoHS)