



# Sandwichmaker

10021386 10021387 10021388

# KLARSTEIN

## Warnung

### Gerät:

Zur Reduzierung der Gefahr von Brand, elektrischem Schlag und Beschädigung:

- Setzen Sie dieses Gerät nicht dem Regen aus.
- Stellen Sie keine mit Flüssigkeiten gefüllten Gefäße, wie Vasen, auf dieses Gerät.
- Ausschließlich das empfohlene Zubehör verwenden.
- Reparieren Sie dieses Gerät nicht selbst.  
Wenden Sie sich zur Wartung an qualifiziertes Kundendienstpersonal.
- Lassen Sie keine Gegenstände aus Metall in dieses Gerät fallen.
- Stellen Sie keine schweren Gegenstände auf dieses Gerät.

## Netzkabel/Netzteil

Zur Reduzierung der Gefahr von Brand, elektrischem Schlag und Beschädigung:

- Gewährleisten Sie, dass die Spannung der Stromversorgung dem auf diesem Gerät angegebenen Wert entspricht.
- Stecken Sie den Netzstecker vollständig in die Steckdose ein.
- Ziehen Sie nicht am Kabel, knicken Sie es nicht und stellen Sie keine schweren Gegenstände darauf.
- Fassen Sie den Stecker nicht mit nassen Händen an.
- Fassen Sie den Stecker beim Herausziehen an seinem Korpus an.
- Verwenden Sie keinen beschädigten Netzstecker oder eine beschädigte Steckdose.
- Installieren Sie dieses Gerät so, dass das Netzkabel sofort aus der Steckdose gezogen werden kann, wenn Störungen auftreten.

## Kleine Objekte/Verpackungsteile

(Plastikbeutel, Karton, etc.)

- Bewahren Sie die kleine Objekte (z.B. Schrauben und anderes Montagematerial, Speicherkarten) und Verpackungsteile außerhalb der Reichweite von Kindern auf, damit sie nicht von diesen verschluckt werden kann. Lassen Sie kleine Kinder nicht mit Folie spielen.  
Es besteht Erstickungsgefahr!

### Achtung:

- **Gerät**  
Stellen Sie keine Quellen offener Flammen, z.B. brennende Kerzen, auf das Gerät.

## Aufstellung

- Stellen Sie das Gerät auf eine trockene, ebene, wasserfeste und hitzebeständige Oberfläche.
- Suchen Sie einen Aufstellort, an dem Kinder nicht an die heißen Oberflächen des Gerätes gelangen können.
- Die Steckdose muss leicht zugänglich sein, um im Notfall das Gerät schnell vom Stromkreis trennen zu können.
- Installieren oder positionieren Sie dieses Gerät nicht in einem Bücherregal, Einbauschränk oder einem sonstigen engen Raum. Stellen Sie eine gute Belüftung des Gerätes sicher.
- Stellen Sie das Gerät nicht auf Verstärker oder andere Geräte, die heiß werden können. Diese Hitze könnte das Gerät beschädigen.
- Setzen Sie dieses Gerät keinem direkten Sonnenlicht, hohen Temperaturen, starker Feuchtigkeit und übermäßigen Erschütterungen aus.

## Netzadapter

- Der Netzadapter kann mit Wechselstrom von 220 - 240 V betrieben werden.
- Verwenden Sie aber einen geeigneten Steckeradapter, wenn der Stecker nicht in die Netzsteckdose passt.

## Bestimmungsgemäßer Gebrauch

Dieses Gerät dient dem

- **Zubereiten von Sandwiches**

Es ist ausschließlich für diesen Zweck bestimmt und darf nur zu diesem Zweck verwendet werden. Es darf nur in der Art und Weise benutzt werden, wie es in dieser Gebrauchsanleitung beschrieben ist.

Dieses Gerät ist nicht dafür bestimmt, durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangels Erfahrung und/oder mangels Wissen benutzt zu werden, es sei denn, sie werden durch eine für ihre Sicherheit zuständige Person beaufsichtigt oder erhalten von ihr Anweisungen, wie das Gerät zu benutzen ist. Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.

## Transport des Gerätes

Bitte bewahren Sie die Originalverpackung auf. Um einen ausreichenden Schutz beim Transport des Gerätes zu erreichen, verpacken Sie das Gerät in der Originalverpackung.


## Reinigung der äußeren Oberfläche

Verwenden Sie keine flüchtigen Flüssigkeiten, wie Insektensprays. Durch zu starken Druck beim Abwischen können die Oberflächen beschädigt werden. Gummi- oder Plastikteile sollten nicht über einen längeren Zeitraum mit dem Gerät in Kontakt sein.

## Bedienelemente

### Übersicht

- a) Betriebsindikatorleuchte
- b) Bereitschaftsindikatorleuchte
- c) Griff
- d) Röstplatten
- e) Klappensicherung

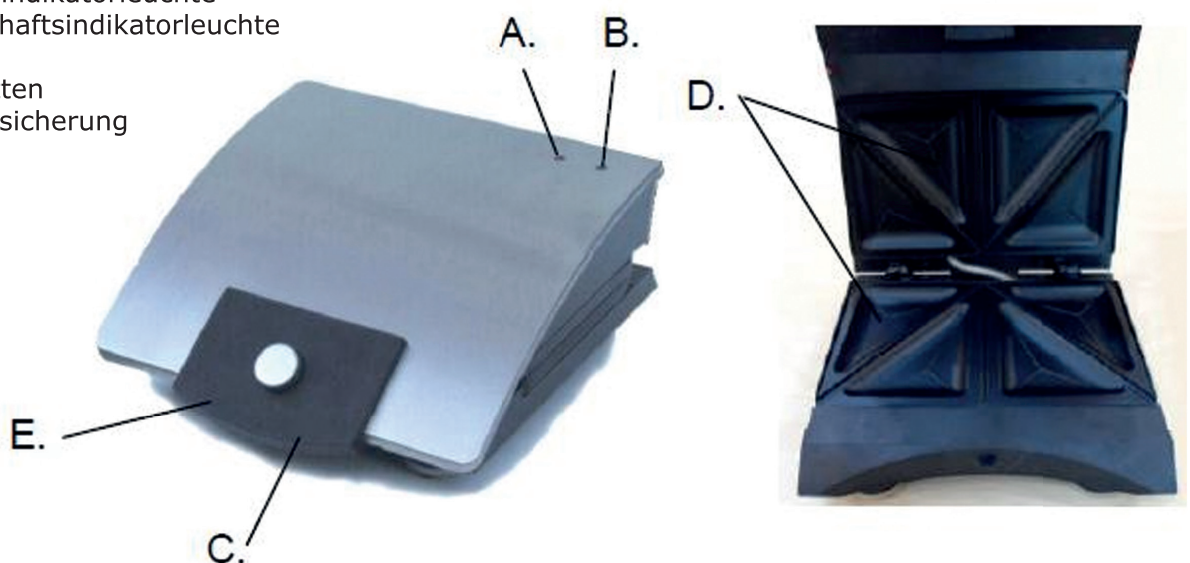

# Reparaturen

- Reparaturen am Gerät sollten nur von einer autorisierten Fachwerkstatt durchgeführt werden.
- Ein Umbauen oder Verändern des Produktes beeinträchtigt die Produktsicherheit. Achtung Verletzungsgefahr!
- Öffnen Sie das Produkt niemals eigenmächtig und führen Sie Reparaturen nie selber aus!
- Falscher Zusammenbau führt möglicherweise zu Fehlfunktionen oder dem Totalausfall.
- Öffnen Sie in keinem Fall das Gerät.

## **Achtung:**

Es wird keine Haftung für Folgeschäden übernommen. Technische Änderungen und Irrtümer vorbehalten!

## **Beachten Sie:**

Die Gewährleistung verfällt bei Fremdeingriffen in das Gerät.

# Gerätenutzung

## **Vor der ersten Verwendung**

- Reinigen Sie vor der ersten Verwendung das Gehäuse des Gerätes und die Röstplatten mit einem leicht angefeuchteten Tuch.
- Um die Antihaft-Beschichtung zu unterstützen, bestreichen Sie die Röstplatten mit etwas Speiseöl, Butter oder zum Braten geeignete Margarine.
- Schalten Sie das Gerät ein.
- Bei der ersten Verwendung kann eine geringe Menge Rauch entstehen. Das ist völlig normal.
- Es gibt zwei Indikator-Leuchten am Gerät. Das rote Licht zeigt an, dass das Gerät eingeschaltet ist. Das grüne Licht zeigt an, dass das Gerät heizt. Das grüne Licht erlischt sobald die Betriebstemperatur erreicht wurde. Es schaltet sich regelmäßig an und ab, um die Temperatur auf einem gleichmäßigen Niveau zu halten.
- Um bestmögliche Ergebnisse zu erzielen, warten Sie bis die Betriebstemperatur erreicht wurde, bevor Sie die Sandwiches in das Gerät legen.

## **Wie Sie das Gerät verwenden**

- Verbinden Sie das Gerät mit dem Stromnetz. So kann das Gerät aufheizen, während Sie die Sandwiches zubereiten.
- Achten Sie darauf, die Sandwiches nicht zu überfüllen. Zu viel Krafteinsatz beim Schließen des Geräts könnte dieses beschädigen.
- Legen Sie das Sandwich auf die Platte sobald die Betriebstemperatur erreicht wurde.
- Schließen Sie die Klappe und sichern Sie sie.
- Sandwiches brauchen in der Regel 3-5 Minuten, abhängig von den Zutaten und dem persönlichen Geschmack. Entfernen Sie das Sandwich am besten mit einem Holzspatel um das Gerät nicht zu beschädigen.
- Lassen Sie das Sandwich danach 2 Minuten ruhen. Dann können Sie überprüfen, ob es ausreichend getoastet wurde.
- Trennen Sie nach dem Gebrauch die Verbindung zum Stromnetz.

**ACHTUNG:** Das innere des Sandwiches kann sehr heiß werden. Seien Sie beim Essen sehr vorsichtig.

Seien Sie besonders vorsichtig, wenn Sie Kindern die Sandwiches servieren.

## Technische Eigenschaften

Der Hersteller dieses Produktes ist die **CHAL-TEC Vertriebs- + Handels GmbH, Wallstraße 16, 10179 Berlin.**

## Hinweise zur Entsorgung



Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

## Konformitätserklärung

Hersteller: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland.



Dieses Produkt entspricht den folgenden Europäischen Richtlinien:  
2014/30/EU (EMV)  
2014/35/EU (LVD)  
2011/65/EU (RoHS)

# Important Safeguards

Please read this leaflet carefully before you start to use your ST15BS Sandwich Maker. It will enable you to get the most out of your new product and to safely enjoy its many benefits.

- Check that the voltage marked on the product corresponds with your supply voltage.
- Never leave the appliance unsupervised when in use. Keep out of the reach of children or incompetent persons.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- In common with other electrical appliances, the product must not be taken into or used in the bathroom or near sources of water.
- Do not immerse the product in water (refer to section on "Cleaning").
- Never use the appliance outside and always place it in a dry environment.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
- Never touch the plug or use the unit with wet hands.
- Never cover the appliance with any kind of material.
- Provide proper ventilation when using the appliance.
- Always unplug the unit before cleaning, moving or when not in use.
- Examine the product for wear and tear. Do not use the unit if you see any signs of damage. Return it to the place where you bought it for repairs.
- Keep out of the reach of children.
- The unit will get hot whilst in use – Be careful not to touch it.
- Use the product on a flat, dry level work surface. Ensure there is plenty space around the product as it will produce steam and surfaces will get hot during use.
- Always use the black plastic hand grip when opening the sandwich maker.
- Do not overfill the sandwich maker – as this may damage the product.
- Do not use on or near a gas appliance.
- Before using the product, position the unit in a suitable place as steam may be emitted from the ingredients when in use, show care when opening and closing the unit. For best results, wait until the unit is up to temperature before cooking. This will give a crispier finish to the sandwich

**WARNING:** WHEN THE APPLIANCE IS IN USE, THE BAKING PLATES AS WELL AS THE METAL PARTS OF THE TOP COVER WARM UP AND CAN REACH A HIGH TEMPERATURE. DO NOT TOUCH THEM!

- A competent qualified electrician must replace a damaged cord (\*).

**!! TO AVOID BURNS, WAIT UNTIL THE APPLIANCE HAS TOTALLY COOLED DOWN BEFORE MOVING THE PRODUCT.**

(\*) Competent qualified electrician: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger.


**SAVE THESE INSTRUCTIONS!**

**TECHNICAL SPECIFICATION**

220V~ 240V 50Hz 700W

## FEATURE

- A. Power on light RED
- B. Ready Light GREEN
- C. Handle for opening
- D. Baking plates
- E. Release button

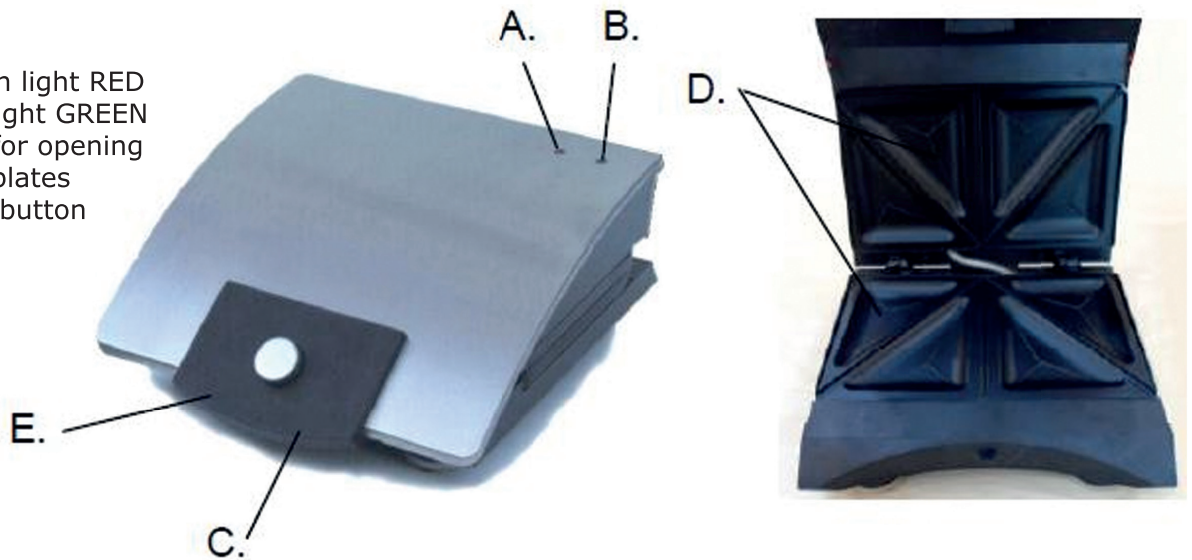

## BEFORE USING THE PRODUCT

- When using the sandwich maker for the first time, use a slightly damp cloth or kitchen paper to wipe both the interior and exterior of the appliance.
- To help with the non-stick performance of the sandwich maker inner plates, rub the plates with a little butter or margarine which is suitable for frying.
- Switch on the unit.
- When using the sandwich maker for the first time, it may emit a little smoke which is normal. This is due to the plates curing and will stop after a short time. Following the first two steps will help reduce this.
- There are two lights on the sandwich maker. The red light indicates that the power is on and the green light indicates that the unit is heating. When the sandwich maker is up to cooking temperature, the green "ready" light will go out. This light will cycle on and off whilst in use – to keep a constant cooking temperature.
- For best results, wait until the unit is up to temperature before cooking. This will give a crispier finish on the sandwiches.

## HOW TO USE YOUR SANDWICH MAKER

- Plug in the sandwich maker so that the unit is heating whilst you prepare your sandwiches.
- Spread the bread evenly with butter or margarine which is suitable for frying. This will prevent the sandwich sticking to the plates.
- With the buttered side of the bread on the outside of the sandwich, fill your sandwich with the filling of your choice. Be careful not to overfill the sandwich, as forcing the unit closed may damage the appliance.
- When the ready light has switched off, carefully place the sandwich in the unit.
- Close the lid and secure with the catch on the handle.
- Your sandwich will normally take between 3-5 minutes to cook depending on your taste and the ingredients. Remove the sandwich with a wooden utensil to avoid damaging the non-stick surface.
- Checking: Leave the sandwich to cook for about 2 minutes to allow it to seal before checking if the sandwiches have been toasted to your liking.
- Warning: The sandwich filling will be very hot!! Show care when eating and especially when serving to children.

## SERVING SUGGESTION

- Always use pre-cooked meats in the sandwich maker as raw meats may not be cooked thoroughly within the cooking time.

- You can choose many different ingredients as fillings for your sandwiches, here are some examples of typical ingredients that can be used:


**Cheese**  
**Ham**  
**Salami**  
**Bacon**  
**Chicken**  
**Tuna**  
**Tomatoes,**  
**Mushrooms**  
**Onions,**  
**Sweet corn**  
**Pickles**  
**Banana**  
**Apple**  
**Strawberry**

## Cleaning and Maintenance

- Do not immerse the appliance in water or any other liquid.
- Before cleaning, unplug the sandwich maker from the power supply and allow to cool completely.
- Wipe the exterior of the sandwich maker with a slightly damp cloth or kitchen paper to keep it clean, ensuring that no excess moisture enters the main body of the unit.
- The interior of the sandwich maker has a non-stick surface. Only clean with a slightly damp cloth or kitchen paper (ensuring no excess moisture enters the main body).
- Never use cleaning agents, abrasive materials or sharp implements to clean the plates inside the sandwich maker, as this can damage both the finish and performance of the unit.

## Special Safety Advice

The wires in the mains lead are coloured in accordance with the following code:

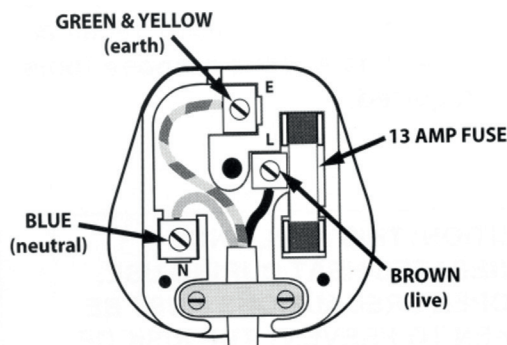

The power supply cord is not a serviceable item.

GREEN/YELLOW: EARTH (E)

BLUE: NEUTRAL (N)

BROWN: LIVE (L)

Class 1 Configuration

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured GREEN & YELLOW (or coloured GREEN) must be connected to the terminal in the plug which is marked with the letter "E" or by the earth symbol:



- The wire which is coloured BLUE (or coloured BLACK) must be connected to the NEUTRAL terminal which is marked with the letter "N".
- The wire which is coloured BROWN (or coloured RED) must be connected to the LIVE terminal which is marked with the letter "L".

Always ensure that the Mains Cord is fixed into the plug through the Cord Guard or Cable Clamp, (plug wiring diagram above), and that the Cord Guard screws are tightened to clamp the cord (outer sheath and inner coloured wires) into position in the plug. Make sure that the plug top is also fitted securely.

## Hints on Disposal



According to the European waste regulation 2012/19/EU this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

## Declaration of Conformity

Producer: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Germany.



This product is conform to the following European Directives:  
2014/30/EU (EMC)  
2014/35/EU (LVD)  
2011/65/EU (RoHS)