

ONE@NCEPT

Standventilator



10029730 10029731
10029732 10029733

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Erwerb Ihres Klarstein Gerätes. Lesen Sie die folgenden Anschluss- und Anwendungshinweise sorgfältig durch und befolgen Sie diese, um möglichen technischen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Sicherheitshinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

Sicherheitshinweise


LESEN SIE BITTE ALLE ANWEISUNGEN VOR DER VERWENDUNG

ACHTUNG! Um Feuer, Stromschläge und Personenschaden zu vermeiden, beachten Sie bitte:

- Das Produkt ist nur für den Hausgebrauch vorgesehen.
- Verbinden Sie bitte das Gerät mit einer Steckdose mit einer Wechselspannung von 220V bis 240V, wie auf dem Typenschild angegeben.
- Schalten Sie immer das Produkt in die Position OFF und ziehen Sie es aus der Steckdose, wenn Sie es länger nicht verwenden.
- Lassen Sie das Stromkabel nicht unter Teppichböden verlaufen oder decken es mit Fußmatten, Läufern oder dergleichen ab. Verlegen Sie das Kabel nicht in den Gehbereich, sondern dort, wo nicht darüber gestolpert werden kann.
- Betreiben Sie das Gerät nicht mit einem beschädigten Kabel oder Stecker oder nach Fehlfunktionen, z.B. nachdem es fallen gelassen oder auf eine andere Art und Weise beschädigt wurde.
- Wenn das Anschlusskabel beschädigt ist, wenden Sie sich an unseren Kundendienst oder lassen Sie das Kabel von einem ausgebildeten Fachmann oder in einer Fachwerkstatt tauschen.
- Verwenden Sie das Gerät in einem gut belüfteten Bereich. Bei der Verwendung soll der Abstand von der Wand oder einer Ecke nicht weniger als 20cm sein, damit die Lufteinlässe oder Abluftöffnungen nicht versperrt werden. Das Gerät darf sich nicht unmittelbar unter oder neben einem Vorhang oder ähnlichem befinden.
- Stecken Sie während des Betriebs, um Gefahren zu vermeiden keine Finger oder andere Gegenstände in den Grill. Blockieren Sie nicht die Lufteinlässe oder Abluftöffnungen auf irgendeine Art und Weise.
- Verwenden Sie das Gerät nur auf dem ebenen, trockenen Boden.
- Seien Sie bitte vorsichtig, wenn das Gerät von oder in der Nähe von den Kindern, Körperbehinderten oder Alten verwendet wird. Dieses Gerät darf von Personen (einschließlich Kindern ab 8 Jahren) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten nach ausführlicher Einweisung benutzt werden. Die Reinigung sollte nicht von unbeaufsichtigten Kindern vorgenommen werden.
- Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
- **HEBEN SIE BITTE DIESE ANWEISUNGEN FÜR DEN GEBRAUCH AUF.**

Aufbau & Nutzungshinweise

- Schrauben Sie das äußere Rohr (14) an der unteren Flansch mit 4 Schrauben an die Basisplatte (17).
- Lösen Sie die Höhenverstellung (13) und nehmen Sie den Griff ab. Schieben Sie die Blende (15) über das äußere Rohr auf die Basisplatte. Bringen Sie den Griff wieder an.
- Lösen Sie die Höhenverstellung (13), ziehen Sie das innere Rohr (21) heraus und fixieren Sie die gewünschte Höhe, indem Sie am Griff (13) wieder festziehen.
- Lösen Sie die Stellschraube (11), falls nötig. Schieben Sie das Gehäuse des Wahlschalters (10) über das innere Rohr. Ziehen Sie die Stellschraube an.
- Schrauben Sie die Rotor-Mutter (4) ab. Bringen Sie den hinteren Korb (5) so an, dass die Löcher der rückseitigen Korbhälfte auf die Pins an der Front des Motorgehäuses passen. Drücken Sie den Korb ein wenig an, so dass der Korb sicher fixiert bleibt und ziehen Sie die Mutter (4) wieder an.
- Schieben Sie den Rotor (3) auf den Rotor-Schaft (6), so dass der Schlitz auf der Rückseite des Rotos auf den Positionierungs-Pin am Rotor-Schaft passt.
- Ziehen Sie die Rändelmutter an, indem Sie sie GEGEN DEN UHRZEIGERSINN drehen (Linksgewinde).
- Positionieren Sie den vorderen Korb (1) so gegen den hinteren Korb (5), dass sie durch das Nut- und Feder-Prinzip ineinander greifen.
- Klappen Sie die Clips am Rand des Korbs zu und schrauben Sie die kleine Sicherheitsschraube (18) zusätzlich zur Sicherheit mit der Mutter fest.

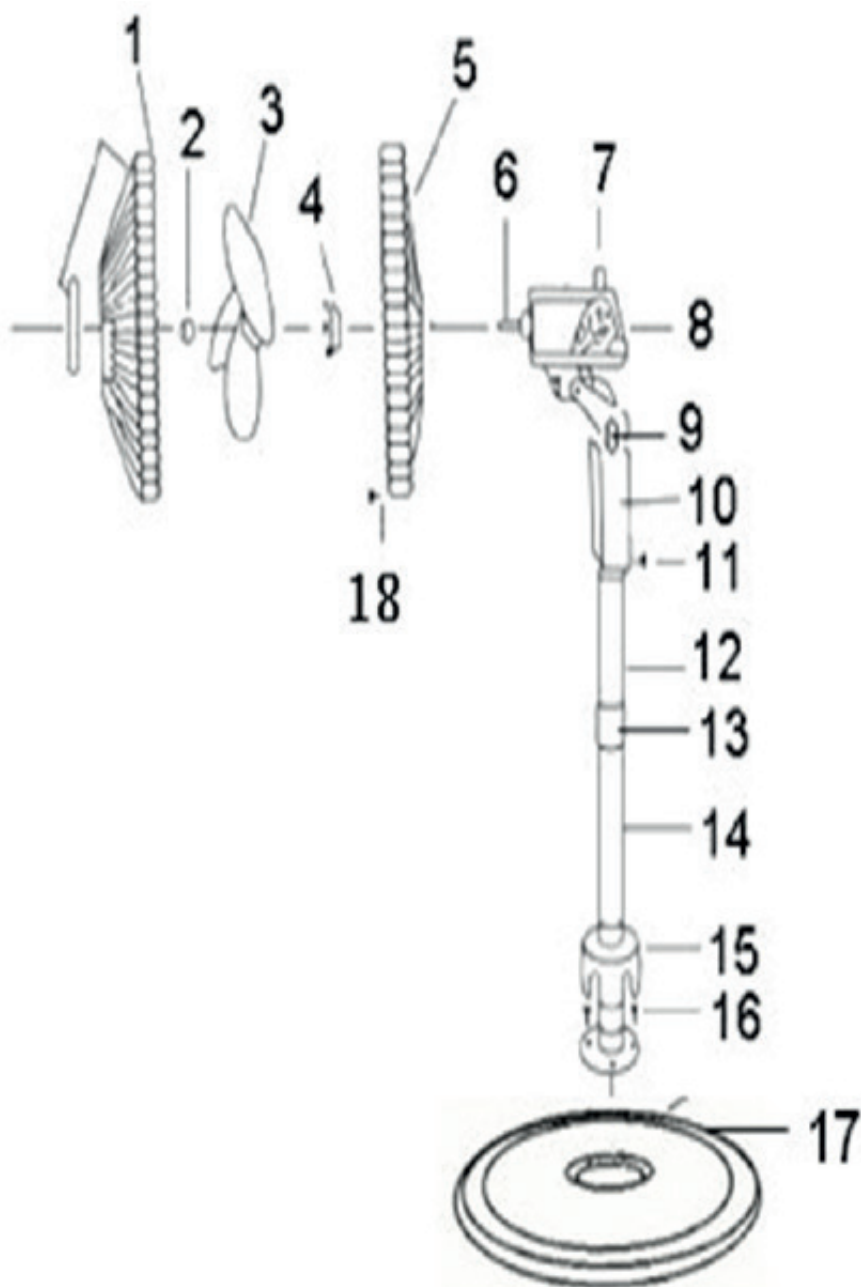

Vorderer Korb	1	10	Wahlschalter
Rotor-Kappe	2	11	Stellschraube
Rotor	3	12	Inneres (Teleskop-)Rohr
Rotor-Mutter	4	13	Höhenverstellung
Hinterer Korb	5	14	Äußeres (Teleskop-)Rohr
Rotor Schaft	6	15	Blende
Oszillationsschalter	7	16	Schrauben
Motorgehäuse	8	17	Basisplatte
Gelenkschraube	9	18	Sicherheitsschraube + Mutter

Nutzung:

Stecken Sie den Netzstecker in eine Steckdose. Positionieren Sie das Gerät nach Ihren Wünschen. Neigen Sie den Korb und stellen Sie ihn mit der Gelenkschraube (9) fest. Wählen Sie die gewünschte Ventilatorleistung am Wahlschalter.

Ziehen oder drücken Sie den Knopf auf dem Motorgehäuse („Oszillationsschalter“ (7)), um den Schwenkbetrieb ein- oder auszuschalten.

Fernbedienung (10028197, 10028198)

Kontrollieren Sie mit der mitgelieferten Fernbedienung die Ventilatorleistung den integrierten Timer (bis zu 7,5 std.) sowie den Schwenkbetrieb.

Technische Daten

Stromversorgung: 230V AC ~ 50Hz

Hinweise zur Entsorgung

Elektroaltgeräte



Befindet sich die diese Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2002/96/EG. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Konformitätserklärung

Der Hersteller dieses Produktes ist die Chal-Tec GmbH, Wallstraße 16, 10179 Berlin.

Dieses Produkt entspricht den folgenden Europäischen Richtlinien:

2014/30/EU (EMV)
2014/35/EU (LVD)
2011/65/EU (RoHS)



Dear Customer,

Congratulations on purchasing this product. Please read and follow these instructions, in order to avoid damaging the item. We do not cover any damages that may arise from improper use of the item or the disregard of the safety instructions.

Important Safety Instructions

READ ALL INSTRUCTIONS BEFORE USING

WARNING: Keep in mind to reduce the risk of fire, electrical shock, or injury to person:

- The product is for household use only.
- Connect the appliance to single-phase AC supply of the voltage specified on the rating label.
- Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
- Extreme caution is necessary when the appliance is near children, invalids or elderly person.
- Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
- Do not operate the appliance with a damaged cord or plug, or after the unit malfunctions, has been dropped, or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
- Use the appliance in a well-ventilated area. While using, distance of no less than 20cm should be kept away from wall or corner to ensure the air intakes or exhaust openings should not be blocked unexpectedly. The unit must not be located immediately below or besides a curtain or the likes.
- Do not insert or allow fingers or any other objects into grill to avoid a mechanical danger when in use. Do not block air intakes or exhaust openings in any manner.
- Use the appliance on flat, dry floor only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
- cleaning and user maintenance shall not be made by children without supervision
- Children should be supervised to ensure that they do not play with the appliance.

Assembly & Operation

ASSEMBLE OF BASE


- Be sure to align the four holes in the base with those on the flange of the Outer Tube. Secure the flange to the bars with the four screws.
- Loosen and remove the Height Adjustment Collar from the top of the Inner Tube. Slide the Base Decorative Cap down over the assembly.
- Replace the Height Adjustment Collar on top of the Inner Tube. Pull the Inner Tube out from the Outer Tube to adjust the tube to the desired height and tighten the collar.
- If necessary, slightly loosen the Set Screw by turning it anticlockwise. Slide the Switch Box down over the Inner Tube and tighten the Set Screw. Make sure the Set Screw is tightly secured.

ASSEMBLE OF BLADE AND GRILLE

- Unscrew the plastic mounting nut from the front of the motor housing by rotating it anticlockwise.
- Position the rear grille against the front of the motor housing with the handle uppermost, ensuring that the locating pegs on the motor housing are engaged correctly in the holes of the rear grille.
- Tighten the Rear Grille Mounting Nut clockwise. **DO NOT OVERTIGHTEN IT.**
- Push the fan blade onto the motor shaft, locating the slot at the back of the blade on the drive pin that passes through the motor shaft.
- Tighten the blade cap by turning it anticlockwise.
- Position the front grille against the rear grille so that the holes in the rims that accept the small nut and bolt are in line. Insert the bolt through the holes and screw on the nut. Do not fully tighten at

the stage.

- Push the grille retaining clips into position ensuring that they engage correctly on the rim of the grille.
- Fully tighten the small nut and bolt that passes through the rim of the grille.

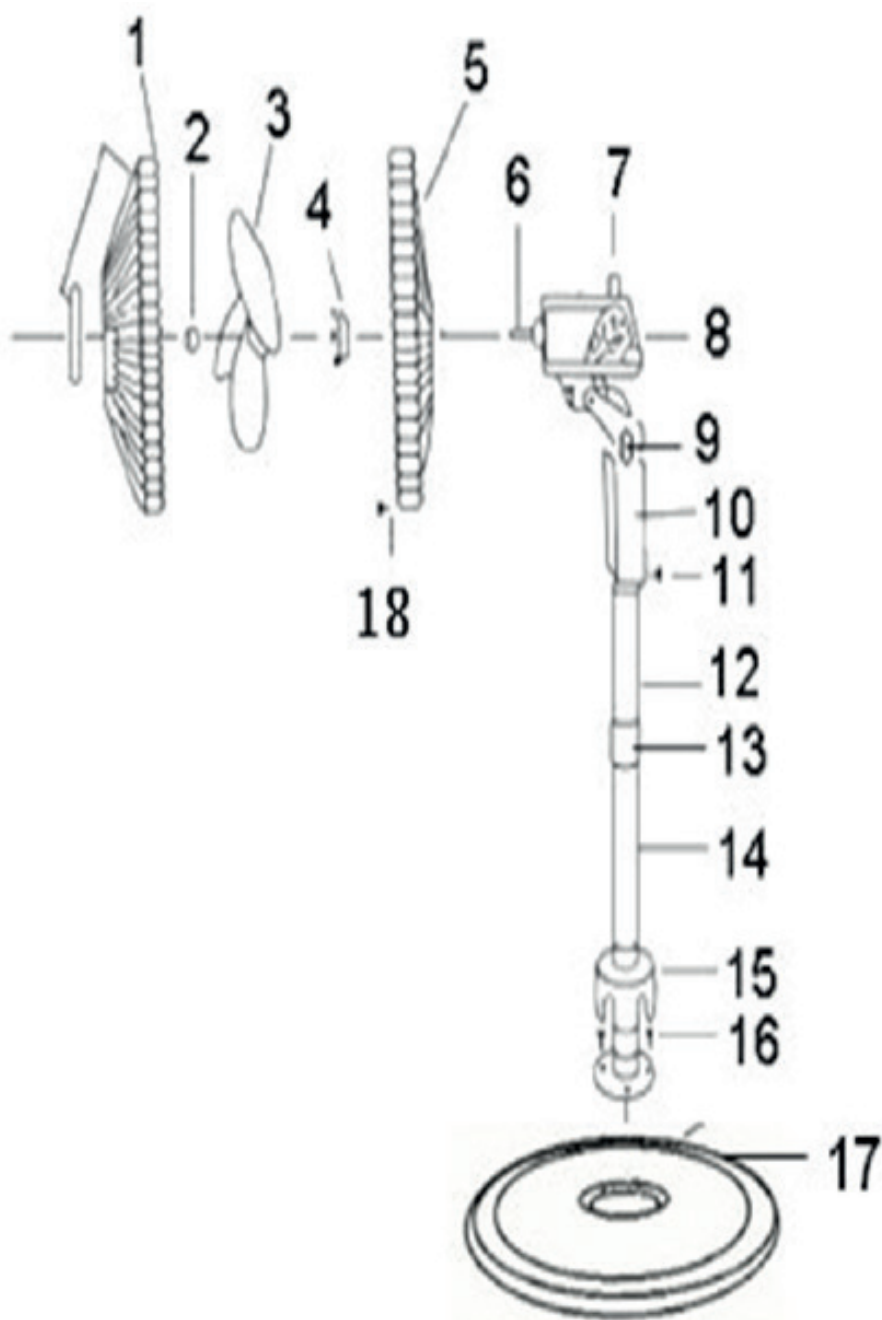

Front Grille	1	10	Switch Box
Blade Cap	2	11	Set Screw
Blade	3	12	Inner Tube
Plastic Mounting Nut	4	13	Height Adjustment Collar
Rear Grille	5	14	Outer Tube
Motor Shaft	6	15	Base Decorative Cap
Oscillating Knob	7	16	Screw
Motor Housing	8	17	Base
Neck Screw	9	18	Safety Screw&Nut

OPERATING INSTRUCTIONS:

- Push the oscillation knob to oscillate
- Pull the oscillation knob to stop
- Plug the power cord into a suitable socket
- Tilt the head up or down to the required position by using a locking mechanism that will hold the head in the desired position.
- The fan is switched on using the push buttons on switch housing, i.e. 0 = Off, 1 = Low Speed, 2 = Medium Speed, 3 = High speed

REMOTE CONTROL (10028197, 10028198)

Control the fan speed, the integrated timer (up to 7.5h) and the oscillation mode with the supplied remote control.

Technical Data

Power rating: 230V AC ~ 50Hz

Environment Concerns



According to the European waste regulation 2002/96/EG this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.

Declaration of Conformity

Producer: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin.

This product is conform to the following European Directives:

2014/30/EU (EMC)
2014/35/EU (LVD)
2011/65/EU (RoHS)

