Light Up

Standlautsprecher
Tower Speaker

10030357 10030358

www.auna-multimedia.com

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Erwerb Ihres Gerätes. Lesen Sie die folgenden Hinweise sorgfältig durch und befolgen Sie diese, um möglichen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Hinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung. Scannen Sie den QR-Code, um Zugriff auf die aktuellste Bedienungsanleitung und weitere Informationen rund um das Produkt zu erhalten.

INHALT

Sicherheitshinweise 4
Technische Daten 6
Erste Inbetriebnahme und Aufbau 6
Übersicht: Bedienelemente 8
Bedienung 10
Hinweise zur Entsorgung 11

SICHERHEITSHINWEISE

- Lesen Sie diese Bedienungsanleitung, bevor Sie versuchen, das Gerät anzuschließen oder zu betreiben.
- Halten Sie diese Anleitung in einem guten Zustand. Beachten Sie alle Warnungen. Folgen Sie allen Anweisungen.
- Bewahren Sie diese Bedienungsanleitung zum späteren Nachschlagen auf.
- Das Gerät darf keinen Tropfen oder Spritzern ausgesetzt werden und es dürfen keine mit Flüssigkeiten gefüllten Gegenstände, wie z.B. Vasen, auf das Produkt gestellt werden. Nur trockene Standorte verwenden.
- Es dürfen keine offenen Flammen, wie z.B. Kerzen, auf das Produkt gestellt werden.
- Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
- Die Luftzirkulation sollte nicht durch das Abdecken der Belüftungsöffnungen behindert werden.
- Stellen Sie sicher, dass das Gerät an eine 100-240 V~5 0/60Hz Steckdose angeschlossen ist. Die Verwendung einer höheren Spannung kann zu Fehlfunktionen oder sogar zu Brandgefahr führen. Schalten Sie das Gerät aus, bevor Sie es vom Stromnetz trennen, um es vollständig auszuschalten.
- Stecken Sie den Netzstecker nicht mit nassen Händen in eine Steckdose.
  Wenn der Netzstecker nicht in Ihre Steckdose passt, zwingen Sie den Stecker nicht in eine Steckdose, wenn er nicht passt.
- Verwenden Sie nur Zubehör, das vom Hersteller vorgeschrieben ist.
- Verwenden Sie Ersatzteile, die vom Hersteller vorgeschrieben sind.
- Installieren Sie das Gerät gemäß den Anweisungen des Herstellers.
- Stellen Sie das Gerät an einem gut belüfteten Ort auf. Stellen Sie das System auf eine ebene, harte und stabile Unterlage. Nicht Temperaturen über 40°C aussetzen. Lassen Sie mindestens 10 cm Abstand von der Rückseite und der Oberseite des Gerätes und 5 cm von jeder Seite.
- Drücken Sie die Tasten des Players vorsichtig. Ein zu starker Druck kann die BT-Soundbar beschädigen.
- Entsorgen Sie verbrauchte Batterien umweltgerecht.
- Vergewissern Sie sich immer, dass das Gerät vom Stromnetz getrennt ist, bevor Sie es bewegen oder reinigen. Nur mit einem trockenen Tuch reinigen.
- Ziehen Sie den Netzstecker bei Blitzschlag, Sturm oder wenn das Gerät längere Zeit nicht benutzt wird.
- Dieses Produkt hat keine vom Benutzer zu wartenden Teile. Versuchen Sie nicht, dieses Produkt selbst zu reparieren. Nur qualifiziertes Servicepersonal sollte die Wartung durchführen. Bringen Sie das Produkt zur Inspektion und Reparatur in die Elektronikwerkstatt Ihrer Wahl.
- Lassen Sie niemanden, insbesondere keine Kinder, in Löcher, Schlitze

oder andere Öffnungen im Gehäuse des Geräts schieben, da dies zu einem tödlichen Stromschlag führen kann.
- Montieren Sie dieses Produkt nicht an einer Wand oder Decke.
- Stellen Sie das Gerät nicht in der Nähe von Fernsehern, Lautsprechern und anderen Gegenständen auf, die starke Magnetfelder erzeugen.
  Dieses Gerät ist nur für den Innenbereich bestimmt.
  Lassen Sie das Gerät nicht unbeaufsichtigt, wenn es in Betrieb ist.

Die normale Funktion des Produktes kann durch starke elektromagnetische Interferenzen gestört werden. Wenn dies der Fall ist, setzen Sie das Gerät einfach wieder in den normalen Betrieb zurück, indem Sie der Bedienungsanleitung folgen. Falls die Funktion nicht wieder aufgenommen werden konnte, verwenden Sie das Gerät bitte an anderer Stelle.

TECHNISCHE DATEN

Artikelnr.	10030357, 10030358
Stromversorgung	12V DC @2A (Netzteil für AC 220-240V, 50-60Hz im Lieferumfang enthalten) Fernbedienung: 3V (CR2025)
Ausgangsleistung	2 x 7 W (10%THD)
Lautsprecher	2 x 3"
FM-Radio	87,4–108 MHz
BT	Frequenz 2,4 GHz; typ. Sendeleistung: 5 dBm
Stromverbrauch (Standby)	<1W
Lieferumfang	Gerät, Montagematerial (Standfuß, Schraube, Unterlegscheibe), Audiokabel (3,5mm), Fernbedienung, Bedienungsanleitung

ERSTE INBETRIEBNAHME UND AUFBAU

Fernbedienung:

- Entfernen Sie vor der ersten Benutzung der Fernbedienung die Folie, die zum Transport- und Entladungsschutz im Batteriefach der Fernbedienung steckt.
- Achten Sie beim Batteriewechsel darauf, baugleiche Batterien (CR2025, 3V) in der korrekten Polarität (Pluspol nach oben zeigend) einzusetzen:

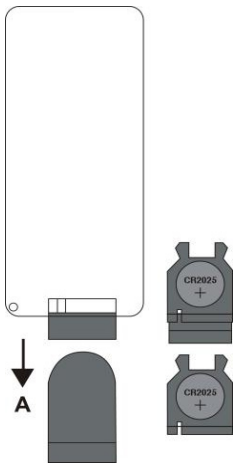

Aufbau und Anschluss:

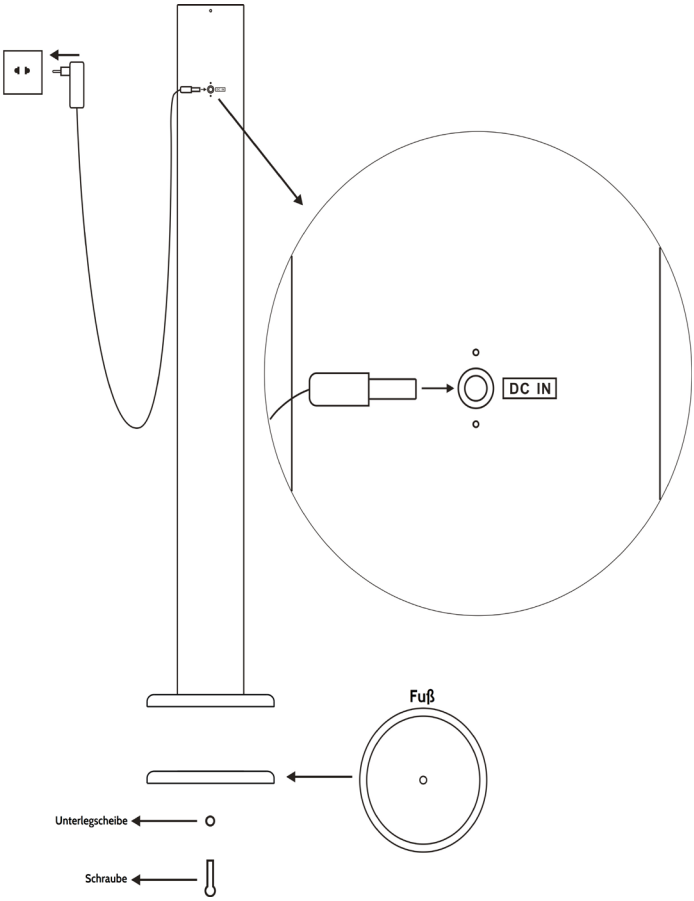

ÜBERSICHT: BEDIENELEMENTE

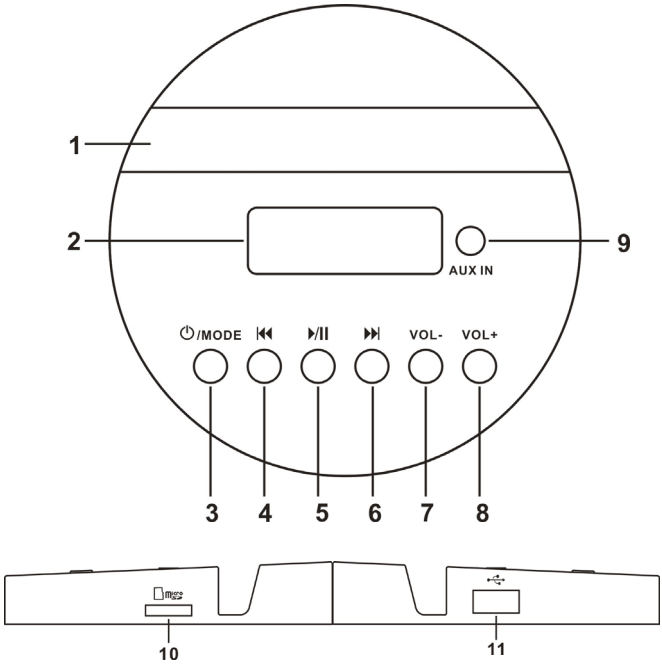

Griff	1	7	Volume –
Display	2	8	Volume +
Power / Standby / MODE	3	9	Aux In
Track zurück	4	10	Micro SD Slot
Play/Pause/Pairing	5	11	USB Port
Nächster Track	6		

Fernbedienung

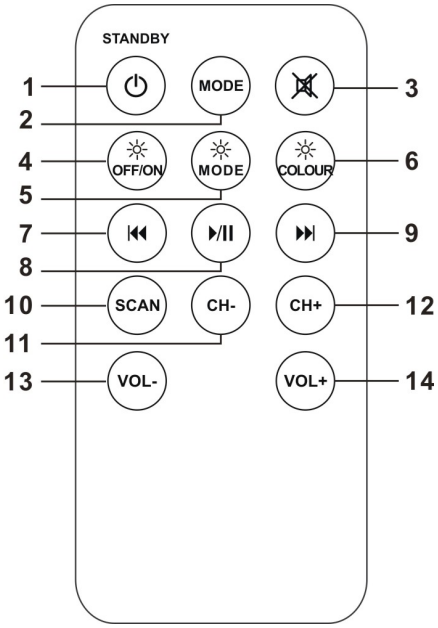

Standby (Power on/off)	**1**	**8**	Play/Pause/Pairing
MODE	**2**	**9**	Nächster Track
Mute	**3**	**10**	SCAN
LED: Ein-/Ausschalten	**4**	**11**	CH- (voriger Sender)
LED: Modus ändern	**5**	**12**	CH+ (nächster Sender)
LED Color Style ändern (00 = random / 01 = red / 02 = green / 03 = blue / 04 = purple / 05 = yellow / 06 = blue / 07 = rainbow / 08 = random color flash circularly)	**6**	**13**	Volume+
Track zurück	**7**	**14**	Volume-

BEDIENUNG

Schalten Sie das Gerät per Druck auf ⏻ (Bedien-Panel) oder MODE (Fernbedienung) ein. Das Display zeigt „bT“ an.

BT: Pairing

- Aktivieren Sie BT auf Ihrem Smartphone/Tablet/Laptop und verbinden Sie mit **Light-Up.** Falls ein Passwort verlangt wird, geben Sie „0000“ (viermal null) ein.
- Bei erfolgreicher Verbindung gibt der LightUp ein Piepsignal aus.
- Der LightUp verbindet sich nach erneutem Einschalten wieder mit dem zuvor gepairten Gerät, falls dieses BT aktiviert hat und in Reichweite ist.

AUX

Nutzen Sie ein 3,5mm Audio-Kabel, um externe Mediengeräte (MP3-Player, CD-Player, Smartphone, Laptop etc.) anzuschließen. Wählen Sie mit MODE (mehrfach drücken) den AUX-Modus. Nutzen Sie das externe Gerät zum Abspielen Ihrer Audio-Daten.

USB/SD

Setzen Sie ein Speichermedium (USB-Stick o.ä./SD-Karte) mit MP3-Dateien in den entsprechenden Anschluss ein. USB und SD werden automatisch erkannt und abgespielt. Halten Sie MODE gedrückt, um zwischen beiden Ports umzuschalten, falls in beiden Medien eingesteckt sind.

Sie können den USB-Port auch zum Aufladen von elektronischen Kleingeräten nutzen. Schalten Sie dazu in den Standby-Modus oder in den AUX-Modus. Der USB-Port liefert DC 5V~0.5A. Stellen Sie unbedingt sicher, dass dies für Ihr Gerät geeignet ist, bevor Sie es anschließen.

Radio

Wählen Sie den Radio-Modus mit MODE aus. Suchen Sie mit den Pfeiltasten nach Sendern oder drücken Sie PLAY/PAUSE für einen automatischen Sendersuchlauf. Gefundene Sender werden automatisch gespeichert und können dann mit CH+/- durchgeschaltet werden.

HINWEISE ZUR ENTSORGUNG

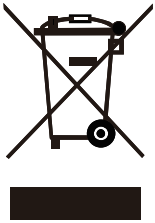

Wenn es in Ihrem Land eine gesetzliche Regelung zur Entsorgung von elektrischen und elektronischen Geräten gibt, weist dieses Symbol auf dem Produkt oder auf der Verpackung darauf hin, dass dieses Produkt nicht im Hausmüll entsorgt werden darf. Stattdessen muss es zu einer Sammelstelle für das Recycling von elektrischen und elektronischen Geräten gebracht werden. Durch regelkonforme Entsorgung schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen vor negativen Konsequenzen. Informationen zum Recycling und zur Entsorgung dieses Produkts, erhalten Sie von Ihrer örtlichen Verwaltung oder Ihrem Hausmüllentsorgungsdienst.

Dieses Produkt enthält Batterien. Wenn es in Ihrem Land eine gesetzliche Regelung zur Entsorgung von Batterien gibt, dürfen die Batterien nicht im Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Bestimmungen zur Entsorgung von Batterien. Durch regelkonforme Entsorgung schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen vor negativen Konsequenzen.

KONFORMITÄTSERKLÄRUNG

CE

UK CA

Hersteller:

Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland.

Importeur für Großbritannien:

Chal-Tec UK limited
Unit 6 Riverside Business Centre
Brighton Road
Shoreham-by-Sea
BN43 6RE
United Kingdom

Die vollständige Konformitätserklärung des Herstellers finden Sie unter folgendem Link:
https://use.berlin/10030347

Dear Customer,

Congratulations on purchasing this device. Please read the following instructions carefully and follow them to prevent possible damages. We assume no liability for damage caused by disregard of the instructions and improper use. Scan the QR code to get access to the latest user manual and more product information.

CONTENTS

Safety Instructions 14
Technical Data 16
Setup & Initial Use 16
Overview 18
Operation 20
Disposal Considerations 22

SAFETY INSTRUCTIONS

- Read this Instruction Manual before you attempt to connect or operate the appliance.
- Keep these instructions in good condition. Heed all warnings. Follow all instructions.
- Save this Instruction Manual for future reference.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- Children should be supervised to ensure that they do not play with the appliance.
- Ventilation should not be impeded by covering the ventilation openings.
- Ensure that the unit is plugged into an AC 100-240 V~50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or even fire catching. Turn off the unit before unplugging it from power source to completely switch it off.
- Do not plug/ unplug the power plug into/from an electrical outlet with wet hands.
- If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
- Only use accessories, which are specified by the manufacturer.
- Use replacement parts, which are specified by the manufacturer.
- Install the unit in accordance with the manufacturer's instructions.
- Place the unit where there is good ventilation. Place the system on a flat, hard and stable surface. Do not expose to temperatures above 40°C. Allow at least 10 cm clearance from the rear and the top of the unit and 5 cm from each side.
- Press the player's buttons gently. Pressing them too hard can damage the Bluetooth sound bar.
- Dispose of used batteries in an environmental-responsible manner.
- Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with dry cloth only.
- Unplug the product during lightning, storms or when it will not be used for long periods of time.
- This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing. Take the product to the electronics repair shop of your choice for inspection and repair.
- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- Don't mount this product on a wall or ceiling.

- Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.
- This unit is for indoor use only.
- Do not leave the unit unattended when it is in use.

The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

TECHNICAL DATA

Item	10030357, 10030358
Power supply	12 V DC @2 A (mains adapter for AC 220-240 V, 50-60 Hz supplied) Remote control: battery 3 V (CR2025)
Output power	2 x 7 W (10%THD)
Speakers	2 x 3"t
FM radio	87.4–108 MHz
BT	Frequency 2.4 GHz; Typical transmission power: 5 dBm
Power consumption (standby)	<1 W
Dimensions	135 x 38 x 98 mm
Scope of delivery	Device, mounting material (base, screw, washer), audio cable (3.5 mm), RC, user manual

SETUP & INITIAL USE

Remote Control

- Remember to pull out the clear plastic tab from the battery compartment before using the remote.
- To remove the battery from the remote, use your thumb to pull out the battery tray. Replace it with a CR2025 type 3 V battery, taking care to insert it with the positive (+) side up.

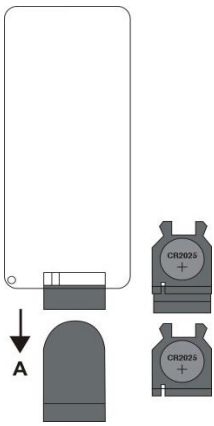

Mounting:

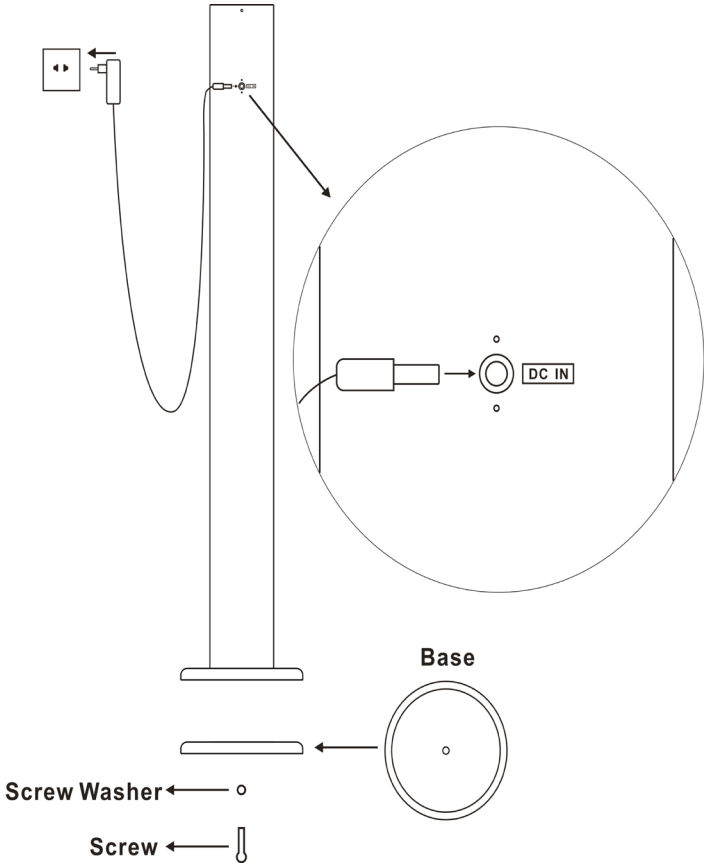

OVERVIEW

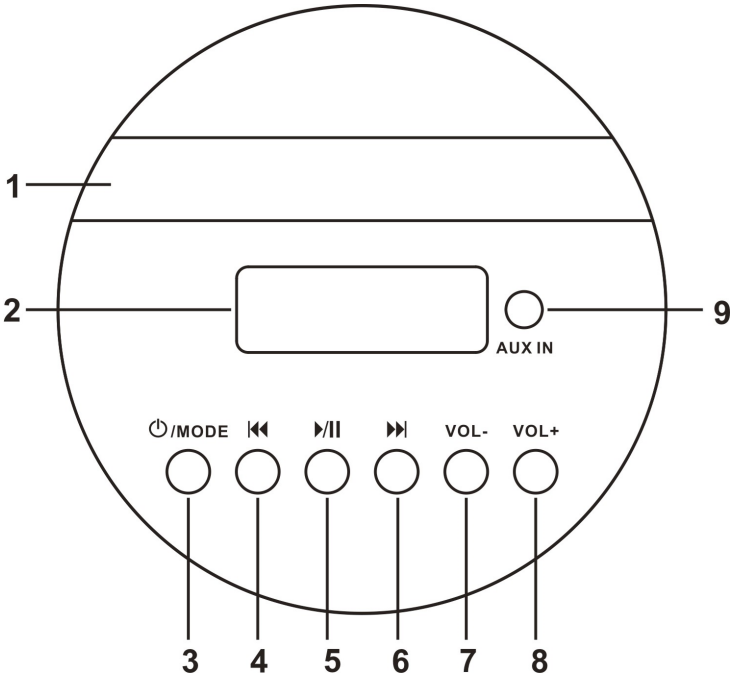

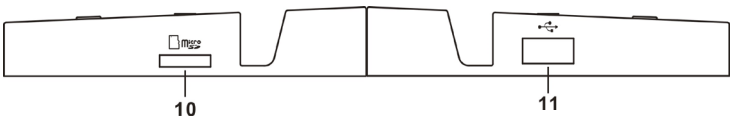

Support Bracket	1	7	Volume –
Display	2	8	Volume +
Power / Standby / MODE	3	9	Aux In
Skip backward	4	10	Micro SD Slot
Play/Pause/Pairing	5	11	USB Port
Skip track	6		

Remote control

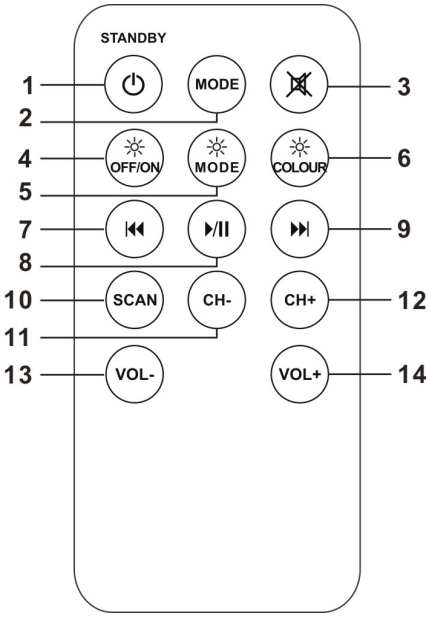

Standby (Power on/off)	1	8	Play/Pause/Pairing
MODE	2	9	Skip track
Mute	3	10	SCAN
LED: I/O	4	11	CH- (previous preset station)
LED: Mode selection	5	12	CH+ (next preset station)
LED Color Style (00 = random / 01 = red / 02 = green / 03 = blue / 04 = purple / 05 = yellow / 06 = blue / 07 = rainbow / 08 = random color flash circularly)	6	13	Volume+
Skip backward	7	14	Volume-

OPERATION

Press the power button ⏻ once to switch on the tower speaker. Press the power button again to switch off the speaker to standby mode.

BT: Pairing

- Activate BT on your mobile device. Search for BT devices in your area and pair with Light-Up. If you're prompted to enter a password, please type in "0000".
- The Light Up will make a beep sound upon successful connection.
- The Light Up will auto reconnect the previous paired device when it enters into BT mode. If the unit doesn't auto connect with the previous paired device, please restart the BT in the smartphone/tablet and then follow the above steps to finish the connection.
- You can manually turn of BT for your smartphone/tablet; BT connection will also be cancelled in case the smartphone/tablet is too far away from the Light Up (over 10m). in this latter case, the unit will go back to BT standby mode.
- To reconnect, please ensure that BT on your smartphone is set at the 'searching device' mode. Keep pressing 'pairing' until you find the Light Up again, and follow the above steps.

AUX

Use the supplied 3.5mm audio cable to connect external audio players with the Light Up. Press MODE repeatedly to change to AUX mode. Use the external player to playback audio.

USB/SD

- **USB port for charging**
  - USB power output DC 5V~0.5A. It supports charging all devices in the power range.
  - When charging a device, ensure that the power supply is the right one for your device.
  - Charging function is ok under OFF/ BT/ Aux in mode

- **USB/SD for MP3 playback**
  - Power on the unit and insert a USB Flash Drive (not supplied) into the USB Port, ensuring the plug is fully inserted in the correct way. The tower will play music from the USB automatically. The maxi-

mum size of the Flash Drive that can be supported is up to 32GB.

- Insert an Micro SD card (not supplied) into the memory card expansion slot. Make sure it is inserted in the correct way. The tower will play music from the Micro SD card automatically. The maximum size of the Flash Drive that can be supported is up to 32GB.

REMARK: When both USB and SD card are inserted, pressing the play button for a long time can swap between USB and SD card.

Radio

Use MODE to switch to radio mode. Use the previous/next buttons to manually search through the frequency band, or press PLAY/PAUSE for an automatic station scan. Found stations will automatically be saved to presets. Then, you can switch stations with CH+/-.

DISPOSAL CONSIDERATIONS

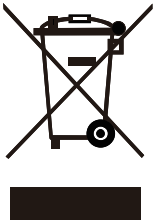

If there is a legal regulation for the disposal of electrical and electronic devices in your country, this symbol on the product or on the packaging indicates that this product must not be disposed of with household waste. Instead, it must be taken to a collection point for the recycling of electrical and electronic equipment. By disposing of it in accordance with the rules, you are protecting the environment and the health of your fellow human beings from negative consequences. For information about the recycling and disposal of this product, please contact your local authority or your household waste disposal service.

This product contains batteries. If there is a legal regulation for the disposal of batteries in your country, the batteries must not be disposed of with household waste. Find out about local regulations for disposing of batteries. By disposing of them in accordance with the rules, you are protecting the environment and the health of your fellow human beings from negative consequences.

DECLARATION OF CONFORMITY

Manufacturer:

Chal-Tec GmbH, Wallstrasse 16, 10179 Berlin, Germany.

Importer for Great Britain:

Chal-Tec UK limited
Unit 6 Riverside Business Centre
Brighton Road
Shoreham-by-Sea
BN43 6RE
United Kingdom

The complete declaration of conformity of the manufacturer can be found at the following link:
https://use.berlin/10030357