



auna

Vinyl Clean

Sehr geehrter Kunde,

zunächst möchten wir Ihnen zum Erwerb Ihres Gerätes gratulieren.

Bitte lesen Sie die folgenden Anschluss- und Anwendungshinweise sorgfältig durch und befolgen Sie diese um möglichen technischen Schäden vorzubeugen.

Sicherheitshinweise

- Diese Bedienungsanleitung dient dazu, Sie mit der Funktionsweise dieses Produktes vertraut zu machen. Bewahren Sie diese Anleitung daher stets gut auf, damit Sie jederzeit darauf zugreifen können.
- Sie erhalten bei Kauf dieses Produktes zwei Jahre Gewährleistung auf Defekt bei sachgemäßem Gebrauch.
- Bitte verwenden Sie das Produkt nur in seiner bestimmungsgemäßen Art und Weise. Eine anderweitige Verwendung führt eventuell zu Beschädigungen am Produkt oder in der Umgebung des Produktes.
- Öffnen Sie das Produkt niemals eigenmächtig und führen Sie Reparaturen nie selber aus!
- Behandeln Sie das Produkt sorgfältig. Es kann durch Stöße, Schläge oder den Fall aus bereits geringer Höhe beschädigt werden.
- Halten Sie das Produkt fern von Feuchtigkeit und extremer Hitze.
- Lassen Sie keine Gegenstände aus Metall in dieses Gerät fallen.
- Stellen Sie keine schweren Gegenstände auf dieses Gerät.
- Reinigen Sie das Gerät nur mit einem trockenen Tuch.

Kleine Objekte/Verpackungsteile (Plastikbeutel, Karton, etc.): Bewahren Sie kleine Objekte (z.B. Schrauben und anderes Montagematerial, Speicherkarten) und Verpackungsteile außerhalb der Reichweite von Kindern auf, damit sie nicht von diesen verschluckt werden können. Lassen Sie kleine Kinder nicht mit Folie spielen. Es besteht Erstickungsgefahr!

Transport des Gerätes: Bitte bewahren Sie die Originalverpackung auf. Um ausreichenden Schutz beim Transport des Gerätes zu erreichen, verpacken Sie das Gerät in der Originalverpackung.

Reinigung der äußeren Oberfläche: Verwenden Sie keine flüchtigen Flüssigkeiten, wie Insektensprays. Durch zu starken Druck beim Abwischen können die Oberflächen beschädigt werden. Gummi- oder Plastikteile sollten nicht über einen längeren Zeitraum mit dem Gerät in Kontakt sein. Nutzen Sie ein trockenes Tuch.


Lieferumfang

Gerät, 2 Rollen, 2 Bürsten, 1 Flasche Reinigungslösung, 1 fusselfreies Tuch


Hersteller

CHAL-TEC GmbH, Wallstraße 16, 10179 Berlin, Deutschland


Funktionsweise

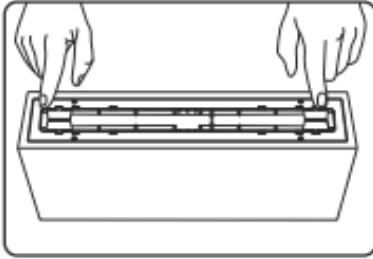


A

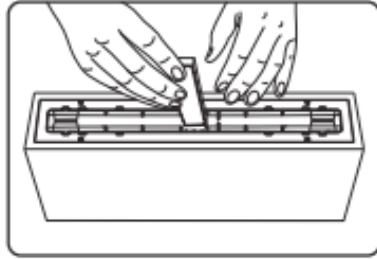


B

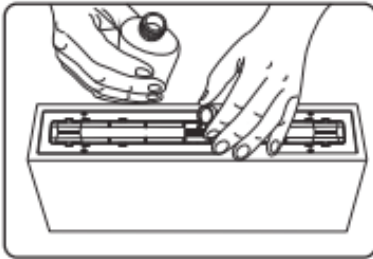


C

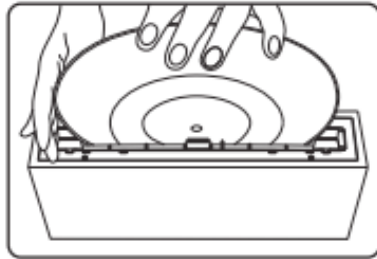

D

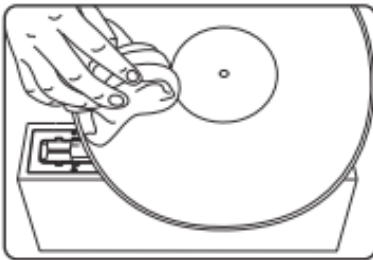

E

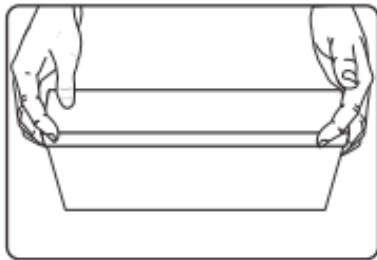

F

- A:** Stecken Sie die zwei Rollen in die entsprechenden Aufnahmen für 7"-, 10" bzw. 12"-Schallplatten.
B: Stecken Sie die zwei Bürsten in die Bürsten-Aufnahme.
C: Gießen Sie etwa eine Flaschenkappe voll der Reinigungslösung auf die Bürsten.
D: Schieben Sie Ihre Schallplatte zwischen die Bürsten. Die Rollen halten Sie gerade. Drehen Sie die Platte nun ein paar Mal im und gegen den Uhrzeigersinn.
E: Wischen Sie überschüssige Reinigungslösung mit dem mitgelieferten fusselfreien Tuch ab.
F: Trocknen Sie die Kammer, verstauen Sie das Zubehör darin und schließen Sie die Abdeckung.

Dear Customer,

Congratulations on purchasing this product. Please read and follow these instructions, in order to avoid damaging the item. We do not cover any damages that may arise from improper use of the item or the disregard of the safety instructions.

Important Safety Advice

- Read all instructions before using.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or device in water or other liquids.
- Do not expose the appliance to extreme temperatures. The appliance shall be used in moderate climates.
- The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Do not open the unit by removing any cover parts. Do not attempt to repair the unit. Any repairs or servicing should be done by qualified personell only.
- **Only qualified persons may perform technical work on the product. The product may not be opened or changed.** The components cannot be serviced by the user. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications.
- The appliance is not a toy. Do not let children play with it. Never let children insert foreign objects into the appliance.
- Never clean the surface of the device with solvents, paint thinners, cleansers or other chemical products. Instead, use a soft, dry cloth or soft brush.
- Save these instructions.

Small objects: Keep small objects (i.e. screws, mounting material, memory cards etc.) and packaging out of the range of children. Do not let Children play with foil. Choking hazard!

Transporting the device: Please keep the original packaging. To gain sufficient protection of the device while shipment or transportation, make sure to put it back in its original packaging.

Cleaning the surface: Do not use any volatile liquids, detergents or the like. Use a clean dry cloth.


In the Box

Device, 2 rollers; 2 brushes, 1 bottle of clean solution, 1 lint-free cloth


Manufacturer

CHAL-TEC GmbH, Wallstraße 16, 10179 Berlin, Germany


Operation

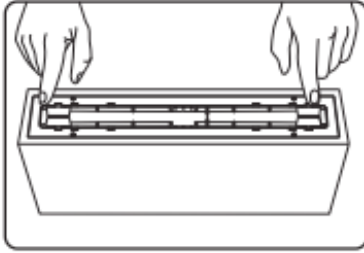


A

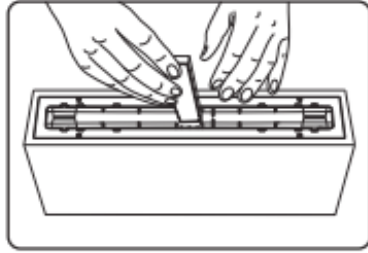


B

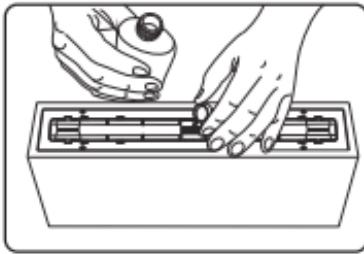


C

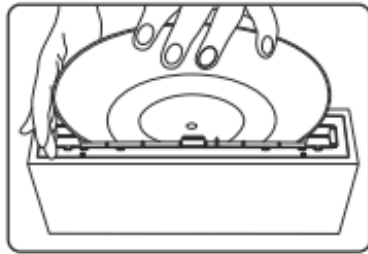

D

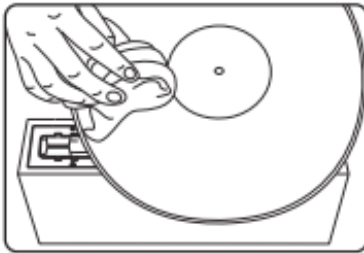

E

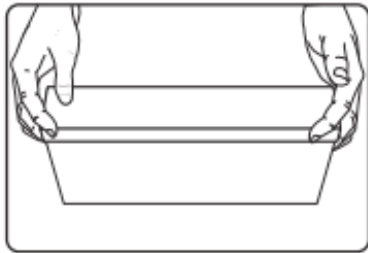

F

- A:** Insert the two rollers into the respective slots 7", 10" and 12" fitting for your record.
B: Insert the two brushes into the brush slot
C: Pour a full bottle cap of clean solution onto the 2 brushes
D: Insert the LP in between the two brushes, the two rollers will hold the LP steadily. Rotate the LP clockwise 3 times and counterclockwise 3 times to clean the LP.
E: Wipe off surplus cleaner with the provided lint-free cloth.
F: Dry the cleaning chamber, store cleaned Brushes, Lint-free Cloth and Cleaning Solution inside and replace the cover.