

KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK
TEIN NIELSTARK KLAR
KLARSTEIN NIELSTARK

KLARSTEIN

Vitwist

Softmixer
Juice Blender

10031970 10031971 10031972

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Erwerb Ihres Gerätes. Lesen Sie die folgenden Hinweise sorgfältig durch und befolgen Sie diese, um möglichen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Hinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

INHALT

Technische Daten	3
Sicherheitshinweise	4
Geräteübersicht	5
Verwendung des mobilen Mixbechers	6
Bedienung	7
Mixtipps	8
Reinigung und Aufbewahrung	8
Hinweise zur Entsorgung	9

TECHNISCHE DATEN

Artikelnummer	10031970 10031971 10031972
Stromversorgung	220-240 V~ 50/60 Hz
Stromverbrauch	250 W
Drehungen pro Minute	18000 - 22000




SICHERHEITSHINWEISE

Lesen Sie vor der Benutzung des Geräts sämtliche Hinweise.


- Halten Sie zum Trennen von der Stromversorgung den Netzstecker fest in der Hand.
- Tauchen Sie das Netzkabel, den Netzstecker oder die Motorbasis nicht in Wasser oder eine andere Flüssigkeit.
- Lassen Sie das Netzkabel nicht über eine Tischkante hängen oder heiße Oberflächen berühren.
- Lassen Sie das Gerät während der Benutzung nicht unbeaufsichtigt.
- In der Nähe von Kindern ist genaue Beaufsichtigung geboten.
- Vermeiden Sie den Kontakt mit sich bewegenden Teilen. Halten Sie Hände und Utensilien während des Mixens aus dem Mixbecher heraus, um Personenverletzungen und Geräteschäden zu vermeiden.
- Die Klinge ist scharf. Gehen Sie vorsichtig damit um.
- Um eine Personenverletzung zu vermeiden, setzen Sie nie die Messereinheit in die Gerätebasis, ohne dass der Mixbecher richtig aufgesetzt wurde.
- Versuchen Sie nicht das Sicherheitsverriegelungssystem zu umgehen, das das Gerät einschaltet.
- Keine heißen Flüssigkeiten in den Mixer geben.
- Betreiben Sie das Gerät nicht mit einem defekten Netzkabel oder Netzstecker, nachdem das Gerät eine Fehlfunktion hatte, fallen gelassen oder anderweitig beschädigt wurde. Geben Sie das Gerät an einen Kundendienst, um es untersuchen oder reparieren zu lassen.
- Nicht für die Verwendung im Außenbereich oder für geschäftliche Anwendungen geeignet.
- Immer auf einer ebenen Fläche benutzen.
- Wenn das Gerät nicht in Verwendung ist, Zubehörteile angebracht oder entfernt werden und bevor das Gerät gereinigt wird, den Netzstecker ziehen.
- Verwenden Sie das Gerät bestimmungsgemäß, wie es in dieser Bedienungsanleitung beschrieben wird. Die Verwendung von Zubehör, das nicht vom Hersteller empfohlen wurde (einschließlich Mixbehälter, -becher und der Messereinheit kann zu einem Personenschaden führen.
- Das Gerät ist ausschließlich für den Hausgebrauch geeignet.


Das Gerät verfügt über eine zurücksetzbare Thermosicherung, die im Fall einer extremen Überlast einen Motorschaden verhindert. Wenn das Gerät sich unerwartet abschaltet, lassen Sie es 15 Minuten abkühlen, bevor Sie weiterbenutzen.

GERÄTEÜBERSICHT

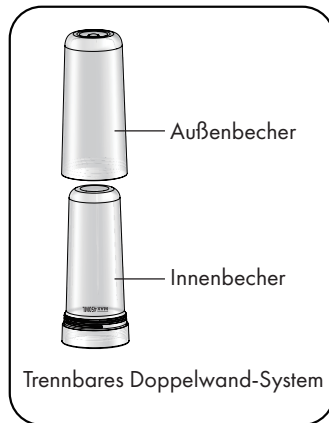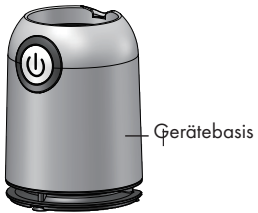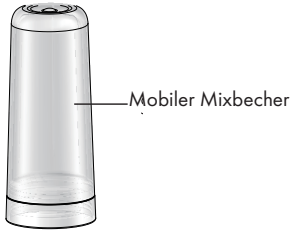

VERWENDUNG DES MOBILEN MIXBECHERS

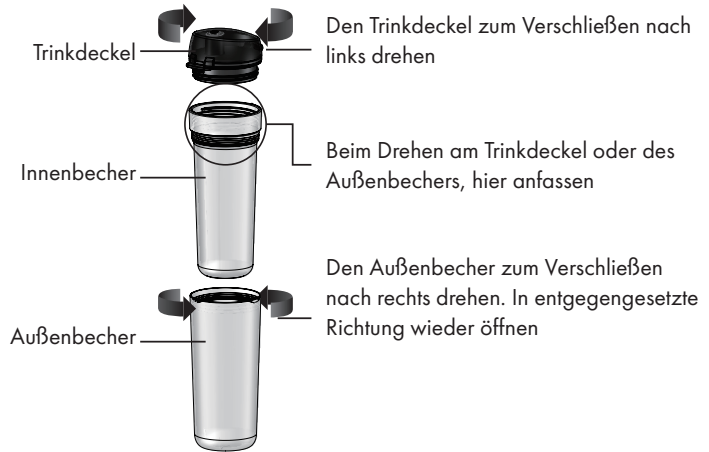


Verriegelungssymbol
auf der Außenflasche




BEDIENUNG

1. Stellen Sie den Sportbecher auf eine ebene Fläche mit der offenen Seite nach oben. Den Sportbecher mit den bevorzugten Zutaten befüllen. Achten Sie darauf, die Zutaten nicht über die MAX-Markierung (450 ml) hinaus zu befüllen. Befestigen Sie die Messereinheit am offenen Ende des Deckels.



2. Den Sportbecher über Kopf auf die Basis stellen und darauf achten, dass er bündig abschließt.
3. Setzen Sie den Mixer über die Ein/Aus-Taste in Betrieb. Wenn die Ein/Aus-Taste losgelassen wird, hält der Mixer an.
4. Stoppen Sie den Mixer nach einer Minute Dauerbetrieb für mindestens 1 Minute.

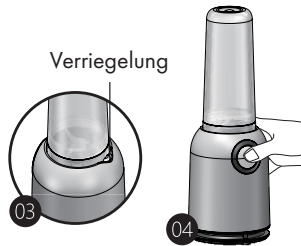

5. Den Mixbecher auf den Kopf drehen und auf eine ebene Fläche stellen. Die Messereinheit abnehmen und einen Deckel raufsetzen. Nehmen Sie den Sportbecher überall mit hin, um ausreichend Flüssigkeitszufuhr zu haben. Nachdem Ihr gemixtes Getränk alle ist, waschen Sie den Sportbecher aus und verwenden ihn über den Tag für Wasser und kalte Getränke.



Hinweis: Am besten fügen Sie die Zutaten in folgender Reihenfolge hinzu: Flüssigkeiten, frische Zutaten, gefrorener Joghurt und Eis.

MIXTIPPS

- Geben Sie zuerst die Flüssigkeiten in den Becher, es sei denn, das Rezept macht andere Vorgaben.
- Schneiden Sie festes Obst- und Gemüse in Stücke, die nicht größer als 1,8 cm sind.
- Überfüllen Sie den Sportbecher nicht. Wenn der Motor ins Stocken gerät, schalten Sie ihn sofort aus und lassen ihn 15 Sekunden abkühlen. Nehmen Sie etwas von dem Mixgut heraus und fahren fort.
- Der Mixer kann nicht Kartoffeln stampfen, Eier oder Butter schlagen, Teig kneten oder Fleisch häckseln.

REINIGUNG UND AUFBEWAHRUNG

Reinigung

- Vorsicht: Ziehen Sie vor der Reinigung den Netzstecker. Die Gerätebasis nicht ins Wasser oder eine andere Flüssigkeit tauchen.
- Verwenden Sie zum Reinigen einen feuchten, weichen Schwamm mit einem milden Reinigungsmittel. Gut abspülen und trocknen lassen.

Aufbewahrung

- Nach der Reinigung die Messereinheit wieder auf den Becher und in den Mixer setzen.

HINWEISE ZUR ENTSORGUNG



Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2012/19/EU. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit Ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.



Konformitätserklärung

Hersteller: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Deutschland

Dieses Produkt entspricht den folgenden Europäischen Richtlinien:

2011/65/EU (RoHS)

2014/30/EU (EMV)

2014/35/EU (LVD)

Dear Customer,

Congratulations on purchasing this equipment. Please read this manual carefully and take care of the following hints on installation and use to avoid technical damages. Any failure caused by ignoring the items and cautions mentioned in the operation and installation instructions are not covered by our warranty and any liability.

CONTENTS

Technical Data	10
Safety Instructions	11
Components	12
Sport Bottle Use Guide	13
Operation	14
Blending Tipps	15
Cleaning and Storing Your Blender	15
Disposal Considerations	16

TECHNICAL DATA

Item number	10031970 10031971 10031972
Power supply	220-240 V~ 50/60 Hz
Power consumption	250 W
RPM	18000 - 22000





SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:


- To disconnect, grasp plug and unplug cord from electrical outlet.
- To protect against risk of electrical shock, do not immerse the cord, plug or motor base in water or any other liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Never leave appliance unattended when in use.
- Close supervision is necessary when used by or near children.
- Avoid contact with moving parts. Keep hands and utensils out of sport bottle while blending to prevent personal injury or damage to the blender.
- The blade is sharp. Handle with care.
- To reduce the risk of injury, never place cutter-assembly blades on base without sport bottle properly attached.
- Do not attempt to bypass the interlock system that powers the unit on.
- Do not blend hot liquids in the blender.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest Service Center for examination, repair or electrical mechanical adjustment
- Do not use outdoors or for commercial purposes; this appliance is for household use only.
- Always operate on a flat surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- Use this appliance for its intended use as described in this manual. The use of attachments not made by the manufacturer, including canning or ordinary jar and processing assembly parts, is not recommended and may cause a risk to persons.


This appliance is equipped with a polarized plug. This type of plug has one blade that is wider than the other. This plug will fit in a polarized outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.


COMPONENTS

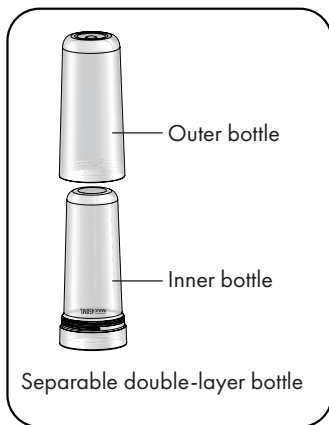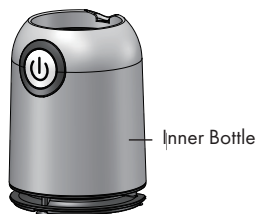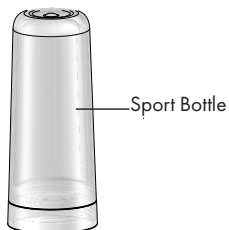

SPORT BOTTLE USE GUIDE

Drinking lid  rotate the drinking lid to left to lock it.
Unlock in opposite directions.

Inner bottle  When rotate the drinking lid or outer bottle, Please hold this place.


Outer bottle  Rotate the outer bottle to right to lock it.
Unlock in opposite directions.


Lock mark on the
outer bottle




OPERATION

1. Place the sport bottle on a flat surface with the open end facing up. Fill the sport bottle with your favorite ingredients. Be sure not to fill ingredients past the MAX marking "MAX 450 ML".
2. Fasten the blade assembly on the open end of the sport bottle.

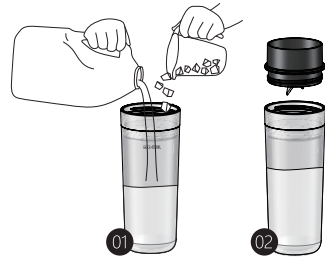

3. Turn the sport bottle upside down, place it in the base vertically. Then be sure the key point is match. Operation by safety switch. Blending will stop once you stop pressing the switch.
4. Work for one rmin, then stop more than one minute.

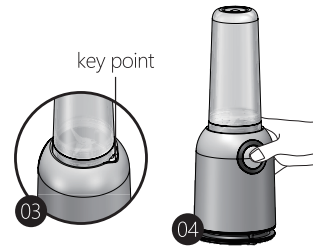

5. Turn the sport bottle over and place on a flat surface. Replace the blade assembly with the drinking lid. Take the sport bottle with you throughout the day to stay hydrated.

Note: For optimal performance, place desired ingredients in the sport bottle according to the following order:
Liquids, fresh ingredients, frozen fruit, yoghurt and ice cream.



BLENDING TIPS

- Put liquids in the cup first unless a recipe says otherwise.
- Cut all firm fruits and vegetables into pieces no larger than 3/4 inch(1.8cm) to 1 inch(2.5 cm).
- Do not overload sport bottle. If the motor stalls, turn the blender off immediately unplug the unit and let it cool for at least 15 minutes. Then, remove a portion of the food and continue.
- This blender will not mash potatoes, whip egg whites or substitute dairy toppings, mix stiff dough or grind raw meat.

CLEANING AND STORING YOUR BLENDER


Cleaning

- Caution: UNPLUG BEFORE CLEANING. DO NOT IMMERSE THE BLENDER BASE IN WATER OR ANY OTHER LIQUID..
- Use a damp, soft sponge with mild detergent to clean the outside of the blender base. All parts except for the blender base are dishwasher-safe. You can also wash the parts, except the blender base, in warm, soapy water. Rinse well and dry.

Storing

- After cleaning, reassemble blade assembly to open end of the sport bottle and the place in the blender. Snap the drinking lid on the other end of the sport bottle.

DISPOSAL CONSIDERATIONS

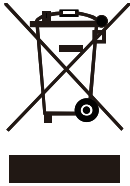

According to the European waste regulation 2012/19/EU this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.



Declaration of Conformity

Producer: Chal-Tec GmbH, Wallstraße 16, 10179 Berlin, Germany

This product is conform to the following European Directives:

2011/65/EU (RoHS)

2014/30/EU (EMC)

2014/35/EU (LVD)

KLARSTEIN NIEIJSR
TEIN NIEIJSR KLAR
KLARSTEIN NIEIJSR
TEIN NIEIJSR KLAR
KLARSTEIN NIEIJSR
TEIN NIEIJSR KLAR
KLARSTEIN NIEIJSR