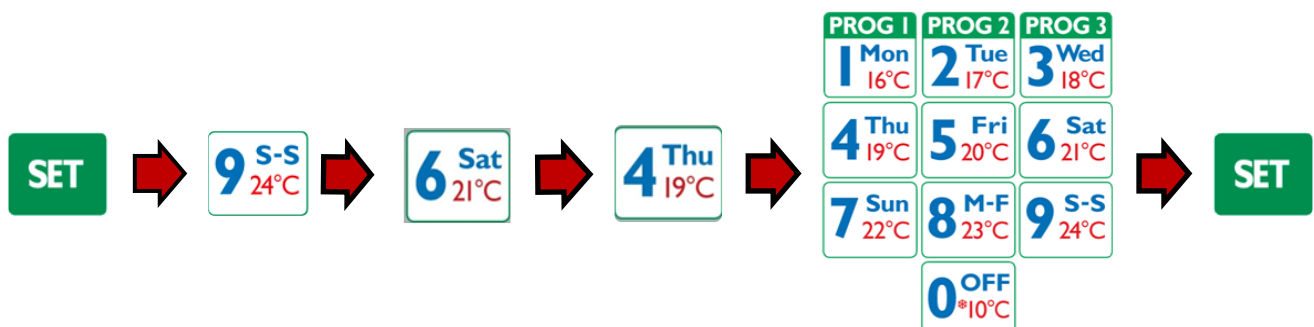# Addendum to instructions for eTRV✛

ADDITIONAL FEATURES INCLUDED IN eTRV✛

The eTRV✛ has additional features for enhanced energy saving, convenience and security. This instruction sheet explains the new features and how to set and check them. These features are only included with eTRV✛ (part number ETRV 3.2 or above):

Open window: choose whether heating is **on** as normal **OR** turns **off** temporarily when eTRV✛ senses an open window.

Dead battery: choose whether heating is **on** fully **OR** turns **off** completely when eTRV✛ batteries die.

Secure Settings lock: choose occupancy control to be **on** automatically **OR** **off** for no remote control and no occupancy control when eTRV✛ has the Secure Settings lock on (see **Note 1**). *Occupancy control of the eTRV✛ requires a separate PAIR Timer accessory to detect people in the room* (see **Note 2**).

HOW TO SET UP OR CHECK THE SYSTEM SETTINGS

*To **set** eTRV+ System Settings* (see **Note 3**):
a. Press **SET**
b. Press **9** (S-S) for System Settings
c. **Press 6,** then **4**, then the selected **Setting number** from the table below
d. Press **SET.** Fill in the table below to note the selected System Setting

*To **check** eTRV+ System Settings:*
a. Press **?**
b. Press **9** (S-S) for System Settings
c. The green LED light will flash back to confirm the setting, for example : 6 flashes, then 4 flashes, then 1 flash would show the Default setting

Setting number	When window opens, heating is:		When batteries die, heating is:		With secure lock, PAIR control is:		Record of setting (Tick setting)
0	✔	ON	✘	OFF	✘	OFF	
1	✔	ON	✔	ON	✘	OFF	(Default)
2	✘	OFF	✘	OFF	✘	OFF	
3	✘	OFF	✔	ON	✘	OFF	
4	✔	ON	✔	ON	✔	ON	
5	✘	OFF	✘	OFF	✔	ON	
6	✘	OFF	✔	ON	✔	ON	
8	✔	ON	✘	OFF	✔	ON	

Note 1: Ask your supplier for further information on how to use the Secure Settings lock. For security reasons you may be asked to prove identity and authorisation.

Note 2: Please see PAIR Timer instructions for full information.
Note 3: Ask your supplier for further advice on other specialist System Settings for advanced users only.