









CROSLEY
FURNITURE





Large Record Player Cabinet with Vinyl Storage
CF1232

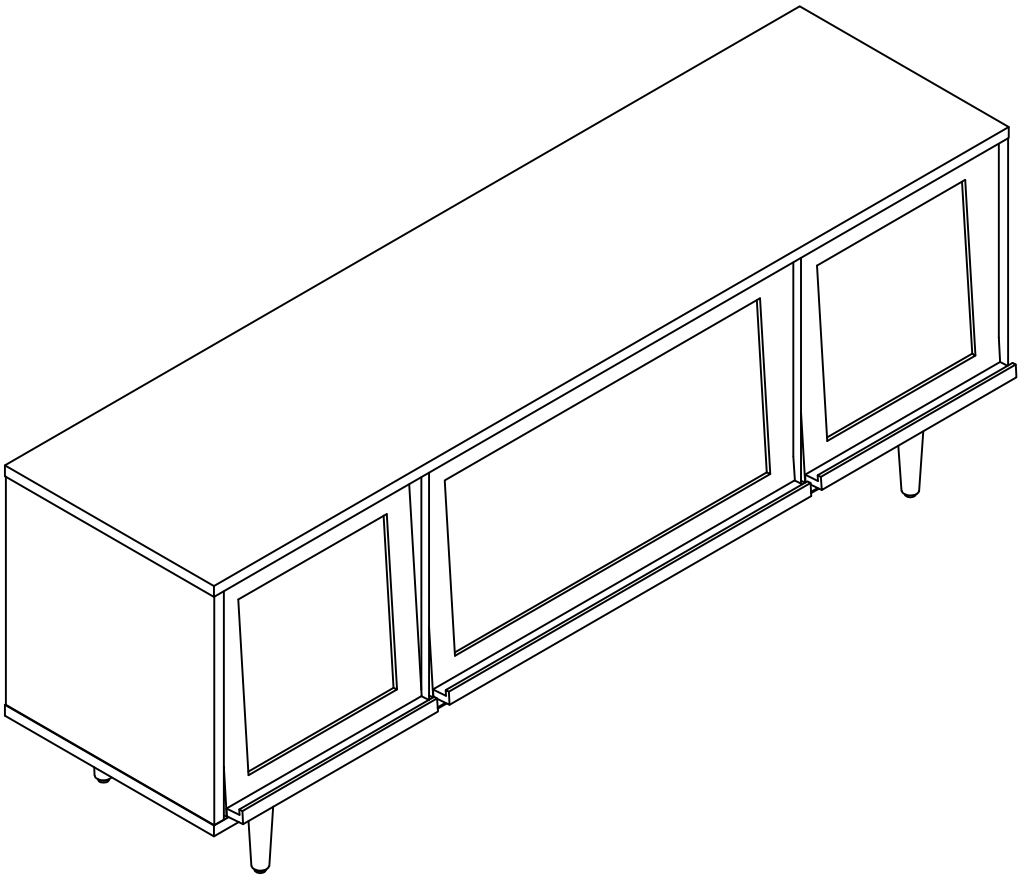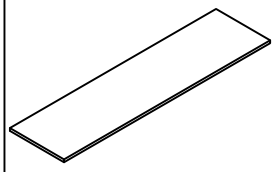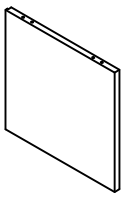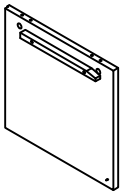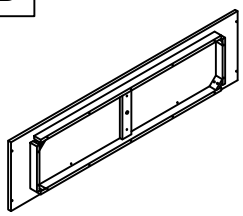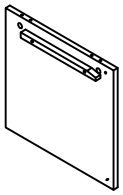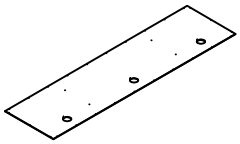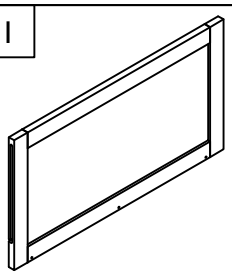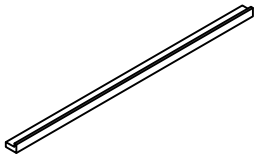

PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 2 PCS
F 	G 	H 	I 	J 
Back Panel 1 PC	Door 2 PCS	Wood Handle 2 PCS	Middle Door 1 PC	Middle Wood Handle 1 PC
K 	L 	M 		
Leg 4 PCS	Support Leg 1 PC	Cover 3 PCS		

HARDWARE LIST

#1  1/4"*45mm	#2  1/4"*10mm	#3  1/4"*13mm	#4  7*38mm	#5 
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Tapping Bolt 8 PCS (Extra 1)	Cam Bolt 8 PCS (Extra 1)
#6 	#7  8*30mm	#8 	#9  8*3*12mm	#10 
Cam Lock 8 PCS (Extra 1)	Wood Dowel 16 PCS (Extra 1)	Round Head Bolt 7 PCS (Extra 1)	Screw 30 PCS (Extra 1)	Door Holder 6 PCS (Extra 1)
#11 	#12 	#13  M2	#14  M4	
Binding Post 3 SETS (Extra 1)	Cam Sticker 8 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach covers (part M) to back panel (part F) using binding posts (part #11) and small allen wrench (part #13).

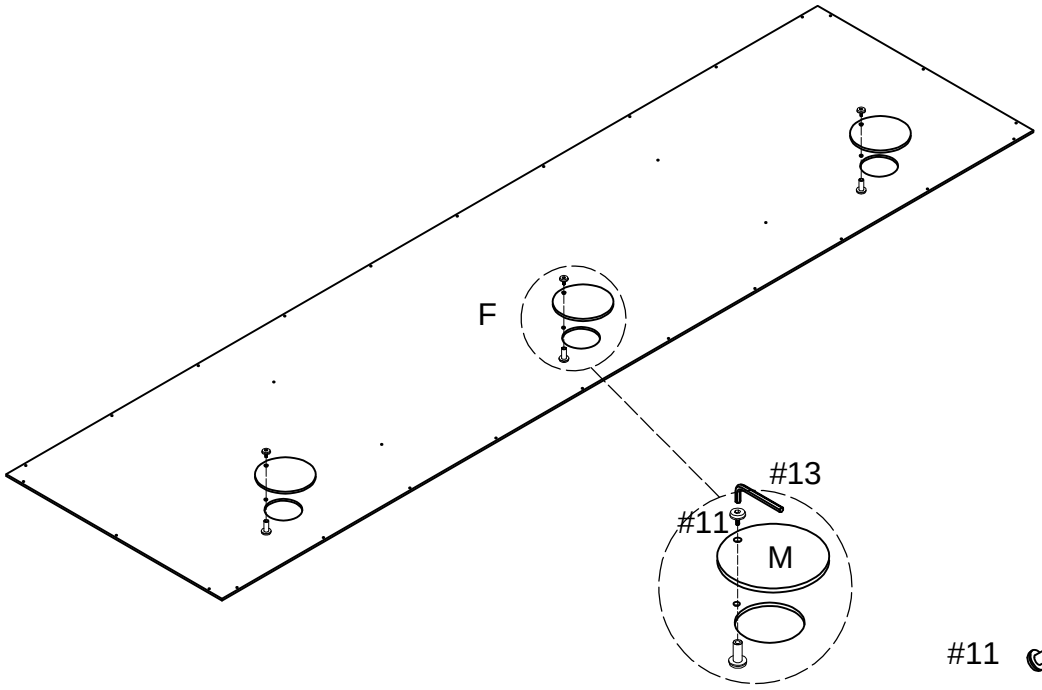

#11 x 3

#13 x 1

Step 2. Attach legs (part K) to bottom panel (part D) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #14). Attach support leg (part L) to bottom panel (part D).

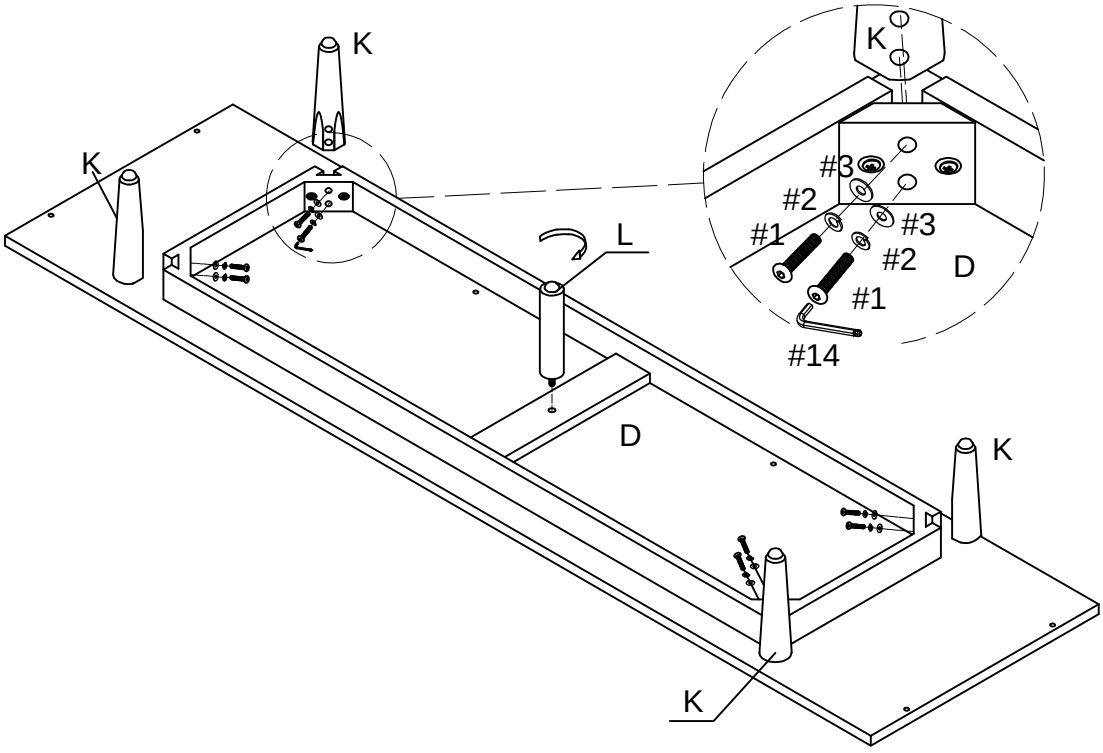


#1 x 8

#2 x 8

#3 x 8

#14 x 1


Step 3. Attach wood handles (parts H & J) to doors (parts G & I) using round head bolts (part #8) and phillips head screwdriver.

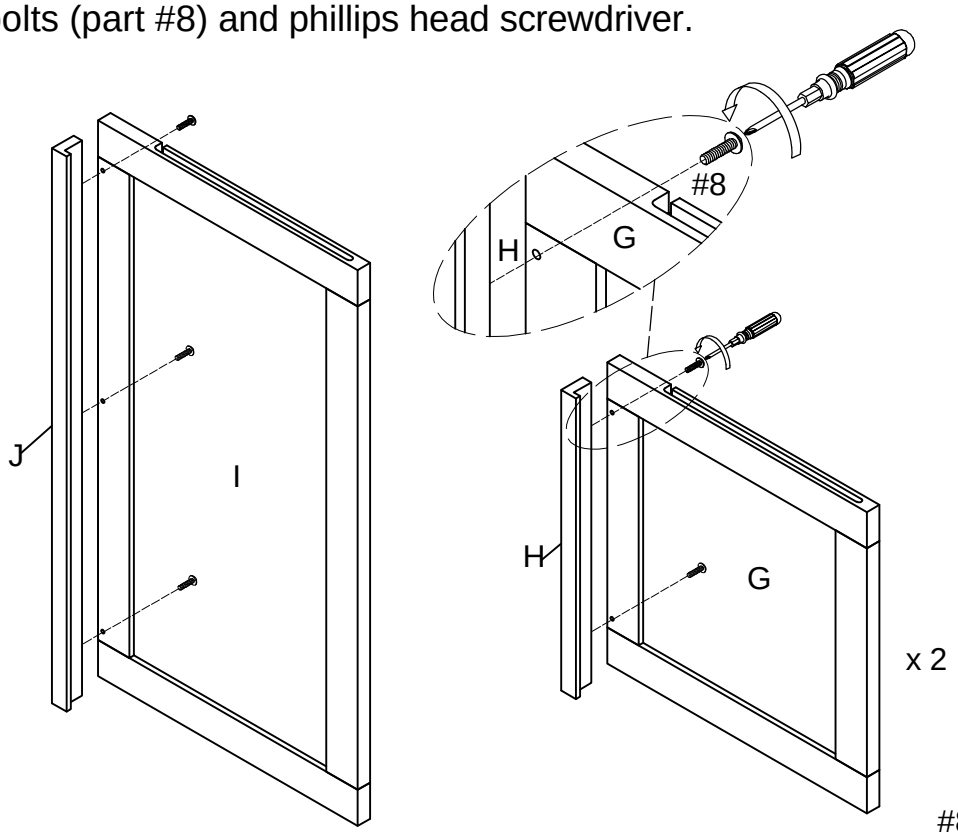

#8 x 7

Step 4. Insert cam bolts (part #5) into pre-drilled holes of top panel (part A) using phillips head screwdriver.


Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

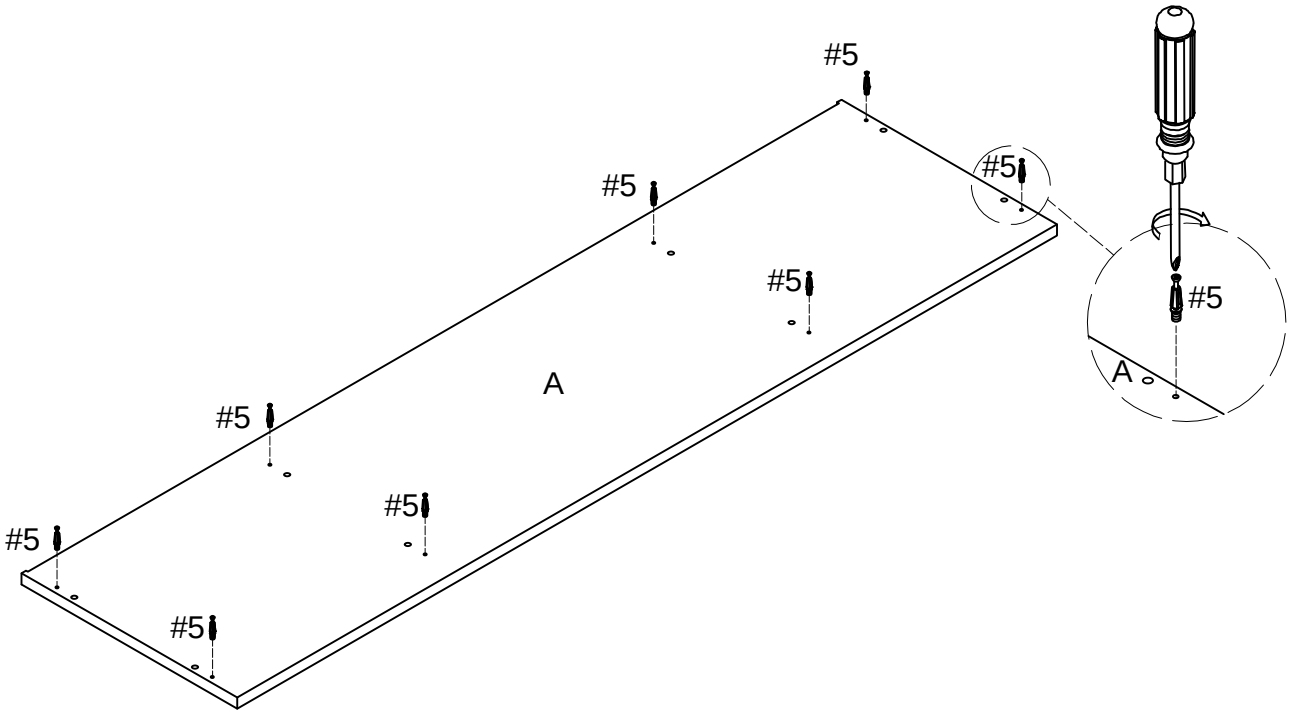


#5 x 8

Step 5. Attach panels (parts B, C & E) to top panel (part A) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

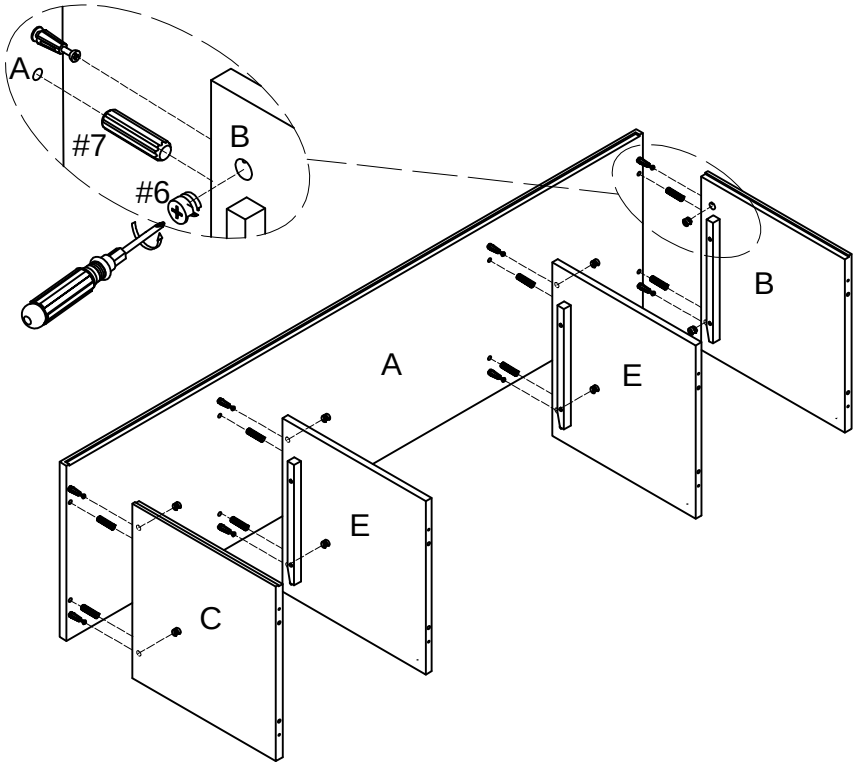

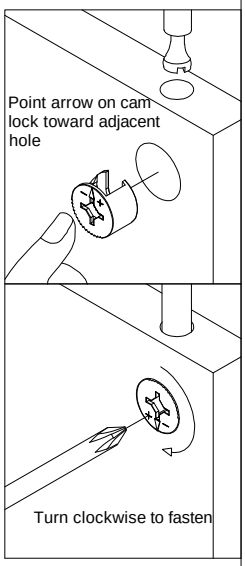


#6		x 8
#7		x 8

Step 6. Attach bottom panel (part D) to assembled unit (parts B, C & E) using tapping bolts (part #4), wood dowels (part #7) and allen wrench (part #14).

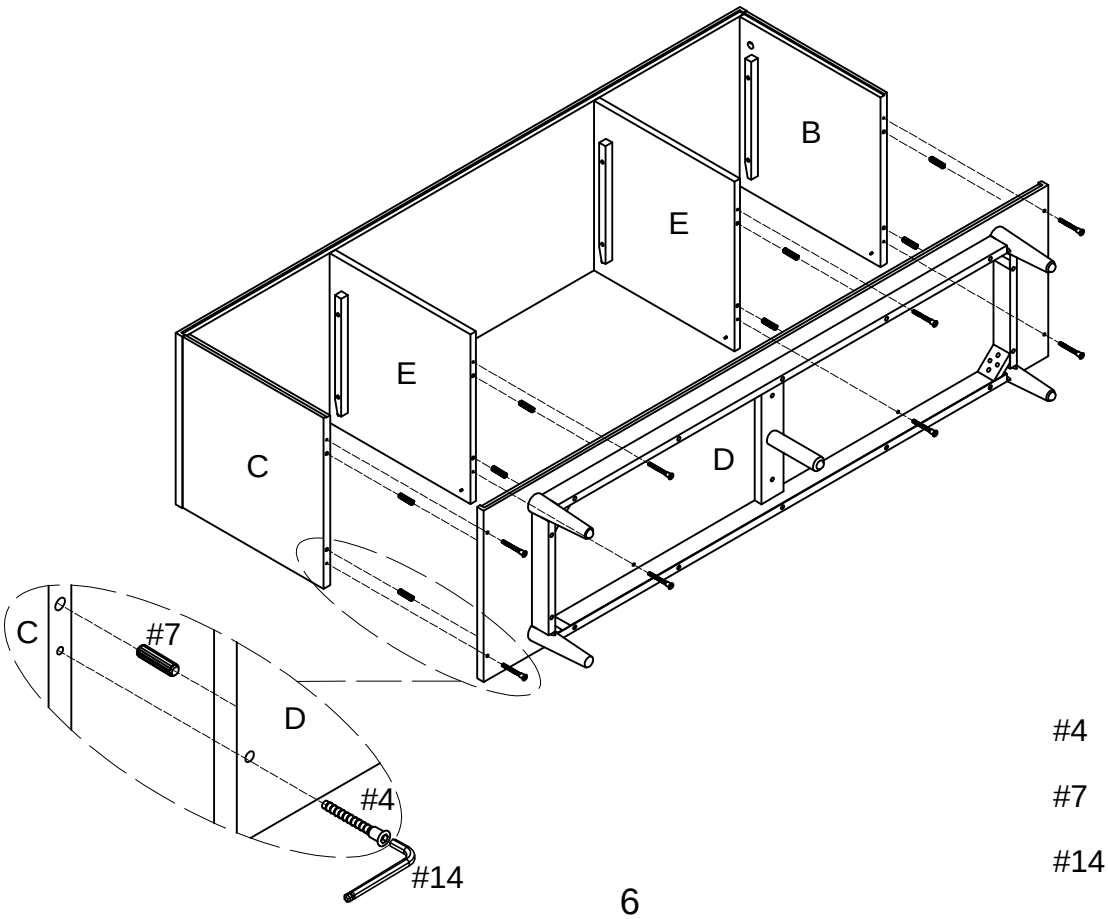


#4		x 8
#7		x 8
#14		x 1

Step 7. Attach back panel (part F) to assembled unit (parts A, B, C, D & E) using screws (part # 9) and phillips head screwdriver.

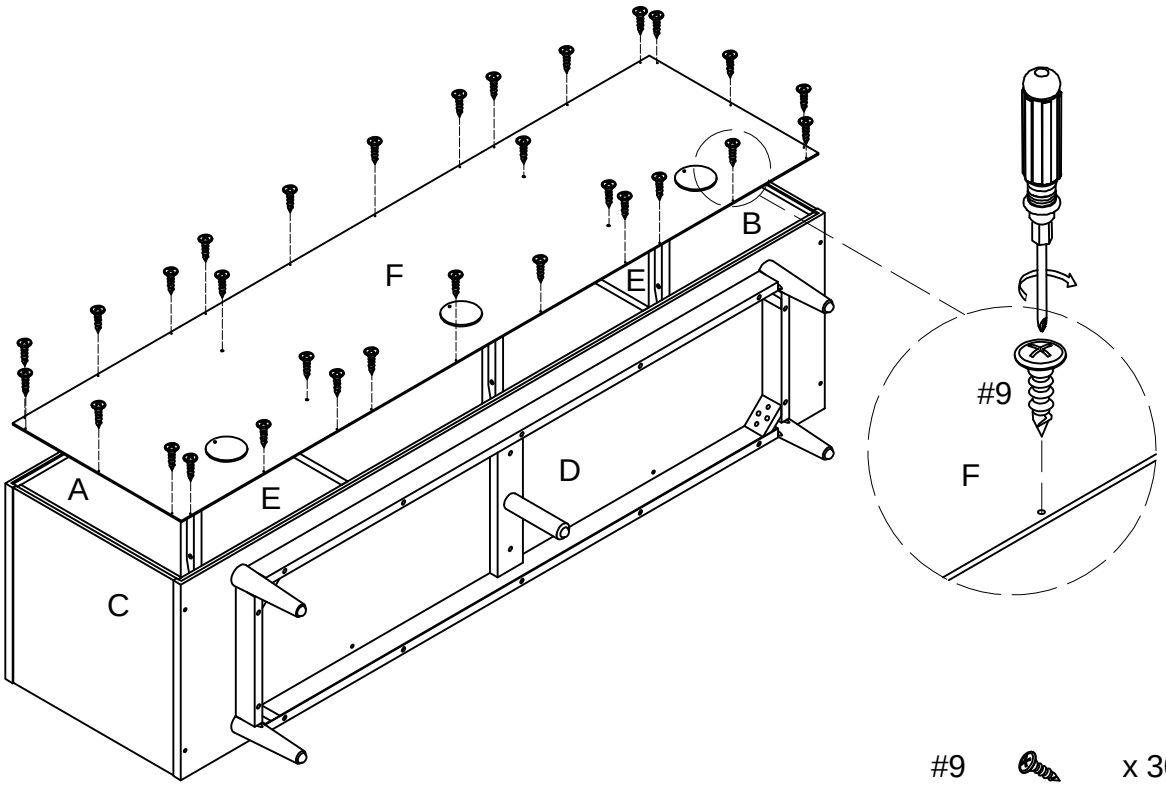


#9 x 30

Step 8. Carefully turn unit upright. Place door holders (part #10) into panels (parts B, C & E) as shown.

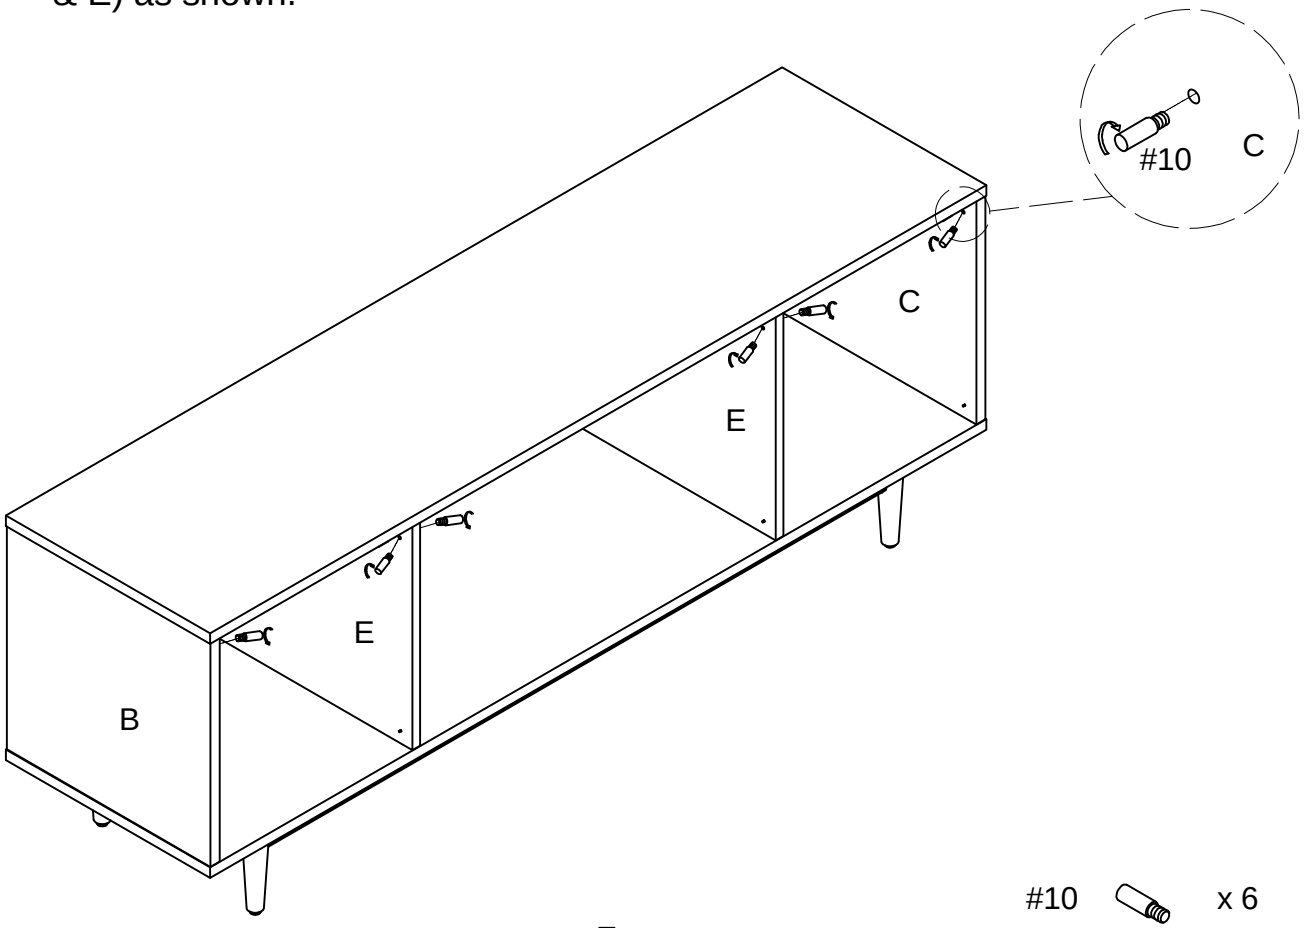



#10 x 6

Step 9. Place doors (parts G & I) flat on the door holder (part #10) and slide into door grooves as shown.

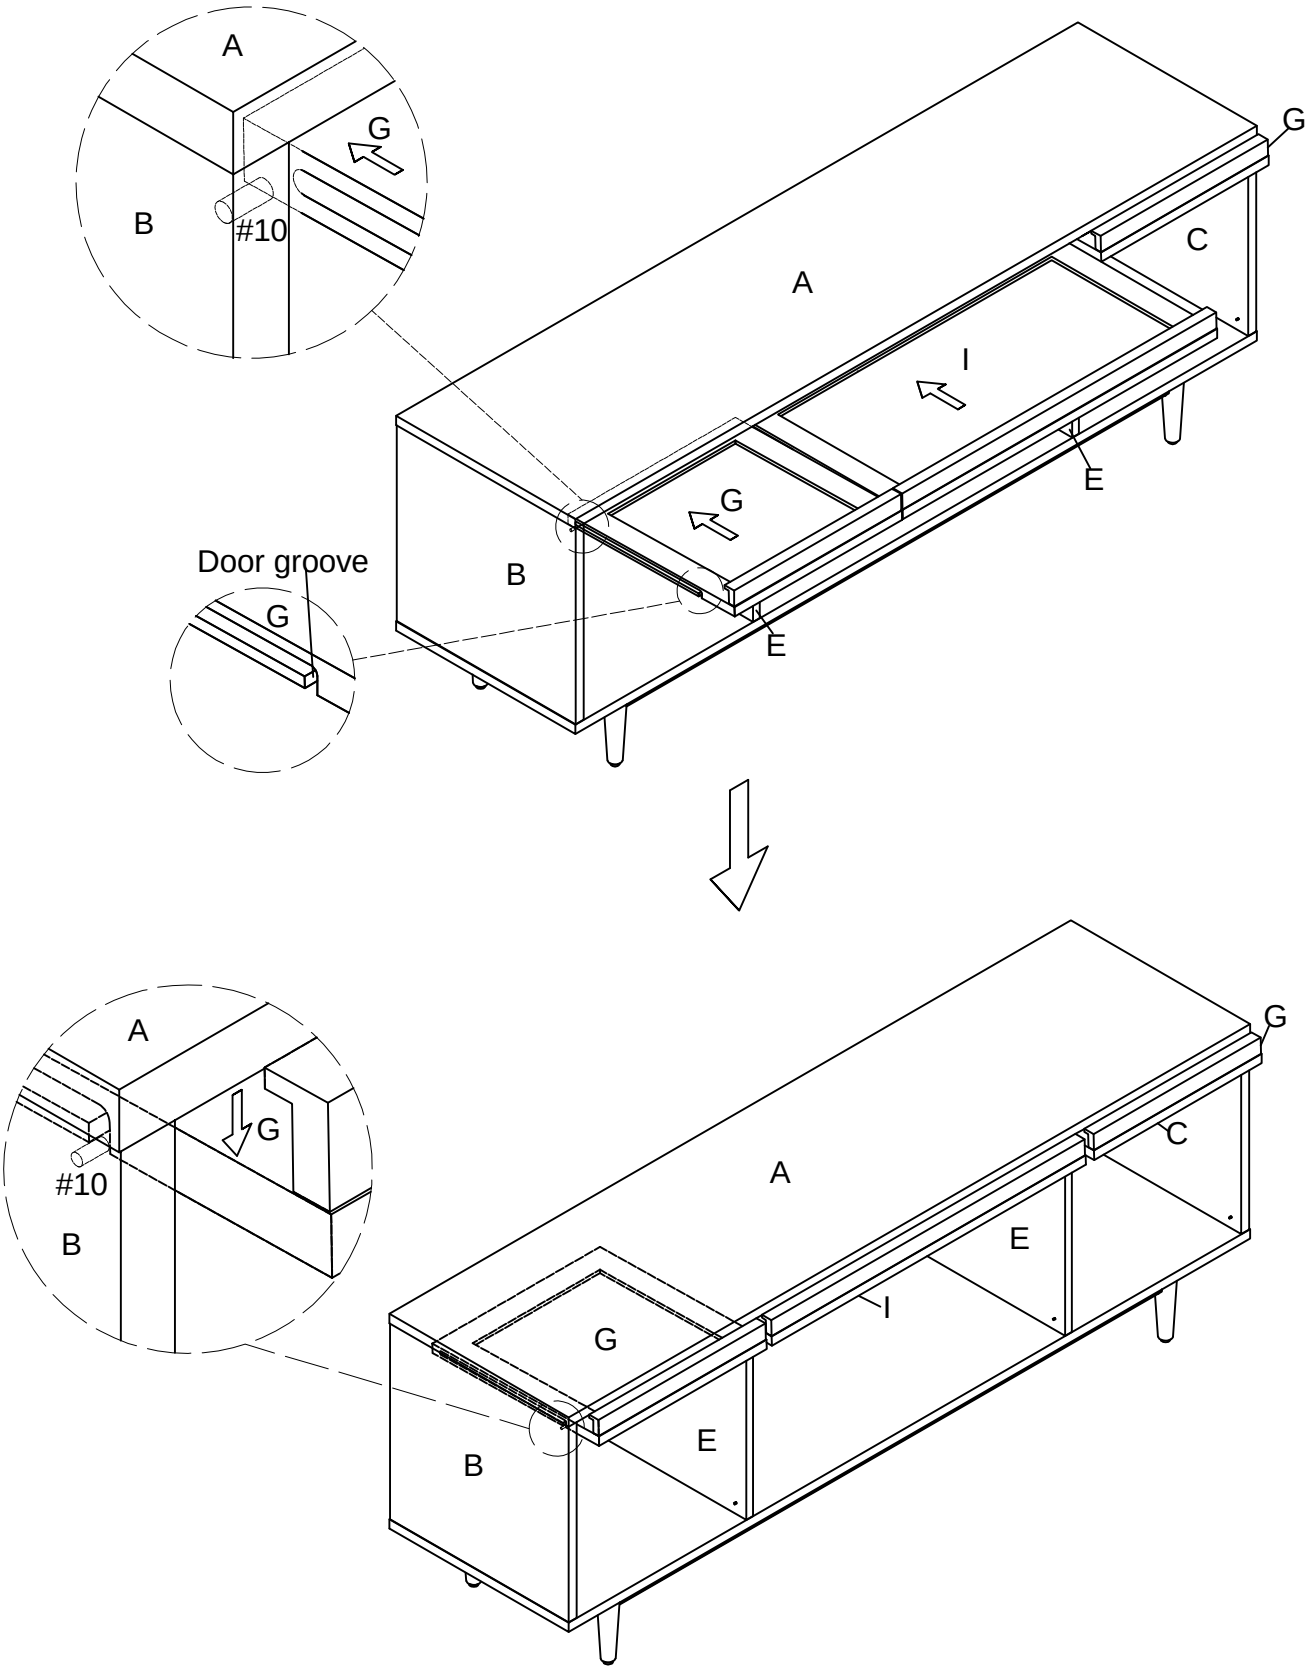

Step 10. Using cam stickers (part #12) cover all cam locks (part #6).
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

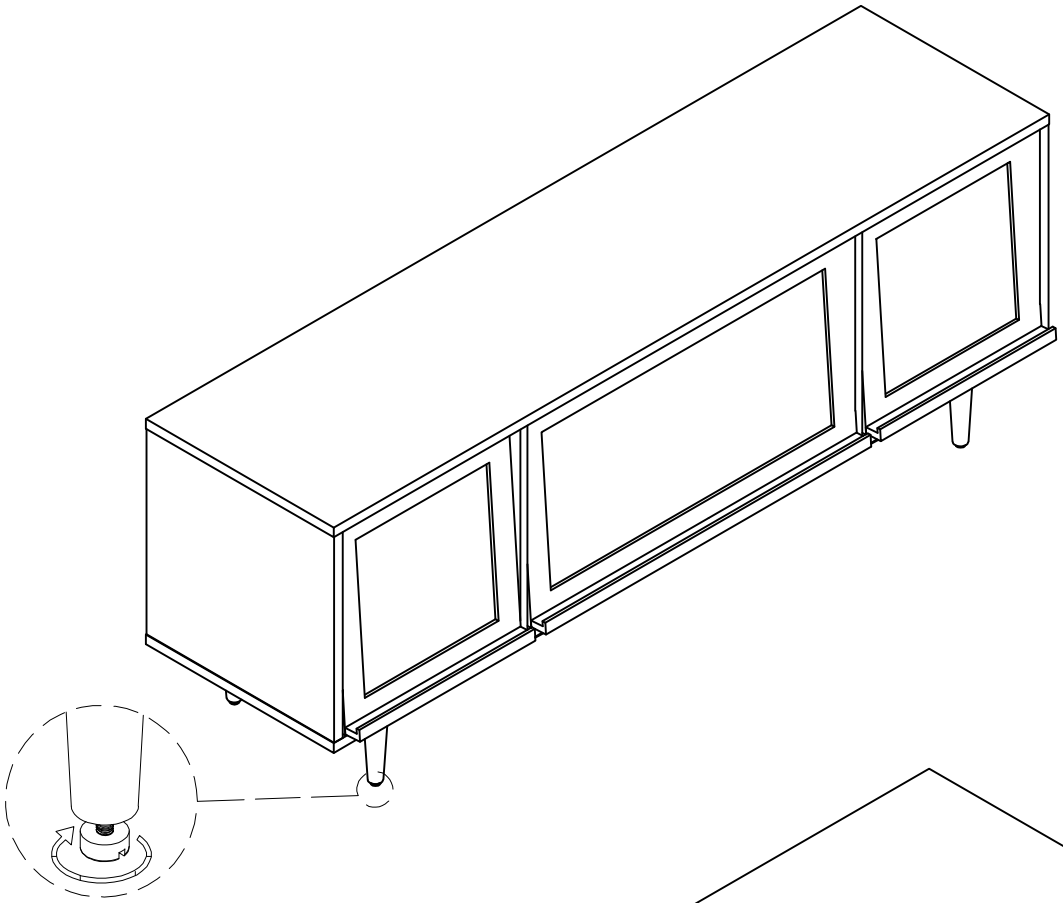

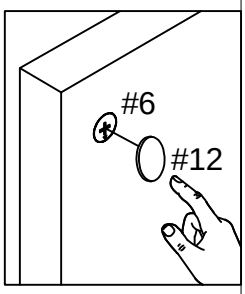

#12 x 8

