










CROSLEY
FURNITURE












Record Player Cabinet with Vinyl Storage
CF1245

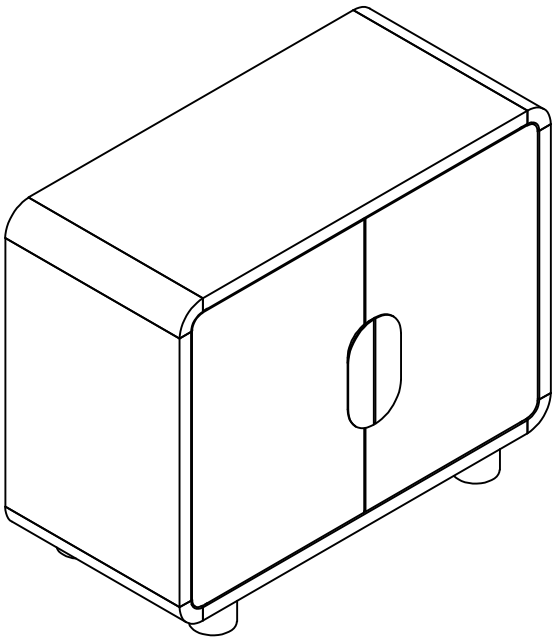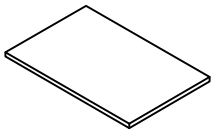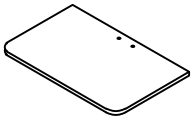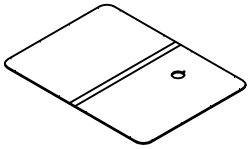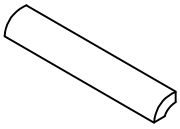

PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Adjustable Shelf 1 PC
F 	G 	H 	I 	J 
Door Panel 2 PCS	Back Panel 1 PC	Corner 4 PCS	Handle 2 PCS	Leg 4 PCS
K 	L 			
Cover 1 PC	Metal Wire 3 PCS			

HARDWARE LIST

#1  Ø10*50mm	#2 	#3 	#4 	#5  7*3*15mm
Wood Dowel 16 PCS (Extra 1)	Cam Bolt 16 PCS (Extra 1)	Cam Lock 16 PCS (Extra 1)	Double Magnet 2 PCS	Screw 4 PCS (Extra 1)
#6  5/32*20mm	#7 	#8  1/4*12mm	#9 	#10 
Round Head Bolt 4 PCS (Extra 1)	Binding Post 1 SET (Extra 1)	Bolt 4 PCS (Extra 1)	Metal Plate 2 PCS	Shelf Holder 4 PCS (Extra 1)
#11 	#12 	#13 	#14  M2	#15  M4
Round Head Screw 16 PCS (Extra 1)	Cam Sticker 16 PCS (Extra 1)	Hex Nut 6 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC
#16 				
Wrench 1 PC				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.

 Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #2) into pre-drilled holes of corners (part H) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.

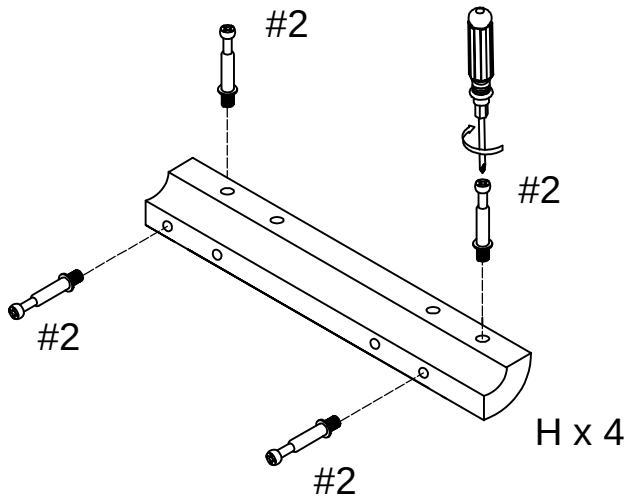

#2 x 16


Step 2. Attach cover (part K) to back panel (part G) using binding post (part #7) and small allen wrench (part #14).

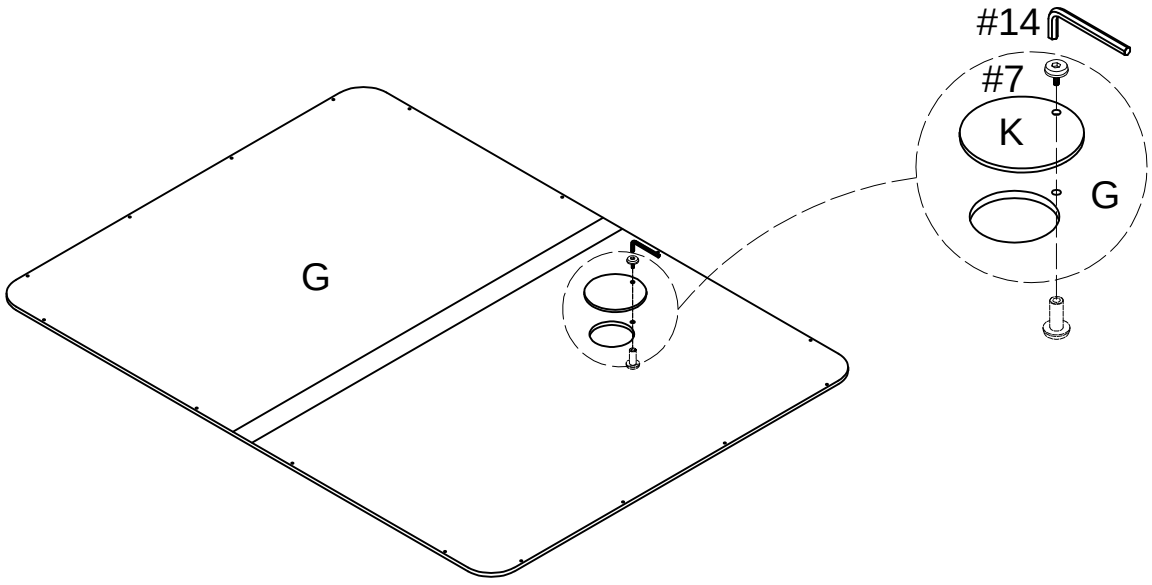

#7 x 1


#14 x 1

Step 3. Attach double magnets (part #4) to panels (parts A & D) using screws (part #5) and phillips head screwdriver.

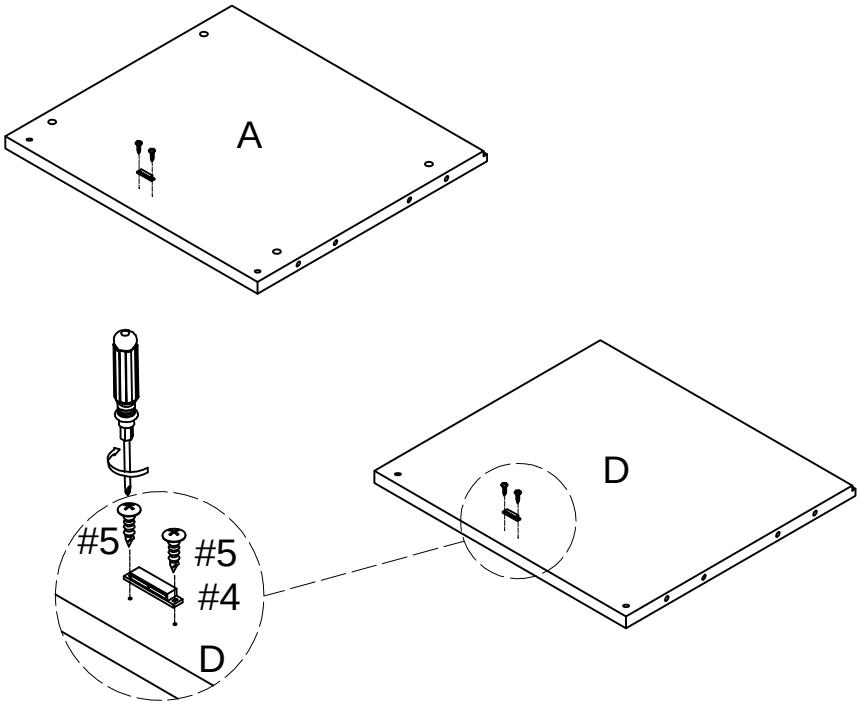


#4 x 2
#5 x 4

Step 4. Attach handles (part I) to door panels (part F) using round head bolts (part #6) and phillips head screwdriver.

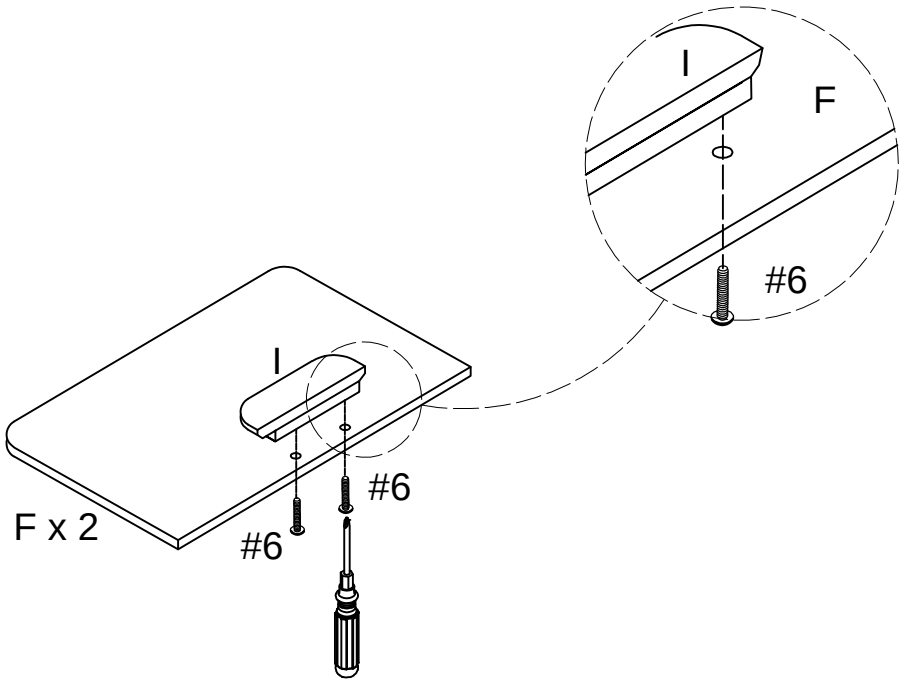

#6 x 4


Step 5. Attach metal wires (part L) to bottom panel (part D) using hex nuts (part #13) and wrench (part #16).

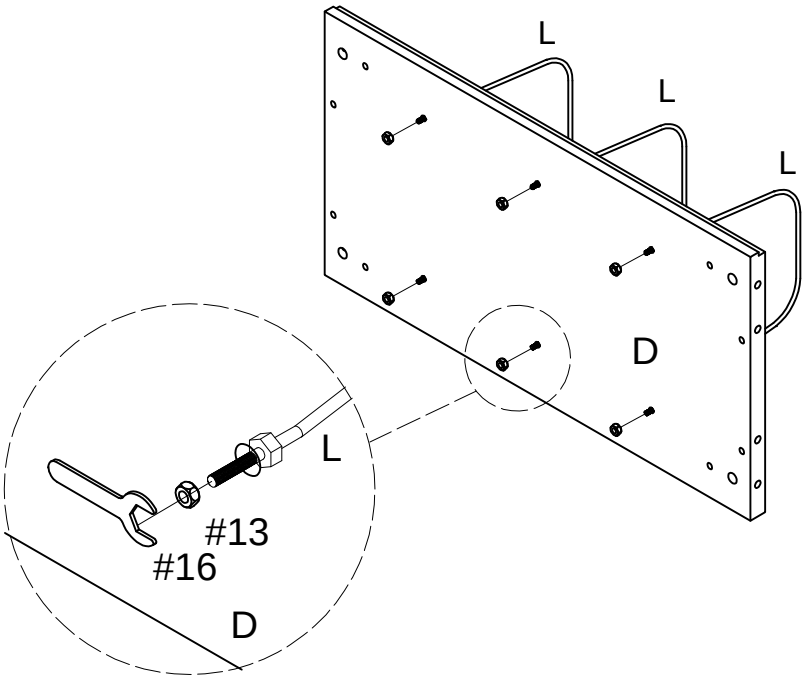


#13 x 6
#16 x 1

Step 6. Attach corners (part H) to panels (parts B & C) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

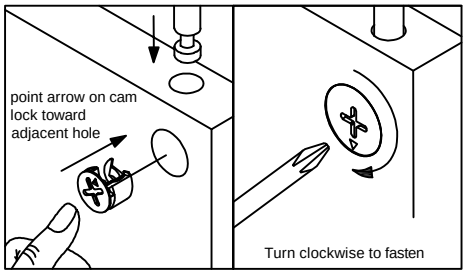


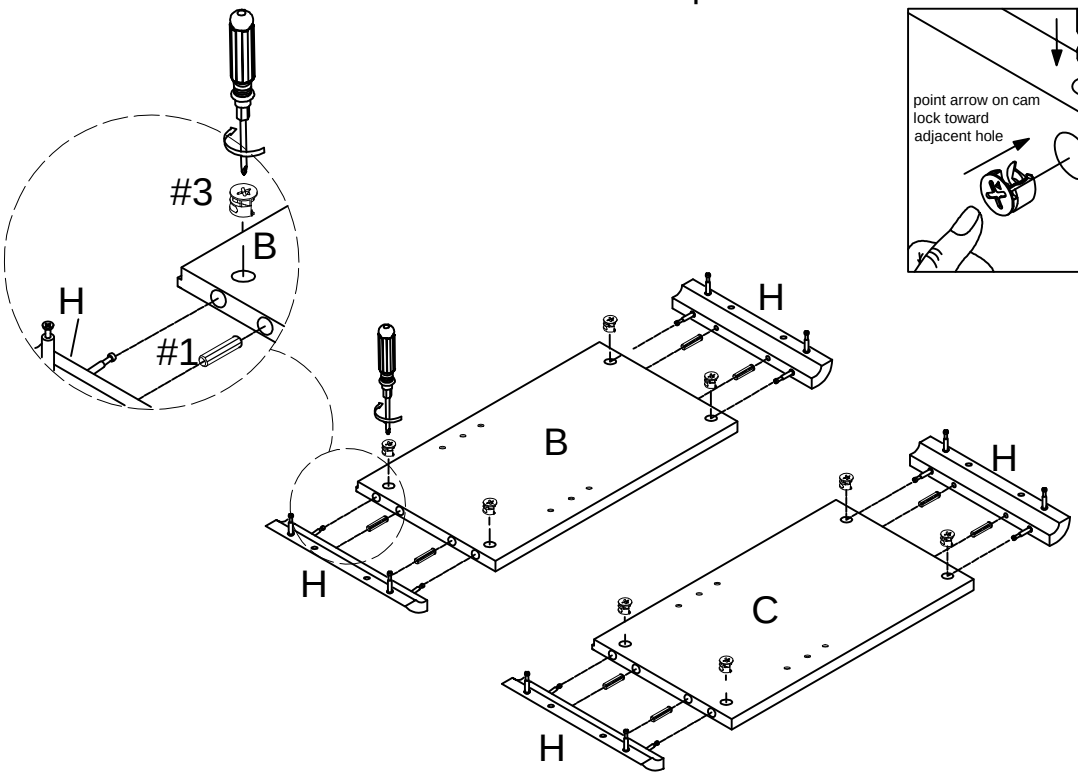


#1 x 8
#3 x 8

Step 7. Attach panels (parts A & D) to assembled unit (parts C & H) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

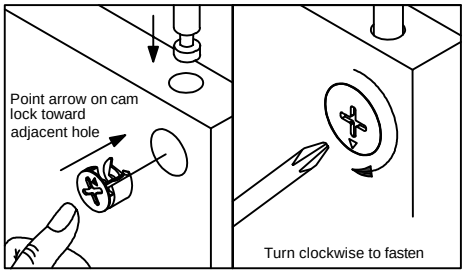

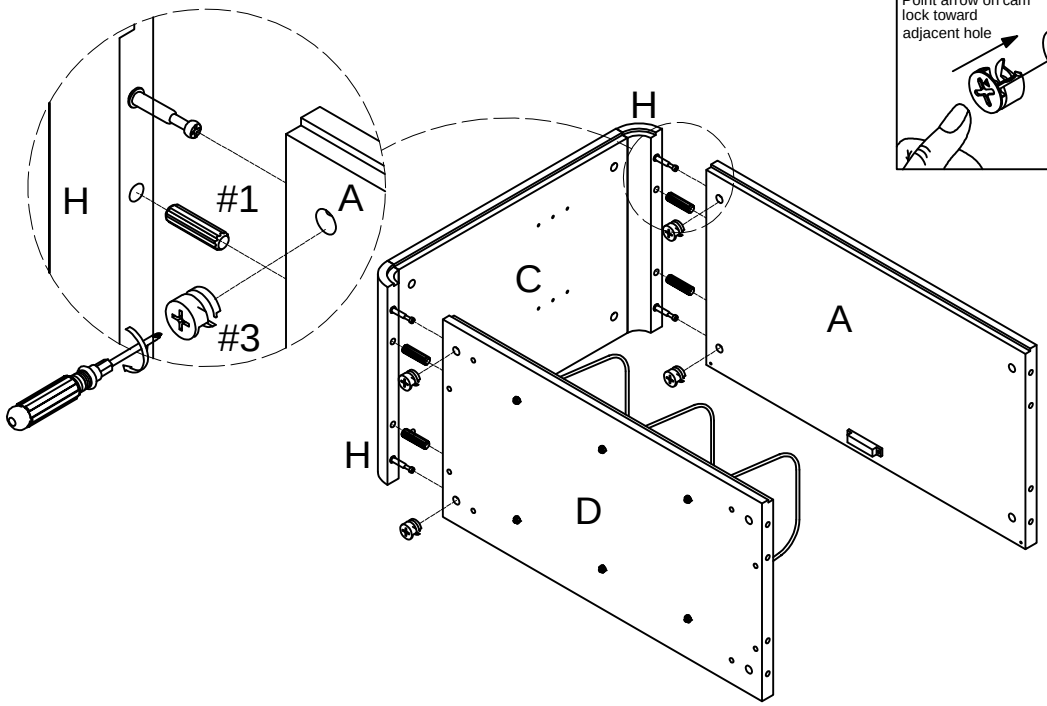



#1 x 4

#3 x 4

Step 8. Attach assembled unit (parts B & H) to assembled unit (parts A & D) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

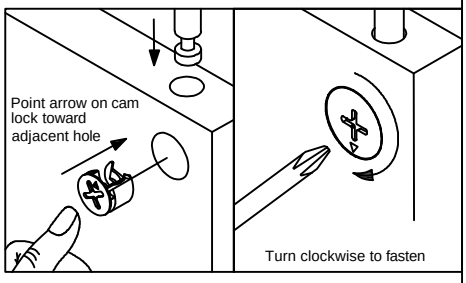


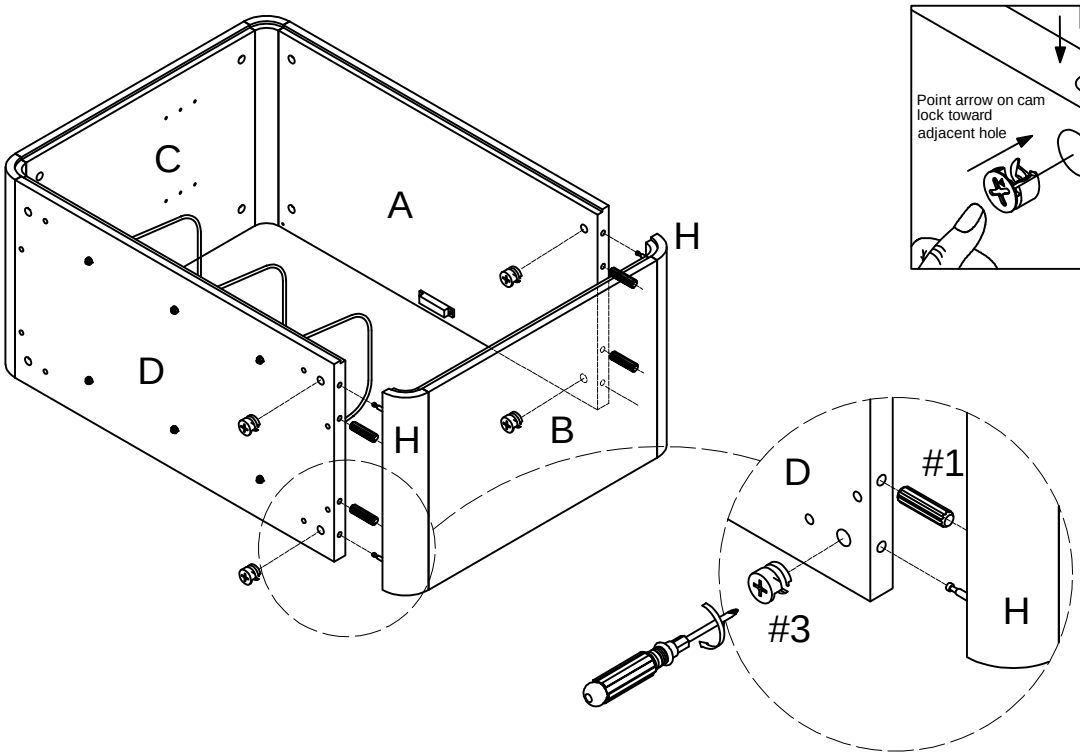

#1 x 4


#3 x 4

Step 9. Attach metal plates (part #9) to bottom panel (part D) using bolts (part #8) and allen wrench (part #15).

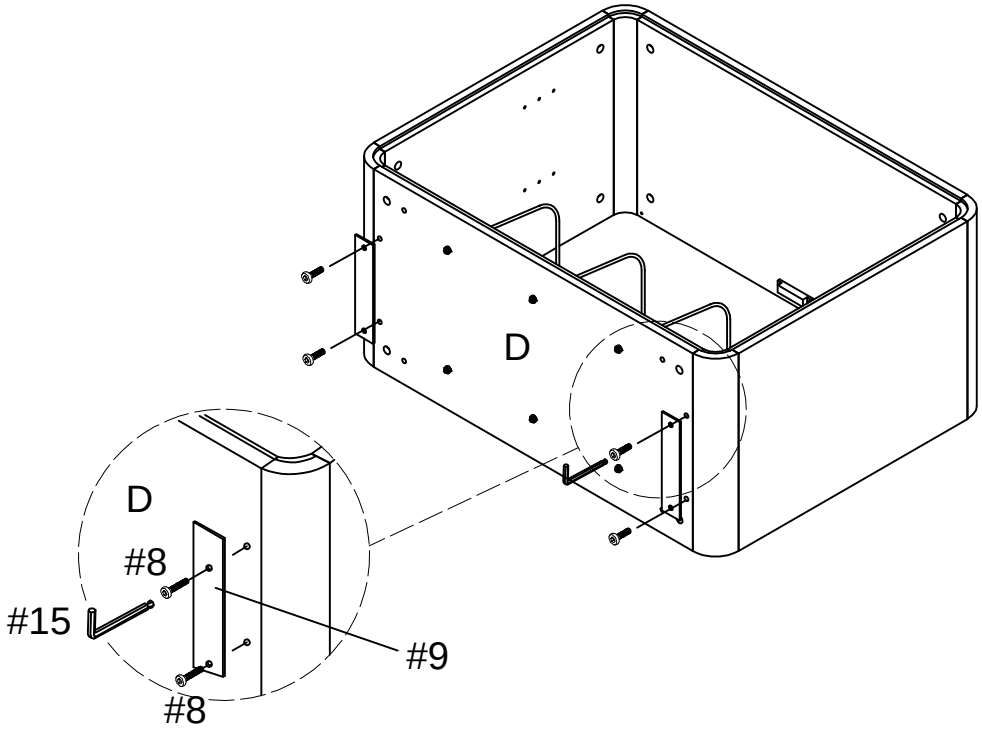


#8 x 4
#9 x 2
#15 x 1

Step 10. Attach legs (part J) to bottom panel (part D).

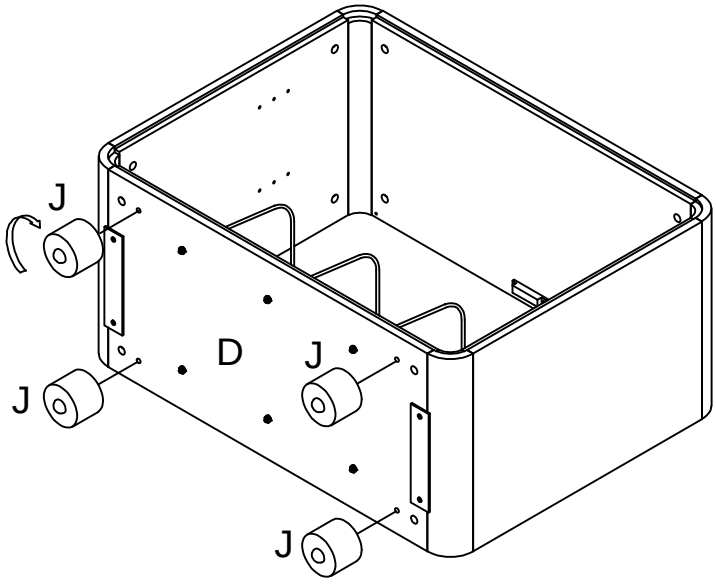



Step 11. Attach back panel (part G) to assembled unit (parts A, B, C & D) using round head screws (part #11) and phillips head screwdriver.

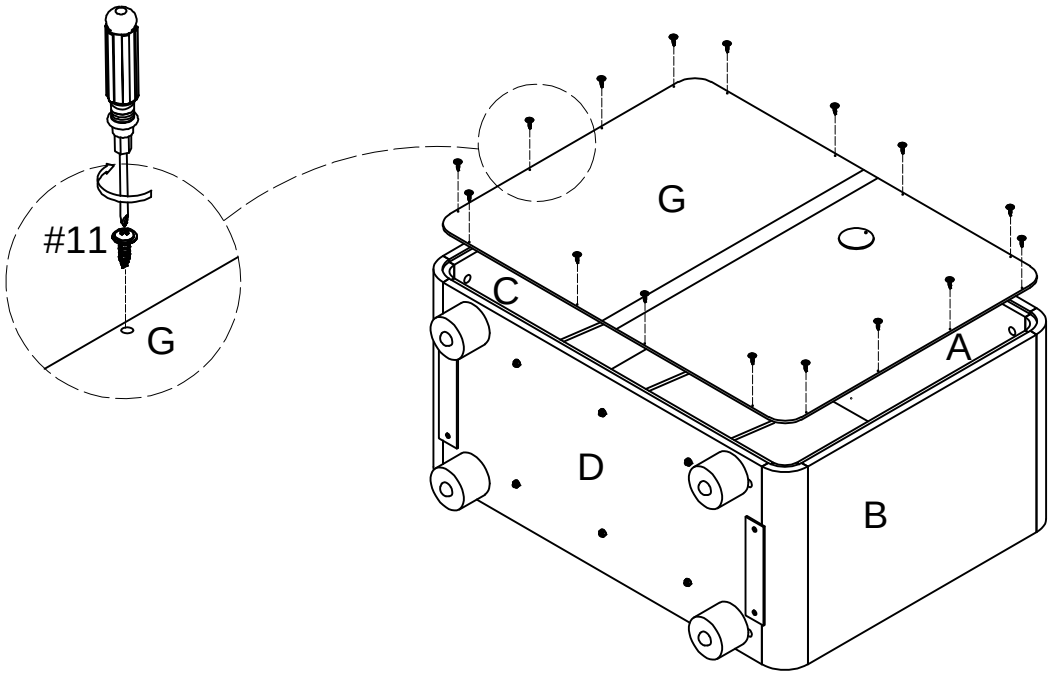

#11 x 16

Step 12. Carefully turn unit upright. Attach cam stickers (part #12) to the hole of cam locks (part #3). Place shelf holders (part #10) into desired position and then slide adjustable shelf (part E) into place.

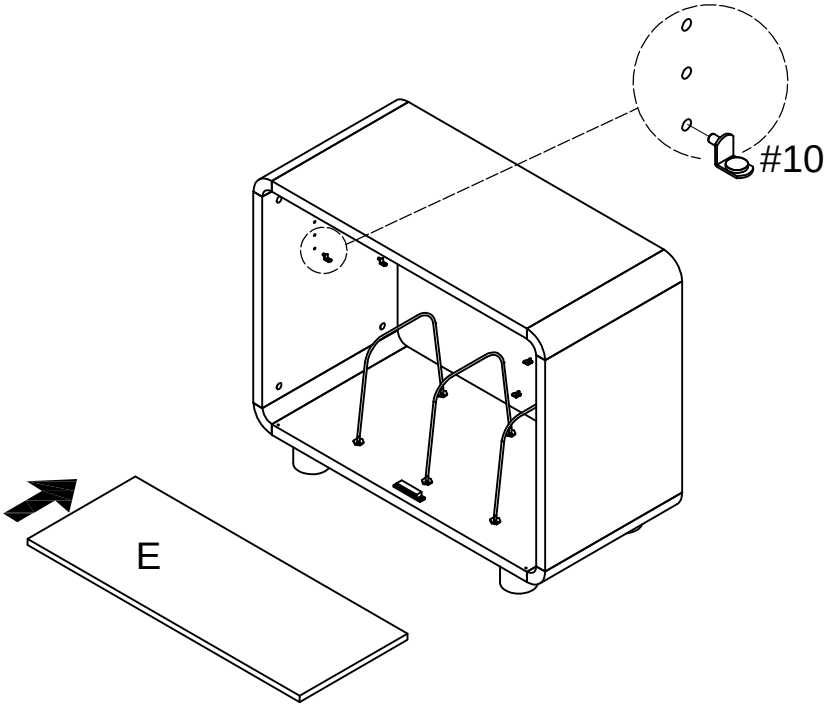

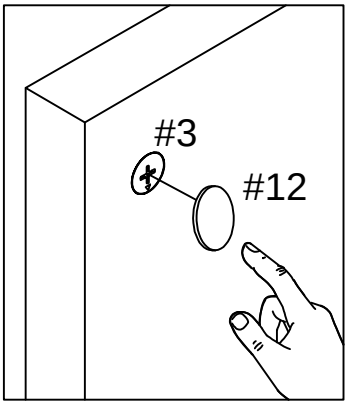

#10 x 4
#12 x 16

Step 13. Attach door panels (part F) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

