










CROSLEY
FURNITURE








Record Player Cabinet
with Vinyl Storage
CF1270

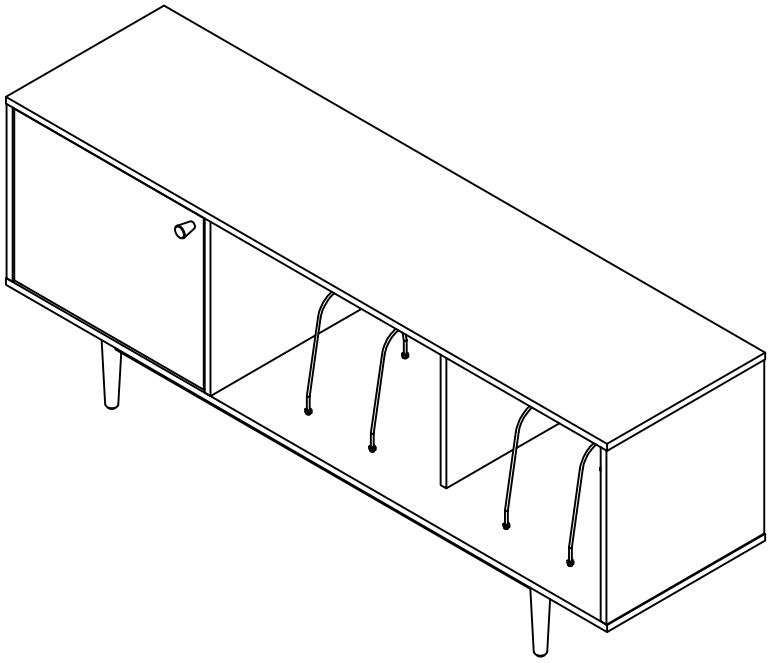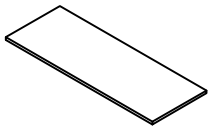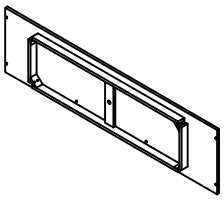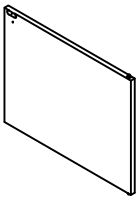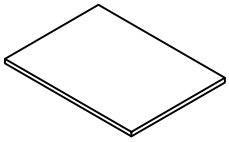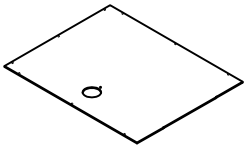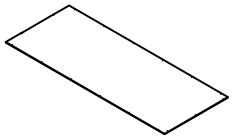

PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Left Partition Panel 1 PC
F 	G 	H 	I 	J 
Right Partition Panel 1 PC	Door 1 PC	Adjustable Shelf 1 PC	Left Back Panel 1 PC	Right Back Panel 1 PC
K 	L 	M 	N 	
Leg 4 PCS	Center Leg 1 PC	Cover 1 PC	Metal Wire 4 PCS	

HARDWARE LIST
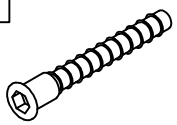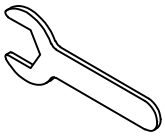
#1  1/4"*45mm	#2  1/4"*10mm	#3  1/4"*13mm	#4  7*38mm	#5 
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Tapping Bolt 8 PCS (Extra 1)	Cam Bolt 8 PCS (Extra 1)
#6 	#7  8*30mm	#8 	#9  3*15mm	#10 
Cam Lock 8 PCS (Extra 1)	Wood Dowel 16 PCS (Extra 1)	Magnet 1 PC	Round Head Screw 2 PCS (Extra 1)	Knob 1 PC
#11  5/32"*20mm	#12  8*3*12mm	#13 	#14 	#15 
Round Head Bolt 1 PC (Extra 1)	Screw 27 PCS (Extra 1)	Hex Nut 8 PCS (Extra 1)	Shelf Holder 4 PCS (Extra 1)	Binding Post 1 SET (Extra 1)
#16 	#17  M2	#18  M4	#19 	
Cam Sticker 8 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC	Wrench 1 PC	

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #5) into pre-drilled holes of top panel (part A) using phillips head screwdriver. Attach magnet (part #8) to top panel (part A) using round head screws (part #9) and phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

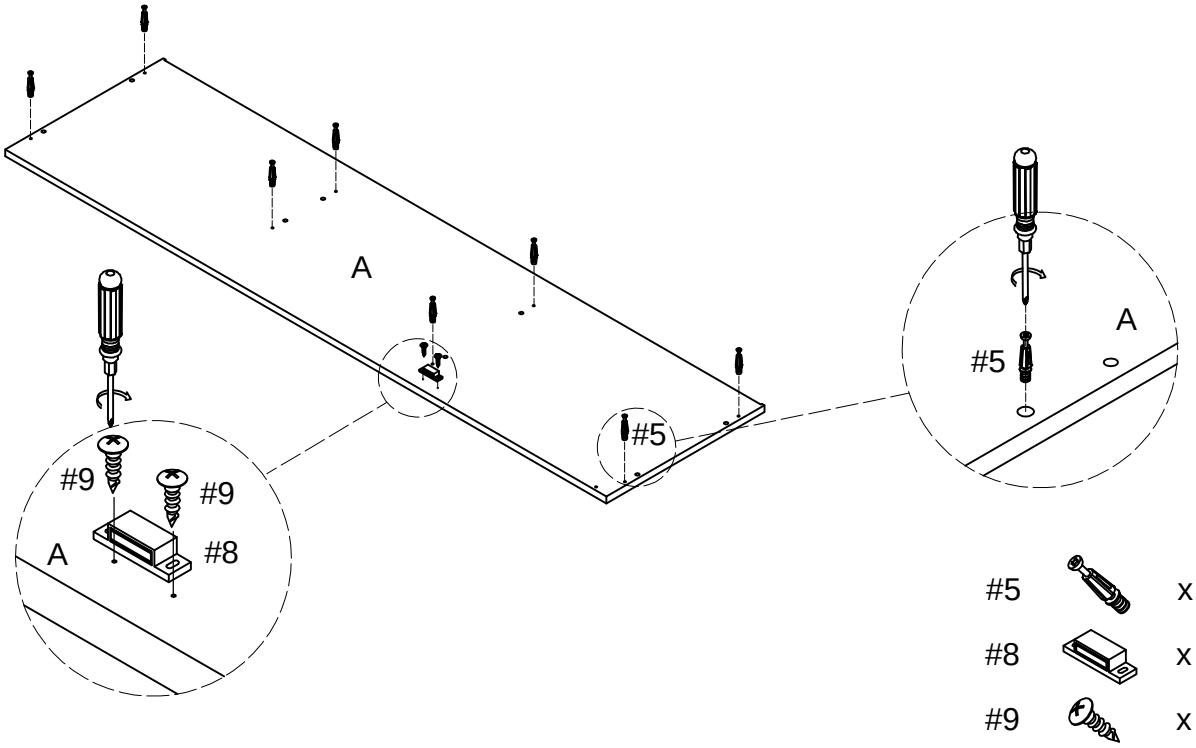


#5		x 8
#8		x 1
#9		x 2

Step 2. Attach cover (part M) to left back panel (part I) using binding post (part #15) and small allen wrench (part #17).

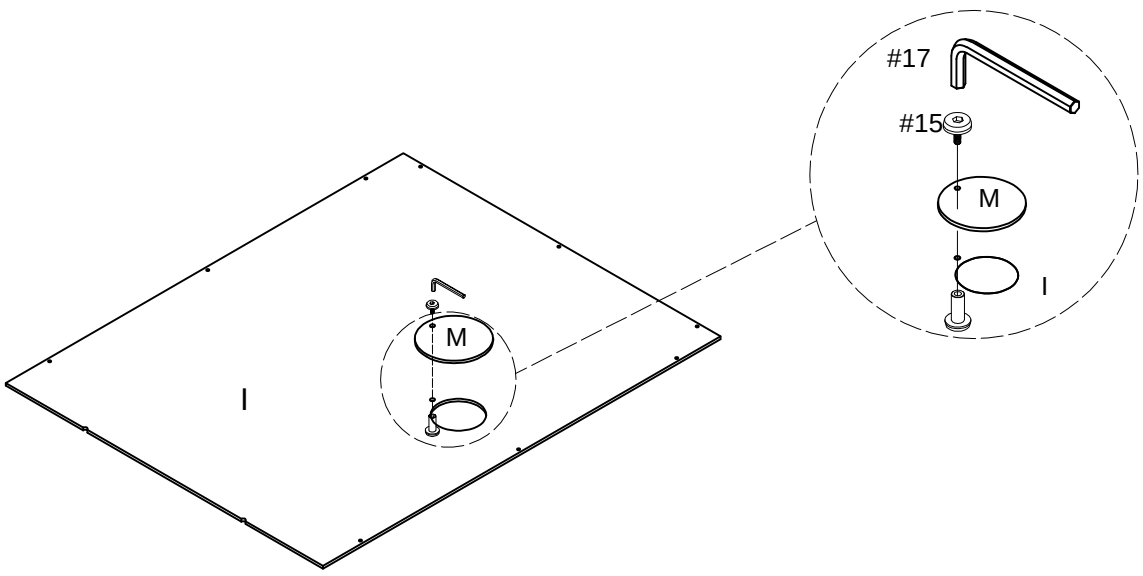


#15		x 1
#17		x 1

Step 3. Attach legs (part K) to bottom panel (part D) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #18). Attach center leg (part L) to bottom panel (part D).

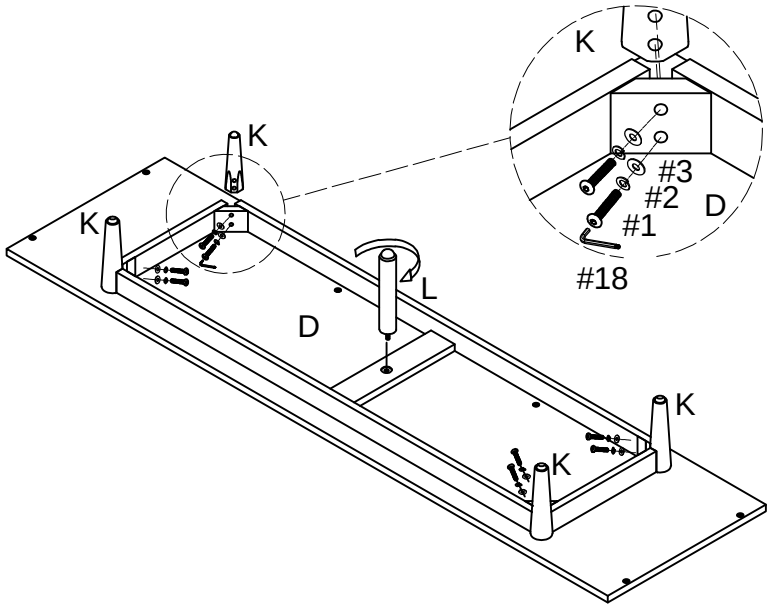


#1		x 8
#2		x 8
#3		x 8
#18		x 1

Step 4. Attach metal wires (part N) to bottom panel (part D) using hex nuts (part #13) and wrench (part #19).

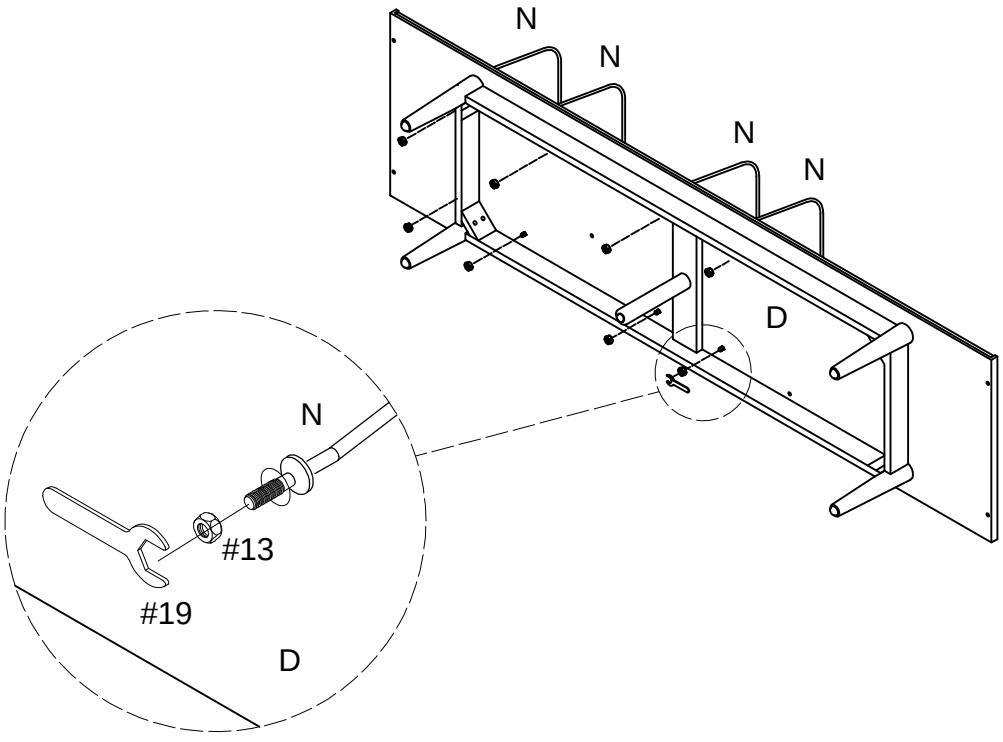


#13		x 8
#19		x 1

Step 5. Attach knob (part #10) to door (part G) using round head bolt (part #11) and phillips head screwdriver.

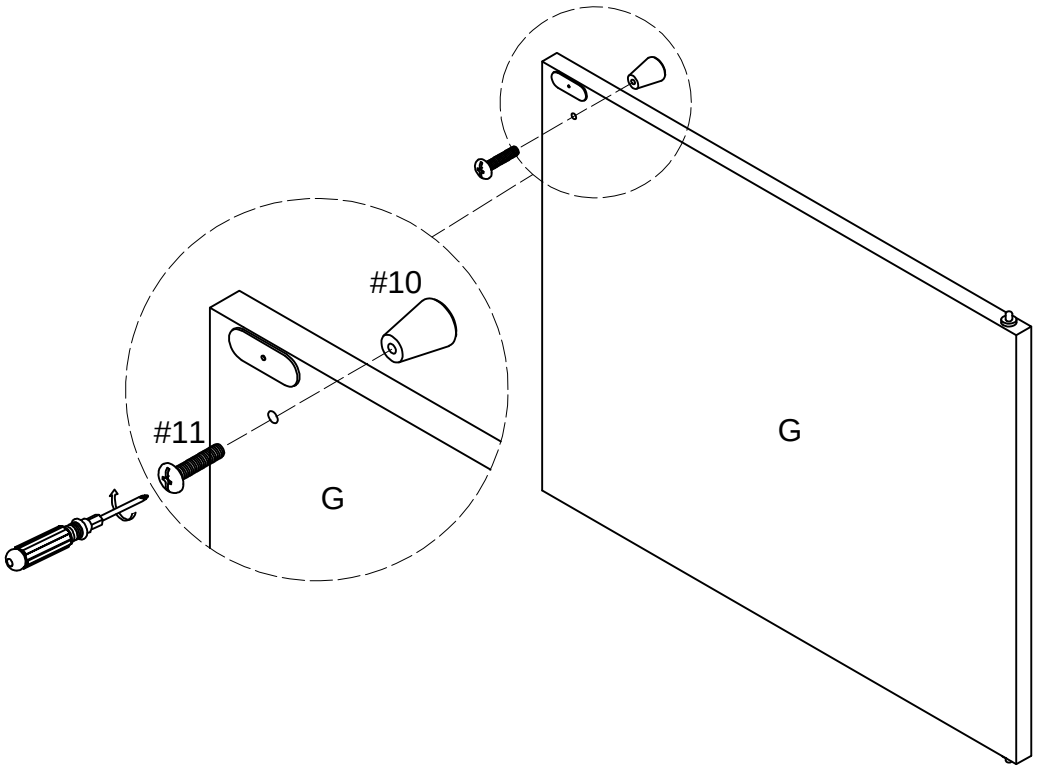


#10		x 1
#11		x 1


Step 6. Attach panels (parts B, C, E & F) to bottom panel (part D) using tapping bolts (part #4), wood dowels (part #7) and allen wrench (part #18).

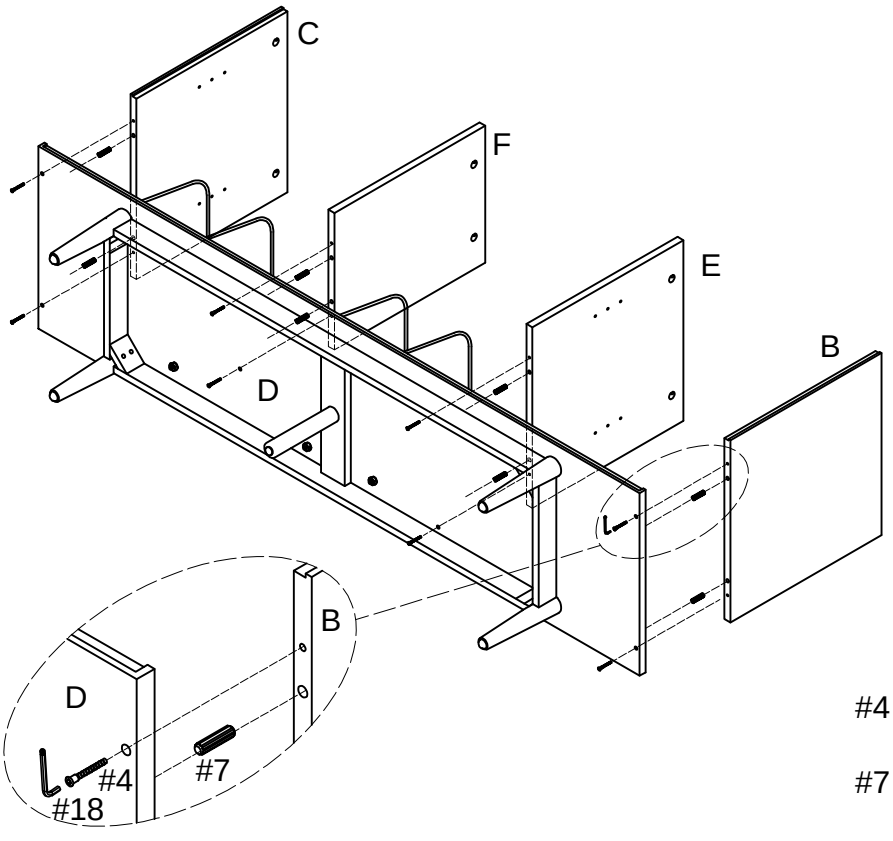

#4		x 8
#7		x 8
#18		x 1

Step 7. Attach top panel (part A) to assembled unit (parts B, C, E & F) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

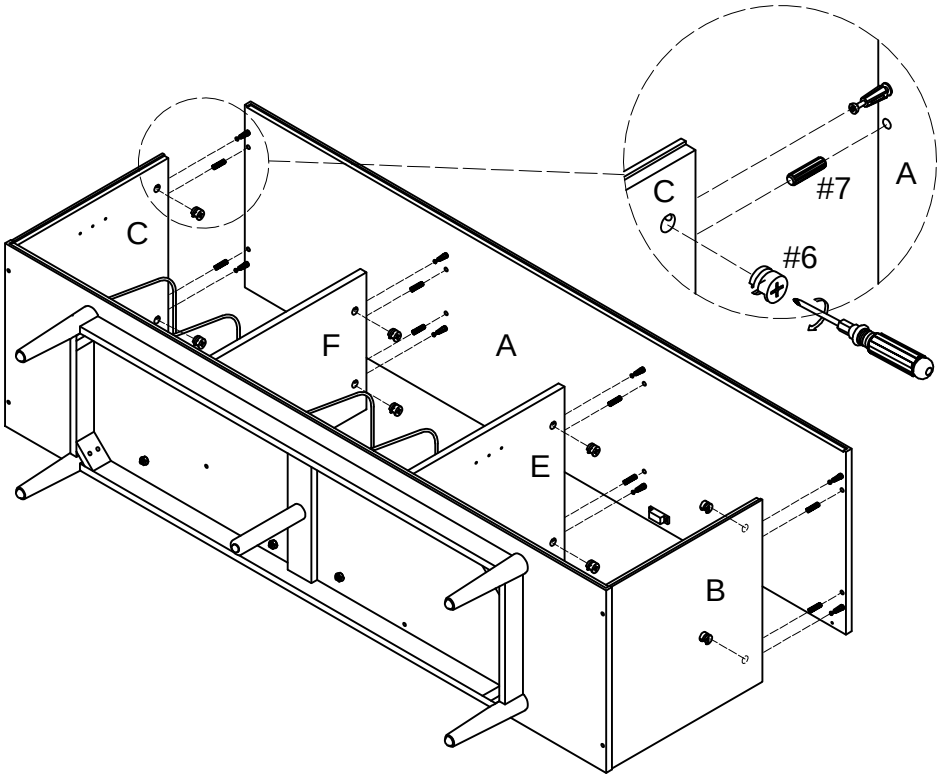


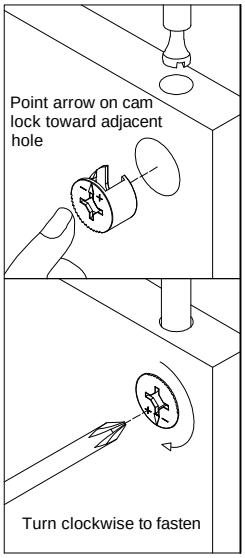

#6 x 8

#7 x 8


Step 8. Attach back panels (parts I & J) to assembled unit (parts A, B, C, D, E & F) using screws (part #12) and phillips head screwdriver.

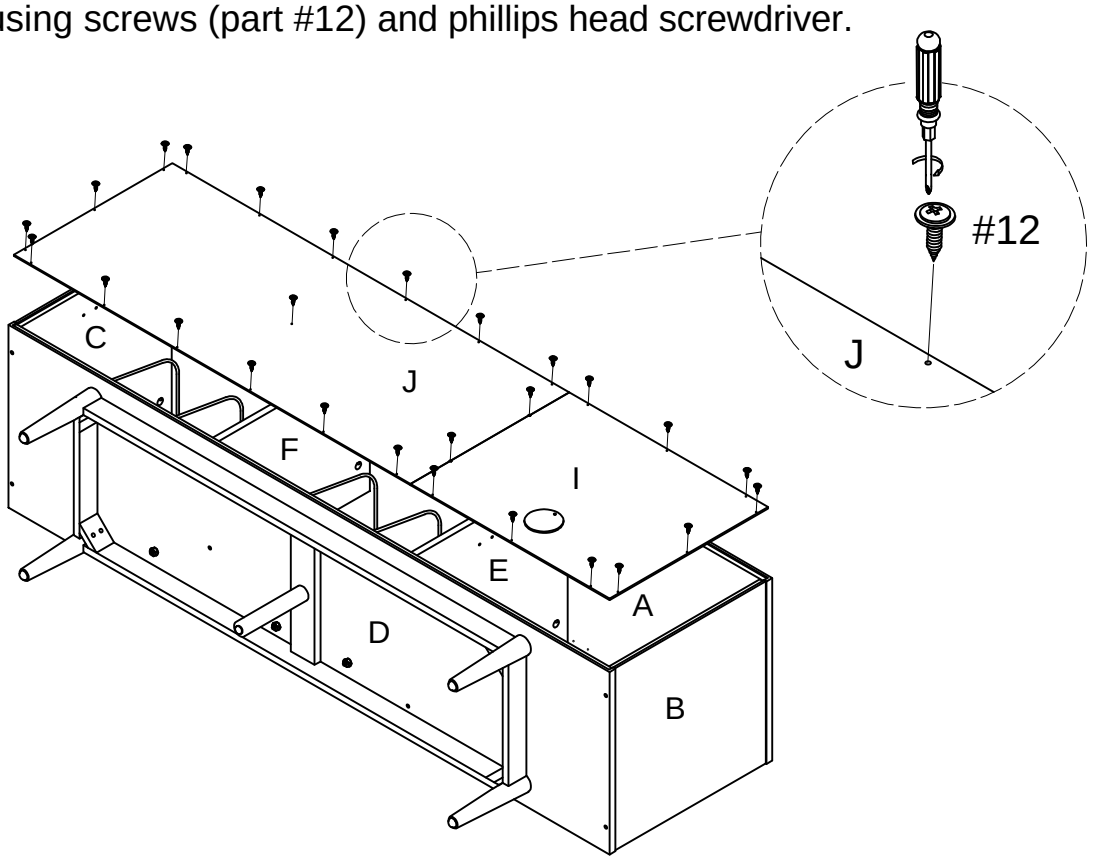


#12 x 27

Step 9. Carefully turn unit upright. Attach door (part G) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge in the pre-drilled hole of top panel (part A).

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

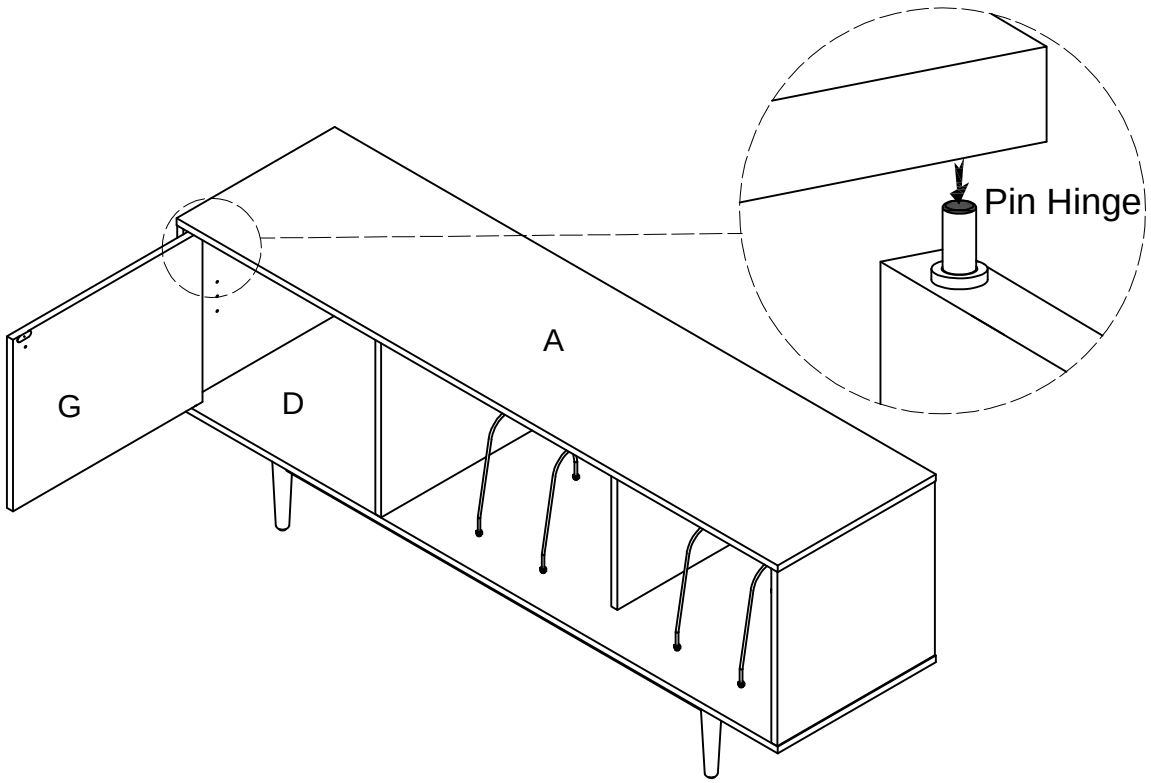


Step 10. Place shelf holders (part #14) into desired position and slide adjustable shelf (part H) into place.

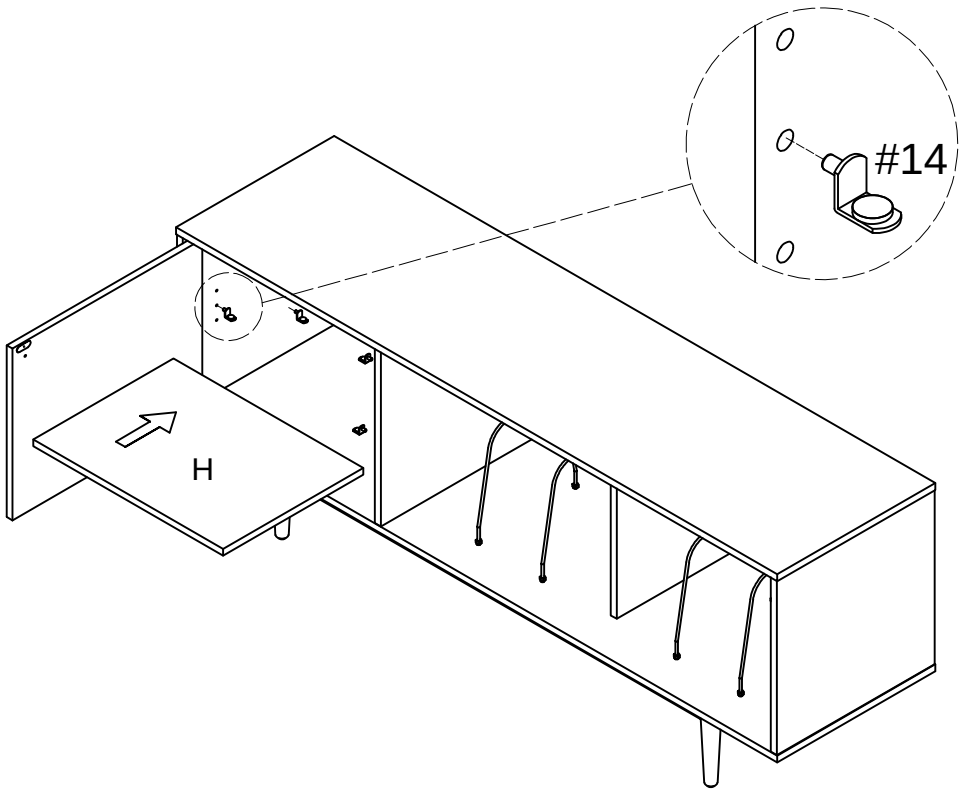


#14 x 4

Step 11. Using cam stickers (part #16) cover all cam locks (part #6).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

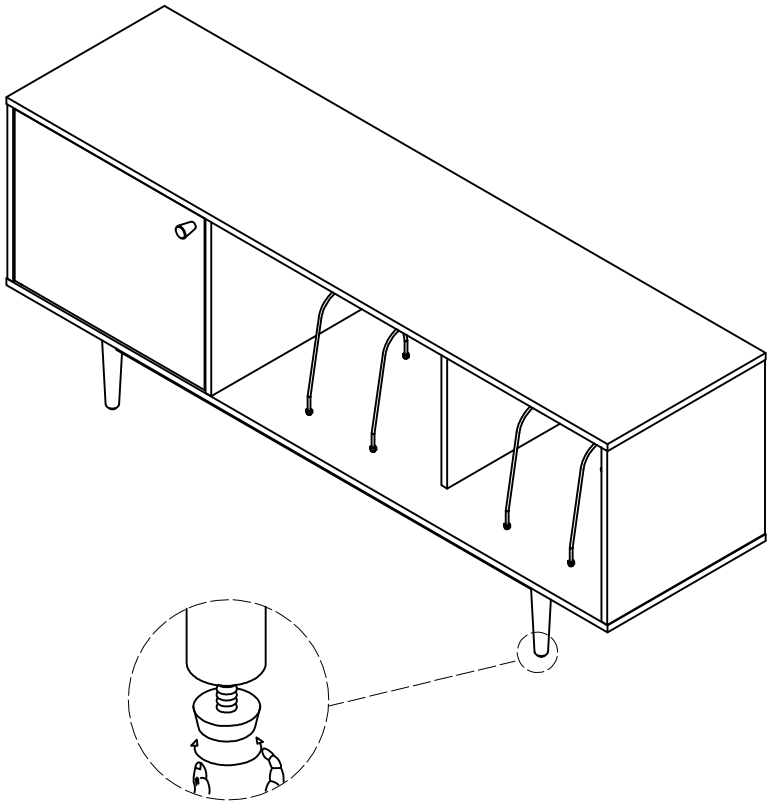

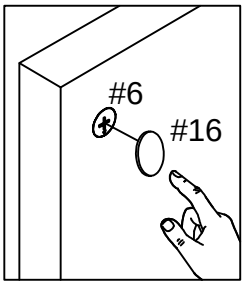

#16 x 8

