



DØRKLOKKE 2900 MP3 - MY SOUND



I denne manual beskrives produktet, og vi anbefaler Dem at læse denne grundigt igennem, så korrekt anvendelse sikres. Manualen bør opbevares så længe produktet er i brug.


QUICKGUIDE - KOM HURTIGT I GANG:

- Isæt batterier i modtager (dørklokke).
 - Fjern batteristrip ved batteriet i dørtrykket
 - Tryk 1 gang på dørtrykket og sættet kodes automatisk. Koden kan ændres - se separat afsnit „Kodning“
 - Test før endelig montering.
- For yderligere information læs efterfølgende brugsanvisning.


PAKKEN INDEHOLDER:

- Dørklokke (modtager) som anbringes i boligen
- Dørtryk (sender) som anbringes ved dør/indgang
- USB kabel
- Fittings
- Manual dansk/engelsk

PRODUKTSPECIFIKATION:

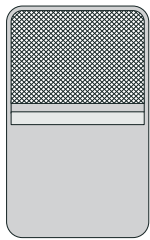

Dørklokke



Dørtryk



USB kabel


FUNKTION:

Når dørtrykket aktiveres sendes et trådløst signal til dørklokken hvorpå flashlyset vil blinke og den valgte melodi afspilles. Dette kan indstilles på dørklokkens side - se afsnittet „Lys/lyd“. Lyden stopper når den valgte ringetone er gennemført. (se afsnittet „valg af ringetone“). Tryk igen for gentagelse. Holdes knappen nede, gentages lyden ikke! Klokken har desuden indbygget MP3 funktion som gør det muligt at downloade og anvende egne valgte ringetoner.

Bemærk! Rækkevidden kan begrænses af vægge og andre lokale forhold. (Se også afsnittet „Rækkevidde“).

MONTERING/SKIFT AF BATTERIER - DØRTRYK:

- Fjern bagpladen ved at tappen i bunden trykkes forsigtigt ind. Brug evt. en flad skruetrækker.
- Monter bagpladen på dørkarmen med 2 skruer eller dobbeltklæbende tape.
- 1 x 3 Volt lithium CR2032 batteri er ved levering isat. Fjern plaststrip som er fastklemt ved batteriet.
- Klik fronten på bagpladen igen.

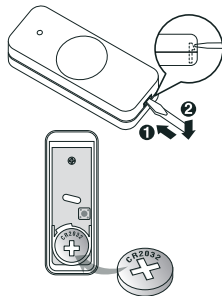


Bemærk - Rækkevidden reduceres væsentligt hvis dørtrykket monteres på en metal/aluminium overflade. Se desuden afsnittet vedr. „Kodning - ændring af kode“

MONTERING/SKIFT AF BATTERIER

- DØRKLOKKE:

- Fjern batteridækslet ved at trykke det forsigtigt nedad.
- Isæt 3 stk. 1,5V alkaline, type LR6 („AA“) batterier (medfølger ikke). Bemærk korrekt placering af + og - pol.
- Monter dæksel igen.

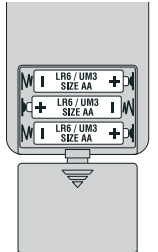


LYS/LYD:

Valg af lys/lyd fortages på knappen på dørklokkens side. Der kan indstilles følgende:

Light - kun flash lys vil blinke

Sound only - kun melodi - ingen flash lys

Sound/Light - både melodi og flash lys vil blinke

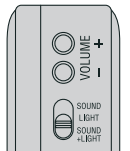

IBRUGTAGNING/DRIFT:

Tryk én gang på dørtrykket og dette vil sende signal til dørklokken, som afgiver akustisk signal. (Dørtryk medfølger ikke) Dørklokken er klar til brug og kan både anvendes hængende på et søm i væggen, som transportabel dørklokke rundt omkring i huset eller stående på en flad overflade.

Bemærk! Hvis dørklokken ringer utilsigtet kan koden ændres således at den ikke forstyrres af udefra kommende signaler. Se afsnittet „Kodning“.

KODNING - ÆNDRING AF KODE:

Dørklokken kodes automatisk når dørtrykket aktiveres første gang. Hvis klokken ringer utilsigtet eller slet ikke, bør koden ændres - følg proceduren nøje:

- Fjern batterierne i BÅDE dørtryk og dørklokke i ca. 15 sek. - herved "nulstilles" kodningen
- Monter igen batterier i både dørklokke og dørtryk. Dørtrykket genererer en ny tilfældig kode som sendes til dørklokken ved 1. aktivering (tryk)
- Tryk 1 gang på dørtrykket og dørklokken vil ringe for at bekræfte den ny kode.

KODNING - 2 ELLER FLERE DØRTRYK TIL SAMME DØRKLOKKE:

Tryk og hold „code“ knappen på dørklokkens side inde i ca 1-2 sekund. Dørklokken vil afgive et lille bip som indikation på at den er klar til at modtage endnu en kode. Aktiver dørtryk nr. 2 inden for 5 sekunder. Herved genereres en ny kode som lagres i dørklokken. Gentag proceduren for alle



Varenr.: 32955
DB nr.: 2086163
EAN: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DØRKLOKKE 2900 MP3 - MY SOUND

2 ÅRS
GARANTI



dørtryk. Der kan maksimalt anvendes 4 dørtryk til samme dørklokke. Brug model 32970, 32971 og 32408.

Husk at gentage proceduren ved hvert batteriskift, eller hvis klokken ringer utilsigtet.

NULSTILLING AF KODNING:

Fjern alle batterier i både dørtryk og dørklokke og gentag proceduren beskrevet i afsnittet „Kodning“


VALG AF RINGETONE - FASTE/MP3 LYDFILER:

Der kan vælges mellem 8 faste ringetoner eller 8 downloadede lydfile. Vælg mellem faste eller MP3 filer på knappen på dørklokkens side „chime - MP3“



Skift mellem ringetoner/lydfile foretages ved et LET tryk på omskifteren som findes i dørtrykkets batterirum.

Denne funktion gør det muligt at vælge forskellige ringetoner til f.eks bag- og fordør.

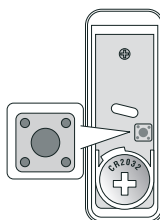

Faste ringetoner:

- | | |
|----------------|------------|
| 1. Westminster | 5. Piano 1 |
| 2. Ding Dong | 6. Piano 2 |
| 3. Xylofon 1 | 7. Trommer |
| 4. Xylofon 2 | 8. Klokke |

DOWNLOAD AF EGEN MUSIK:

Opret en mappe på din PCs skrivebord. Forbind USB kablet til din PC og dørklokken. Efter et par sekunder vil musik programmet automatisk starte og vises på din PC.

Bemærk - hvis programmet ikke startes automatisk dobbeltklik på „min computer“ og derefter på „CDROM“ ikonet. I enkelte versioner af windows skal man efterfølgende også dobbeltklikke også på ikonet „MusicPlayer“

Programmet understøtter windows 2000, XP, Vista og windows 7, 8 & 10.

VIGTIGT - de nye ringetoner (melodier) er først lagret i dørklokken efter synkronisering. Følg nedenstående vejledning nøje.

OPSTART / AUTORUN:

Efter automatisk opstart vil musikprogrammet vises på din PC. I kolonnen „my computer“ vises dine programmer og filer.

Bemærk - hvis programmet ikke startes automatisk dobbeltklik på „min computer“ og derefter på „CDROM“ ikonet. I enkelte versioner af windows skal man efterfølgende også dobbeltklikke på ikonet „MusicPlayer“

REDIGERING:

Det kan være en fordel at „redigere/klippe“ din musik så længden tilpasses som ringetone - ca. 8-16 sekunder.

Klik én gang på din musikmappe i kolonnen „my computer“ - Herved vises alle musikfiler i kolonnen „music“ - fig. 1.

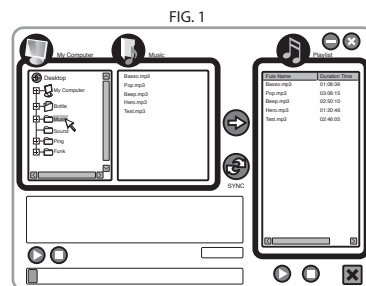


FIG. 1

Klik én gang på det musikstykke som skal redigeres. Efter et par sekunder vises filen i redigeringsdisplayet - fig. 2.

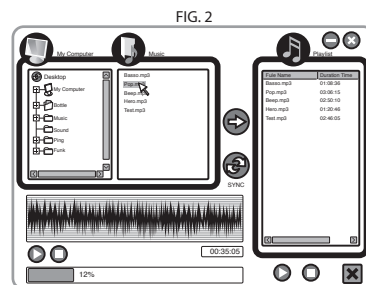


FIG. 2

Hold venstre museknapp nede og marker det stykke af musikfilen som skal bruges som ringetone. Du kan afspille stykket ved at trykke på den blå „afspil“ knap. Ringesignalets/filens længde ses i displayet under redigeringsdisplayet - fig. 3.

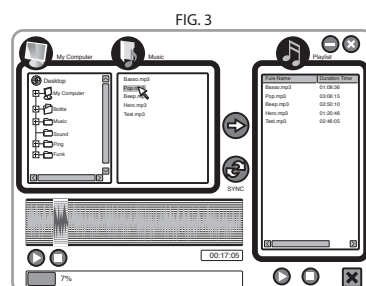


FIG. 3

Overfør til playlisten:

Efter redigering af musikstykket overføres filen til playlisten ved at trykke én gang på den grønne „pil“ knap midt på siden. Herved importeres lydfilen til playlisten - fig. 4.

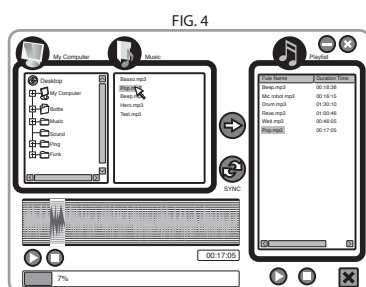


FIG. 4

Bemærk - Det er kun muligt at lagre i alt 8 melodier på playlisten. Hvis listen allerede indeholder 8 filer skal der slettes 1 eller flere filer fra playlisten før der kan overføres de nye filer.

AFSPIL / SLET RINGETONER:

Klik én gang på den valgte ringetone/fil. Herved fremkommer knapperne „afspil“ (blå pil), „stop“ (grøn), „slet“ (blåt kryds).

Varenr.: 32955
DB nr.: 2086163
EAN: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DØRKLOKKE 2900 MP3 - MY SOUND



SYNKRONISERING:

Når playlisten er redigeret som ønsket, skal de synkroniseres med dørklokken. Tryk én gang på knappen „sync“ - herved lagres playlisten i dørklokken.

Bemærk - Husk altid at synkronisere før USB kablet fjernes.

HUKOMMELSE:


Det er muligt at lagre op til 8 MB i dørklokken - svarende til 8-9 minutters musik. Anvendt plads vises i displayet i nederste venstre hjørne.

Fjern USB kablet og dørklokken er klar til brug.

For valg af ringetone se afsnit „valg af ringetone“.

VOLUMEN:

Dørklokkens lydstyrke kan indstilles på + & - knapperne på siden af dørklokken.

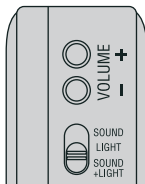

LAVT BATTERI INDIKATOR:

Dørklokken har indbygget „lavt batteri“ indikator. En rød LED på dørklokkens (modtagerens) front vil blinke når batterierne i dørklokken (modtageren) skal udskiftes. Se afsnit „montering/skift af batteri“.

RÆKKEVIDDE:

Bemærk at rækkevidden på op til 150 meter kan begrænses af bl.a. metal, mure og andet elektronisk udstyr. Rækkevidden kan forlænges ved at indsætte en „Repeater/forlænger“ model 32980

GODKENDELSER:



BORTSKAFFELSE:

Elektrisk og elektronisk udstyr indeholder materialer, komponenter og stoffer, der kan være skadelige for menneskers sundhed og for miljøet, hvis affaldet ikke håndteres korrekt. Elektrisk og elektronisk udstyr er mærket med nedenstående overkrydsede skraldespand. Den symboliserer, at elektrisk og elektronisk udstyr ikke må bortskaffes sammen med usorteret husholdningsaffald, men skal indsamles særskilt. Kontakt den lokale genbrugsstation og følg deres anvisninger.



VEDLIGEHOLDELSE:

Dørklokken bør rengøres regelmæssigt. Den kan aftørres med en blød klud. Må ikke overmales eller udsættes for vand. Test dørklokken efter rengøring.

HJÆLP TIL PRODUKTET:

- Dørklokken (modtageren) er kun til indendørs brug
- Montér ikke dørtrykket på metal/aluminiumsoverflade, da det vil reducere rækkevidden væsentligt
- Udsæt ikke dørklokken eller dørtrykket for direkte vand
- Udsæt ikke dørklokken eller dørtrykket for høje temperaturer
- Brug kun ALKALINE batterier for optimal rækkevidde/levetid
- Tag batterierne ud hvis produktet ikke anvendes i længere tid

PROBLEMLØSNING:

Dørklokken ringer ikke når der trykkes på dørtryk:

1. Afstand mellem dørtryk og dørklokken for stor.
2. Dørtrykket og dørklokken er ikke kodet ens.
3. Batteri er fladt i dørtryk eller dørklokke
4. Dørklokken kan ikke lagre musik i playlisten
5. Der er ikke lagret musikfiler i dørklokken

Løsning: Ad 1. Ryk enhederne tættere sammen.

Ad 2. Omkod dørklokken

Ad 3. Udskift batterier.

Ad 4. Der kan maksimalt lagres 8 melodier i play-

listen. Slet en/flere musikfiler så der er plads til nye.

Ad 5. Husk at synkronisere dørklokken inden kablet fjernes.

TEKNISKE SPECIFIKATIONER :

Batteri :

- Dørklokke: 3 X 1,5V alkaline LR6 - AA (medfølger ikke)

- Dørtryk: 1 x CR2032 (medfølger)

Rækkevidde: Op til 150 meter

Ringetoner: 8 faste samt op til 8 MP3 lydfiler

Koder: 256 - tildeles automatisk

Volumen: 88 dB

Omgivelses

temperatur:

- Dørklokke: +15° - +35° C

- Dørtryk: -10° - +35° C

Hukommelse: 8 MB

Musikfiler:

Understøtter alle MP3 format (med undtagelse af alle iPod MP-3 filer) V1 - MPEG Version 1, V2 - MPEG Version 2 & Version 2,5, L1 - Layer I, L2 - Layer II, L3 - Layer III

Frekvens (i Hz) bits:

MPEG1	MPEG2	MPEG2.5
44,100	22,050	11,025
48,000	24,000	12,000
32,000	16,000	8,000

Supports all WAV files

Varenr.: 32955
DB nr.: 2086163
EAN: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DØRKLOKKE 2900 MP3 - MY SOUND



Systemprogram: Understøtter Microsoft 2000, XP, Vista,
Windows 7, 8 & 10

Tilbehør:

- Forlæng rækkevidden med repeater/forlænger model 32980
- Ekstra dørtryk model 32970, 32971 og 32408 (op til i alt 4 dørtryk)

GARANTI:

Der ydes 2 års garanti på produktet regnet fra købsdatoen. Garantien er kun gyldig mod forevisning af original købskvittering.

Garanti dækker reparation af produktet i garantiperioden forudsat at produktet er anvendt og vedligeholdt som beskrevet i manualen. Alle erstattede dele tilfalder L-Team. Udskiftning og reparation forlænger ikke garantiperioden. Garantien bortfalder ved modificering eller forsøg på reparation af produktet. Garantien dækker ikke fragtomkostninger og force majeure som f.eks. utilsigtet strømafbrydelse.

Ensonordic er udviklet af L-Team der har mere end 25 års erfaring med el-produkter til det danske og nordiske marked. Serien omfatter bl.a. røgalarm, dørklokker, sensorer og varmeblæsere.

Se mere på www.ensonordic.com

01.12.2019

Varenr.: 32955
DB nr.: 2086163
EAN: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DOOR BELL 2900 MP3 - MY SOUND




This instruction manual explains the product and we advise you to read this carefully so that proper use is ensured. It is important to install this product in accordance with the fitting instructions below. Failure to do so may render your guarantee void. The instruction manual should be kept as long as the Door bell is in use.

CONTENTS:

- Bell push (sender)
- Door bell (receiver)
- USB cable
- Fittings
- Manual instruction Danish / English

PRODUCT SPECIFICATION:

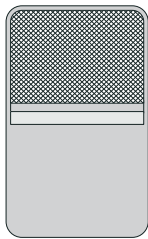

Door Chime



Bell push



USB Cable

FUNCTION:

When the bell push is activated, the small LED light will light up for approximate 1 second and a wireless signal is sent to the doorbell which will sound and a blue flash light will flash. For settings of sound and light see section "Door Chime Function". The sound stops when the selected ringtone is completed. (See section "Ringtone selection"). Press again for repeat. Holding down the bell push does not repeat the sound! The LED flash light on the doorbell's front will illuminate approximate 5 seconds when signal is received and the door bell is activated. Built-it MP3 feature makes it possible to download and use new ringtones / melodies.


Note! The transmission range will be reduced if mounting the bell push on metal or UPVC door frames. The transmission range can be reduced if the signal is transmitted through a number of walls or ceilings.

BATTERY INSTALLATION:

PUSH BUTTON:


Push button uses a 3volt CR2032 Lithium battery (included), to activate remove the isolation strip.

To replace open the push button (slide the flat screwdriver in the opening on the bottom and press the tab down) and replace ensuring correct battery polarity.

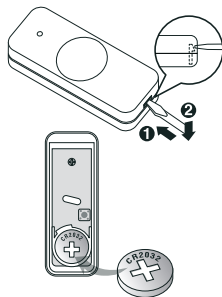

DOOR CHIME:


Remove the battery cover and insert 3 x 1.5v batteries ("AA", UM3 & LR6 – not included); ensure battery polarity match the internal markings. The door chime is now ready to learn the operation code (Please see Digital Code Set Up).

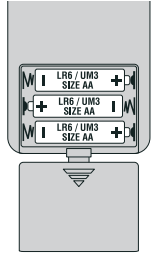

DOOR CHIME FUNCTION:

The function "mode" selector located at the back of the unit is used to select one of the 3 following functions:

- 1 Light Only: The Ultra Bright LED on the Door Chime unit will flash
- 2 Sound Only
- 3 Sound and Light: The Door Chime will sound as well as Ultra Bright LED flashing to maximize attention

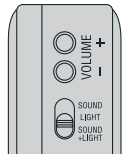

OPERATING THE DOOR BELL:

Press the button on the bell push unit once and it sends a wireless signal to the door bell. The door bell will sound and the LED flash light will light up. The sound will stop as soon as the melody ends and LED light will light up for about 5 seconds. For repeating sound, press the button again. Holding the button in will NOT repeat the sound.

The door bell is ready for use and can be used both hanging on a wall seam, like a portable door bell around the house or standing on a flat surface.

Note! If the door bell activates unmotivated, the code can be changed to avoid disturbance from external signals. See section "Digital Code Set Up".

LOW BATTERY INDICATOR:

The door bell (receiver) built-in has "low battery" indicator on front of the cabinet. When flashing then replace the batteries in the door bell (receiver).

REPLACE BATTERY:

See sections "Battery Installation"

DIGITAL CODE SET UP :

The Door bell kit is equipped with advanced random and self-learning operation code ability.

1 1st Bell Push:

After the batteries are installed in to both Push Button and Door Chime units, press the Push Button once to generate a new operation code. The Chime will sound to indicate that a new operation code is registered and memorized.

Item no.: 32955
 DB no.: 2086163
 Barcode: 5703901019731

L-Team ApS
 Industrivej 20
 5492 Vissenbjerg
 Danmark



DOOR BELL 2900 MP3 - MY SOUND



1 2nd Bell Push:

Then press and hold the code setting button (on the side of unit) for about 1-2 second, the door chime unit will give a "beep" sound to indicate that it is ready for the new code registration. Press the 2nd push button once (within 5 seconds) to generate a new operation code randomly and send a wireless signal to the door chime unit which will sound to indicate that a second operation code is also registered and memorized.



2 3rd-4th Bell Push

Repeat the same procedure for 3rd and 4th bell pushes or same series transmitter.

Remark:

- Repeat this procedure after the Push Button or Door Chime batteries have been changed.
- If the chime unit sounds for no reason during the digital code setting, it means that it has been interfered by other similar chime unit nearby, re-set the digital code immediately.
- The Door Chime unit can store up to 4 sets of operating code from the same series transmitter. Use model 32970, 32971 and 32408.

MELODY SELECTION:

Door Chime Unit:


The melody selector is a small switch located on the side of door chime unit to select:



- 8 Pre-stored melodies
- 8 MP3 Download melodies

Bell Push Unit:

The melody selector is a small switch located inside the Push Button, at the top right corner of battery compartment and marked with. Press the switch to change to next melody of the 8 Pre-Stored OR MP3 Downloaded.

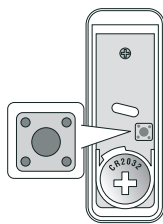

Prestored ringtones:

- | | |
|----------------------|------------|
| 1. Westminster chime | 5. Piano 1 |
| 2. Ding Dong | 6. Piano 2 |
| 3. Tubular 1 | 7. Drum |
| 4. Tubular 2 | 8. Bell |

DOWNLOAD TO CHANGE MELODY:

Firstly create a folder to store your music/melodies in MP3 or WAV format at your "Desktop". Connect the USB link with the door chime unit and your computer, the program will auto-run by itself, after then your computer will show the download program display.

Note: If the program does not start, double click MY COMPUTER; double click CDROM (with logo).

Program supports: Windows 2000, XP, Vista Windows 7, 8 and 10.

A Auto-Run: The program will auto-run by itself, after then your computer will show the download program display. "My Computer" column will show your "Desktop" programs/files.

Note: If the program does not start, double click My Computer then double click CDROM (with logo).

B Editing: MP3 or WAV files may need to be reduced in size to create an appropriate chime melody. Click your music/melody folder twice; the music/melody will be listed on the "Music" column. Select the music/melody that wants to edit by click it once, after then the music/melody sound wave will be displayed. Hold the left button on your mouse at the start of the selected section and drag your mouse to the end of selected section, then release the left button, the window at bottom right corner of the sound wave bar will show the duration time of this section. You can play the selected section by press the play button on the bottom left corner of the sound wave bar.

Remark: The door chime melody duration time should ideally be 8-15 seconds.

C Build up the Play List: After edited the music/melody, you can transfer it to the play list by click the large "Green Arrow" button in the centre once, the edited melody is imported to the Play List and displayed. You can build up total 8 different music/melodies on the Play List to replace the pre-stored melodies.

Remark: If the Play List already has 8 melodies stored, you have to delete 1 or more melodies from the Play List to make room before transfer the edited/new melody to the Play List.

D Play or Delete in the Play List: You can play or delete the edited music/melody on the play list. Click the music/melody once, the "Play", "Stop" and "Delete" buttons will be appeared at the bottom of the Play List column, then click the "Play" or "Delete" button once to play or delete this music/melody.

Item no.: 32955
DB no.: 2086163
Barcode: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DOOR BELL 2900 MP3 - MY SOUND



E Synchronize: After the 8-melodies Play List is built, you have to synchronize it to the door chime by click the "Sync" button in the centre once and the door chime will store the music/melody on the Play List in the memory. "Synchronize is finished" icon will pop up for confirmation.

Note: Always synchronize your door chime before disconnect the USB cable.


F Memory: The door chime has 8 MB memory to store (Approximates 8-9 minutes) the music/melodies. The memory bar is showing the percentage of memory has been used.

G Disconnect: Disconnect the USB cable then the door chime is ready to use.

H Melody Selection: Select one of the melodies on your play list as your door chime sound by press the melody selector switch inside the push button (refer to Melody Selection), after then the door chime will only play the selected melody.

VOLUME ADJUSTMENT:

Press the + or - button on the side of the door chime unit to adjust the sound level.

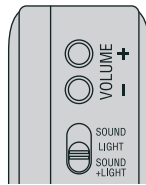

OPERATING DISTANCE:

The transmission range of up to 180 meters will be reduced if mounting the bell push on metal or UPVC door frames. The transmission range can be reduced if the signal is transmitted through a number of walls or ceilings.

To increase the range insert repeater model no. 32980.

APPROVALS:



RECYCLING:

Do not discard the unit with household waste, but in compliance with currently enforced regulations. In compliance with the Directive 2002/96/CE relative to waste from electrical and electronic equipment (WEEE) this product must be recycled.



IMPORTANT:

- Do not mount the bell push onto any metal surfaces or UPVC door frame, as this will reduce the operation range seriously.
- Do not mount either unit close to fireplace or expose to high temperature.
- Do not use different type of batteries, or mix up old and new batteries.
- Batteries should be inserted and removed by an adult only.
- Always use alkaline batteries. Please dispose of old, defective batteries in an environmentally friendly manner in accordance with the relevant legislation.
- Make sure that no naked flame sources, such as lighted candles, should be placed on the unit.
- The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- CAUTION:** Make sure batteries are installed correctly as per the internal markings.
- CAUTION:** Replace only with the same or equivalent type of battery that is recommended by the manufacturer.
- CAUTION:** Danger of explosion if battery is incorrectly installed or replaced.
- IMPORTANT:** There are no serviceable parts in the units, do not attempt to repair it.
- NOTE:** Extreme (Hot & Cold) temperature may shorten the operating range; re-locate the chime unit if necessary.
- Note: The product function maybe reset when it is subjected to electrostatic discharges. Just follow the instruction described in this manual to set the function again for normal operation.

USERS HINT:

If the door bell unit does not sound, please check the following:

- Flat batteries in either bell push or in door bell units**
 - Change the batteries.
- Wrong battery polarity in either bell push or in door bell units**
 - Reinsert the batteries.
- Both bell push and in door bell units are not on the same operation codes**
 - Reset the code
- The door bell unit does not register any operation code after batteries changed**
 - Reset the code
- Units are out of range**
 - Operate the door bell unit within the operation range.
- Can not store music in the Play List**
 - If the Play List already has 8 melodies stored, you have to delete 1 or more melodies from the Play List to make room before transfer the edited/new melody to the Play List and the Play list can only store 8 melodies (max).
- No melody/song stored in the Door Chime unit**
 - Synchronize the door chime before disconnect the USB cable.

Item no.: 32955
DB no.: 2086163
Barcode: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark



DOOR BELL 2900 MP3 - MY SOUND



TECHNICAL SPECIFICATIONS :

Power door bell: 3x1,5V Alkaline LR6 (not supplied)
Power bell push: 1 x CR2032 (supplied)
Operating Distance: Up to 180 meter
Selectable ringtones: 8 prestored & up to 8 MP3 files
Digital Code: 256 - random coding
Volume: 85dB
Operating temperature:
Door bell: +15 ° - +35° C
Bell Push: -10 ° - +35° C
Memory: 8MB

Files supported: All MP3 format (Not iPod MP-3 filer) V1 -
MPEG Version 1, V2- MPEG Version 2 &
Version 2,5, L1 - Layer I, L2 - Layer II, L3 -
Layer III

Sampling rate frequency index (values are in Hz) bits:

MPEG1	MPEG2	MPEG2.5
44,100	22,050	11,025
48,000	24,000	12,000
32,000	16,000	8,000

Supports all WAV files

System supported: Microsoft 2000, XP, Vista, Windows 7, 8
& 10

ACCESSORIES:

Insert extender model no. 32980 for extension of operation
distance. Use Bell Push item no. 52510 - up to 4 total.

WARRANTY:

The product is covered by a 2-year warranty from the date
of purchase. The warranty is only valid on presentation of an
original purchase receipt.

The warranty covers repair of the product during the warranty
period, provided the product has been used and maintained
as described in the manual. All replaced parts belong to
L-Team. Replacement and repair do not extend the warranty
period. The warranty lapses upon modification or attempted
repair of the product. The warranty does not cover freight
costs and force majeure, such as accidental power outage.

For more information go to www.ensonordic.com

01.12.2019

Item no.: 32955
DB no.: 2086163
Barcode: 5703901019731

L-Team ApS
Industrivej 20
5492 Vissenbjerg
Danmark