









LK FUGA®

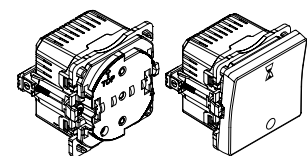

506D0610 506D6610



1	200 W		1050 VA
	2200 W	C	10 A, 140µF
	2000 W		200 W
	1000 VA		500 VA
(M)			

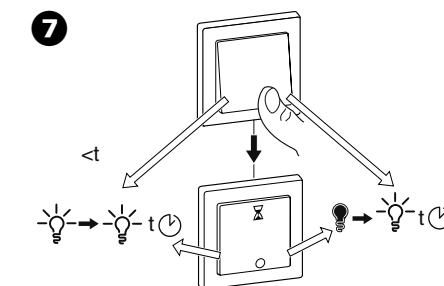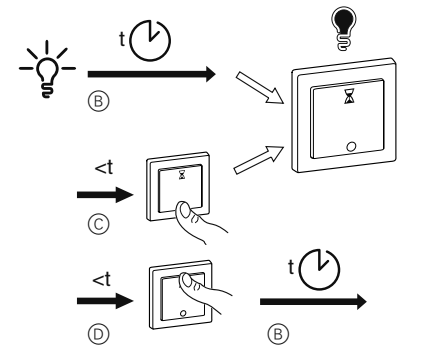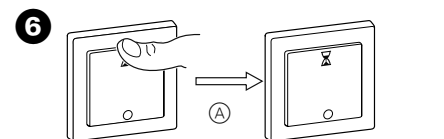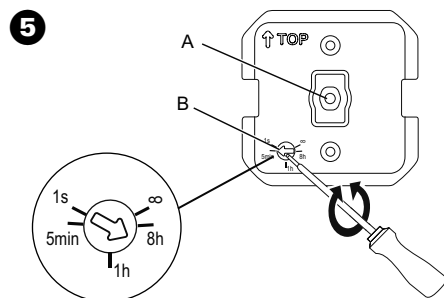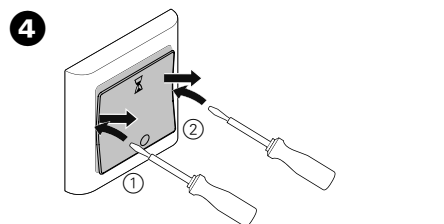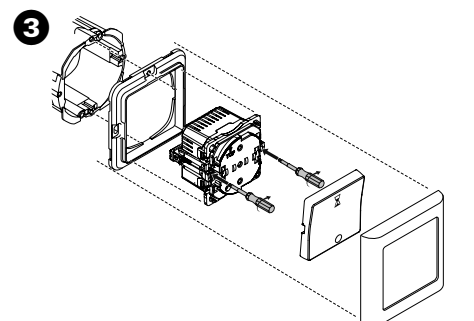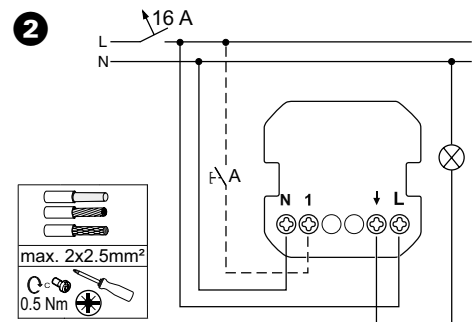

da Timer afbryder 10A

Om dette produkt

Du kan bruge timeren som nedtælling til at styre en ohmsk, induktiv eller kapacitiv belastning, til en indstillet tid.

Egenskaber:

- Kan bruges som timer-funktion med nedtælling, eller som almindelig tænd/sluk.
- Kan betjenes med almindelig afbryder med fjeder.

Indstillinger:

- Tidsinterval: 5 minutter - 8 timer (standardindstilling 5 minutter).
- Tilstand: Tænd/sluk-knap.
- Impulsfunktion: Styling af anden enhed.

Installeres med:

- Monteres i alle LK FUGA rammer i alle typer LK FUGA installationsdåser og underlag (i underlag med ekstra dybde eller forhøjet ramme).

FARE FOR ELEKTRISK STØD, EKSPLOSION ELLER LYSBUER

Af hensyn til sikkerheden må den elektriske installation kun udføres af kvalificerede fagfolk. Kvalificerede fagfolk skal kunne dokumentere omfattende viden inden for følgende områder:

- Tilslutning til installationsnetværk
- Tilslutning af forskellige elektriske enheder
- Trækning af elektriske kabler
- Sikkerhedsstandarder, regler og regulativer for lokal ledningsføring

Hvis du ikke er el-uddannet fagperson, følg da Sikkerhedsstyrelsens instruktioner om hvad man selv må installere på:
https://www.sik.dk/privat/elsikkerhed/alt_om_elsikkerhed

Personer vil komme i livsfare eller alvorligt til skade, hvis disse instrukser ikke overholdes.

FARE FOR ELEKTRISK STØD, EKSPLOSION ELLER LYSBUER

Udgangen kan være strømførende, selvom belastningen er slukket.

Afbryd enheden fra spændingsforsyningen ved at afbryde sikringen i det indgående kredsløb, inden du arbejder på enheden.

Personer vil komme i livsfare eller alvorligt til skade, hvis disse instrukser ikke overholdes.

1 Belastninger

2 Elektriske forbindelser

- A Mekanisk trykknop på udvidelsesenhedens tilslutning (option)

3 Montage

4 Fjernelse af tangenten

5 Visnings- og betjeningslementer

- A Status-lysdiode (rød), bag linsen
- B Potentiometer efterløbstid/programvælger

Tidsinterval: 5 min-1t-8t.

Indstil en overgangstid mellem 5 minutter og 8 timer. Jo mere potentiometeret drejes mod uret, jo hurtigere øges tiden.

Manuel tilstand: ∞

Du kan bruge timeren som en almindelig afbryder. Belastninger kan kun tændes og slukkes manuelt.

Impulsfunktion: 1s

Ved brug af en timeren i impulsfunktion kan du betjene en anden enhed, eller andre tilsluttede belastninger.

6 Betjening af timeren lokalt

- A Tænd timeren i henhold til det indstillede tidsinterval (t).
- B Timeren slukker automatisk, når tiden (t) er udløbet.
- C Sluk timeren, før tiden er udløbet (<t).

Tilsluttede belastninger og status-lysdioden tændes og slukkes sammen med timeren.

- D Start timeren forfra, før udløb af en igangsat nedtælling.

7 Betjening af timeren ved brug af en trykknop

Ved hjælp af en tilsluttet mekanisk trykknop, tændes timeren eller timeren startes forfra inden udløb af en igangsat nedtælling. (<t).

Tekniske data

Mærkespænding:	AC 230 V ~, 50 Hz
Mærkeeffekt:	Se 1 Belastninger
Nulleffekt:	Anbefalet
Udvidelsesenhed:	Enkelt trykknop, ubegrænset antal, maks. 50 m
Forsikring:	16 A brydekontakt
Nominel strøm:	10 AX, cos φ = 0,6

Hvad skal jeg gøre, hvis der opstår et problem?

Tilsluttet belastning tændes ikke:

- Kontroller strømforsyningen.
- Sluk timeren og tænd den igen.
- Kontroller belastningen.
- I tilfælde af en ekstra trykknop, kontroller ledningerne.




Bortskaf enheden separat fra husholdningsaffaldet på et officielt deponeringssted. Professionelt genbrug beskytter personer og miljøet mod potentielle negative effekter.

Lauritz Knudsen

Hvis du har tekniske spørgsmål, skal du kontakte Schneider Electric Danmark A/S, Lautrupvang 1, 2750 Ballerup, tlf.: +45 35 15 90 00, www.lk.dk

LK FUGA®







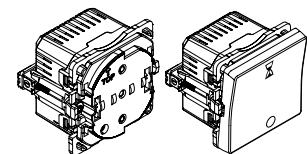


506D0610 506D6610



BRU11965-01 08/24

1	200 W		1050 VA
	2200 W	C	10 A, 140µF
	2000 W		200 W
	1000 VA		500 VA

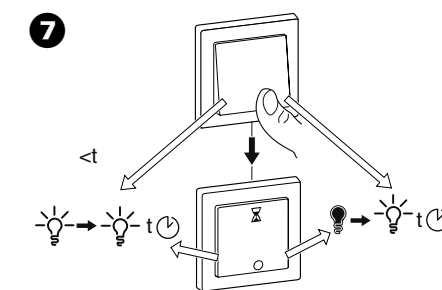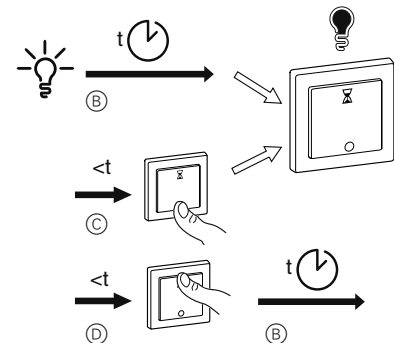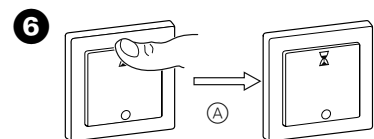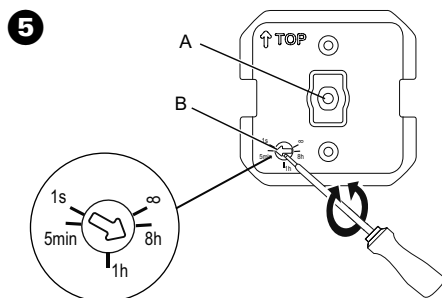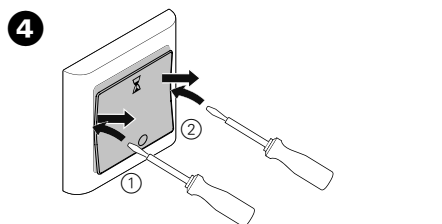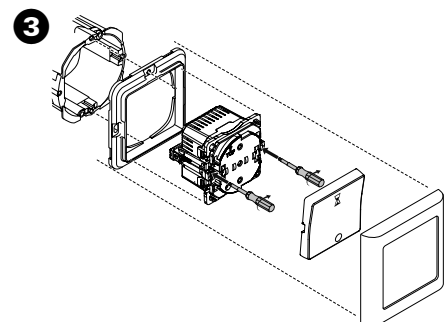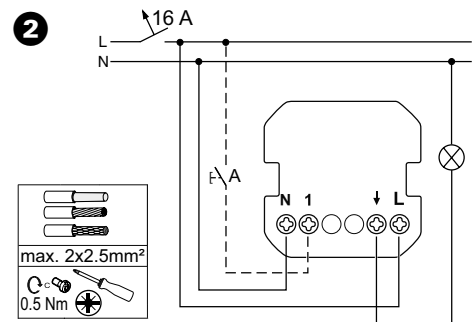

en Countdown timer 10 A

About this product

You can use the countdown timer 10 A (hereinafter referred to as timer) to switch on ohmic, inductive or capacitive loads for a settable overtravel time.

Properties:

- Manual switching off or restarting the overtravel time with an activated overtravel time.
- Operation with extension unit (mechanical push-button)

Settings:

- Overtravel time: 5 minutes - 8 hours (default setting 5 minutes)
- Infinite mode: On/Off switch
- Trigger mode: Switching of a second timer

To be completed with:

- Frame in corresponding design

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Safe electrical installation must be carried out only by skilled professionals. Skilled professionals must prove profound knowledge in the following areas:

- Connecting to installation networks
- Connecting several electrical devices
- Laying electric cables
- Safety standards, local wiring rules and regulations.

If you are not a skilled professional, follow the Danish Safety Authority's guideline to learn what you are allowed to install yourself on: https://www.sik.dk/privat/elsikkerhed/alt_om_elsikkerhed



Failure to follow these instructions will result in death or serious injury.

⚠ ⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

The output may carry electrical current even when the load is switched off.

Disconnect the device from the supply by means of the fuse in the incoming circuit before working on the device.

Failure to follow these instructions will result in death or serious injury.

1 Loads

2 Electrical Connections

- A Mechanical push-button at extension unit connection (optional)

3 Mounting

4 Removing the cover

5 Display and operating elements

- A Status LED (red)
- B Potentiometer overtravel time

Overtravel time: 5min-1h-8h

Set an infinitely adjustable overtravel time between 5 minutes and 8 hours. The further the potentiometer is turned anticlockwise, the faster the setting increases.

Infinite mode: ∞

You can use the timer like a normal switch in infinite mode. Loads can only be switched off manually.

Trigger mode: 1s

Using a timer in trigger mode, you can operate a second timer externally and switch connected loads.

6 Operating the timer locally

- A Switch on the timer for the duration of the set overtravel time (t)
- B The timer automatically switches off after overtravel time (t) has elapsed.
- C Switch off the timer before overtravel time has elapsed (<t).
- D Restart the activated overtravel time (t) before it elapses (<t).

7 Operating the timer using a push button

Using a mechanical push-button connected to the extension unit connection, switch the timer on or restart the activated overtravel time before it has elapsed (<t).

Technical data

Nominal voltage:	AC 230 V ~, 50 Hz
Nominal power:	See 1 Loads
Neutral conductor:	Recommended
Extension unit:	Single push-button, unlimited number, max. 50 m
Fuse protection:	16 A circuit breaker
Nominal current:	10 AX, cos φ = 0.6

What should I do if there is a problem?

Connected load does not switch on:

- Check the power supply.
- Switch the timer off and back on again.
- Check the load.
- In the case of an external push-button, check the wiring



Dispose of the device separately from household waste at an official collection point. Professional recycling protects people and the environment against potential negative effects.

Lauritz Knudsen

If you have technical questions, please contact Schneider Electric Danmark A/S, Lautrupvang 1, 2750 Ballerup, Phone: +45 35 15 90 00, www.lk.dk

