INSTALLATION INSTRUCTIONS

INDIVIDUAL CONTROL SYSTEM

ASP-401

The ASP-401 is a single pole, double throw (SPDT) switch designed for use with any Chief® electric lift.

Unpack and check contents (See Figure 1):

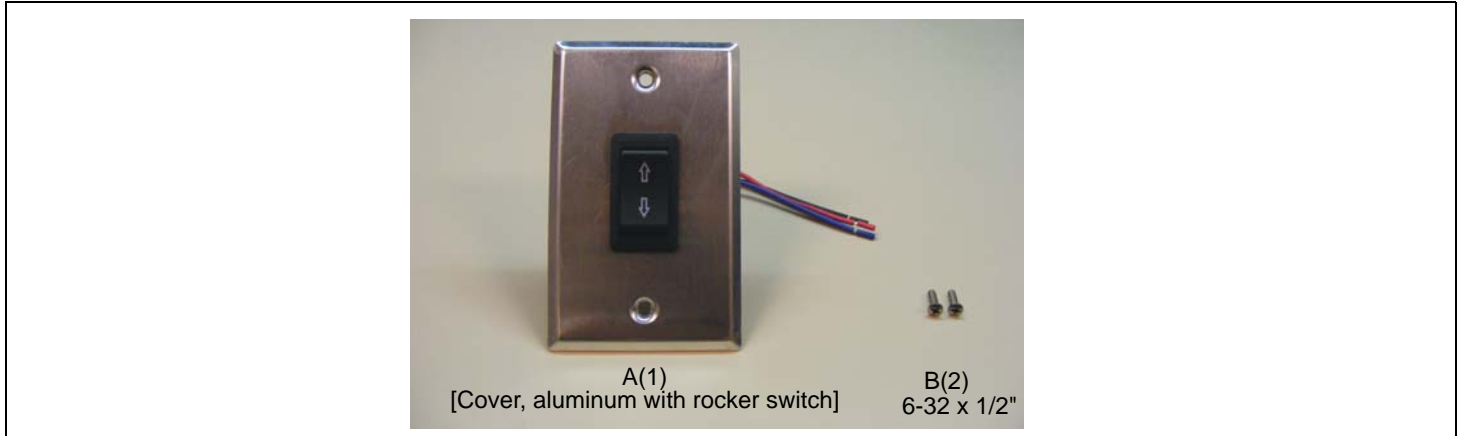(1) Cover, aluminum with rocker switch   (2) Screw, oval head, 6-32 x 1/2"

A(1)
[Cover, aluminum with rocker switch]

B(2)
6-32 x 1/2"

Figure 1: Parts

Installation:

⚠ **WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT!** DO NOT substitute hardware. Use only hardware supplied by manufacturer!

1.   Connect black wire to common (See Figure 2).

2.   Connect blue wire to up.

3.   Connect red wire to down.

4.   Install switch in single gang box with red wire on top and secure using two screws (provided).
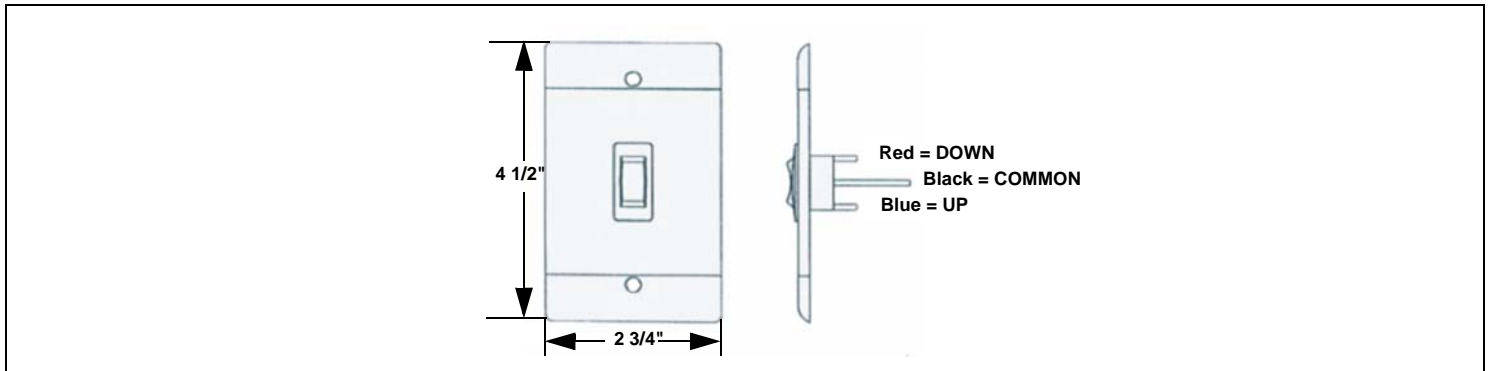

4 1/2"

2 3/4"

Red = DOWN
Black = COMMON
Blue = UP

Figure 2: Dimensions and Wiring