Weller®

Operating Instruction
WX HUB

WX – Zero Smog Easy Remote Network
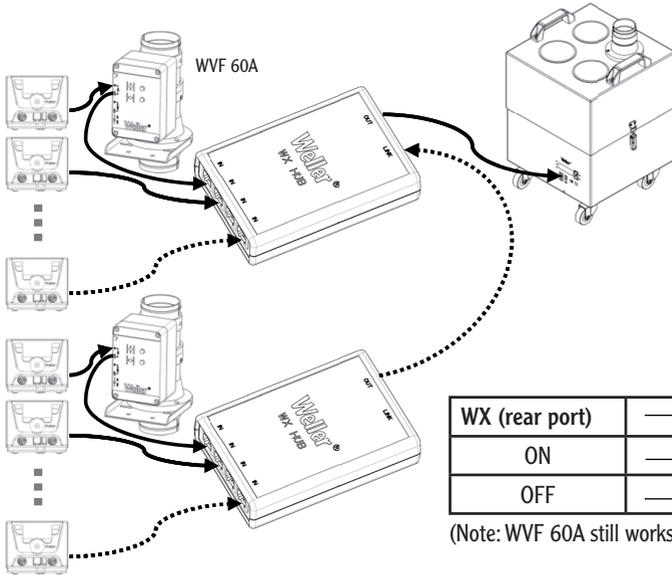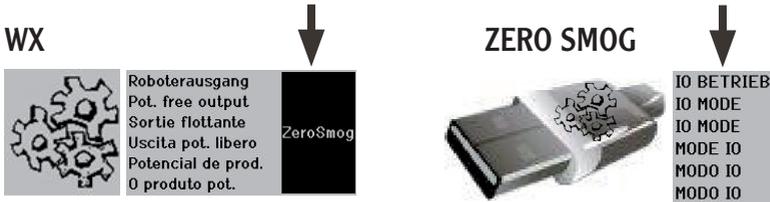
Order No. T0058764726

Requirements:

Zero Smog:	Firmware version 006 or higher
PC Software:	ZeroSmog Monitor 1.00 or higher
WX soldering station:	Firmware version 060 or higher

Networkconfiguration (unidirectional use - without filter information)
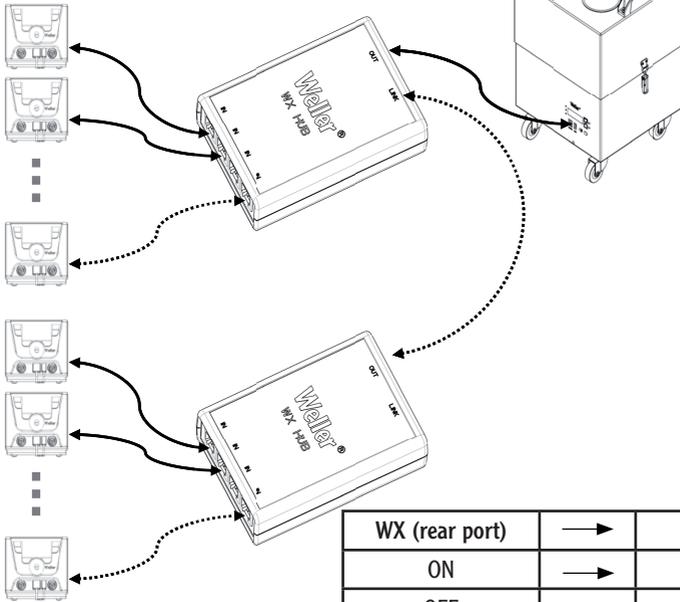
WX

Roboterausgang
Pot. free output
Sortie flottante
Uscita pot. libero
Potencial de prod.
O produto pot.

ZeroSmog

ZERO SMOG

IO BETRIEB
IO MODE
IO MODE
MODE IO
MODO IO
MODO IO

WVF 60A

WX (rear port)	→	ZERO SMOG
ON	→	ON
OFF	→	OFF

(Note: WVF 60A still works with the WX rear port)

Weller®

Networkconfiguration (bidirectional use – with filter information)

WX

Roboterausgang
Pot. free output
Sortie flottante
Uscita pot. libero
Potencial de prod.
O produto pot.

Stop&Go

ZERO SMOG

IO BETRIEB
IO MODE
IO MODE
MODE IO
MODO IO
MODO IO

WX (rear port)	→	ZERO SMOG
ON	→	ON
OFF	→	OFF
FILTER FULL display	←	FILTER FULL (LED → red)

(Note: WVF 60A does not work with the WX rear port)

The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The given information does not release the user from the obligation of own judgement and verification. It must be remembered that our products are subject to a natural process of wear and aging.

Order no.T005 57 358 00 – 01.2014