
FELLOW®

ESPRESSO
SERIES 1

SAFETY INFORMATION

Diagram A: Product Diagram

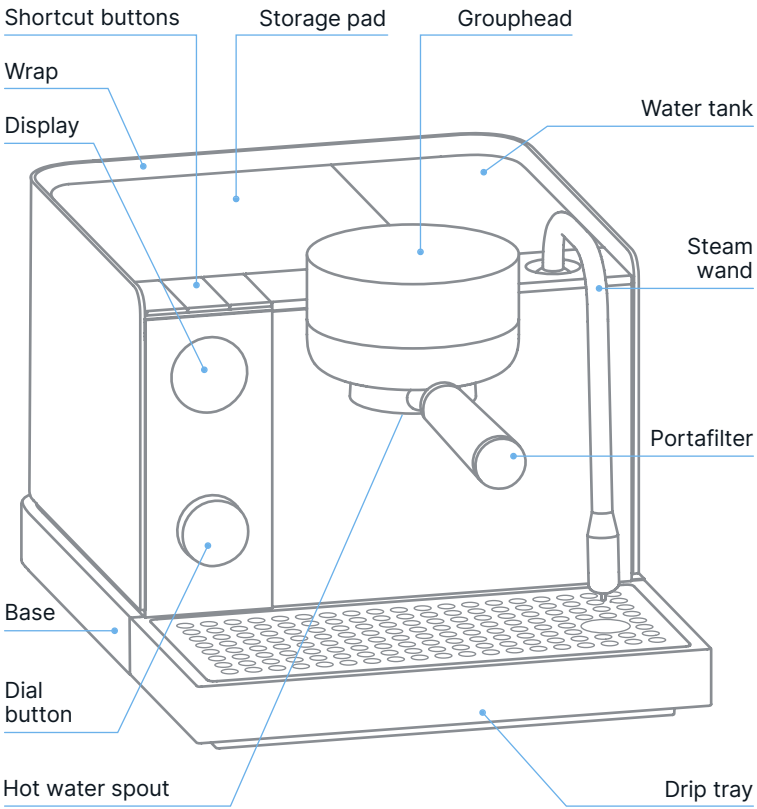

ESPRESSO SERIES 1

Fellow Industries Inc.
fellowproducts.com
Email: hello@fellowproducts.com
San Francisco, CA 94110

Product Name: Espresso Series 1
Patent: fellowproducts.com/pages/patents
2-Year Limited Warranty | Designed in San Francisco, Made in China

MODEL	SPECIFICATIONS
SO01AAUK SO01AAAU	220-240 V | 50 Hz | 1500 W **Machine Weight:** 21.7 lbs / 9.8 kg **Machine + Accessories Weight:** 24.7 lbs / 11.17 kg **Dimensions (LxWxH):** 438 mm x 315 mm x 279 mm **Tank Capacity:** 2000 ml / 2.0 L

SAA-260704-EA

Do not discard as unsorted waste. To be sent to separate collection facilities for recovery and recycling.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

More info at:
fellowproducts.com/pages/espresso-series-1-gear-guide

Read and follow all instructions.
Keep this safety and maintenance manual for future reference.

WARNING!

Shock Hazard: This appliance has a grounded, three-pronged plug. To ensure protection against risk of electric shock or fire, connect to properly grounded outlets only. The plug fits only one way into an outlet. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adapter. Do not plug this appliance into an outlet with a voltage other than specified on the bottom of this appliance.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including but not limited to the following:

- Read all Instructions.
- Do not touch hot surfaces, including the grouphead. Use the provided portafilter handle. Grouphead is subject to residual heat after use.
- Water emitting from the Hot Water Spout and Grouphead can be as hot as 210°F / 99°C.
- Steam emitted from the Steam Wand can exceed temperatures of 210°F / 99°C.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

WARNING: Do not fill above the MAX line as displayed in the diagram below. Always make sure the water level in the tank is above the LOW line before using the device.

If the device is overfilled, water may leak, increasing the risk for issues to occur. See Diagram B below for reference.


Diagram B: Fill Points

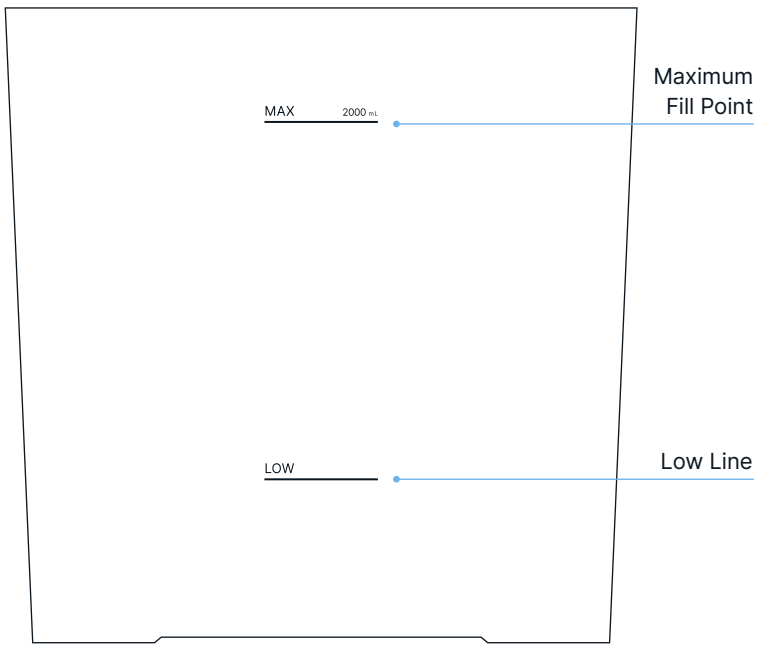

IMPORTANT SAFEGUARDS CONTINUED

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. See service section below for details.
- The use of accessory attachments not recommended by Fellow may result in fire, electric shock or injury to persons.
- This appliance is for household use only. Do not use the appliance for anything other than its intended purpose. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury. Use for anything other than intended use will void the warranty.
- Do not move machine during use.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Extension cords are available and may be used if care is exercised in their use. If extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
  - If the appliance is of the grounded type, the extension cord should be a grounding-type 3- wire cord; and
  - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- To prevent personal injury, ensure the portafilter is firmly inserted into the grouphead before pulling a shot. To do so, insert and rotate the portafilter until the handle is aligned with the longer line (see Diagram C). Never remove the portafilter during the extraction process. Failure to follow this instruction may lead to scalding by hot steam or hot coffee.

Diagram C: Locked / Unlocked Grouphead Cap

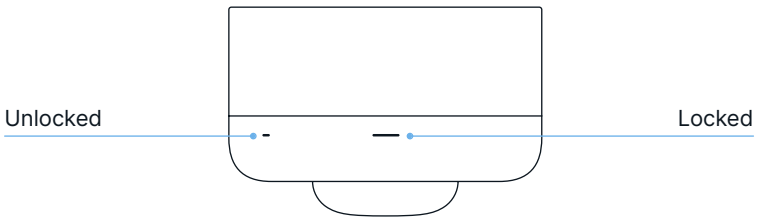

- Keep the machine and accessories clean. Refer to the Get To Know You Guide for cleaning procedures and details.
- Before using, please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns, please contact your local electricity company.

UK

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Product contains small parts which may become a choking hazard. Small children should be attended to at all times.

AU

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruciton concerning use of the appliance by a person responsible for their own safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Position the appliance on a stable, heat resistant, level, dry surface away from the counter edge, and do not operate on or near a heat source such as a hot plate, oven, or gas hob.
- Do not operate the appliance in an enclosed space, or inside a cupboard.
- Improper use of the machine such as brewing coffee in the portafilter without one of the provided filter baskets, may cause injury and/or damage to surfaces surrounding the machine.
- Do not fill water tank with hot water or milk.
- Do not use the appliance without water in the water tank.
- The drip tray grill is sharp. Use caution, when handling and cleaning the drip tray grill.
- Use caution as the steam wand will auto purge when the steam wand is moved to “home” position after steaming operation.
- Empty boilers before storage of the machine. Do not store below freezing temperatures.
- Refer to the Care + Maintenance section of the Get To Know You Guide for more information on safe operation.
- Standby mode consumption is <0.45W in non WIFI mode.
- The unit will enter standby mode automatically after 20 minutes without operation when powered on in non WIFI mode.


SAVE THESE INSTRUCTIONS

DRAINING THE BOILER

Empty internal boiler before storage, shipping, or transport of the machine. Do not store machine below freezing temperatures. To empty the boiler, follow these steps:

- With the unit off and unplugged, remove the drip tray.
- Place the unit over a sink or receptacle for the water to drain into. Take caution: this water may be hot.
- Using a flat-head screwdriver, turn the plastic boiler screw counterclockwise to loosen (see Diagram D). Stop when resistance is felt. Do not remove the screw completely. Over-loosening or entirely removing the screw may cause leakage or damage.
- Water will begin to release from the right side of the unit. The draining process will take a few minutes.
- After the unit is fully drained, use the flat head screwdriver to tighten the boiler screw by turning it clockwise. Stop when resistance is felt as over tightening may cause damage. If water leaks from the exit during machine operation, tighten the boiler screw further.

Diagram D: Boiler Screw and Water Exit

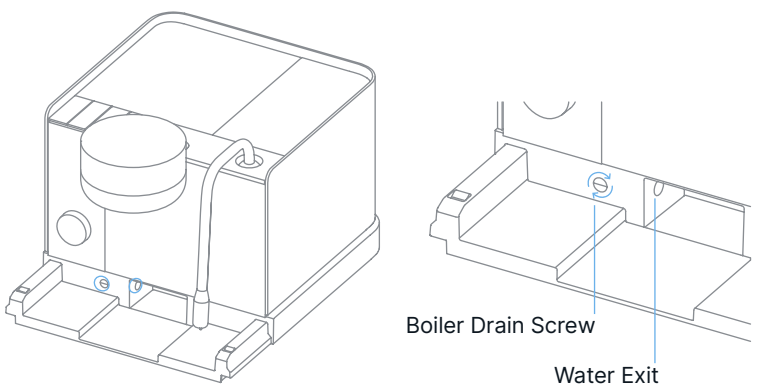

SERVICE

For service or any questions regarding your appliance, first visit fellowproducts.com/pages/espresso-series-1-gear-guide. If you still have questions, reach out to us at help.fellowproducts.com.

Do NOT mail the appliance back to the manufacturer or bring it to a service center without first talking to a Fellow customer service representative.

2-YEAR LIMITED WARRANTY

Fellow warrants this appliance against any defects that are due to faulty material or workmanship for a two year period after the original date of consumer purchase.

This warranty is valid only for:

- The original consumer.
- Products purchased through authorized retailers.
- Products with the original sales receipt for proof of purchase.

This warranty does not include damage to the appliance resulting from:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Operation with the wrong type of current or voltage.
- Failure to follow cleaning instructions for both the appliance and cleaning/descaling agents.
- Failure to comply with any safeguards listed in the warnings and instructions of this document.

If the appliance should become defective within the warranty period, or you have questions regarding warranty or service, email us at **hello@fellowproducts.com**.



Find more information at:
fellowproducts.com/pages/espresso-series-1-gear-guide

789-00258 M

DO NOT PRINT THIS PAGE. INFORMATION ONLY.

FELLOW®

SENIOR PRINT & PACKAGING DESIGNER
Nancy Spellman
nancy@fellowproducts.com
320 Florida St.
San Francisco, CA 94110

05.26.26

CYAN | MAGENTA | YELLOW | BLACK

PANTONE BLACK 6 C | PANTONE 284 C | AQ MATTE VARNISH

FILE NAME: 789-00258_M.indd
DESCRIPTION: Safety Guide - Espresso Series 1 UK/AU

TRIM: 4.5" x 6"
MODELS: SO01AAUK, SO01AAAU

SUBSTRATE:
Wood free 80gsm

NOTES: MP VERSION
12 page saddle stitch
Rev K: Remove amperage
Rev L: UK + AU statements

REV:
M

- If electronic art supplied does not match this print, contact Fellow.
- This laser proof shows representative color only. Refer to the current edition of the Pantone® Formula Guide for color standards.
- Fonts provided are for output of this artwork only.