nutribullet
LIMITLESS™
FOOD PROCESSOR



User Guide.

⚠ **WARNING! To reduce the risk of serious injury, read the User guide before operating your nutribullet Limitless™ Food Processor. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.**

IMPORTANT SAFEGUARDS.

WARNING! To avoid the risk of serious injury, carefully read all instructions before operating your nutribullet Limitless™ Food Processor. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

When operating your nutribullet Limitless™ Food Processor, remember:
SAFETY COMES FIRST. READ CAREFULLY AND THOROUGHLY BEFORE OPERATING.

If you let anyone else use your nutribullet Limitless™ Food Processor, make sure that they understand the health and safety information in this User Guide, as well as any additional safety or usage instructions provided. Each person using a device should read the User Guide completely and become familiar with the safe operation of the unit.

Save these instructions!
FOR HOUSEHOLD USE ONLY

PERSONAL SAFETY

WARNING! BLADES AND DISCS ARE SHARP. READ ALL INSTRUCTIONS. FAILURE TO FOLLOW ALL INSTRUCTIONS REGARDING USING YOUR NUTRIBULLET® DEVICE MAY RESULT IN SERIOUS PERSONAL INJURY, DEATH, OR PROPERTY DAMAGE.

- Do not leave the appliance unattended when in use.
- This appliance should not be used by children. Keep the appliance and its cord out of reach of children
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure that the surface where the appliance operates is stable, level, clean and dry.
- **DO NOT** process hot ingredients. Be careful if hot liquid is poured into the food processor bowl as it can be ejected out of the appliance due to sudden steaming
- To protect against the risk of electrical shock, never operate the device near water or on a wet surface. Any significant spillage onto the surface, under, around, or onto the appliance itself should be cleaned and dried before continuing to use the appliance.
- **TO PROTECT AGAINST RISK OF ELECTRICAL SHOCK DO NOT IMMERSE THE APPLIANCE, MOTOR BASE, CORD, OR PLUG IN WATER OR ANY OTHER LIQUID.**
- When using this appliance, provide adequate air space above, below, and on all sides for circulation.
- Vibration may occur during normal operation.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid contact with moving parts.

WARNING! ALWAYS MAKE SURE THAT THE MOTOR BASE IS POWERED OFF AND THE BLADES ARE COMPLETELY STOPPED BEFORE REMOVING ANY ATTACHMENT, DISASSEMBLY, OR BEFORE CLEANING. NEVER STORE THE BLADE ATTACHMENTS IN THE WORK BOWL WITHOUT THE LID IN PLACE. EXPOSED BLADES CAN PRESENT A DANGEROUS HAZARD.

- **DO NOT** use this appliance if any part appear to be damaged. If you have any questions or concerns, please contact Customer Service.
- **DO NOT** place any nutribullet® parts or accessories in the microwave, parts and accessories are not microwave-safe.
- Misuse or unintended use of your appliance can result in potential injury.
- Only use the appliance for its intended domestic use.
- Use of incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage. **ALWAYS** use genuine nutribullet® parts and accessories. Using incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage. Order replacement parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz** or contact Customer Service.

WORK BOWL & FEED CHUTE

- Do not overfill the Work Bowl. Make sure to stay at or below the **LIQUID MAX** line when using liquid ingredients to reduce the risk of injury or damage to the machine. Overfilling the Work Bowl can cause damage to the Work Bowl or cover and cause the ingredients to leak.
- Always make sure the unit is properly and completely assembled with the Work Bowl securely locked in place (with lid on) before connecting to power outlet and turning on the motor.
- **NEVER** attempt to remove the Work Bowl or open Lid while the unit is in operation or when the blades or discs are still moving to avoid the risk of severe bodily injury or damage. **ALWAYS** allow the blades or discs to come to a complete stop before handling.
- **NEVER** push food into the Feed Chute with your fingers or utensils. Only use the Food Pusher provided.
- To prevent the risk of severe bodily injury or property damage, keep hands, fingers, and utensils out of the Feed Chute and Work Bowl and away from moving blades or discs to prevent the risk of severe injury to persons or property damage. A scraper or spatula may be used, **BUT ONLY WHEN THE APPLIANCE IS OFF**.
- **DO NOT** overload the Feed Chute with ingredients or use excessive force on the Food Pusher when pushing food through. This may cause the blades or discs to seize, resulting in the motor overheating, or cause the Work Bowl to fracture and break.
- For best results, start the Food Processor first before placing ingredients into the Feed Chute. Wait until food naturally moves down the Feed Chute and slowly start adding more ingredients into the Feed Chute.

PRODUCT SAFETY

GENERAL BLADE & DISC SAFETY

- Always **POWER OFF** and **UNPLUG** the unit and wait until the blades or discs come to a complete stop before assembling, disassembling, changing accessories, or cleaning to avoid laceration or other bodily injury.

WARNING! ALWAYS REMOVE THE BLADES OR DISCS BEFORE ACCESSING THE FOOD FROM THE WORK BOWL. NEVER TILT THE WORK BOWL ATTEMPTING TO HAVE THE BLADE OR DISC DROP OUT ONTO YOUR HAND.

- Blade is sharp. Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
- **DO NOT** touch the sharp blades. The blade and disc are very sharp, handle with care. Always hold by the finger grip at the top, away from the cutting edge, when handling the sharp cutting blades, emptying the bowl and during cleaning.
- To reduce the risk of injury, never place Chopping Blade and Slice/Shred Disc on base without first putting bowl property in place.
- **AVOID CONTACT WITH MOVING PARTS!** Keep fingers out of discharge opening. Do not attempt to defeat any safety interlock mechanisms.
- **DO NOT** leave non-food items (such as a spoon or fork) in the Work Bowl and avoid processing hard ingredients like nuts, coffee beans, and fruit pits. These items can damage your nutribullet® device and may result in bodily injury or damage to the unit.
- **NEVER** leave or store an exposed blade or disc on the Motor Base. Exposed blades and discs present a safety hazard that may result in severe laceration injuries. Always place blades and discs in the Work Bowl and cover with the Work Bowl Lid.
- **NEVER** store the blade attachments in the Work Bowl without the Lid in place. Exposed blades can present a dangerous hazard.
- Do not use the blades or discs for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor, blades and discs. Use of dry ingredients may cause the motor to overheat.

WARNING! ALWAYS USE EXTREME CARE AND EXERCISE CAUTION WHEN CLEANING THE BLADES OR DISCS BY HAND. DO NOT TOUCH THE SHARP EDGES OF THE BLADES OR DISCS WITH YOUR HANDS OR FINGERS TO AVOID SEVERE LACERATION INJURIES.

ELECTRICAL SAFETY

WARNING! DO NOT USE THIS PRODUCT IN LOCATIONS WITH DIFFERENT ELECTRICAL SPECIFICATIONS OR PLUG TYPES. DO NOT OPERATE WITH ANY TYPE OF PLUG ADAPTER OR VOLTAGE CONVERTER DEVICE, AS THESE MAY CAUSE ELECTRICAL SHORTING, FIRE, ELECTRIC SHOCK, PERSONAL INJURY OR PRODUCT DAMAGE. THIS APPLIANCE HAS IMPORTANT MARKINGS ON THE PLUG BLADE. THE CORD IS NOT SUITABLE FOR REPLACEMENT. IF DAMAGED, THE APPLIANCE MUST BE REPLACED.

- Do not modify the plug in any way. This appliance has important markings on the plug blade. The cord is not suitable for replacement. If damaged, the appliance must be replaced.
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not let the power supply cord hang over the edge of a table or countertop.
- Do not let the power supply cord touch hot surfaces, including stove, or become knotted or tangled.
- If the supply cord is damaged, it must, for safety reasons, be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- Regularly inspect the power cord, plug, and appliance for any damage. **DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED CORD OR PLUG OR IF THE APPLIANCE MALFUNCTIONS, OR IS DROPPED OR DAMAGED IN ANY MANNER**. Contact Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633**.

ADDITIONAL SAFEGUARDS

- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.
- Before lifting or carrying the appliance by the handle on the lid, always check that the bowl and lid are securely locked in place.
- Ensure the cord is fully unwound before using the appliance.
- Do not put any non-food items in any of the appliance pieces, as doing so may damage the unit and or cause severe personal injury or property damage.
- This appliance is not intended to be an ice crusher. Attempting to crush ice may cause permanent damage to the blades or cause the unit to malfunction, resulting in personal injury or property damage.
- Make sure you have removed any rind from fruit prior to adding to the Work Bowl. Do not use fruits that contain seeds or pits unless they have been completely removed.
- **DO NOT** attempt to use blade, cup or Work Bowl attachments from another nutribullet® or a magic bullet® product or an attachment from another brand with the nutribullet Limitless™ Food Processor. Only use the Work Bowl and blade attachments included with with your unit.
- Only use genuine nutribullet® parts specifically for your nutribullet® Food Processor from **bulletbrands.com.au / bulletbrands.co.nz**. Use of incompatible or aftermarket parts may result in damage to your nutribullet® unit and may create safety hazards that may cause personal injury or damage.
- Periodically inspect all nutribullet® components, including the power cord and plug, for damage or wear that may impair proper function or present an electrical hazard. Discontinue use and contact Customer Service for assistance.
- If your nutribullet® malfunctions in any way, immediately discontinue use and contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633**.
- If you have any questions or comments, or if some aspect of this user guide is not clear, please contact Customer Service for assistance at **AU: 1300 285 538 / NZ: 0800 232 633**.



Contents.

08 What's included

09 Assembly guide

10 Control panel

11 Assembly & use

- 11 Before first use
- 12 Recommended maximum Work Bowl capacity
- 13 Assembly
- 14 Using the Chopping Blade
- 17 Using the Reversible Slice/Shred Disc
- 20 Using the Endless Chute
- 22 Using the Food Pusher

23 Troubleshooting


24 Care & maintenance

- 25 How to store
- 25 Replacement parts


26 nutribullet Limitless™ Food Processor one-year limited warranty

Thank you for purchasing the nutribullet Limitless™ Food Processor.


What's included.

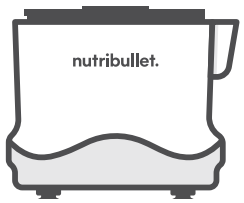


motor base

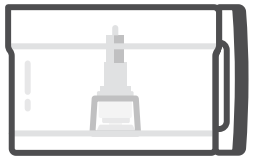

1.3L
work bowl

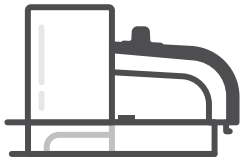

work bowl lid
with feed chute

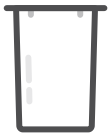


food pusher




chopping blade



reversible
slice/shred disc

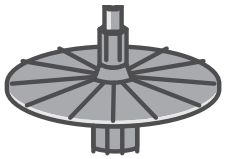


slinger disc

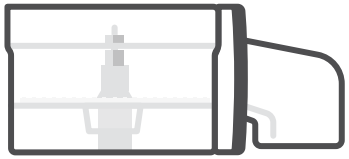

endless chute
attachment


⚠ **WARNING:** Blades are sharp. Handle carefully.

Assembly guide.

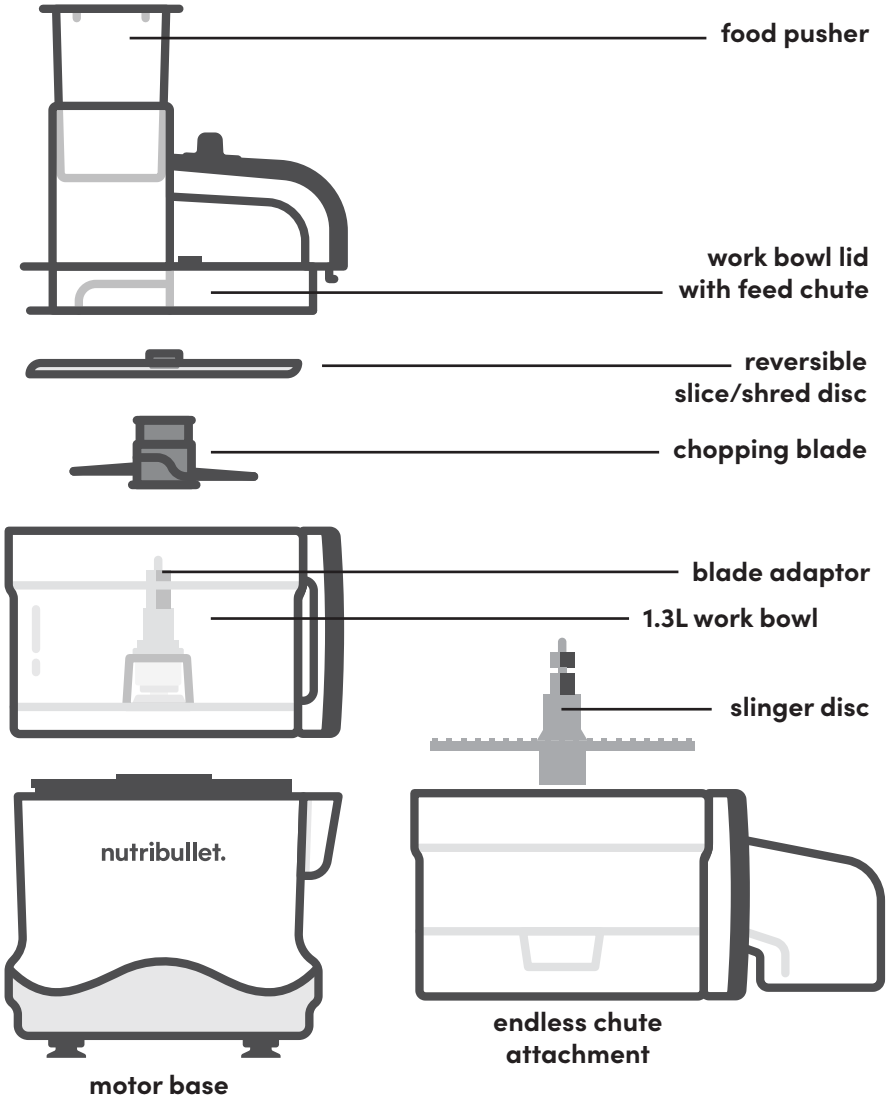

Control panel.

The nutribullet Limitless™ Food Processor features a sliding speed control toggle, conveniently located on the handle of the Work Bowl.

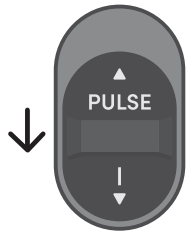


ON:

Slide the toggle to the **ON** position. The toggle will remain in the **ON** position until it is turned off.



OFF:

Slide the toggle to the **OFF** position to stop the food processor.

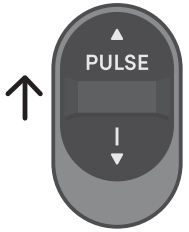

PULSE:

Slide the toggle to the **PULSE** position to activate a burst of chopping or mixing. The food processor will operate while the toggle is held in the **PULSE** position, and automatically reset to the **OFF** position when released.

Assembly & use.

Before first use.

Before using your nutribullet Limitless™ Food Processor for the first time, please take a moment to perform the steps below.

1. UNPACK
Open box. Remove the **Motor Base** and all attachments. Place all parts on a flat, dry surface.

⚠ **WARNING! Blades and discs are sharp. Handle with care. NEVER tilt the Work Bowl attempting to have the blade or disc drop out onto your hand.**

2. CLEAN
Rinse all detachable parts and accessories. All parts except the **Motor Base** are dishwasher safe, or can be cleaned by rinsing with warm, soapy water. Clean the **Motor Base** with a clean, damp cloth.

⚠ **WARNING! Blades and discs are sharp. Handle with care. NEVER tilt the Work Bowl attempting to have the blade or disc drop out onto your hand.**

⚠ **WARNING! Never submerge the Motor Base in water or any other liquid. See Care & Maintenance instructions on page 24 for more detailed cleaning instructions.**

Recommended maximum Work Bowl capacity.

Food	Max Capacity	Time (Seconds, Pulses)*
Chopped fruit or vegetables (cut into 2-3cm pieces)	250g	5-10 pulses
Sliced or shredded fruit or vegetables	360g	10-20 seconds
Chopped meat, or, seafood (cut into 2cm pieces)	300g	5-10 seconds
Chopped cheese (Cut into 2cm pieces	300g	5-10 seconds
Sliced or shredded cheese	340g	10-20 seconds
Herbs	55g (packed)	5-10 pulses
Nuts	275g	5-10 pulses
Bread dough / pizza dough/ cookie dough	220g (all-purpose or bread flour) + 120g water	30 seconds

Prunes Marinade:


- 400g Honey
- 50g Prunes
- 50ml Water

Place all ingredients into the bowl. Store in fridge overnight. Fit the attachment to the power unit. Switch to pulse for 4 seconds using Pulse. Use as required.


*Endless Chute Attachment times out at 120 seconds.

Assembly.

Review all warning and caution statements in the Important Safeguards section (pages 2-5) and above before proceeding to Step 1.

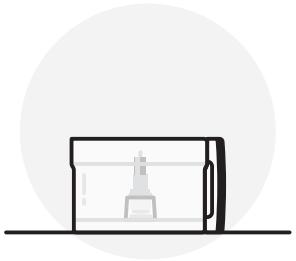


1 Place the **Work Bowl** on a clean, dry, flat surface, like a countertop or table.

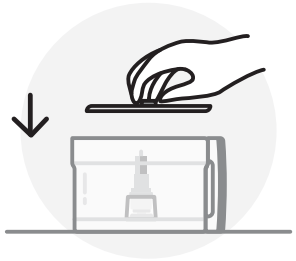

2b If using the Reversible Slice/Shred Disc attachment: With the required side (slice or shred) facing up, hold the disc by the plastic knob at the center and carefully secure onto the **Blade Adaptor**.

⚠ **WARNING! Never run the motor with more than 1 blade attached.**

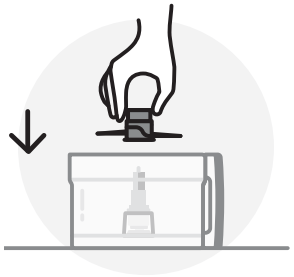


2a If using the Chopping Blade: Holding the plastic knob at the top of the blade, carefully slide the hollow blade center down the **Blade Adaptor** until it reaches the bottom of the **Work Bowl**. Press it down firmly to set it in place.

⚠ **WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blade's sharp edges. Always hold blades by grasping the plastic areas.**


⚠ **WARNING! Always power off and unplug the unit before assembling, disassembling, changing accessories, or cleaning to avoid laceration or other bodily injury.**

Using the Chopping Blade.

The **Chopping Blade** is a versatile blade that can be used to chop, mix, mince, or purée foods.

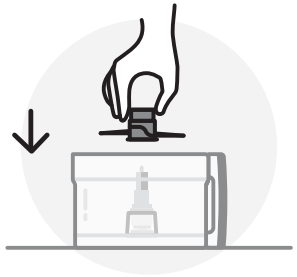


1 Place the **Work Bowl,** with the **Chopping Blade** attached, on a clean, dry, flat surface like a countertop. Refer to the assembly instructions on page 13 for how to properly attach the **Chopping Blade.**

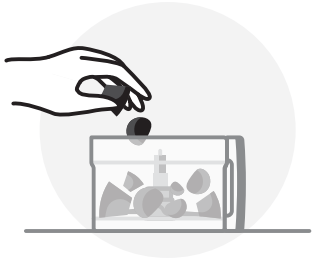

2 Prepare food (cut into smaller pieces, remove seeds, etc.) and place into the **Work Bowl.** Do not overload **Work Bowl** with food. If you are using liquid ingredients do not fill past the **LIQUID MAX** line.

NOTE: Make sure the **Chopping Blade** has been attached to the **Work Bowl BEFORE** adding food to the Work Bowl.

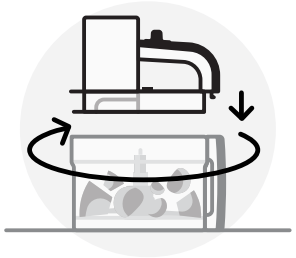


3 Place the **Work Bowl Lid** on top of the **Work Bowl**. Turn the lid clockwise, lining up the markings on the lid and handle, to lock into place. Place the **Food Pusher** into the **Feed Chute.**

NOTE: The motor will not run unless the lid is locked into place.



4 Place the **Work Bowl,** with lid attached, onto the **Motor Base.** Turn the **Work Bowl** clockwise to lock into place. You should hear a click when the **Work Bowl** is properly locked into place.

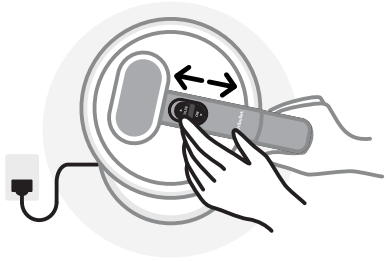

5a Plug in the unit, slide the toggle to the **ON** or **PULSE** position to start processing food.




5b If you need to add liquid while processing, lift the **Pusher** and drizzle liquid through the **Feed Chute**.


NOTE: Do not fill liquid ingredients past the LIQUID MAX line.



6 When you're finished, slide the toggle to the **OFF** position. Wait until the **Chopping Blade** has come to a complete stop. Remove the **Work Bowl** by turning the handle counterclockwise to unlock it from the **Motor Base**. Lift the **Work Bowl** up off the base and set it on a flat surface.

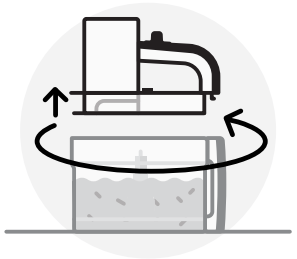


7 Remove the **Work Bowl Lid** from the **Work Bowl** by turning the lid counterclockwise to unlock. Carefully remove the lid and set it aside.

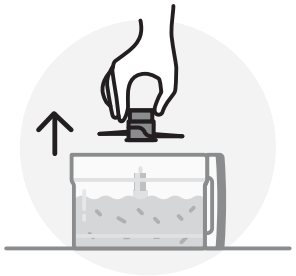

8 Carefully remove the **Chopping Blade** from the **Work Bowl** and set aside.

⚠ **WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blade's sharp edges. Always hold blades by grasping the plastic areas.**


⚠ **WARNING! Never tilt the Work Bowl to have the blade or disc drop out onto your hand.**

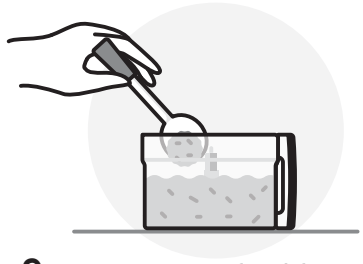

9 Remove your food from the **Work Bowl** using a spatula or spoon. Dispose of any leftover food in the **Work Bowl**, then clean the **Work Bowl**, blades, and other parts to avoid food residue buildup.

Using a Disc Attachment.

The disc attachment is for slicing or shredding your ingredients. The **Slice/Shred Disc** is reversible. Place the side you want to use with its name facing up.

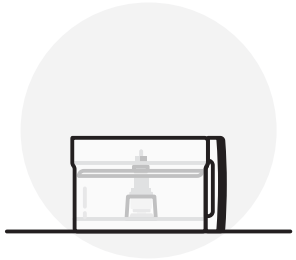


1 Place the **Work Bowl,** with **Reversible Slice/Shred Disc** attached, on a clean, dry, flat surface like a countertop. Refer to the assembly instructions on page 13 for how to properly attach a disc for use.

⚠ **WARNING! Blades and discs are sharp! Handle with care!**



3 Place the **Work Bowl,** with lid attached, onto the **Motor Base.** Turn the **Work Bowl** clockwise to lock in place. You should hear a click when the **Work Bowl** is properly locked in place.

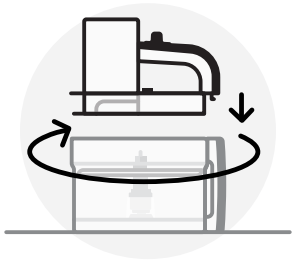


2 Place the **Work Bowl Lid** on top of the **Work Bowl.** Turn the lid clockwise, lining up the arrows on the lid and handle to lock into place.


NOTE: The motor will not run unless the lid is locked in place.




4 Prepare food (cut into smaller pieces, remove seeds, etc.) and set aside.

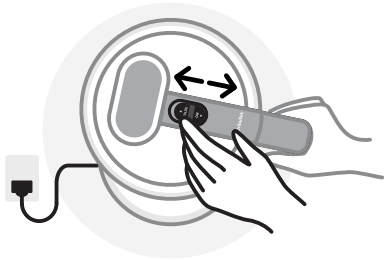

5 Plug in the unit and slide the toggle to the **ON** or **PULSE** position.

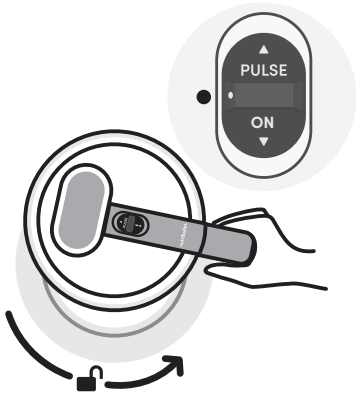


7 When you're finished, slide the toggle to the **OFF** position. Wait until the **Disc** has come to a complete stop. Remove the **Work Bowl** by turning the handle counterclockwise to unlock it from the **Motor Base**. Lift the **Work Bowl** up off the base and set it on a flat surface.

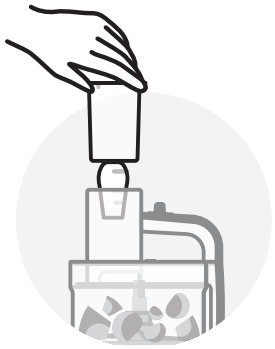


6 With the motor running, place food into the **Feed Chute,** carefully guiding it down using the **Food Pusher.**

⚠ **WARNING! Always use the Food Pusher, not fingers or utensils, to push food down chute. Do not insert too much food at one time. Never force stuck food down chute.**

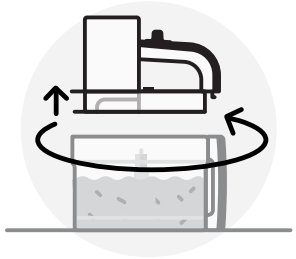


8 Remove the **Work Bowl Lid** from the **Work Bowl** by turning the lid counterclockwise to unlock. Carefully remove the lid and set it aside.

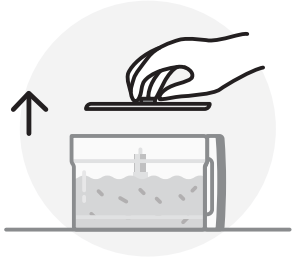

9 Carefully remove the **Disc** from the **Work Bowl** and set aside.

⚠ **WARNING! Keep fingers away from the discs sharp blades, handle by using the plastic center hub only.**


⚠ **WARNING! Never attempt to remove the blade or disc by tilting the Work Bowl and dropping out the blade or disc onto your hand.**

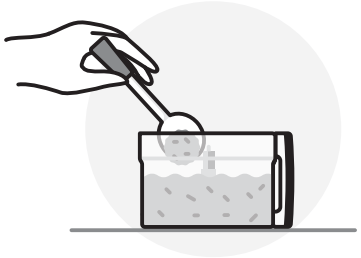


10 Remove your food from the **Work Bowl** using a spatula or spoon. Dispose of any leftover food in the **Work Bowl**, then clean the **Work Bowl**, blades, and other parts to avoid food residue buildup.

Using the Endless Chute.


The Endless Chute can be used for non-stop slicing and shredding without having to stop and empty the Work Bowl. The total amount of food you can slice or shred is limited only by the size of the receptacle under the chute. You can replace the full receptacle with an empty one and continue slicing or shredding.

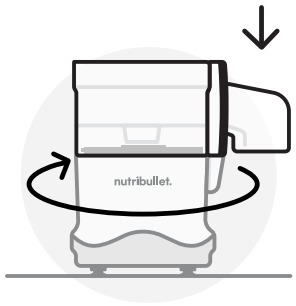


1 Place the **Endless Chute** on top of the **Motor Base**. Turn the **Endless Chute** clockwise to lock it onto the **Motor Base**.

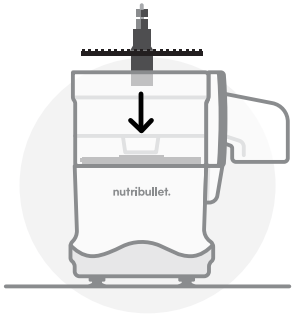


2 Insert the **Slinger Disc** into the hole at the bottom of the **Endless Chute**. Push down so the **Slinger Disc** is firmly and securely in place.

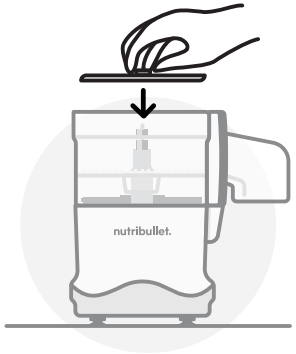


3 Carefully attach the **Slice/Shred Disc** to the **Slinger Disc** stem with the required side (slice or shred) facing up.

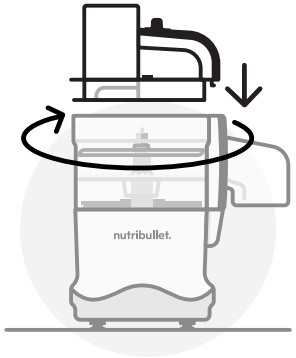

4 Place the **Work Bowl Lid** on the **Endless Chute Work Bowl**. Turn the **Lid** clockwise, lining up the markings on the **Lid** handle and **Work Bowl** handle to lock into place.

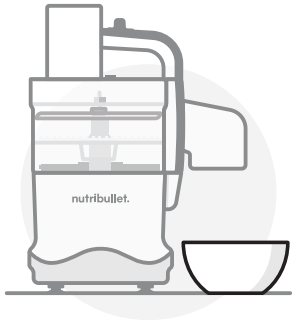

5 Place a receptacle for processed food on the counter under the **Endless Chute**. You can use bowls or saucepans. Those with high (under 5 inches, or 12.7cm) straight sides work best.

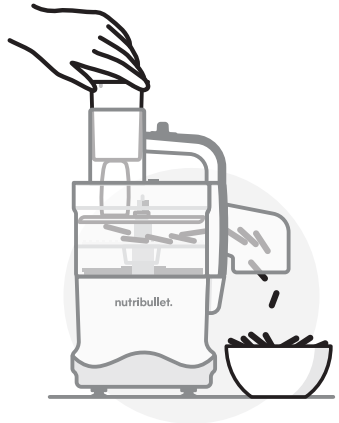

6 With the motor running, place food into the **Feed Chute**, carefully guiding it down using the **Food Pusher**.


NOTE: Remember to cut one end of the food flat if you are slicing to insert into feed tube flat side down. **Slinger Disc** will direct food through chute into receptacle.

⚠ **WARNING! Blades are sharp! Handle carefully. Keep fingers away from the disc and rotate until the markings line up and the disc sits in the higher position.**

⚠ **WARNING! Never use hands, fingers or utensils to push food down into the Feed Chute or Work Bowl. Only use the Food Pusher provided.**

Using the Food Pusher.

Use the pusher for guiding pieces of food down the **Feed Chute**.

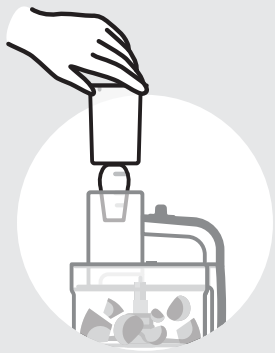

TIP: For best results, start the Food Processor first and then place the ingredients into the Feed Chute. Use the Food Pusher to gently guide the food down the Feed Chute. Do not use excessive pressure as it may cause the motor to seize and overheat or crack the Work Bowl.

⚠ **WARNING! Blades are sharp! Handle carefully. Keep fingers away from the blades' sharp edges. Always hold blades by grasping the plastic areas.**

Troubleshooting.

PROBLEM
Unit does not power on.

SOLUTIONS
Make sure the Power Cord is plugged into an electrical outlet, and that outlet has power.

Make sure the Work Bowl Lid is locked into place on top of the Work Bowl. The markings on the Lid and handle should line up when properly locked in place. If the Lid becomes unlocked at any time while the motor is running, the unit will stop running and the blue lights around the buttons will flash.

Make sure the Work Bowl is locked into place on the Motor Base. When placing the Work Bowl on the Motor Base, turn the handle clockwise until you hear a click – indicating that the Work Bowl is properly locked in place.

PROBLEM
Feed Chute is blocked.

SOLUTIONS
If you notice that a piece or cluster of food appears to be stuck in the Feed Chute, blocking food flow, turn the motor OFF. Unlock the Work Bowl Lid from the Work Bowl, and use the Food Pusher, a spatula, or spoon to remove the stuck food before reassembling.

If the Work Bowl is nearly full of food, that may stop the flow of food down the Feed Chute. If the food has reached to just below the disc attachment, you'll need to empty the Work Bowl before processing more food. Turn the motor OFF, wait until the blades have come to a complete stop and disassemble the unit to empty the Work Bowl.

Care & maintenance.

Cleaning the **nutribullet Limitless™ Food Processor** is quick and easy. All detachable parts (Blade Adaptor, Chopping Blade, Slice/Shred Disc, Endless Chute and Slinger Disc) are **TOP RACK** dishwasher-safe. The food processor parts can handle dishwasher temps of up to 180F (82C). The Motor Base is not dishwasher safe. It can be quickly hand-washed with a damp cloth.

NOTE: DO NOT use the heat/santize cycle when using the dishwasher.

STEP 1:
The most important thing — **ALWAYS POWER OFF THE UNIT** and **UNPLUG** the Motor Base from the power outlet when it is not in use.

NOTE: Do not attempt to handle the appliance until all parts have stopped moving! This includes during assembly and disassembly, while changing accessories, during cleaning, and any time you leave the machine unattended.

STEP 2:
Detach the blades and other attachments from the Motor Base.

STEP 3:
Clean the individual components as recommended below.

⚠ **WARNING! NEVER store or leave blades or discs exposed. Always cover or store with the appropriate lid or cover.**

MOTOR BASE:

- To avoid risk of injury, **NEVER** attempt to clean the actuator system on the Motor Base while the unit is plugged in.
- Do not attempt to remove any pieces from the Motor Base.
- Use a sponge or dish cloth dampened with warm soapy water to wipe down the Motor Base until clean.
- If necessary, you may use a small brush to scrub the actuator system area to ensure it's clean.
- To clean leakage residue from the Motor Base, wipe with a damp sponge and warm water.

⚠ **WARNING! Never submerge the Motor Base in water.**

ALL DETACHABLE PARTS:

⚠ **WARNING! Blades are sharp! Handle all blade attachments with care when cleaning!**

- Work Bowl, Chopping Blade, Lid, Food Pusher, Reversible Slice/Shred Disc, direct serve chute and slinger disc are all **TOP RACK** dishwasher-safe. These parts may also be cleaned by hand with warm soapy water.
- We recommend cleaning all removable parts after each use to reduce the buildup of residue.

⚠ **WARNING! Never use the sanitize cycle — heat this high can warp the plastic.**

⚠ **WARNING! Do not clean the Work Bowl, Work Bowl Lid, or other parts of the appliance with steel wool pads/balls or other hard material that might scratch your nutribullet Limitless™ Food Processor.**

How to store.

The Chopping Blade and Reversible Slice/Shred Disc can be conveniently stored within the Work Bowl when not in use. Make sure the unit is powered off and unplugged before placing attachments in the Work Bowl for storage.

STEP 1:
Lower the Chopping Blade onto the Blade Adaptor.

STEP 2:
Lower the disc attachment onto the adaptor, on top of the Chopping Blade.

STEP 3:
Place the Work Bowl Lid onto the Work Bowl and lock into place with the Food Pusher nestled in the Feed Chute.

STEP 4:
Endless Chute and Slinger Disc can be stored separately.

Replacement parts.

To order additional parts and accessories, please visit our website at **bulletbrands.com.au / bulletbrands.co.nz** or feel free to contact Customer Service: **AU: 1300 285 538 / NZ: 0800 232 633.**

CDB GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of One (1) Year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the defective product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.
- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB GROUP

NEW ZEALAND
PO Box 100-707
NSMC
Auckland 0745
0800 232 633
bulletbrands.co.nz

AUSTRALIA
PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

nutribullet® is a registered trademark of CapBran Holdings, LLC.
Copyright © 2026 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90024, USA. Made in China.

Capital Brands Distribution, LLC | All rights reserved.

nutribullet® and the nutribullet logo are trademarks of Capbran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NBP07300_260720