nutribullet
POWER CORE™
BLENDER COMBO



User guide

WARNING! Reduce the risk of serious injury by reading the User Guide to your nutribullet Power Core™ Blender Combo before operating. Save these instructions. Ensure anyone who uses the nutribullet® knows how to do so safely.

IMPORTANT SAFEGUARDS

When operating your nutribullet® device, remember:
SAFETY COMES FIRST. WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE OBSERVED, INCLUDING THE FOLLOWING:

⚠ **WARNING! To avoid the risk of serious injury, death, property damage, or damage to your device, carefully read all instructions before operating your nutribullet® device. When using any electrical appliance, basic safety precautions should always be observed, including the important information in this User Guide.**

Ensure that anyone using this nutribullet® product understands the health and safety information included in this User Guide, a well as any additional safety or usage instructions provided. Each person using a device should carefully read the User Guide in its entirety to become familiar with the safe operation of the unit.

! SAVE THESE INSTRUCTIONS!
FOR HOUSEHOLD USE ONLY

GENERAL USE AND SAFETY:

Failure to follow all instructions regarding your use of your nutribullet® device may result in serious personal injury, death, or property damage. Be aware of possible hazards when using or storing your nutribullet®.

⚠ **WARNING! USE ONLY THE BLENDING PITCHER AND VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS. NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS USING A NUTRIBULLET® CUP ACCESSORY, AS CONTENTS MAY PRESSURISE AND MAY ERUPT UPON OPENING, CAUSING SERIOUS BODILY INJURIES OR DAMAGE.**

- Do not use the nutribullet® for other than its intended purpose.
- Never place any non-food items in any of the attachments when blending. Doing so may damage the unit or crack or shatter the attachment, resulting in bodily injury or property damage.
- Close supervision is necessary when using this or any appliance near children to ensure they do not play with it. Keep cord out of reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety.
- **NEVER LEAVE THE NUTRIBULLET® UNATTENDED WHILE IT IS IN USE.**
- Do not place or operate your nutribullet® on uneven or unstable surfaces.
- To reduce the risk of fire, shock, or damage to your nutribullet® during cleaning, follow these precautions:
  - Turn off your device and unplug it before cleaning.
  - Only clean the exterior of your device.
  - Clean your device with a dry cloth.
- To protect against the risk of electrical shock, **DO NOT** immerse the Motor Base in water or other liquids. The Motor Base should only be cleaned by wiping it down with a clean cloth.
- Do not place any nutribullet® part or accessory in a microwave, conventional oven, air fryer, or stovetop pot, or immerse in boiling water, as this will damage the part.
- This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the Lid is securely installed on the the Pitcher.
- Do not place or operate your nutribullet® on or near a hot gas or electric burner, or in a heated oven.

⚠ **WARNING! NEVER WASH YOUR NUTRIBULLET® PARTS OR ACCESSORIES USING THE SANITISE OR HEAT CYCLE OF YOUR DISHWASHER. DOING SO CAN WARP THE PART, WHICH CAN CREATE HAZARDOUS CONDITIONS DURING USE THAT MAY RESULT IN BODILY INJURY OR PROPERTY DAMAGE.**

- **NEVER** place any nutribullet® parts or accessories in the freezer. Do not use nutribullet® parts and accessories as storage containers in the freezer.
- Never attempt to defeat any safety interlock mechanisms on the appliance.
- Remove and safely discard any packaging material or promotional labels before using the appliance for the first time.

- Do not operate your nutribullet® if any of the parts and accessories are or appear to be damaged in any manner that may impair proper function or create a safety hazard. If you suspect your nutribullet® parts and/or accessories may be damaged, contact Customer Service.
- Do not use parts, accessories or attachments from other manufacturers, different models of nutribullet® or magic bullet® products, or canning jars. Use of parts, accessories or attachments **NOT** specifically designed for your particular nutribullet® device may damage your unit or cause serious bodily injury, fire, or electric shock.
- Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.
- **DO NOT USE OUTDOORS. ALWAYS UNPLUG YOUR NUTRIBULLET® WHEN NOT IN USE.**
- To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Always **POWER OFF** and **UNPLUG** the unit and wait until the blades come to a complete stop before assembling, disassembling, changing accessories, or cleaning.
- This appliance has a polarized plug, on which one blade is wider than the other. To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit into the outlet properly, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

USING THE BLENDING PITCHER:

⚠ **WARNING! ONLY USE THE BLENDING PITCHER WITH THE VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS. NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS IN A NUTRIBULLET® CUP ACCESSORY, AS CONTENTS MAY PRESSURISE AND MAY ERUPT UPON OPENING, CAUSING SERIOUS BODILY INJURIES OR DAMAGE.**

- To prevent splashes and splatters, always affix the Vented Pitcher Lid to the Blending Pitcher with the Pour Spout Cover down and closed before blending. This will ensure ingredients remain contained within the pitcher, preventing property damage, bodily injuries and, in the case of hot ingredients, burns.
- After blending hot ingredients or liquids, exercise caution when opening the Pitcher Lid, and be mindful of escaping hot steam or splattering hot ingredients.
- Do not overfill the Blending Pitcher beyond the MAX line.

⚠ **WARNING! DO NOT USE THE BLENDING PITCHER IF YOU DETECT CRACKING, CLOUDINESS, OR OTHER DAMAGE. VISIT BULLETBRANDS.COM.AU / BULLETBRANDS.CO.NZ OR CONTACT CUSTOMER SERVICE TO PURCHASE A NEW BLENDING PITCHER.**

⚠ **WARNING! TO INCORPORATE INGREDIENTS DURING BLENDING, CAREFULLY LIFT OPEN THE POUR SPOUT COVER ON THE PITCHER LID AND GENTLY POUR OR DROP INGREDIENTS INTO THE MIXTURE. BE ESPECIALLY MINDFUL WHEN ADDING HOT INGREDIENTS AND LIQUIDS, AS ESCAPING STEAM OR SPLATTERS MAY PRESENT A RISK OF INJURY.**

- When using manual speeds, start blending on the LOW setting and, once ingredients are integrated, adjust the speed as needed.

BLENDING PITCHER SAFETY:

Proper Blending Pitcher use is important for the safe operation of your nutribullet®. Using the Blending Pitcher inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.

- This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the lid is securely installed on the the Pitcher.
- Only operate the Blending Pitcher with the Pitcher Lid securely locked in place and the spout closed.
- Before blending, check that the vent slots on the Pitcher Lid are clear and unobstructed. Clogged or obstructed vent slots will pressurise the contents, which can cause the release of hot steam or the splattering of ingredients upon opening.
- For recipes that require certain ingredients to be incorporated during blending, first add the base ingredients, then attach the Pitcher Lid and begin blending. Once the ingredients are mixed well, lift open the Pour Spout Cover and carefully pour or drop ingredients into the blended

mixture. If the blended mixture is hot or warm, use caution and lift open the Pour Spout Cover slowly, being mindful of escaping hot steam or the splattering of hot ingredients. Always close the Pour Spout Cover after adding ingredients.

- **NEVER** place hands or use utensils like spatulas, spoons, or other tools near the spinning blades during operation. Doing so can damage the unit, shatter the Blending Pitcher, or cause severe bodily injury or property damage.

BLENDING WITH NUTRIBULLET® CUPS:

⚠ WARNING! NEVER BLEND HOT, WARM, OR CARBONATED INGREDIENTS OR LIQUID IN THE NUTRIBULLET® CUP! HEATED OR CARBONATED INGREDIENTS CAN PRESSURISE THE CONTENTS, WHICH MAY CAUSE THE CUP AND BLADE TO FORCIBLY SEPARATE UPON OPENING OR REMOVING FROM MOTOR BASE. THIS MAY RESULT IN THE EXPULSION OF HOT CONTENTS FROM THE CUP OR EXPOSURE OF THE BLADE, BOTH OF WHICH MAY RESULT IN SERIOUS BODILY INJUIRES (INCLUDING THERMAL BURNS) OR PROPERTY DAMAGE. ONLY USE THE BLENDING PITCHER AND VENTED PITCHER LID TO BLEND HOT, WARM, OR CARBONATED INGREDIENTS.

⚠ WARNING! NEVER BLEND FOR LONGER THAN ONE MINUTE.

- **To avoid heating and overpressurising the Cup: NEVER** blend hot, warm, or carbonated ingredients in the nutribullet® Cups. Only blend room-temperature or refrigerated ingredients (70°F/21°C or cooler). After blending, transfer the mixture to a stovetop pot to heat and eat.
- **NEVER** blend for longer than one minute. Friction from the rotating blades can cause contents to heat and pressurise. Continuous blending for more than one minute may cause the Cup to separate from the Blade, exposing the Blade or expelling heated ingredients, both of which can cause injury.
- Do not run consecutive one-minute blending cycles. Allow contents to settle for at least 10 to 15 minutes and release any built-up pressure by opening the Cup slowly and carefully, pointing away from your body, before running another blending cycle.

⚠ WARNING! NEVER ATTEMPT TO OPEN THE CUP IF IT FEELS HOT OR WARM TO THE TOUCH. SEE CUP CAUTION SECTION FOR DETAILS.

- Do not blend anything carbonated or effervescent. Carbonated and effervescent ingredients (carbonated water, baking powder, baking soda, yeast, some batters, cake mix, dry ice, or other things that become bubbly) release gases that increase pressure within the Cup. Pressure from released gases can cause a sealed nutribullet® Cup to separate, resulting in possible injury and/or property damage. **NOTE:** Some protein powders include effervescent ingredients. Always check supplement ingredients before adding.
- Do not overfill.
  - Filling above the MAX line can result in leakage. The cyclonic action of the nutribullet® requires space to blend effectively. Exceeding the MAX line can result in leakage and may create dangerous conditions for pressurisation, which can cause the Cup and Extractor Blade to separate, resulting in possible injury and/or property damage.
- **DO NOT** leave blended foods inside a sealed Cup.
  - Blended mixtures can spoil and ferment, increasing pressure when left inside the Cup.
  - Use the To-Go Lid or transfer to a vented container for storage after blending.

CUP CAUTION:

⚠ WARNING! NEVER ATTEMPT TO OPEN A SEALED NUTRIBULLET® CUP IF IT FEELS HOT OR WARM TO THE TOUCH. THE CONTENTS MAY BE HEATED AND PRESSURISED, WHICH CAN CAUSE THE CUP TO VIOLENTLY SEPARATE WHEN OPENED AND POTENTIALLY RESULT IN BODILY INJURY AND/OR BURNS. IF THE CUP FEELS HOT OR WARM, TAKE THE FOLLOWING PRECAUTIONS:

1. Stop blending and unplug the unit.
2. **LEAVE ALONE**. **DO NOT TOUCH**. **DO NOT OPEN**. Leave the Cup where it is and do not touch it or allow others to touch it.
3. **DO NOT** attempt to remove the Cup from the Motor Base. **DO NOT** attempt to twist-off the Extractor Blade from the Cup.
4. Allow the Cup to cool for at least 30 minutes.

5. After 30 minutes, check if the Cup is completely cooled. If it is still warm, give it more time to cool.
6. Once the Cup is cool to the touch, slowly and carefully disengage it from the Motor Base.
7. Point the Cup away from your face and body. Use a towel to slowly untwist the Extractor Blade from the cup, gently releasing any residual pressure as you open.

⚠ **WARNING! NEVER ATTEMPT TO SEPARATE THE CUP FROM THE EXTRACTOR BLADE BY FORCING OR PRYING APART THE COMPONENTS. DOING SO MAY CRACK OR SHATTER THE CUP, WHICH CAN RESULT IN BODILY INJURY. IF YOU ARE UNABLE TO UNTWIST THE EXTRACTOR BLADE FROM THE CUP, CONTACT CUSTOMER SERVICE AND PROPERLY DISPOSE OF THE CUP AND ITS CONTENTS.**

- **NEVER** handle the a sealed nutribullet® Cup if it feels hot or warm.
- If the Cup is cool, securely wrap or box the Cup as the contents may ferment and pressurise causing the Cup to forcibly separate, which may result in bodily injury or property damage.
- **DO NOT** dispose or leave a sealed Cup in an indoor trash container. Dispose of the securely wrapped or boxed Cup at the bottom of a covered outdoor trash container.

CUP SAFETY:

Proper Cup use is important for the safe operation of your nutribullet®. Using the Cup inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit. Remember, **NEVER** blend hot, warm, or carbonated ingredients or liquid in the nutribullet® Cup, and **NEVER** blend for more than one minute.

ALWAYS securely tighten the Extractor Blade to the Cup. An improperly tightened Extractor Blade may lead to leakage. If the Cup starts to leak during blending, **DO NOT** attempt to disengage the Cup from the Motor Base as the Cup may separate from the Blade, which can expose the Blade and cause laceration injuries. If you notice leakage, **DO NOT** attempt to remove the Cup. Immediately unplug the unit and allow the blades to come to a complete stop before removing the Cup from the Motor Base.

- Always make sure the Cup is securely tightened and locked onto the Motor Base before blending. The motor will not turn on unless the Cup is set in the locked position.
- Do not overfill or exceed the MAX line. Exceeding the MAX line can result in leakage.
- Do not remove the Cup while the unit is in operation.
- **NEVER** operate your nutribullet® with an empty Cup attached.
- Do not crush ice or overfill the Cup with ice. Your nutribullet® is not intended to be used as an ice crusher. Overfilling the Cup with ice may cause the ice to wedge into the Blade, which can jam the Blade and cause the motor to overheat.
- Always use sufficient liquid ingredients when blending.
- Do not place any nutribullet® parts or accessories on the bottom rack or use the heat/sanitise cycle on your dishwasher.
- Cups, To-Go Lids, and other nutribullet® parts or accessories are **NOT** microwave-safe.
- Do not use the Extractor Blade as a storage lid, as it is not vented. Your blended mixture can ferment, increasing pressure within the Cup, which may cause separation that can lead to bodily injury and property damage. Use the To-Go Lid or transfer to a vented container for storage after blending.
- To reduce the risk of injury, never place or store an exposed Extractor Blade on the Motor Base without the Cup properly attached.
- Do not leave any non-food items in the Cup when blending. Remove all utensils from the Cup.
- Do not blend stone fruit in this appliance unless pits/seeds have been removed. Fruit pits may damage the Cup, potentially resulting in shattering and personal injury. In addition, apple seeds and the pits of cherries, plums, peaches, and apricots contain a chemical known to release cyanide into the body when ingested.
- Periodically inspect your nutribullet® Cup for damage or wear that may impair proper function or create a safety hazard.
- Do not use the Cup if you detect cracking, cloudiness, or other damage. You may purchase new Cups at **bulletbrands.com.au / bulletbrands.co.nz** or by contacting Customer Service.
- Periodically inspect your Extractor Blade. If the blades do not rotate freely or if the gasket is missing or damaged, immediately discontinue use and contact Customer Service.
- Do not use after-market replacement parts for your nutribullet®. After-market replacement parts may result in damage to your nutribullet® or present safety hazards resulting in bodily injury or damage. Only order replacement parts from **bulletbrands.com.au**

/ bulletbrands.co.nz or by contacting Customer Service. Please specify the model for parts that are compatible with your unit.

GENERAL BLADE SAFETY:

⚠ **WARNING! BLADES ARE SHARP! HANDLE WITH CARE TO AVOID BODILY INJURY. NON-FOOD ITEMS OR HARD INGREDIENTS MAY DAMAGE THE BLADES. ROUTINELY INSPECT THE BLADES AND DISCONTINUE USE IF THE BLADES ARE DAMAGED OR DO NOT FREELY ROTATE. CONTINUED USE WITH DAMAGED BLADES OR USE INCONSISTENT WITH THESE INSTRUCTIONS MAY RESULT IN BODILY INJURY, PROPERTY DAMAGE, OR DAMAGE TO YOUR UNIT.**

- **NEVER STORE THE UNIT WITH THE BLADE EXPOSED. ALWAYS COVER THE BLADE. EXPOSED BLADES PRESENT A LACERATION HAZARD THAT MAY CAUSE SEVERE PERSONAL INJURY.**
- Always **POWER OFF** and **UNPLUG** the unit and wait until the Blade comes to a complete stop before assembling, disassembling, changing accessories, or cleaning.
- **DO NOT** crush ice. Your nutribullet® is not intended function as an ice crusher. Doing so may shatter the Pitcher or Cup accessory causing injury or damage. Always add a sufficient amount of liquid ingredients when blending.
- Do not overload the Pitcher or any nutribullet® Cup accessory, as this may prevent the Blade from spinning.
- Do not attempt to grind dry ingredients such as grains, cereal, or coffee, as this may overheat the motor and/or damage the blades.
- **AVOID CONTACT WITH MOVING PARTS!** Keep hands and utensils out of and away from the Blade to reduce the risk of severe personal injury or damage to the unit.
- **NEVER** place accessory parts on the bottom rack of the dishwasher or use the heat/sanitise cycle while cleaning the components in the dishwasher.
- Periodically inspect your Blade. If the blades do not rotate freely or are damaged, immediately discontinue use and contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633**.
- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® unit, or present safety hazards that may cause personal injury or damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz** or contact Customer Service.

ELECTRICAL SAFETY:

Modifying, improperly using, or failing to follow the setup, usage, and care instructions for your nutribullet® device can increase the risk of property damage, serious personal injury, or death.

⚠ **WARNING! NEVER USE THE UNIT IN COUNTRIES OR LOCATIONS WITH INCOMPATIBLE ELECTRICAL SPECIFICATIONS OR PLUG TYPES.**

⚠ **WARNING! DO NOT USE THE UNIT WITH A VOLTAGE CONVERTER DEVICE, AS IT MAY CAUSE ELECTRICAL SHORTING, FIRE, OR ELECTRIC SHOCK, ALL OF WHICH MAY RESULT IN PERSONAL INJURY OR PRODUCT DAMAGE.**

- Do not use the unit if the cord, plug, or Motor Base has been immersed in water or other liquids.
- Do not use the unit in a wet area, or anywhere it could become wet. Any significant spillage on, under, or around the Motor Base should be cleaned and dried before plugging in and using the unit.
- Do not attempt to plug the unit into an electrical outlet with wet hands.
- Avoid contact with the touchscreen display when the Power Button is illuminated to prevent inadvertent and unexpected operation of the unit.
- Do not modify the electrical cord in any way.
- Do not operate any unit with a damaged electrical cord or plug. The electrical cord and plug are not suitable for replacement. If damaged, the appliance should be replaced. Contact Customer Service for assistance.
- Do not place the electrical cord near or touching any hot surfaces, heat sources, or flames, including stoves.
- Do not allow the electrical cord to hang over the edge of a table or counter.
- Do not pull, twist, or damage the power cord.
- Overloading the unit with ice or other ingredients may overheat the motor and engage the thermal breaker. If the internal thermal breaker shuts off the motor, unplug the Motor Base and let it cool for an hour before attempting to use it again. The thermal breaker will reset when the unit is unplugged and the thermal breaker cools down.

- Always **UNPLUG** your nutribullet® when it is not in use, and when assembling, disassembling, changing accessories, or cleaning.
- **NEVER** pull the power cord to remove the plug from the outlet. To unplug, grasp the plug and pull from the outlet.
- Use of incompatible parts or aftermarket parts may result in damage to your nutribullet® or present safety hazards that may cause personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz** or contact Customer Service.

VENTILATION:

- **NEVER** obstruct the ventilation openings on the bottom of the Motor Base of your nutribullet® device. Openings on the bottom of the Motor Base should be free of dust and lint and never obstructed. Obstructing the ventilation openings may overheat the motor, presenting a fire hazard that may cause property damage, serious personal injury, or death.
- **ALWAYS** use the nutribullet® on a level surface, ensuring there is unobscructed space surrounding the motor base to allow for proper air circulation. Slots on the bottom of the Motor Base are provided for ventilation to ensure reliable operation and to prevent the motor from overheating.
- **NEVER** place your nutribullet® on top of flammable materials such as newspapers, tablecloths, napkins, dishtowels, placemats, or similar items.

MEDICAL SAFETY:

Always consult your physician regarding health and nutrition concerns and advice. The information contained in this User Guide, accompanied Recipe Guide, and/or online recipes are general suggestions and ideals, and are not meant to replace the advice of your physician.

MEDICATION INTERACTIONS:

⚠ **WARNING! ALWAYS USE CAUTION WHEN COMBINING INGREDIENTS. FAILURE TO FOLLOW NUTRIBULLET® PRODUCT WARNINGS CAN RESULT IN SERIOUS BODILY INJURY; NEVER FOLLOW PREPARATION INSTRUCTIONS THAT CONTRADICT NUTRIBULLET® PRODUCT WARNINGS. CERTAIN INGREDIENTS UNDERGO CHEMICAL REACTIONS WHEN MIXED. BLENDING SUCH INGREDIENTS IN YOUR NUTRIBULLET® CAN CAUSE PRESSURISATION THAT MAY RESULT IN SERIOUS BODILY INJURY OR PROPERTY DAMAGE. FOR THE SAFE OPERATION OF YOUR UNIT, ALWAYS BE MINDFUL WHEN COMBINING INGREDIENTS, AND BE SURE TO FOLLOW ALL NUTRIBULLET® PRODUCT WARNINGS AS WRITTEN IN THE PRODUCT USER GUIDE.**

- Always consult your physician regarding health and nutrition concerns and advice. The information contained in this User Guide, any accompanied guide, and/or online recipes are general suggestions and ideals and are not meant to replace the advice of your physician.
- If you are taking any medications, especially cholesterol-lowering medication, blood thinners, blood pressure drugs, tranquilizers, or antidepressants, please check with your physician before trying any published recipes.
- **ALWAYS** follow recommended maintenance and care instructions in the User Guide.

! SAVE THESE INSTRUCTIONS!



Contents

02 Important safeguards

16 What's included

17 Assembly guide

18 Control panel

20 Blending with the Pitcher
- 20 First-time setup
- 21 Using the blender


24 Blending with the Cup

27 Care & maintenance
- 28 Replacement parts


29 nutribullet Power Core™ Blender Combo one-year limited warranty

Thank you for purchasing the nutribullet Power Core™ Blender Combo.


What's included

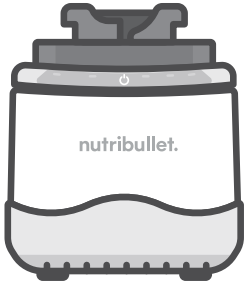


motor base

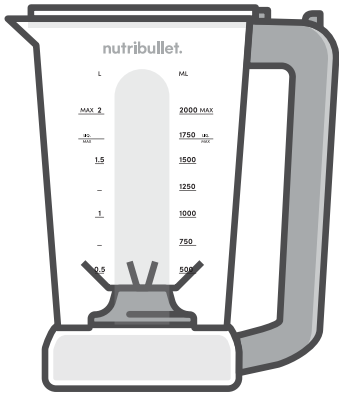

2L pitcher

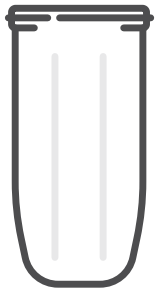


700 ml cup

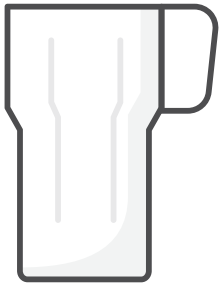


700 ml
handled cup



pitcher lid with
pour spout cover

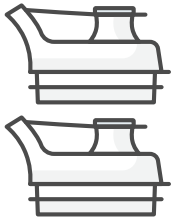


2 to-go lids




blade

Product configurations may vary. To see our full list of nutribullet® accessories, please visit **bulletbrands.com.au / bulletbrands.co.nz**

Assembly guide

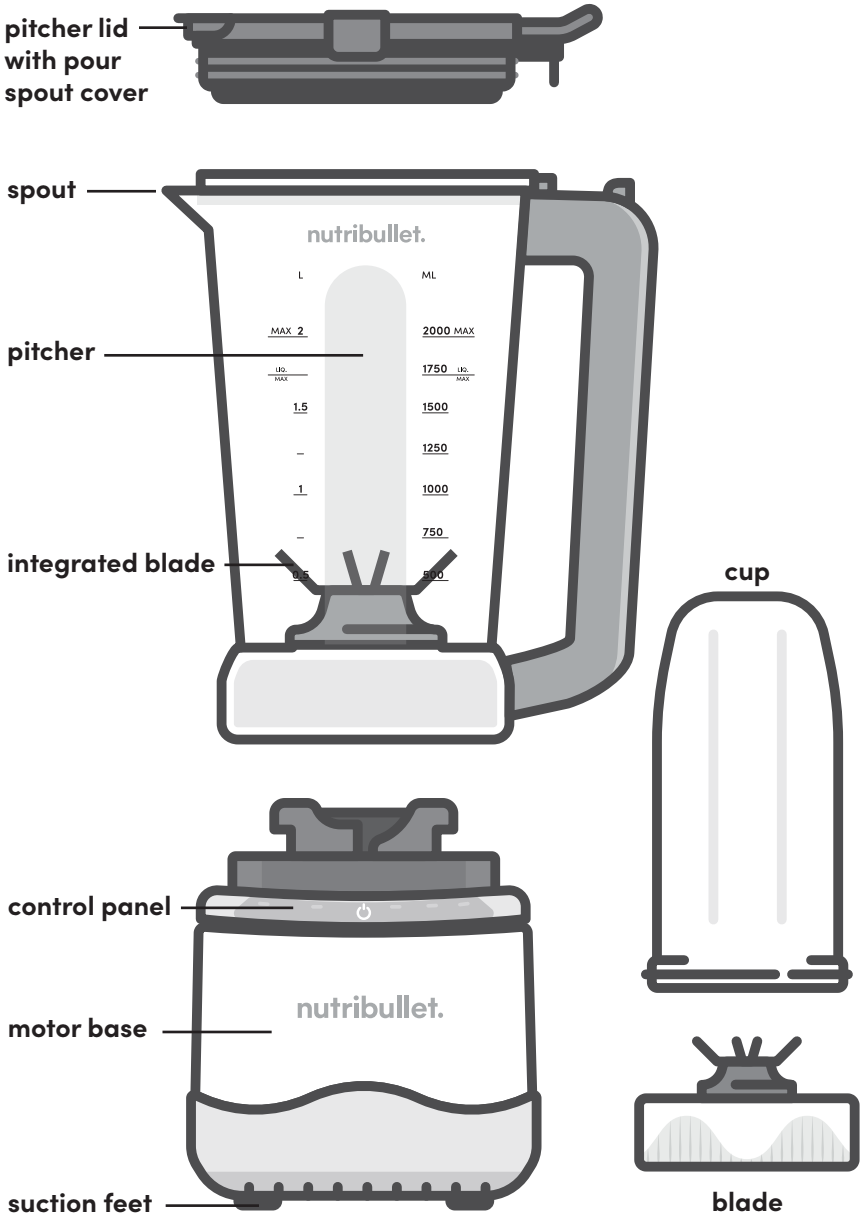

Control panel

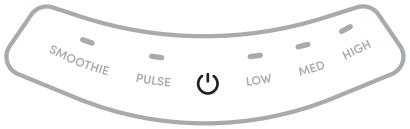

POWER BUTTON
The **Power Button** turns the blender on (light indicates power). Always turn off and unplug the blender when not in use.



LOW
For mixing thin batters, gravies, and marinades, scrambling eggs, and processing cooked foods or raw fruits.



SMOOTHIE
Automatically blends ingredients in a timed cycle to create smooth, consistent drinks.



MED
For creaming soups, mixing dips, grinding nuts, and blending sauces, spreads, drinks, and milkshakes.



PULSE
For controlled chopping and processing.



HIGH
For liquefying thick mixtures and blending frozen fruits or vegetables.

Blending with the Pitcher

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

- Plug in the Motor Base before use.
- Always attach the Pitcher before blending.
- Never run the blender while empty.
- Do not put accessories in the microwave.
- Never leave the blender running unattended.
- Be extra careful when blending hot liquids.
- This appliance is equipped with a safety interlock system. The motor will not operate unless the Pitcher is properly seated and locked onto the Motor Base and the Lid is securely installed on the the Pitcher.

⚠ **WARNING! STEAM AND SPLASHES CAN BURN YOU.**

⚠ **WARNING! ALWAYS KEEP THE PITCHER LID WHEN BLENDING HOT LIQUIDS.**

⚠ **WARNING! FILL ONLY UP TO THE MAX LINES FOR LIQUIDS AND SOLIDS.**

⚠ **WARNING! START AT LOW SPEED, THEN INCREASE ONCE THE MIXTURE IS SMOOTH AND STEADY.**

First-time setup



1 Unbox the **Motor Base** and all attachments; place them on a flat, dry surface.



2 Rinse all detachable parts. All parts except the **Motor Base** are dishwasher-safe or can be hand-washed with warm, soapy water. Wipe the **Motor Base** with a damp cloth.

Using the blender




1 Set the **Motor Base** on a clean, dry, level surface. Ensure the rubber suction feet are secured to the surface for stability.



2 Place the **Pitcher** on a clean, dry, level surface. Add ingredients without exceeding the MAX line.




3 Attach the **Lid** to the **Pitcher** with the **Pour Spout Cover** opposite the handle. Align the Interlocking mechanism, located under the thumb push portion, with the opening on the top of the **Pitcher's** handle and push down for a secure fit.

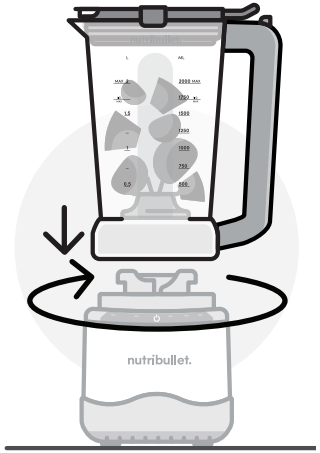

4 Place the **Pitcher** onto the **Motor Base** with the handle pointed directly toward the **Control Panel**. Twist clockwise to lock the **Pitcher** into place. (You should hear a "**click**" when it's locked.)




5 Plug the power cord into an electrical outlet.

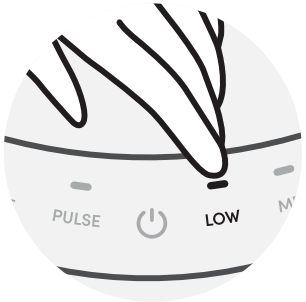


7 To blend continuously, locate your desired speed on the **Control Panel** and press once to start. The blender will run at that speed until paused or stopped, and you can change speeds at any time.

To pause, press the selected speed button again: the setting light will turn off and the unit will stop until you choose a new setting to resume.

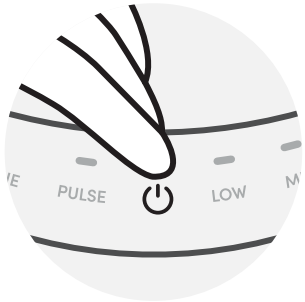

6 Press ⏻ to turn on the blender. The blending mode lights will illuminate in sequence from left to right when the unit is powered on.

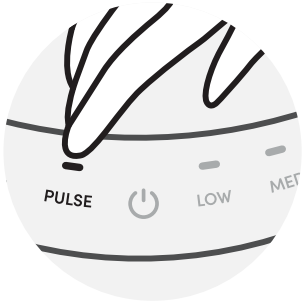


For pulsing, press and hold the **PULSE** button. The blender runs only while the button is held, giving you precise control over blending time and texture.




To add ingredients: Turn the **Blender OFF.** Remove the **Lid**. Add ingredients and replace the **Lid** as shown in Step 3.

NOTE: If you need to dislodge or redistribute stuck ingredients at any point during blending, be sure to completely power off and unplug the unit, ensuring blades have come to a full stop, before opening the **Lid** and loosening ingredients. If using a utensil to dislodge ingredients, ensure it is completely removed from the pitcher before reattaching the **Lid** and resuming blending. If sticking persists, add more liquid to your blend.

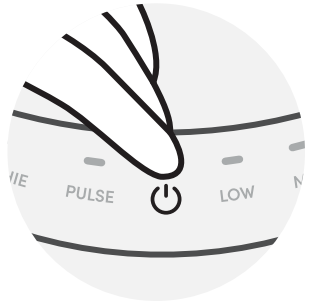

8 Press the ⏻ to stop blending and wait for the blades to stop spinning. The ⏻ will remain lit, indicating the blender is in idle mode.

⚠ **WARNING! Blades are sharp. Never put your hands in the Pitcher.**

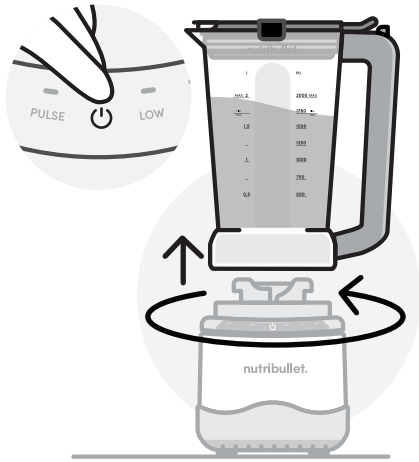

9 Press ⏻ again to power off. Twist the **Pitcher** counterclockwise to release from the **Motor Base**. Open the **Spout Cover Lid** before pouring your mixture into your desired vessel.

Blending with the Cup

⚠ **WARNING! NEVER BLEND HOT OR WARM INGREDIENTS INSIDE THE NUTRIBULLET® CUP! USING THE CUP TO BLEND HOT OR WARM INGREDIENTS MAY CAUSE THE CUP TO SEPARATE, EXPELLING HOT CONTENTS OR EXPOSING THE BLADE, BOTH OF WHICH CAN CAUSE SEVERE BODILY INJURY AND PROPERTY DAMAGE.**


⚠ **WARNING! USE ONLY THE VENTED PITCHER TO BLEND HOT OR WARM INGREDIENTS.**

⚠ **WARNING! DO NOT BLEND FOR LONGER THAN ONE MINUTE.**


⚠ **WARNING! DO NOT OVERFILL WITH ICE. ALWAYS USE SUFFICIENT LIQUIDS.**



1 Set the **Motor Base** on a clean, dry, level surface. Ensure the rubber suction feet are secured to the surface for stability.

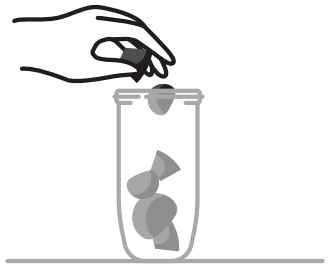


2 Place the **Cup** on a clean, dry, level surface. Add ingredients without exceeding the MAX line.

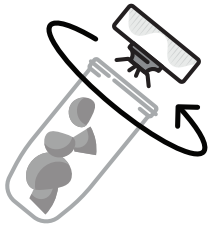

3 Twist the **Extractor Blade** onto the **Cup** so it is tightly sealed.



4 Turn the **Cup** upside down and place it onto the **Motor Base**, gently turning the **Cup** clockwise to lock into the **Motor Base**.

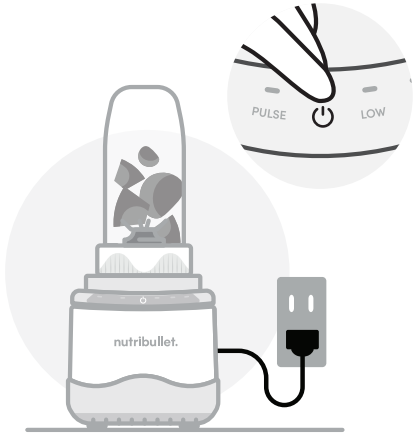


5 Plug the **Motor Base's** power cord into an electrical outlet and press the **Power Button** to turn on the Blender. You will see the **Control Panel** illuminate.




6 Press the **Smoothie** button.

Once the blending is complete, wait for the blades to stop turning.

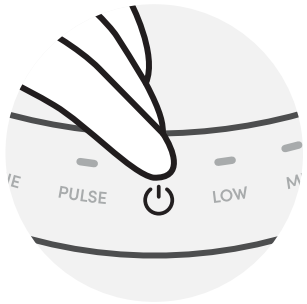


7 Press the **Power Button** to turn off the blender.

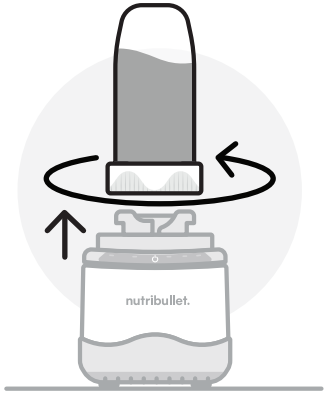


8 Unlock the assembly by gently twisting the Cup counterclockwise. You will hear a **click**.

Care & maintenance

CLEANING YOUR NUTRIBULLET POWER CORE™ BLENDER COMBO:

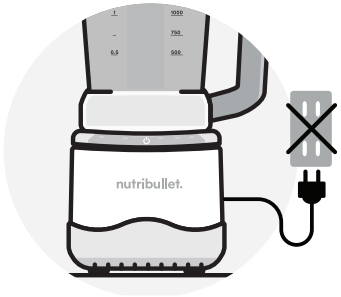

1 Always turn off and unplug the blender before touching it. Wait until all parts stop moving.

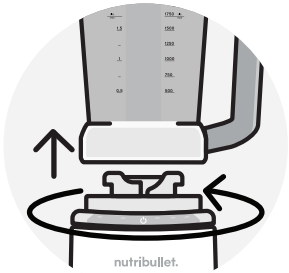

2 Remove the **Pitcher** or **Cup** from the **Motor Base**.



3 Clean the **Motor Base** and **Pitcher**, and **Cups** as described in the cleaning instructions.

MOTOR BASE:

- Do not take apart the Motor Base.
- Wipe the Motor Base with a sponge or cloth and warm soapy water damp cloth.
- For leaks, wipe with a damp sponge and warm water.
- Use a small brush if needed to clean around the actuator system.

⚠ **WARNING: NEVER PUT THE MOTOR BASE IN WATER.**

PITCHER:

⚠ **WARNING: BLADES ARE SHARP! USE CAUTION WHEN CLEANING THE PITCHER.**

- The Pitcher is dishwasher-safe. We recommend rinsing and briefly scrubbing it with a dish brush to remove any remaining debris before placing it in the dishwasher. **NEVER** use the sanitise cycle to wash the Pitcher — heat this high can warp the plastic.
- If preferred, hand-wash the Pitcher with soap and water. Stuck-on ingredients might require extra scrubbing with a dish brush or sponge.

- Regularly check the structure of the Pitcher and twisting threads for cracking, crazing, or breakage. If damaged, replace immediately to prevent the risk of personal injury.

NUTRIBULLET® CUPS & TO-GO LIDS:

These items are **TOP RACK** dishwasher-safe. We recommend rinsing and briefly scrubbing them with a dish brush to remove any remaining debris before placing them in the dishwasher. **NEVER** use the sanitise cycle to wash the Cups — heat this high can warp the plastic.

STUBBORN CLEANUP:

If ingredients dry inside the nutribullet® Cup or Pitcher, fill your vessel with room-temperature water (70°F/21°C) to the liquid MAX line and add 1-2 drops of dish soap. For Cups, twist on the Extractor Blade and place the Cup on the Motor Base. Blend on LOW for 20-30 seconds. For the Pitcher, attach the Pitcher Lid with the Vented Lid Cap inserted, and place the Pitcher on the Motor Base. Blend on LOW for 20-30 seconds; this should loosen debris enough to scrub away with soap and water.

STORAGE:

Store the nutribullet® Pitcher upright with the Pitcher Lid secured on top. Do not place anything on top of the Pitcher Lid. Store the remaining pieces in a safe place where they will not be damaged and won't cause harm.

Replacement parts

To order additional parts and accessories, please visit our website at **bulletbrands.com.au / bulletbrands.co.nz** or feel free to contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633**.

Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® device. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury.

CDB GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorised/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB GOLDAIR

NEW ZEALAND
PO Box 100-707
NSMC
Auckland 0745
0800 232 633
bulletbrands.co.nz

AUSTRALIA
PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

nutribullet® is a registered trademark of CapBran Holdings, LLC.
Copyright © 2026 CapBran Holdings, LLC. All rights reserved.
Los Angeles, CA 90024, USA. Made in China.

Capital Brands Distribution, LLC | bulletbrands.com.au / bulletbrands.co.nz | All rights reserved.

nutribullet® and the nutribullet® logo are trademarks of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

260623_NBF072002AK