KTH-1000

Desktop Rapid Charger

Thanks for purchasing our products. Please kindly read detailed instruction manual before using the product.

■ FUNCTION

The battery charger is designed exclusively for use with Ni-CD and Ni-MH battery pack when either attached to or removed from the transceiver.
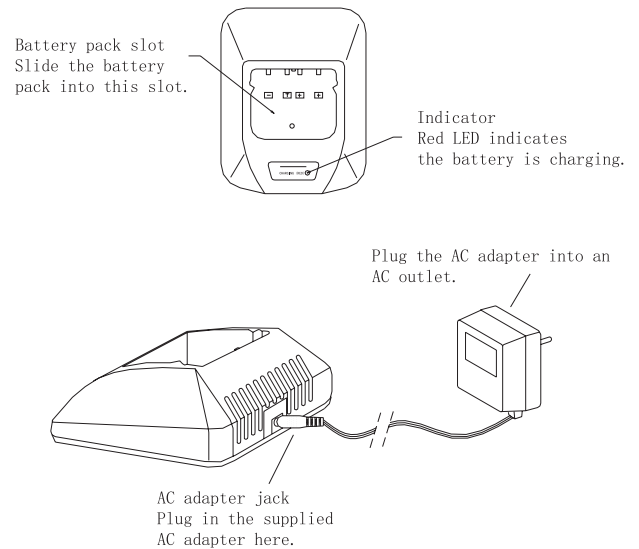
■ CHARGING PROCEDURE

1. Plug the AC adapter into the adapter jack on the back of the charger.
2. Plug the AC adapter into an AC outlet.
3. Along the guides provided on both sides of the battery pack slot, insert a battery pack or transceiver attached a battery pack into the charger.
4. When charging is completed, the LED will change to green. Remove the battery pack or the transceiver from the battery pack slot.
5. If not use, please unplug the AC adapter from the AC outlet.

■ INDICATOR DESIGNATION

Charger operation status	LED
Power connection	Red/green flash
Charge	Red light
Full charged	Green light
Function failure	Red flash

■ CONSTRUCTION

Battery pack slot
Slide the battery pack into this slot.

Indicator
Red LED indicates the battery is charging.

Plug the AC adapter into an AC outlet.

AC adapter jack
Plug in the supplied AC adapter here.

■ WARNING

1. Do not charge an improper battery.
2. Do not expose the charger to high/low temperature and damp places.
3. Do not use the battery charger as a power source for any appliances.
4. Do not disassemble the charger. Incorrect reassembly can cause fire or electric shock.
5. During charging cycles it is normal for the battery to become warm. If the battery become too hot to touch during charging, unplug the charger and discontinue using.
6. If the battery charger is not used for a long period of time, disconnect the AC adapter from the wall socket and remove the battery pack from the battery charger.