

# Instructions for Installation


## 4-way Mixing Valve

### Mounting Instructions

- The mixing valve comes ready for right hand mounting.
- The "KV" label (found on underside of valve) is always boiler supply (BS).
- The boiler always supplies the valve horizontally.
- The main leaving the top of the valve supplies the manifold.
- The main leaving the bottom of the valve is the boiler return (BR).


### Right Hand Mounting

The valve is mounted to the **RIGHT** of the boiler.

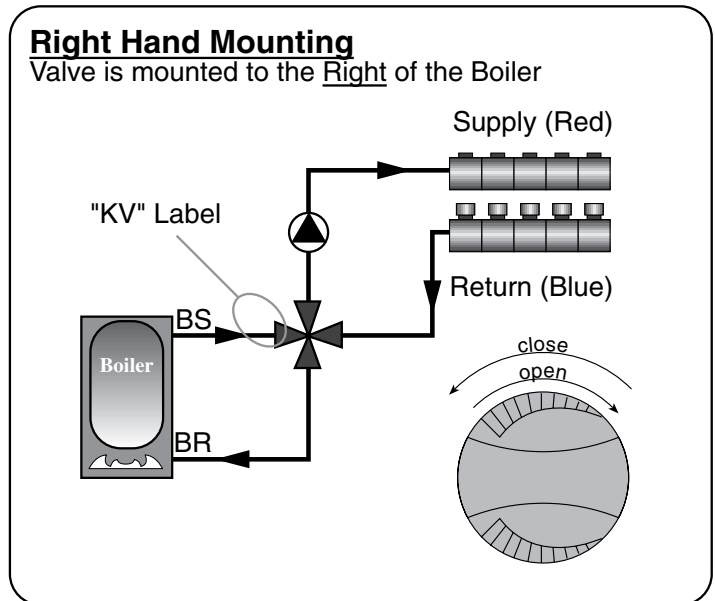

### Left Hand Mounting

The valve is mounted to the **LEFT** of the boiler.

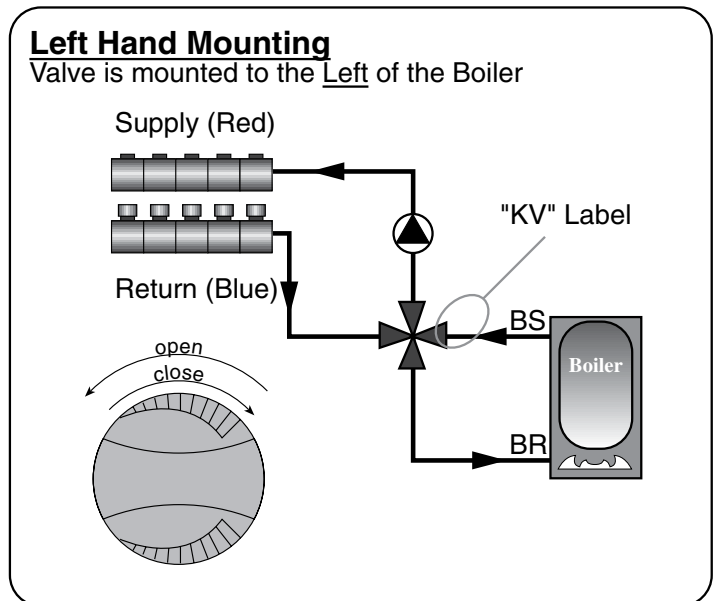

# Mode d'emploi pour l'installation

## Mitigeur à 4 voies

### Mode d'emploi pour le montage


- La valve mélangeuse est livrée prête à être montée à droite.
- L'étiquette KV (situé sur le dessous de la valve) correspond toujours à l'alimentation chaudière (BS)
- La chaudière alimente toujours la valve horizontalement.
- La conduite maîtresse partant du haut de la valve alimente le collecteur
- La conduite maîtresse partant du bas de la valve sert au retour de la chaudière (BR)

### Montage à droite

La valve est montée à la **droite** de la chaudière.

#### Montage à droite

La valve est montée à droite de la chaudière

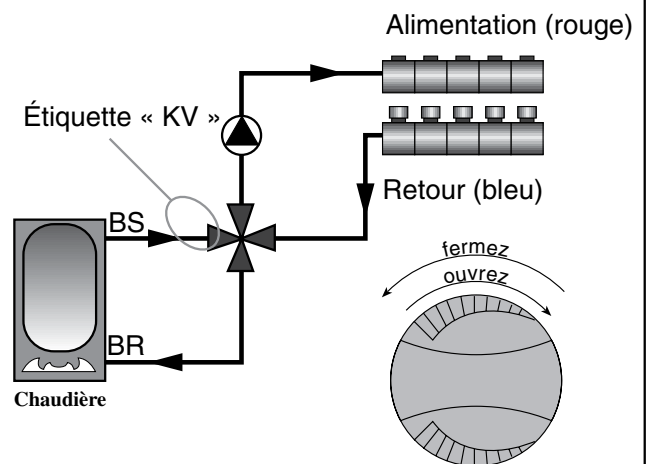

### Montage à gauche

La valve est montée à la **gauche** de la chaudière.

#### Montage à gauche

La valve est montée à gauche de la chaudière

