STEP-BY-STEP GUIDE

SCUF OMEGA UPDATER TOOL

Update your SCUF Omega firmware on a Windows PC when you can't access the SCUF mobile app.

STEP 01 OF 05

01

CONNECT THE CONTROLLER AND DONGLE

Set your SCUF Omega to Wired mode. Connect it to your PC with a USB cable, then plug the USB dongle into the same PC.



STEP 02 OF 05

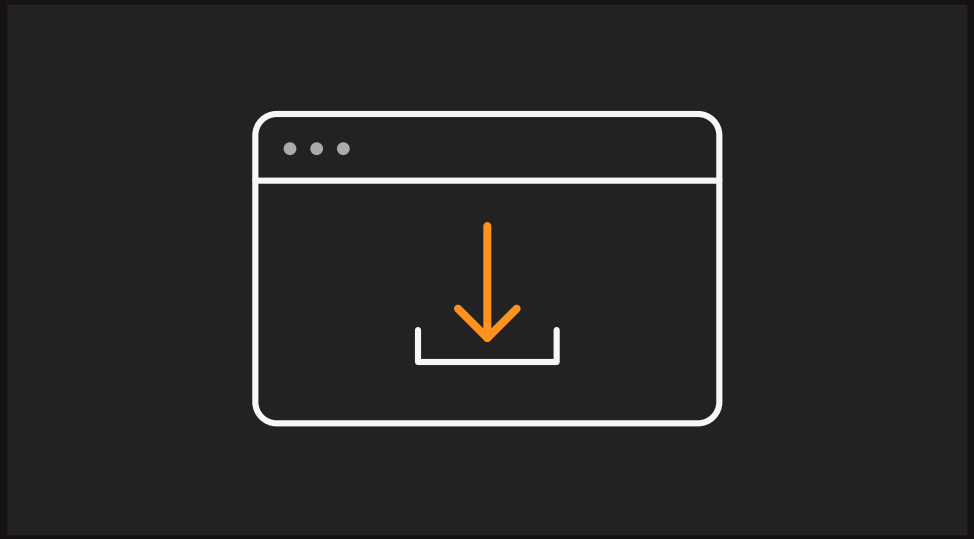

02

DOWNLOAD THE UPDATER

Go to **SCUF Downloads** and click Download for the SCUF Omega FW Update Tool.

STEP 03 OF 05

03

EXTRACT THE ZIP FILE

Right-click the downloaded ZIP file and choose Extract All.

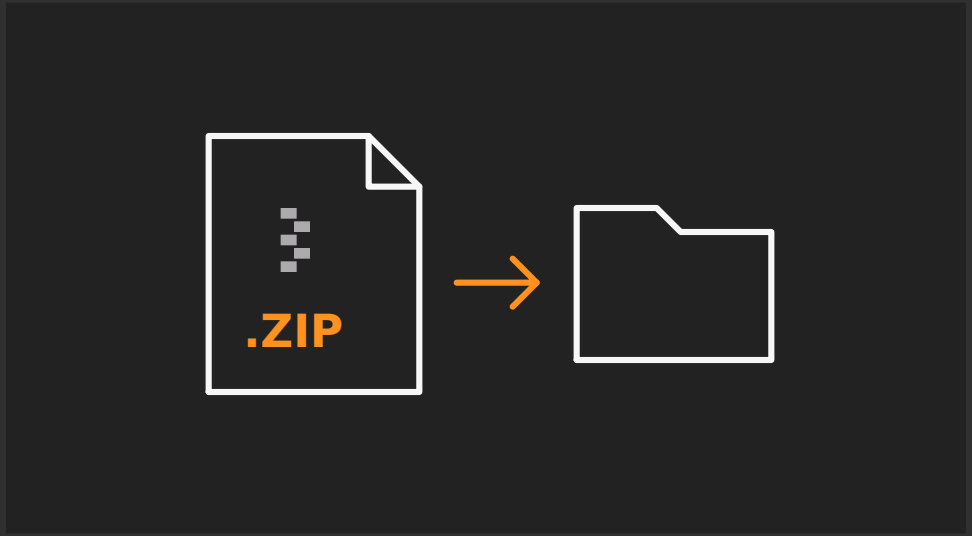



STEP 04 OF 05

04

RUN THE UPDATER

Open the extracted folder and double-click the .exe file to start the firmware update.

STEP 05 OF 05

05

WAIT FOR THE UPDATE TO FINISH

The progress bar shows the update status. Keep both devices connected until the update finishes.

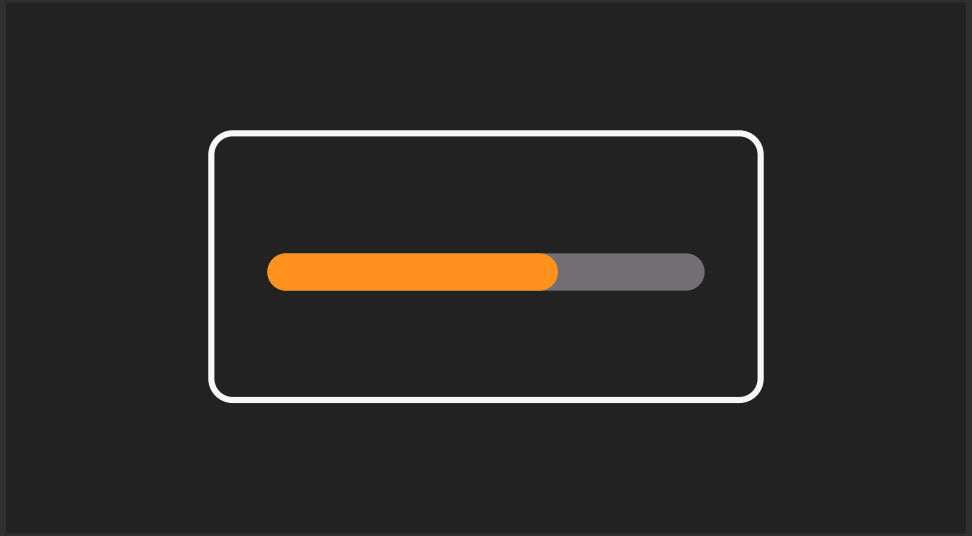

UPDATED.
READY TO PLAY.

Your SCUF Omega controller is ready to use.

If you see an error, run the updater again.